OneEye_DAS_Shell_1 for KIT_AURIX_TC297_TFT Shell via DAS interface using OneEye

AURIX[™] TC2xx Microcontroller Training V1.0.0



Please read the Important Notice and Warnings at the end of this document



A Shell is used to parse a command line and call the corresponding command execution. A OneEye pipe is used to interface OneEye with the Shell through the DAS interface.

After configuring the OneEye DAS interface, the Shell from iLLDs is used to interpret and manage commands like "info" or "help". The example creates a OneEye pipe and the corresponding DPipe that is used to interface the shell.



Introduction

- OneEye is a GUI that enables the creation of interactive Graphical User Interface. Graphical elements can be drag from a toolbox and drop onto the GUI. The behavior of the created GUI can be customized. Different communication interfaces like UART, Ethernet, CAN, DAS can be used to interact with the embedded system
- The DAS (Device Access Server) can be used in line with Infineon Microcontroller Starter Kits, Application Kits and DAP MiniWiggler to access the micro controller resources
- Recommendation: It is recommended to go through some of the basic tutorials listed in the help embedded in OneEye (Menu: Help -> OneEye help). This enables a quicker rampup in the OneEye concept and ensure a nice journey with OneEye



Hardware setup

This code example has been developed for the board KIT_AURIX_TC297_TFT_BC-Step.

The board should be connected to the PC through the USB port 1





Configuring the OneEye pipe

A OneEye pipe (*Ifx_OneEyeDasPipe*) is a special object that is recognized by OneEye and enables streaming of data between OneEye and the microcontroller. The OneEye pipe is initialized with *Ifx_OneEyeDasPipe_init()*. The *size* parameter passed for the configuration corresponds to the buffer allocated for the data transmission, in this example 2 buffers of 512 bytes are allocated, one for TX and one for the RX direction. The *Ifx_OneEyeDasPipe_h* file can be found in the Libraries\OneEye directory.

Configuring the DPipe

A DPipe is initialized with *lfx_OneEyeDasPipe_stdlfDPipeInit()*. The DPipe enables access by the shell to the OneEye Pipe.

Configuring the Shell

The shell is initialized with *lfx_Shell_init()* passing a pointer to the previously initialized DPipe.

Running the Shell

The shell is executed in the background loop by calling *lfx_Shell_process()*.



Run and Test

- After code compilation, flash the device using the Flash button 1 to ensure that the program is running on the device
- For this training, the OneEye application is required for visualizing the values. OneEye can be opened inside the AURIX[™] Development Studio using the following icon:





In this training, the OneEye configuration is provided inside the Libraries folder. The following steps are needed to configure the OneEye from a brand-new configuration.

Setup OneEye for editing

Select the OneEye menu "**Options -> Edit mode**" (if not already checked) to enable the edit mode. Select the OneEye menu "**View -> Browser box**", "**View -> Property box**", "**View -> Tool box**" (if not already checked) to display the browser, property box, and tool box. Close the Welcome screen if it was shown.

Onecye		
ile Options View Help		
ool box	ē ×	Property box
Bar Gauge	^	
Check Box		
Clock Gauge		
opt 🔻 Combo Box		
Dial		
Graph		
Graph Channel		
(Goup) <	>	
rowser box	ē ×	
All	\checkmark	
Path Object	Title	
signals		
signals layout		
signals layout interface interface. configuration		
signals layout > interface interface. configuration debugBox		



Configuring the DAS interface

When the OneEye configuration is created by ADS, it is already setup with a DAS interface. Select the DAS interface in the Browser box _____.

Notice the "system-key" {ADS} that enables the connection to the device in parallel with the ADS debugger.

File Options View Help Tool box Image: Comparison of the second of the se	OneEye		- 0	×
Tool box B × Bar Gauge Plugin Com Port: Data Check Box Clock Gauge	File Options View Help			
Plugin Com Port: DAS plugin PCom_DAS::DAS server-host-address localhost server-name UDAS connect frequency 3e+08	Tool box 🗗 🗸	Property box		8 >
Image: system-key System-key System-key Image: system-key	Tool box Tool b	Property box Plugin Com Port: plugin server-host-address server-name connect frequency system-key	DAS PCom_DAS::DAS localhost UDAS Se+08 {ADS}	
	Path Object Title ^ Iayout interface DAS interface. configuration			



Create a debug box to get access to variables from the .elf file

A debugBox item is already setup by default when ADS creates the OneEye configuration, preconfigured with the project .elf file path.

Select the DAS interface in the Browser box

Set the id property to "elf", which enables to group variables into the signal tree later.





Open the debug box viewer and connect to the device

Select the OneEye menu "**View -> Debug box viewer**" (if not already checked) to display the debug box. Select the debug box with the id "(elf)" 1 if not yet selected by default. Note that the debug box enables the selection of the .elf file to be used to get information about the variables.

The **Filter** field 2, enables to filter variables by name. E.g. in this example, entering "g_" will filter for global variables.

To enable the connection with the microcontroller and have read / write access to variables, check the "DAS connection status" box 3.

Del	oug box viewer							
(e	lf) 1						~	
3	3 DAS connection status: C C C C <p< td=""></p<>							
	Name	Size	^	Name	Value	Address		
	g_oneEyeDasPipe	60		g_oneEyeDasPipe	-	0x700005FC	1	
	g_shellCommands	48						
	g_cpuSyncEvent	4	¥					



Create signals for the Pipe

In the debug box, search for the **g_oneEyeDasPipe**¹ variable, right click on it and select "**Create pipe for: g_oneEyeDasPipe**". The watch should appear on the right side of the debug box ______. Watches are periodically polled for new values on the micro controller.

Two signals are also automatically created to access the pipe **3**, one for the OneEye to microcontroller direction (*ToTarget*), and one for the microcontroller to OneEye direction (*FromTarget*).

ug box viewer						
f)			~			
neeye_aurix_examples_ads/workspace/OneEye_ DAS connection status:	DAS_Shell_1_KIT_TC375_LK/Libraries/\Debug\OneEye_DAS_Shell_1_KIT_TC375_LK.elf	ELF file Rel	oad ELF file Clear			
Filter: g	Name g_oneEyeDasPipe 2 -	Browser	box			
g_cpuSyncEvent 4	×					
		Path		Object	Title	^
		V si	gnals 3	group		
			✓ g_oneEyeDasPipe	group		
	The created signals should appear in		FromTarget	char	FromTarget	t
			ToTarget	char	ToTarget	
	the browser box under the "signals.elf"	> la	yout			
	group	> in	terface	interface.		1
		00	ontiguration			~
		<	THE REAL		>	*



Create a text box to display the shell text

Drag and drop a **textEdit** item from the toolbox onto the layout, and set its **data-in** property to **elf.g_oneEyeDasPipe.FromTarget**.

OneEye		- 0	×
File Options View Help			
Tool box 🗗 🗙	Hello World !	é	F ×
Signal Generator Channel: Radar Map (rando Slider Spacer Tab	Enter 'help' to see the command list ! Shell>	omTarget + - + - + -	
Tab Page	user-data enabled defined-by-connection	~	
Tree View	FromTarget visible yes update-method on-new-data style-sheet	~	
Browser box 🗗 🗙			
All			
Path Object Title > signals			



Create a line edit to enter key stroke to the shell

Drag and drop a **lineEdit** item from the toolbox onto the layout, and set its **data-out** property to **elf.g_oneEyeDasPipe.ToTarget**. **Check** the **capture-key** property to enable each key stroke to be send.

OneEye						_		×
File Options View Help								
Tool box & X		Hello World !	Pr	operty box				ð ×
Inage ImageBuffer Tot Label		Hello World ! Enter 'help' to see the command list ! Shell>		Plugin widget: id data-in data-out auto-connect title user-data enabled visible	lineEdit elf.g_oneEyeDasPipe.ToTarget defined-by-connection yes	+		
Mux-Demux <u>'ee</u> Named Pipe Client <u>Fipe</u> Named Pipe Server	FromTarget			capture-key format format-string format-field-width format-base	961 0 10		~]]]
Browser box				format-fill-char				
All				format-precision	-1			1
Path Object Title				format-format	g		~	
 > signals > layout > interface interface. configuration debugBox 				update-method style-sheet	on-new-data		~	
< >>				may	0			
OneEve Version 2 46 0 1059 685	loTarget			max	۷			¥



Test the shell interface

The shell textbox should display the "Hello World !" text **1**, if it is not the case, check that the "**DAS connection status**" is checked in the debug box viewer.

Enter "info" in the **ToTarget** lineEdit field 2 and press ENTER, the microcontroller will execute the **printShellInfo()** function and should answer as below to acknowledge the command.

OneEye				_		×
File Options View Help	-					
Tool box 🗗 🗙		Hello World !	Property box			đΧ
Image ImageBuffer Tet Label See Line Edit Logger Logger Channel Mux-Demux Tes Named Pipe Server	FromTarget	Enter 'help' to see the command list ! Shell>info The shell command was called ! Shell>	Plugin widget: id data-in data-out auto-connect title user-data enabled visible capture-key format format-string	InneEdit pe.ToTarget + pe.ToTarget + defined-by-connection yes default 961 -	-	•
< >			format-base	10		
Browser box 5 ×			format-fill-char format-precision	-1		
Path Object Title > signals > > layout > interface configuration debugBox			format-format update-method style-sheet min	g on-new-data	~	
<	ToTarget		max	0		~

Save your configuration with CTRL+S.

Exit the edit mode with the OneEye menu "**Options -> Edit mode**" and close the "**Debug box viewer**" to only see the GUI 3.



References











- AURIX[™] Development Studio is available online: >
- https://www.infineon.com/aurixdevelopmentstudio
- Use the *"Import…"* function to get access to more code examples. >
- More code examples can be found on the GIT repository: >
- https://github.com/Infineon/AURIX code examples >
- For additional trainings, visit our webpage: >
- https://www.infineon.com/aurix-expert-training >
- For questions and support, use the AURIX[™] Forum: >
- https://www.infineonforums.com/forums/13-Aurix-Forum >

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.



Edition 2022-03 Published by Infineon Technologies AG 81726 Munich, Germany

© 2021 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document? Email: <u>erratum@infineon.com</u>

Document reference OneEye_DAS_Shell_1 _KIT_TC297_TFT

IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application. For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.