

# CPU\_Trap\_Recognition\_1 for KIT\_AURIX\_TC297\_TFT

TRAP error recognition and reaction

AURIX™ TC2xx Microcontroller Training  
V1.0.0



# Scope of work

---

**This example shows how to identify the root cause of a trap.**

The tutorial describes what types of traps are supported by the AURIX™ microcontroller, their root causes and how to identify them. AURIX™ architecture supports different types of traps. Three different traps can be provoked with this example and the tutorial guides the user through the needed steps to observe the root cause of each trap.


# Introduction

---

- › A trap occurs as a result of an event such as a Non-Maskable Interrupt (NMI), an instruction exception, a memory management exception or an illegal access. Traps are always active; they cannot be disabled by software.
- › The TriCore™ architecture specifies eight general classes for traps. Each trap class has its own trap handler. Within each class, specific traps are distinguished by a Trap Identification Number (TIN).
- › Traps can be further classified as synchronous or asynchronous, and as hardware or software generated.
- › Three different combinations of trap types are supported:
  - Synchronous and hardware generated
  - Asynchronous and hardware generated
  - Synchronous and software generated

# Hardware setup

This code example has been developed for the board  
KIT\_AURIX\_TC297\_TFT\_BC-Step.

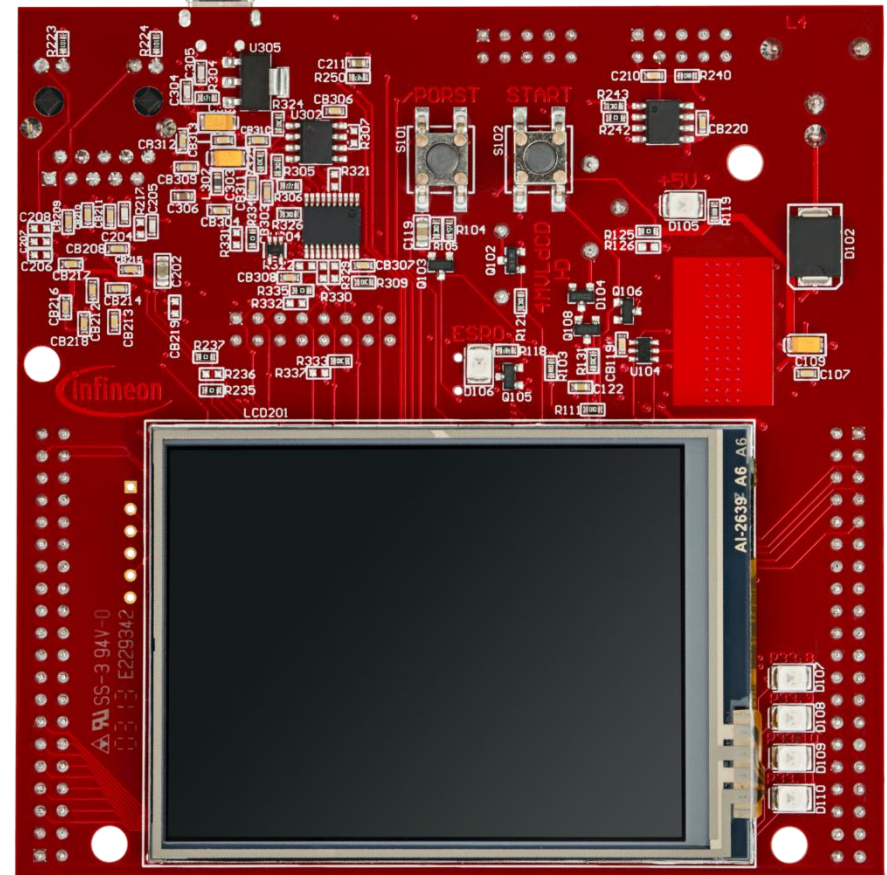

# Implementation

## Supported traps

The following table provides an overview about all supported traps and their types:

TIN	Name	Synch. / Asynch.	HW / SW	Definition
<b>Class 0 – MMU</b>				
0	VAF	Synch.	HW	Virtual Address Fill.
1	VAP	Synch.	HW	Virtual Address Protection.
<b>Class 1 – Internal Protection Traps</b>				
1	PRIV	Synch.	HW	Privileged Instruction.
2	MPR	Synch.	HW	Memory Protection Read.
3	MPW	Synch.	HW	Memory Protection Write.
4	MPX	Synch.	HW	Memory Protection Execution.
5	MPP	Synch.	HW	Memory Protection Peripheral Access.
6	MPN	Synch.	HW	Memory Protection Null Address.
7	GRWP	Synch.	HW	Global Register Write Protection.
<b>Class 2 – Instruction Errors</b>				
1	IOPC	Synch.	HW	Illegal Opcode.
2	UOPC	Synch.	HW	Unimplemented Opcode.
3	OPD	Synch.	HW	Invalid Operand specification.
4	ALN	Synch.	HW	Data Address Alignment.
5	MEM	Synch.	HW	Invalid Local Memory Address.

TIN	Name	Synch. / Asynch.	HW / SW	Definition
<b>Class 3 – Context Management</b>				
1	FCD	Synch.	HW	Free Context List Depletion (FCX = LCX).
2	CDO	Synch.	HW	Call Depth Overflow.
3	CDU	Synch.	HW	Call Depth Underflow.
4	FCU	Synch.	HW	Free Context List Underflow (FCX = 0).
5	CSU	Synch.	HW	Call Stack Underflow (PCX = 0).
6	CTYP	Synch.	HW	Context Type (PCXI.UL wrong).
7	NEST	Synch.	HW	Nesting Error: RFE with non-zero call depth.
<b>Class 4 – System Bus and Peripheral Errors</b>				
1	PSE	Synch.	HW	Program Fetch Synchronous Error.
2	DSE	Synch.	HW	Data Access Synchronous Error.
3	DAE	Asynch.	HW	Data Access Asynchronous Error.
4	CAE	Asynch.	HW	Coprocessor Trap Asynchronous Error.
5	PIE	Synch.	HW	Program Memory Integrity Error.
6	DIE	Asynch.	HW	Data Memory Integrity Error.
7	TAE	Asynch.	HW	Temporal Asynchronous Error
<b>Class 5 – Assertion Traps</b>				
1	OVF	Synch.	SW	Arithmetic Overflow.
2	SOVF	Synch.	SW	Sticky Arithmetic Overflow.
<b>Class 6 – System Call<sup>1)</sup></b>				
	SYS	Synch.	SW	System Call.
<b>Class 7 – Non-Maskable Interrupt</b>				
0	NMI	Asynch.	HW	Non-Maskable Interrupt.

Please refer to the TriCore™ TC1.6.2 core architecture manual and the AURIX™ TC29x B-Step User's Manual for detailed information about each trap.

# Implementation

---

## Trap types

### › **Synchronous traps:**

- Synchronous traps are associated with the execution or attempted execution of specific instructions or with attempts to access a virtual address that requires the intervention of the memory-management system.
- The trap is triggered and serviced immediately.

### › **Asynchronous traps:**

- Since asynchronous traps are associated with hardware conditions, they are similar to interrupts.
- They are routed via the trap vector.
- Some asynchronous traps are triggered indirectly from instructions, that have been previously executed, but the direct association with the instructions causing the trap is lost.

### › **Hardware traps:**

- Hardware traps are generated in response to exception conditions detected by the hardware.
- In most, but not all cases, the exception conditions are associated with the attempted execution of a particular instruction.

### › **Software traps:**

- Software traps are generated as an intentional result of executing a system call or an assertion instruction.

# Implementation

## Trap handling

- › When a trap occurs, a trap identifier is generated by hardware. The trap identifier has two components that can be used to determine more information about the trap and why it was caused (refer to slide [Supported traps](#)):
  - The Trap Class Number (TCN)
  - The Trap Identification Number (TIN)
- › In most cases, the debugger will stop the code execution within one of eight trap handlers (implemented in the iLLD header ***IfxCpu\_Trap.c***)
- › An instance of the structure ***IfxCpu\_Trap*** is declared within each trap handler. When a trap occurs, the instance provides four information fields about the trap:
  - ***tCpu***: Which CPU caused the trap
  - ***tClass***: TCN, Class of the trap (refer to slide [Supported traps](#))
  - ***tId***: TIN, Id of the trap (refer to slide [Supported traps](#))
  - ***tAddr***: Return Address (RA) (refer to the [next slide](#))

# Implementation

## Return Address

- › The Return Address (RA) might help to locate the specific line of code which caused the trap.
- › The return address, which is stored in the instance of the ***IfxCpu\_Trap*** structure, is read from the return address register A[11].
- › Depending on the **trap type**, the return address is different:
  - For most of the **synchronous** traps, the return address is the 32-bit Program Counter (PC) of the instruction that caused the trap. (The PC holds the address of the instruction which is currently running when the core is halted.)
  - On a **System Call (SYS)** trap, triggered by the SYSCALL instruction, the return address points to the instruction immediately following SYSCALL.
  - A **Free Context List Depletion (FCD)** trap is generated after a context save operation that causes the free context list becoming “almost empty”.  
The responsible for the FCD trap can be a hardware interrupt or a trap handler. The operation responsible for the context save normally is completed before the FCD trap is executed. Because of this, the return address of the FCD trap is the first instruction of the trap/interrupt/called routine or the instruction following a Save Lower Context (SVLCX) or Begin Interrupt Service Routine (BISR) instruction.
  - For an **asynchronous** trap, the return address is the address of the instruction that would have been executed next, if the asynchronous trap had not been triggered.



# Implementation

## Additional debug information

- › The bit field **ERROR\_ADDRESS** of the **Data Error Address Register (DEADD)** contains the trap address information for the data memory. The content of the DEADD register is valid if the **Data Synchronous Trap Register (DSTR)** or the **Data Asynchronous Trap Register (DATR)** register are non-zero (depending on the trap type). The bit fields in the DSTR and the DATR registers can provide additional information about the trap (refer to the TC29x B-Step User's Manual).
  - These information are valid in case of the following traps:
    - **Data Address Alignment (ALN)**
    - **Data Access Synchronous Error (DSE)**
    - **Data Access Asynchronous Error (DAE)**
    - **Invalid Local Memory Address (MEM)**
    - **Memory Protection Write (MPW)**
    - **Memory Protection Read (MPR)**
    - **Memory Protection Peripheral Access (MPP)**
    - **Memory Protection Null Address (MPN)**

# Implementation

---

## Additional debug information

- › The **Program Memory Interface Synchronous Trap Register (PSTR)** contains synchronous trap information for the program memory system. The register is updated with trap information for **Program Fetch Synchronous Error traps (PSE)**.
- › The **Program (or Data) Integrity Error Address Register (PIEAR / DIEAR)** and the **Program (or Data) Integrity Error Trap Register (PIETR / DIETR)** can be interrogated to determine the source of the **Program (or Data) Memory Integrity Error (PIE / DIE)** more precisely.

# Implementation

## Trap provocation

- › Three different combinations of trap types can be provoked in this example:
  - Synchronous Hardware trap
  - Asynchronous Hardware trap
  - Synchronous Software trap
- › The trap provocation is implemented in the function ***run\_trap\_provocation()*** and can be started by setting one of the three ***g\_provokeXYTrap*** (***X = Synchronous / Asynchronous***; ***Y = Hardware / Software***) variables.
- › The implemented code for the first two traps is based on the MTU\_MBIST\_1 and SMU\_IR\_Alarm\_1 examples. For further information on the code, please refer to the specific tutorials.
- › The third trap is provoked by using two instructions: ***\_\_mtcr()*** (Move To Core Register) and ***trapv*** (assembly code). For further information on these instructions, please refer to the TriCore™ TC1.6.2 core architecture manual - Instruction set manual.
- › For a better understanding of the trap behavior, the required code instructions used to avoid the cause of each trap, are implemented and can be activated by setting the ***AVOID\_PROVOCATION*** macro to true.

# Run and Test

After code compilation and flashing the device, perform the following steps:

- › Add the three variables “***g\_provokeSynchronousHardwareTrap***”, “***g\_provokeAsynchronousHardwareTrap***” and “***g\_provokeSynchronousSoftwareTrap***” in the Expressions window of the debugger.
- › Add the three registers DEADD, DATR and DSTR in the Expressions window of the debugger.

(x) Variables Breakpoints Expressions			
Expression	Type	Value	
<code>g_provokeSynchronousHardwareTrap</code>	unsigned short	0	
<code>g_provokeAsynchronousHardwareTrap</code>	unsigned short	0	
<code>g_provokeSynchronousSoftwareTrap</code>	unsigned short	0	
> <code>GRP( CPU ).REG( CPU0_DEADD )</code>	Unsigned / Readable,Writeable	0x0	
> <code>GRP( CPU ).REG( CPU0_DATR )</code>	Unsigned / Readable,Writeable	0x0	
> <code>GRP( CPU ).REG( CPU0_DSTR )</code>	Unsigned / Readable,Writeable	0x0	
+ Add new expression			

# Run and Test


## 1.1 Synchronous hardware trap

- › Provoke the synchronous hardware trap by setting the value of “***g\_provokeSynchronousHardwareTrap***” in the “Expressions” window to “1”.
- › Press the “Resume” button to start the program.
- › Observe the following information:
  - The debugger stopped in the ***IfxCpu\_Trap\_busError()*** function (***IfxCpu\_Trap.c***).
  - The “Variables” window of the debugger displays the “***trapWatch***” structure and the value of its parameters.
  - The trap is provoked by CPU0, it is a trap of class 4, the trap id is 2 and the Return Address (RA) is 0x80000042 (2147483714<sub>10</sub>).
  - It is a Data Access Synchronous Error ([Trap table](#), class 4 and tin 2).

# Run and Test

## 1.2 Synchronous hardware trap

- › Observe the following information:
  - The call stack in the “Debug” window displays the function which was called before the trap occurred (in this case the function ***run\_trap\_provocation()***, the address displayed behind this function equals the Return Address (RA)).
  - By clicking on this function, the debugger jumps to the specific code line in the ***CPU\_Trap\_Recognition.c*** file and to the corresponding assembly line in the „Disassembly“ window. The address of the assembly line equals the Return Address (RA).

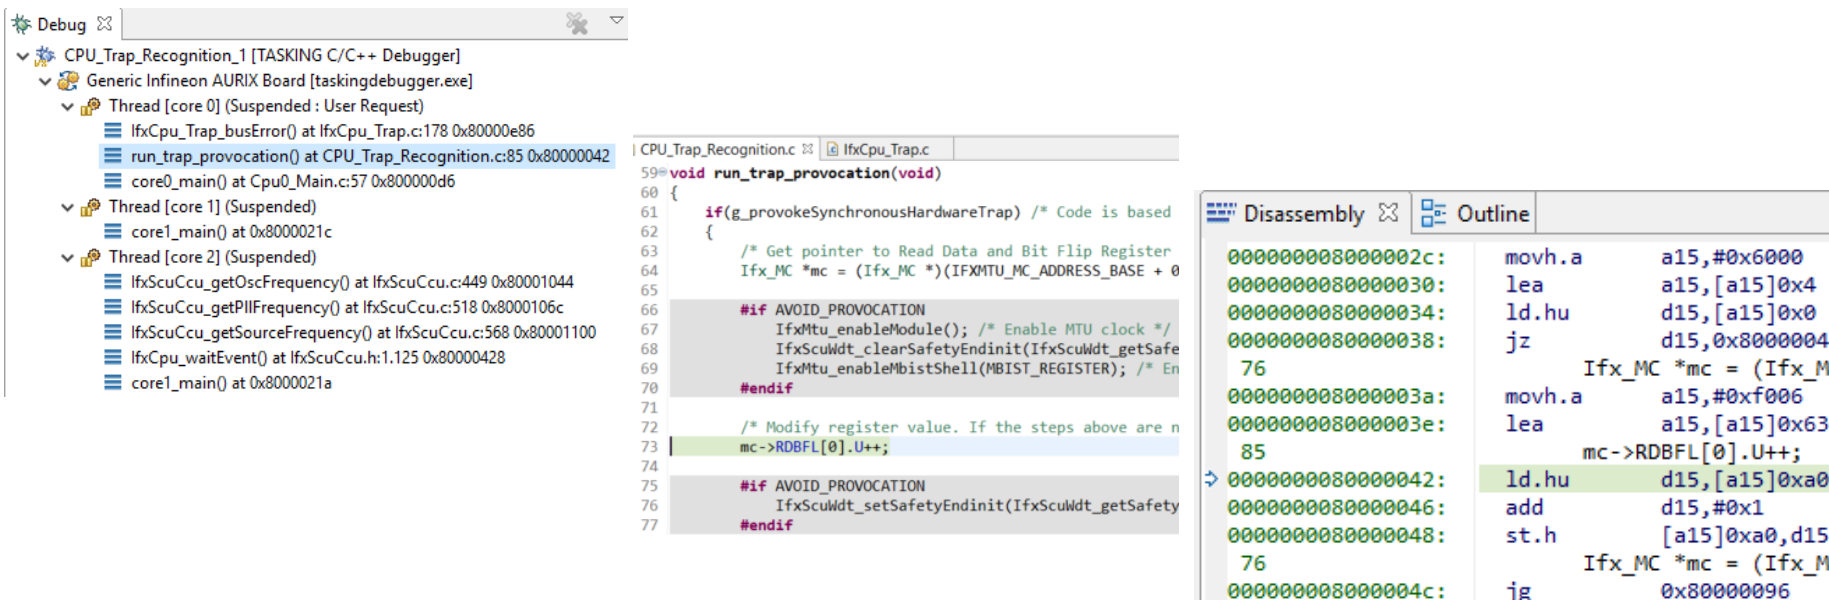

The screenshot displays the Infineon debugger interface with three main windows:

- Debug Window:** Shows the call stack for the tasking C/C++ debugger. The selected thread is "Thread [core 0] (Suspended : User Request)". The call stack shows:
  - lfxCpu\_Trap\_busError() at lfxCpu\_Trap.c:178 0x80000e86
  - run\_trap\_provocation() at CPU\_Trap\_Recognition.c:85 0x80000042** (highlighted)
  - core0\_main() at Cpu0\_Main.c:57 0x800000d6
- Source Code Window:** Displays the C code for *CPU\_Trap\_Recognition.c*. The function *run\_trap\_provocation(void)* is shown, with line 85 highlighted:
 

```

85 void run_trap_provocation(void)
86 {
87     if(g_provokeSynchronousHardwareTrap) /* Code is based
88     {
89         /* Get pointer to Read Data and Bit Flip Register
90         Ifx_MC *mc = (Ifx_MC *) (IFXMTU_MC_ADDRESS_BASE + 0
91
92         #if AVOID_PROVOCATION
93             IfxMtu_enableModule(); /* Enable MTU clock */
94             IfxScuWdt_clearSafetyEndinit(IfxScuWdt_getSafe
95             IfxMtu_enableMbistShell(MBIST_REGISTER); /* En
96         #endif
97
98         /* Modify register value. If the steps above are n
99         mc->RDBFL[0].U++;
100
101         #if AVOID_PROVOCATION
102             IfxScuWdt_setSafetyEndinit(IfxScuWdt_getSafe
103         #endif
            
```
- Disassembly Window:** Shows the assembly code corresponding to the selected line in the source code. The instruction at address 0x80000042 is highlighted:
 



 









```

0000000080000042: movh.a    a15,#0x6000
0000000080000030: lea       a15,[a15]0x4
0000000080000034: ld.hu     d15,[a15]0x0
0000000080000038: jz        d15,0x80000004
76          Ifx_MC *mc = (Ifx_M
000000008000003a: movh.a    a15,#0xf006
000000008000003e: lea       a15,[a15]0x63
85          mc->RDBFL[0].U++;
0000000080000042: ld.hu     d15,[a15]0xa0
0000000080000046: add       d15,#0x1
0000000080000048: st.h      [a15]0xa0,d15
76          Ifx_MC *mc = (Ifx_M
000000008000004c: jg        0x800000096
            
```

# Run and Test
 
## 1.3 Synchronous hardware trap

- › Observe the following additional information:
  - The **LBE** bit field in the **DSTR** register is set (Load Bus Error - Data load from bus causing error, refer to AURIX™ TC29x B-Step User's Manual).
  - The **DEADD** register displays the address 0xf00663a0, which is the address of the modified register which caused the trap.
  - By running a file search (Search -> File) for the address, the search finds the specific **RDBFL0** register which equals the modified **MBIST** DMA register.

Variables	Breakpoints	Expressions	
Expression	Type	Value	
 g_provokeSynchronousHardwareTrap	unsigned short	1	
 g_provokeAsynchronousHardwareTrap	unsigned short	0	
 g_provokeSynchronousSoftwareTrap	unsigned short	0	
>  GRP( CPU ).REG( CPU0_DEADD )	Unsigned / Readable,Writeable	0xf00663a0	
>  GRP( CPU ).REG( CPU0_DATR )	Unsigned / Readable,Writeable	0x0	
▼  GRP( CPU ).REG( CPU0_DSTR )	Unsigned / Readable,Writeable	0x4	
 SRE	Readable,Writeable	0x0	
 GAE	Readable,Writeable	0x0	
 LBE	Readable,Writeable	0x1	
 RES	Readable,Writeable	0x0	
 CRE	Readable,Writeable	0x0	
 RES_6	Readable,Writeable	0x0	

 Memory
  Search

'0xf00663a0' - 1 match in workspace

CPU\_Trap\_Recognition\_1
 

- Libraries
  - Infra
    - Sfr
      - TC29B
        - \_Reg
          - lfxMc\_reg.h
            - 14.220: #define MC83\_RDBFL0 /\*lint --e(923)\*/ (\*(volatile lfx\_MC\_RDBFL\*)0xF00663A0u)

# Run and Test

## 2.1 Asynchronous hardware trap

- › Restart the program by pressing the “Restart” button in the debugger.
- › Provoke the asynchronous hardware trap by setting the value of “***g\_provokeAsynchronousHardwareTrap***” in the “Expressions” window to “1”.
- › Press the “Resume” button to start the program.
- › Observe the following information:
  - The debugger stopped in the ***IfxCpu\_Trap\_busError()*** function (***IfxCpu\_Trap.c***).
  - The “Variables” window of the debugger displays the “***trapWatch***” structure and the values of its parameters.
  - The trap is provoked by CPU0, it is a trap of class 4, the trap id is 3 and the Return Address (RA) is 0x80000038 (2147483704<sub>10</sub>).
  - It is a Data Access Asynchronous Error ([Trap table](#), class 4 and tin 3).




# Run and Test

## 2.2 Aynchronous hardware trap

› Observe the following information:

- The call stack in the “Debug” window displays the function which was called before the trap occurred (in this case the function ***run\_trap\_provocation()***, the address displayed behind this function equals the Return Address (RA)).
- By clicking on this function, the debugger jumps to the specific code line in the ***CPU\_Trap\_Recognition.c*** file and to the corresponding assembly line in the „Disassembly“ window. The address of the assembly line equals the return address.
- Because it is an asynchronous trap, the specific code line is **not** pointing to the line which is causing the trap. It is the code line of the instruction that would have been executed next, if the asynchronous trap had not been triggered.
- Since there is no other instruction within the function ***run\_trap\_provocation()***, it is impossible to find the line of code by using the Return Address (RA) in this example.

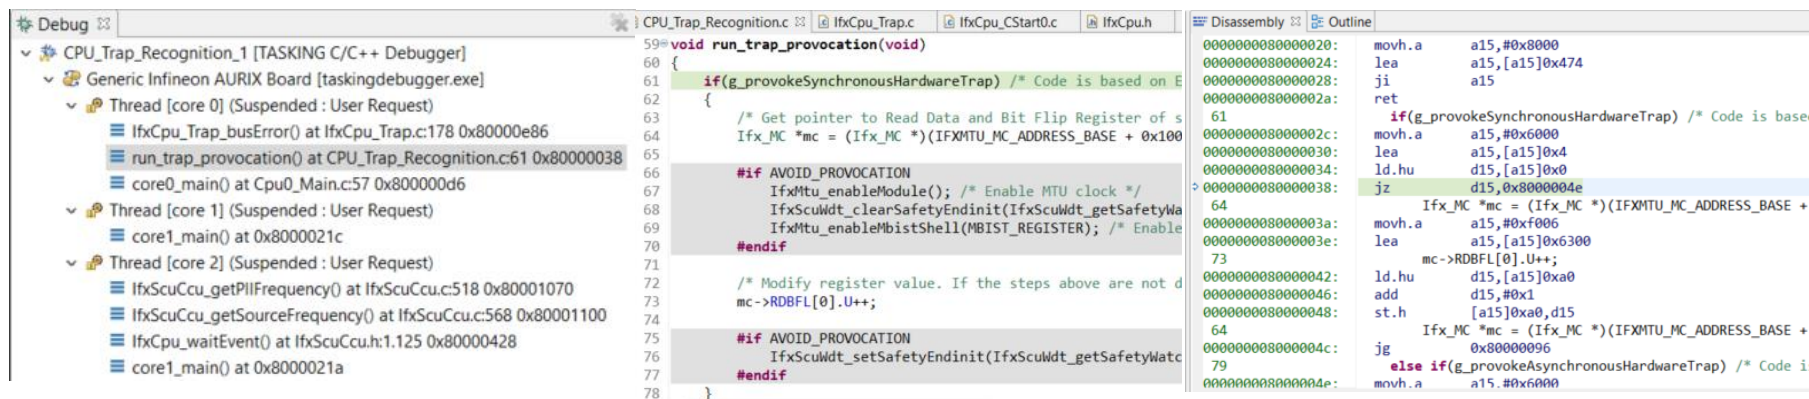

The screenshot displays a debugger interface with three main panels:

- Debug Window (Left):** Shows the call stack for the task "CPU\_Trap\_Recognition\_1 [TASKING C/C++ Debugger]". The stack includes:
  - Generic Infineon AURIX Board [taskingdebugger.exe]
  - Thread [core 0] (Suspended : User Request)
    - lfxCpu\_Trap\_busError() at lfxCpu\_Trap.c:178 0x80000e86
    - run\_trap\_provocation() at CPU\_Trap\_Recognition.c:61 0x80000038** (highlighted)
    - core0\_main() at Cpu0\_Main.c:57 0x800000d6
  - Thread [core 1] (Suspended : User Request)
    - core1\_main() at 0x8000021c
  - Thread [core 2] (Suspended : User Request)
    - lfxScuCcu\_getPIIFrequency() at lfxScuCcu.c:518 0x80001070
    - lfxScuCcu\_getSourceFrequency() at lfxScuCcu.c:568 0x80001100
    - lfxCpu\_waitEvent() at lfxScuCcu.h:1.125 0x80000428
    - core1\_main() at 0x8000021a
- Source Code Window (Middle):** Displays the C code for **run\_trap\_provocation(void)** in **CPU\_Trap\_Recognition.c**. The code includes comments and logic for handling synchronous and asynchronous hardware traps. Line 61 is highlighted, corresponding to the selected function in the call stack.
 

```

59 void run_trap_provocation(void)
60 {
61     if(g_provokeSynchronousHardwareTrap) /* Code is based on E
62     {
63         /* Get pointer to Read Data and Bit Flip Register of s
64         lfx_MC *mc = (lfx_MC *) (IFXMTU_MC_ADDRESS_BASE + 0x100
65
66         #if AVOID_PROVOCATION
67             lfxMtu_enableModule(); /* Enable MTU clock */
68             lfxScuWdt_clearSafetyEndinit(lfxScuWdt_getSafetyWa
69             lfxMtu_enableMbistShell(MBIST_REGISTER); /* Enable
70         #endif
71
72         /* Modify register value. If the steps above are not d
73         mc->RDBFL[0].U++;
74
75         #if AVOID_PROVOCATION
76             lfxScuWdt_setSafetyEndinit(lfxScuWdt_getSafetyWatc
77         #endif
78     }
      
```
- Disassembly Window (Right):** Shows the assembly code corresponding to the selected function. The instruction at address 0000000080000038 is highlighted, which is the instruction that would have been executed next to the trap.
 

```

0000000080000020: movh.a    a15, #0x8000
0000000080000024: lea       a15, [a15]0x474
0000000080000028: ji        a15
000000008000002a: ret
61          if(g_provokeSynchronousHardwareTrap) /* Code is base
000000008000002c: movh.a    a15, #0x6000
0000000080000030: lea       a15, [a15]0x4
0000000080000034: ld.hu     d15, [a15]0x0
> 0000000080000038: jz        d15, 0x8000004e
64          lfx_MC *mc = (lfx_MC *) (IFXMTU_MC_ADDRESS_BASE +
000000008000003a: movh.a    a15, #0xf006
000000008000003e: lea       a15, [a15]0x6300
73          mc->RDBFL[0].U++;
0000000080000042: ld.hu     d15, [a15]0xa0
0000000080000046: add       d15, #0x1
0000000080000048: st.h      [a15]0xa0, d15
64          lfx_MC *mc = (lfx_MC *) (IFXMTU_MC_ADDRESS_BASE +
000000008000004c: jg        0x80000096
79          else if(g_provokeAsynchronousHardwareTrap) /* Code i
000000008000004e: movh.a    a15, #0x6000
      
```

# Run and Test

## 2.3 Asynchronous hardware trap

- › Due to the fact that the Return Address (RA) cannot be used, the following information might help to locate the cause of the trap:
  - The **SBE** bit field in the **DATR** register is set (Store Bus Error - Data store to bus causing error, refer to AURIX™ TC29x B-Step User's Manual).
  - The **DEADD** register displays the address 0xf003682c, which is the address of the modified register that caused the trap.
  - By running a file search (Search -> File) for the address, the search finds the specific **SMU\_AGC** register which equals the modified register. The name of the modified register helps to find the code line which is causing the trap (By using another search for „AGC“).

Expression	Type	Value
g_provokeSynchronousHardwareTrap	unsigned short	0
g_provokeAsynchronousHardwareTrap	unsigned short	1
g_provokeSynchronousSoftwareTrap	unsigned short	0
GRP( CPU ).REG( CPU0_DEADD )	Unsigned / Readable,Writeable	0xf003682c
GRP( CPU ).REG( CPU0_DATR )	Unsigned / Readable,Writeable	0x8
RES		
SBE		
RES_3		
CWE		
CFE		
RES_6		
SOE		
SME		
RES_9		
GRP( CPU ).REG( CPU0_DSTR )		

Memory	Search
'0xf003682c' - 2 matches in workspace	
<ul style="list-style-type: none"> <li>CPU_Trap_Recognition_1               <ul style="list-style-type: none"> <li>Libraries                   <ul style="list-style-type: none"> <li>Infra                       <ul style="list-style-type: none"> <li>Sfr                           <ul style="list-style-type: none"> <li>TC29B                               <ul style="list-style-type: none"> <li>_Reg                                   <ul style="list-style-type: none"> <li>IfxSmu_reg.h                                       <ul style="list-style-type: none"> <li>101: #define SMU_AGC /*lint --e(923)*/ (*(volatile Ifx_SMU_AGC*)0xf003682Cu)</li> </ul> </li> </ul> </li> </ul> </li> </ul> </li> </ul> </li> </ul> </li> </ul> </li> </ul>	

Console	Properties	Problems	Search	Progress
'AGC' - 2.938 matches in workspace				
<ul style="list-style-type: none"> <li>CPU_Trap_Recognition_1               <ul style="list-style-type: none"> <li>Libraries                   <ul style="list-style-type: none"> <li>iLLD                       <ul style="list-style-type: none"> <li>TC29B                           <ul style="list-style-type: none"> <li>Tricore                               <ul style="list-style-type: none"> <li>Gtm</li> <li>Smu</li> </ul> </li> <li>Infra</li> </ul> </li> <li>CPU_Trap_Recognition.c               <ul style="list-style-type: none"> <li>89: MODULE_SMU_AGC.B.IGCS0 = 1;</li> </ul> </li> </ul> </li> </ul> </li> </ul> </li></ul>				

# Run and Test


## 3.1 Synchronous software trap

- › Restart the program by pressing the “Restart” button in the debugger.
- › Provoke the synchronous software trap by setting the value of **“g\_provokeSynchronousSoftwareTrap”** in the “Expressions” window to “1”.
- › Press the “Resume” button to start the program.
- › Observe the following information:
  - The debugger stopped in the ***lfxCpu\_Trap\_assertion()*** function (***lfxCpu\_Trap.c***).
  - The “Variables” window of the debugger displays the **“trapWatch”** structure and the value of its parameters.
  - The trap is provoked by CPU0, it is a trap of class 5, the trap id is 1 and the Return Address (RA) is 0x80000090 (2147483792<sub>10</sub>).
  - It is an Arithmetic Overflow Error ([Trap table](#), class 5 and tin 1).

# Run and Test

## 3.2 Synchronous software trap

- › Observe the following information:
  - The call stack in the “Debug” window displays the function which was called before the trap occurred (in this case the function ***run\_trap\_provocation()***, the address displayed behind this function equals the Return Address (RA)).
  - By clicking on this function, the debugger jumps to the specific code line in the ***CPU\_TrappingRecognition.c*** file and to the corresponding assembly line in the „Disassembly“ window. The address of the assembly line equals the Return Address (RA).

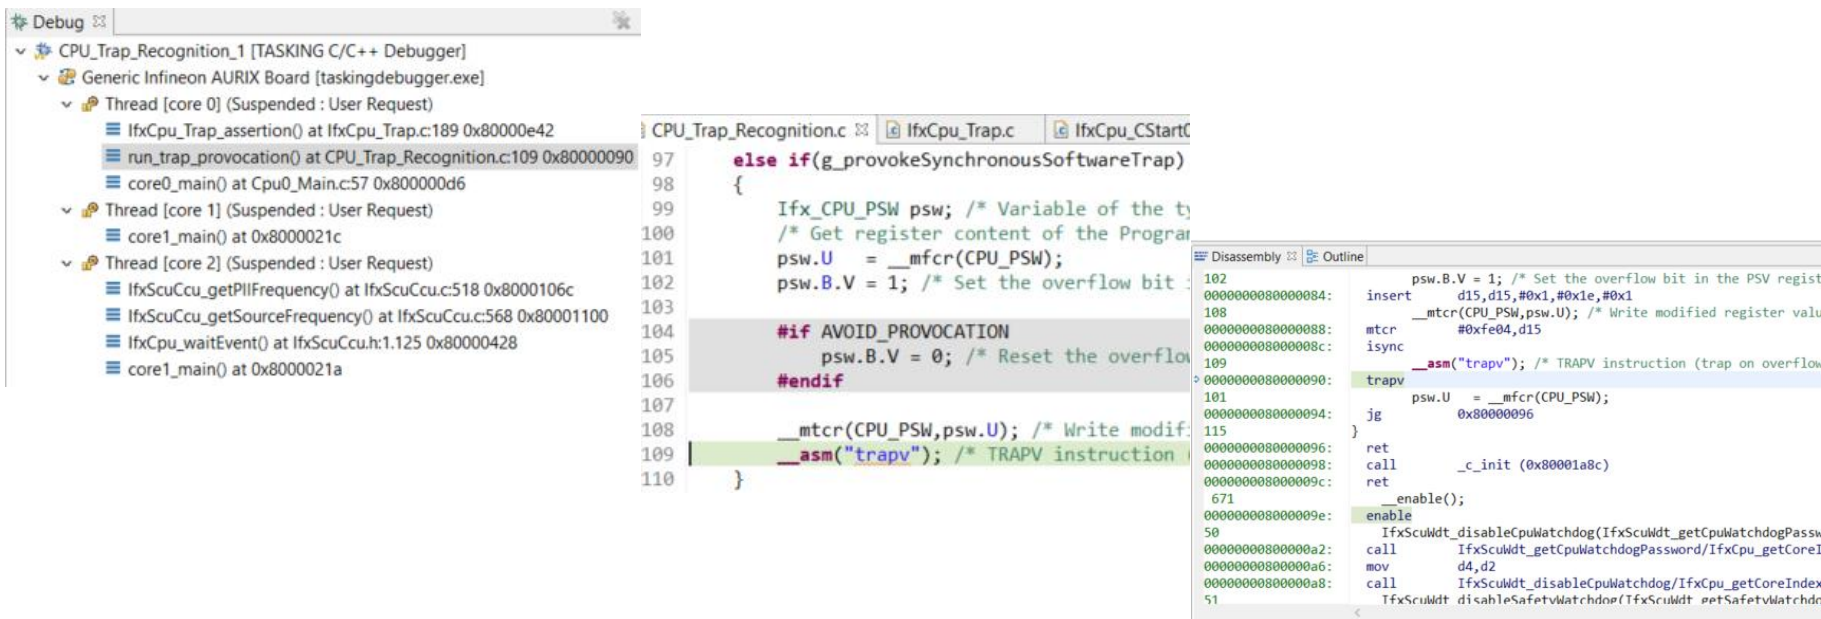

The screenshot displays a debugger interface with three main panels:

- Debug Window (Left):** Shows the call stack for the tasking C/C++ Debugger. The selected function is `run_trap_provocation()` at address `0x80000090`. Other functions in the stack include `core0_main()`, `core1_main()`, and `core2_main()`.
- Source Code Window (Middle):** Displays the source code for `CPU_TrappingRecognition.c`. The code is at line 109, showing the `__asm("trapv");` instruction. The code includes comments about setting the overflow bit in the PSW register and writing the modified register value to the mcr register.
- Disassembly Window (Right):** Shows the assembly code corresponding to the source code. The selected instruction is `trapv` at address `0x80000090`, which corresponds to the `__asm("trapv");` instruction in the source code.

# References



- › AURIX™ Development Studio is available online:
- › <https://www.infineon.com/aurixdevelopmentstudio>
- › Use the „Import...“ function to get access to more code examples.



- › More code examples can be found on the GIT repository:
- › [https://github.com/Infineon/AURIX\\_code\\_examples](https://github.com/Infineon/AURIX_code_examples)



- › For additional trainings, visit our webpage:
- › <https://www.infineon.com/aurix-expert-training>



- › For questions and support, use the AURIX™ Forum:
- › <https://www.infineonforums.com/forums/13-Aurix-Forum>

## Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

**Edition 2020-02**

**Published by**

**Infineon Technologies AG**

**81726 Munich, Germany**

**© 2020 Infineon Technologies AG.**

**All Rights Reserved.**

**Do you have a question about this document?**

**Email: [erratum@infineon.com](mailto:erratum@infineon.com)**

**Document reference**

**CPU\_Trap\_Recognition\_1**

**\_KIT\_TC297\_TFT**

## IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office ([www.infineon.com](http://www.infineon.com)).

## WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.