


# PSoC 4 Serial Communication Block (SCB)

1.0

## Features


- Pre-configured components:
  - Industry-standard NXP® I<sup>2</sup>C bus interface
  - Standard SPI Master and Slave functionalities with Motorola, Texas Instruments, and the National Semiconductor's Microwire protocol
  - Standard UART TX and RX functionalities with SmartCard reader and IrDA protocols
  - Supports wakeup from Deep Sleep mode
- Run-time customization
- I<sup>2</sup>C Bootloader support

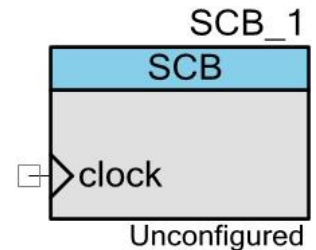

## General Description

The PSoC 4 SCB component is a multifunction hardware block that implements the following components. Each is available as a pre-configured schematic macro in the PSoC Creator Component Catalog, labeled with “SCB Mode.”

Click on one of the links below to jump to the appropriate section:

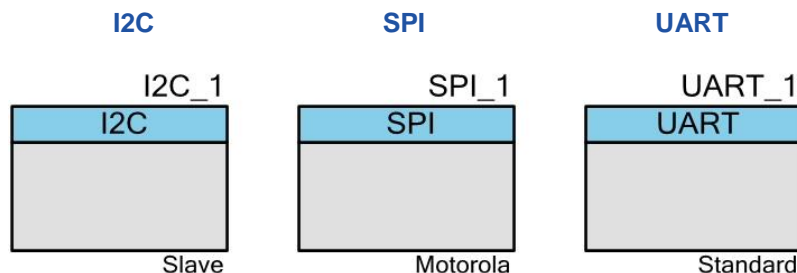

There is also an [Unconfigured SCB](#) component entry in the component catalog.


## When to Use an SCB Component

The SCB can be used in a pre-configured mode: I2C, SPI, and UART. Alternatively the SCB can be Unconfigured at build time and configured at run-time into any of the modes with any setting value using APIs. All configuration settings can be made at run time.

The pre-configured mode is the typical use case. It is the simplest method to configure the SCB into the mode of operation that is desired. The unconfigured method can be used to create designs that can be used for multiple applications and where the specific usage of the SCB in the design is not known when the PSoC Creator hardware design is created.

## Unconfigured SCB

The SCB can be run-time configured for operation in any of the modes from the unconfigured mode.

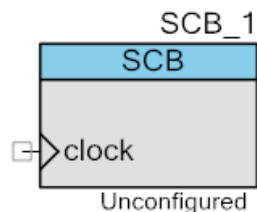

## Input/Output Connections

This section describes the various input and output connections for the SCB component. An asterisk (\*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.


### clock – Input

Clock that operates this block. The terminal is always available in Unconfigured mode. For other modes the option is provided to use an internal clock or an external clock connected to a terminal.

The interface specific pins are buried inside component because these pins use dedicated connections and are not routable as general purpose signals. See the *I/O System* section in chip *Technical Reference Manual (TRM)* for more information.

## Unconfigured SCB Parameters


Drag an SCB component onto your design and double click it to open the **Configure** dialog.

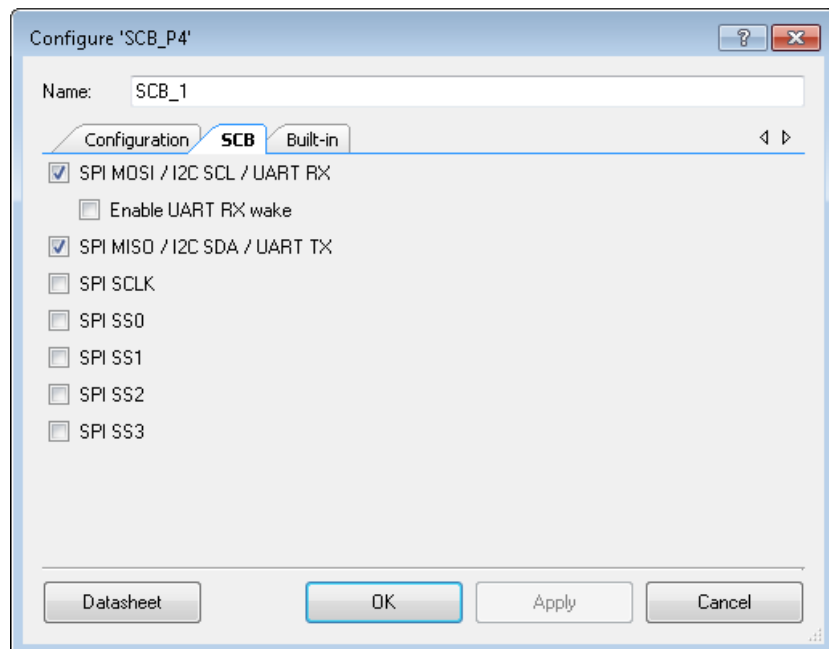

The **SCB** tab options allow pin selection that will be utilized by the configured interface. The interface type along with the pin name is listed with a checkbox to enable that terminal on the symbol.

The **Enable UART RX wake** adds an interrupt to the RX pin to accomplish the UART wake-up capability. This option restricts the processing of any other pin interrupts from the port where this RX pin is placed.

## I2C

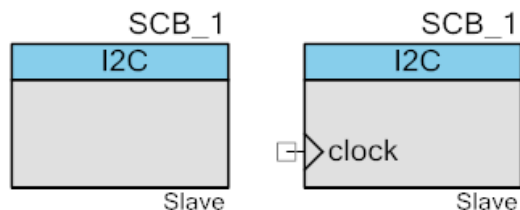

The I<sup>2</sup>C bus is an industry-standard, two-wire hardware interface developed by Philips. The master initiates all communication on the I<sup>2</sup>C bus and supplies the clock for all slave devices. The I<sup>2</sup>C is an ideal solution when networking multiple devices on a single board or small system.

The component supports I<sup>2</sup>C Slave, Master, Multi-Master and Multi-Master-Slave configurations.

The component supports standard clock speeds up to 1000 kbps. It is compatible with I<sup>2</sup>C Standard-mode, Fast-mode, and Fast-mode Plus devices as defined in the NXP I<sup>2</sup>C-bus specification<sup>1</sup>. The component is compatible with other third-party slave and master devices.

### Input/Output Connections

This section describes the various input and output connections for the SCB component. An asterisk (\*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

#### clock – Input\*


Clock that operates this block. The presence of this terminal varies depending on the **Clock from terminal** parameter.

The interface specific pins are buried inside the component because these pins use dedicated connections and are not routable as general purpose signals. See the *I/O System* section in chip *Technical Reference Manual (TRM)* for more information.

<sup>1</sup> Refer to the *I<sup>2</sup>C-Bus Specification* (Rev. 4 from February 2012) on the NXP web site at [www.nxp.com](http://www.nxp.com)

## I2C Parameters

Drag an SCB component onto your design and double click it to open the **Configure** dialog.

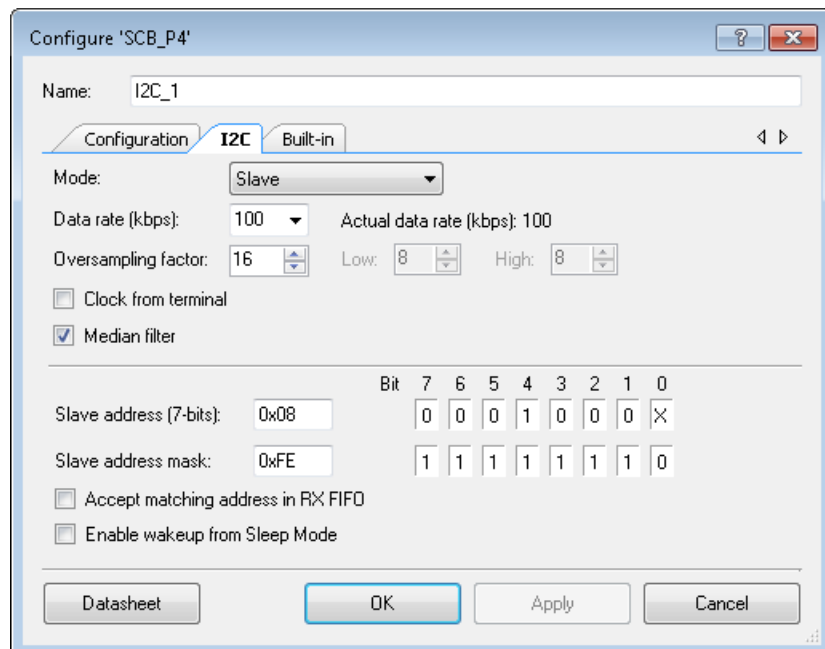

The **I2C** tab has the following parameters:

### Mode

This option determines what modes are supported, Slave, Master, Multi-Master or Multi-Master-Slave.

- **Slave** – Slave only operation (default)
- **Master** – Master only operation
- **Multi-Master** – Supports more than one master on the bus
- **Multi-Master-Slave** – Simultaneous slave and multi-master operation

### Data rate

This parameter is used to set the I<sup>2</sup>C data rate value up to 1000 kbps; the actual speed may differ based on available clock speed and divider range. The standard data rates are 50, 100 (default), 400, and 1000 kbps. If **Clock from terminal** is set, the **Data Rate** parameter is ignored; the input clock and **Oversampling factor** determines the actual data rate.

## Actual data rate

Actual data rate displays data rate on which component will operate with current settings. The selected data rate could be differing from actual data rate. The factors that have effect on actual data rate calculation are: oversampling factor, HFCLK clock and accuracy of internal component clock.

## Oversampling factor

This parameter defines the oversampling factor of the I<sup>2</sup>C SCL clock; the number of component clocks within one I<sup>2</sup>C SCL clock period. The oversampling factor consists from oversampling factor low and high. An oversampling factor maximum value is 32 and minimum depends on median filter option. The default is 16.

In **Slave** mode operation, the **Oversampling factor** is not used (does not set any register). It is just used to calculate the clock frequency required to achieve this amount of oversampling.

### Low

This parameter defines the oversampling factor low of the I<sup>2</sup>C SCL clock; the number of component clocks with in one low period I<sup>2</sup>C SCL clock. The default is 8.

### High

This parameter defines the oversampling factor high of the I<sup>2</sup>C SCL clock; the number of component clocks with in one high period I<sup>2</sup>C SCL clock. The default is 8.

## Clock from terminal

This parameter allows choosing between an internally configured clock and an externally configured clock for data rate generation. When option is enabled, the component does not control the data rate but displays the actual data rate based on the user-connected clock source. Otherwise, PSoC Creator calculates and configures the required clock frequency based on the **Data rate** parameter, taking into account the oversampling.

**Note** When setting the data rate or external clock frequency value, make sure that PSoC Creator can provide this value using the current system clock frequency. Otherwise, a warning about the clock accuracy range is generated while building the project. This warning contains the actual clock value set by PSoC Creator. Choose whether the system clock or component clock should be changed to fit the clocking system requirements and achieve an optimal value.

## Median filter

This parameter applies digital 3 taps median filter on input path of I2C SDA. This filter reduces the susceptibility to errors. However, minimum oversampling factor value is increased.

### Slave address (7-bits)

This is the I<sup>2</sup>C address that will be recognized by the slave. If slave operation is not selected, this parameter is ignored. A slave address between 0 and 127 may be selected; the default is **8**. This address is the 7-bit right-justified slave address and does not include the R/W bit.

The value may be entered as decimal or hexadecimal; for hexadecimal numbers type '0x' before the address. The binary input format is provided as well.

### Slave address mask

This parameter is used to mask bit of slave address while address match procedure. The bit 0 of address mask corresponds to read/write direction bit and always does not care in address match.

- Bit value 0 – excludes bit from address comparison.
- Bit value 1 – the bit needs to match with the corresponding bit of the I<sup>2</sup>C slave address.

For example: Slave address is 0x36 and Slave Address Mask is 0xDE (bit 0 is R/W bit and bit5 set as does not care in address match). The matched slave addresses are: 0x36 and 0x26.

The value may be entered as decimal or hexadecimal; for hexadecimal numbers type '0x' before the address. The binary input format is provided as well.

### Accept matching address in RX FIFO

This parameter determines whether to accept a match I<sup>2</sup>C slave address in the RX FIFO or not.

### Enable wakeup from Sleep Mode

This option allows the system to be awakened from sleep when an address match occurs. The I<sup>2</sup>C clock is stretched after matched address was received. The I<sup>2</sup>C slave executes clock stretching and waits until device wakeup and ACKs the address. This option is only valid if **Mode** is Slave or Muti-Master-Slave.

You must enable the possibility for the I<sup>2</sup>C to wake up the device on slave address match while switching to the sleep mode. You can do this by calling the SCB\_Sleep() API; also refer to the *Power Management APIs* section of the *System Reference Guide*.

## I2C APIs

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections discuss each function in more detail.

By default, PSoC Creator assigns the instance name "SCB\_1" to the first instance of a component in a given design. You can rename the instance to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function



name, variable, and constant symbol. For readability, the instance name used in the following table is “SCB”.

Function	Description
SCB_Init()	Initialize the SCB component according to defined parameters in the customizer.
SCB_Enable()	Enables the SCB component operation.
SCB_Start()	Starts the SCB component.
SCB_Stop()	Disable the SCB component.
SCB_Sleep()	Prepares the SCB component to enter Deep Sleep.
SCB_Wakeup()	Prepares the SCB component to exit Deep Sleep.
SCB_I2CInit()	Configures the SCB component for operation in I2C mode.
SCB_I2CSlaveStatus()	Returns slave status flags.
SCB_I2CSlaveClearReadStatus()	Returns read status flags and clears slave read status flags.
SCB_I2CSlaveClearWriteStatus()	Returns the write status and clears the slave write status flags.
SCB_I2CSlaveSetAddress()	Sets slave address, a value between 0 and 127 (0x00 to 0x7F).
SCB_I2CSlaveSetAddressMask()	Sets slave address mask, a value between 0 and 254 (0x00 to 0xFE).
SCB_I2CSlaveInitReadBuf()	Sets up the slave receive data buffer (master <- slave).
SCB_I2CSlaveInitWriteBuf()	Sets up the slave write buffer (master -> slave).
SCB_I2CSlaveGetReadBufSize()	Returns the number of bytes read by the master since SCB_I2CSlaveClearReadBuf() was called.
SCB_I2CSlaveGetWriteBufSize()	Returns the number of bytes written by the master since SCB_I2CSlaveClearWriteBuf() was called.
SCB_I2CSlaveClearReadBuf()	Resets the read buffer counter to zero.
SCB_I2CSlaveClearWriteBuf()	Resets the write buffer counter to zero.
SCB_I2CMasterStatus()	Returns the master status.
SCB_I2CMasterClearStatus()	Returns the master status and clears the status flags.
SCB_I2CMasterWriteBuf()	Writes the referenced data buffer to a specified slave address.
SCB_I2CMasterReadBuf()	Reads data from the specified slave address and places the data in the referenced buffer.
SCB_I2CMasterSendStart()	Generates a start condition and sends specified slave address.
SCB_I2CMasterSendRestart()	Generates a restart condition and sends specified slave address.
SCB_I2CMasterSendStop()	Generates a stop condition.
SCB_I2CMasterWriteByte()	Writes a single byte. This is a manual command that should only be used with the SCB_I2CMasterSendStart() or SCB_I2CMasterSendRestart() functions.



Function	Description
SCB_I2CMasterReadByte()	Reads a single byte. This is a manual command that should only be used with the SCB_I2CMasterSendStart() or SCB_I2CMasterSendRestart() functions.
SCB_I2CMasterGetReadBufSize()	Returns the number of bytes read since the SCB_I2CMasterClearReadBuf() function was called.
SCB_I2CMasterGetWriteBufSize()	Returns the number of bytes written since the SCB_I2CMasterClearWriteBuf() function was called.
SCB_I2CMasterClearReadBuf()	Resets the read buffer pointer back to the beginning of the buffer.
SCB_I2CMasterClearWriteBuf()	Resets the write buffer pointer back to the beginning of the buffer.

## Global Variables

Knowledge of these variables is not required for normal operations.

Variable	Description
SCB_initVar	SCB_initVar indicates whether the SCB component has been initialized. The variable is initialized to 0 and set to 1 the first time SCB_Start() is called. This allows the component to restart without reinitialization after the first call to the SCB_Start() routine. If reinitialization of the component is required, then the SCB_Init() function can be called before the SCB_Start() or SCB_Enable() function.

## I2C Function Appliance

Function	Slave	Master	Multi-Master	Multi-Master-Slave
SCB_I2CInit()	+	+	+	+
SCB_I2CSlaveStatus()	+	–	–	+
SCB_I2CSlaveClearReadStatus()	+	–	–	+
SCB_I2CSlaveClearWriteStatus()	+	–	–	+
SCB_I2CSlaveSetAddress()	+	–	–	+
SCB_I2CSlaveSetAddressMask()	+	–	–	+
SCB_I2CSlaveInitReadBuf()	+	–	–	+
SCB_I2CSlaveInitWriteBuf()	+	–	–	+
SCB_I2CSlaveGetReadBufSize()	+	–	–	+
SCB_I2CSlaveGetWriteBufSize()	+	–	–	+
SCB_I2CSlaveClearReadBuf()	+	–	–	+
SCB_I2CSlaveClearWriteBuf()	+	–	–	+



Function	Slave	Master	Multi-Master	Multi-Master-Slave
SCB_I2CMasterStatus()	–	+	+	+
SCB_I2CMasterClearStatus()	–	+	+	+
SCB_I2CMasterWriteBuf()	–	+	+	+
SCB_I2CMasterReadBuf()	–	+	+	+
SCB_I2CMasterSendStart()	–	+	+	+
SCB_I2CMasterSendRestart()	–	+	+	+
SCB_I2CMasterSendStop()	–	+	+	+
SCB_I2CMasterWriteByte()	–	+	+	+
SCB_I2CMasterReadByte()	–	+	+	+
SCB_I2CMasterGetReadBufSize()	–	+	+	+
SCB_I2CMasterGetWriteBufSize()	–	+	+	+
SCB_I2CMasterClearReadBuf()	–	+	+	+
SCB_I2CMasterClearWriteBuf()	–	+	+	+

### void SCB\_Init(void)

**Description:** Initializes the SCB component to operate in one of selected configurations: I2C, SPI, or UART  
When set to “Unconfigured SCB”, this function does not do any initialization.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

### void SCB\_Enable(void)

**Description:** Enables SCB component operation. The SCB configuration should be not changed when the component is enabled. Any configuration changes should be made after disabling the component.  
When set to “Unconfigured SCB”, this function does not enable the component. The component must be initialized to operate in: I2C, SPI, or UART configuration before.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Start(void)**

<b>Description:</b>	Invokes SCB_Init() and SCB_Enable(). After this function call the component is enabled and ready for operation.  When set to “Unconfigured SCB”, this function does not enable the component. The component must be initialized to operate in: I2C, SPI, or UART configuration before.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_Stop(void)**

<b>Description:</b>	Disables the SCB component.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_Sleep(void)**

<b>Description:</b>	Prepares component to enter Deep Sleep.  The “Enable wakeup from Sleep Mode” selection has an influence on this function implementation.  Call the SCB_Sleep() function before calling the CyPmSysDeepSleep() function. This function should not be called before entering Sleep. Refer to the PSoC Creator <i>System Reference Guide</i> for more information about power management functions.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_Wakeup(void)**

<b>Description:</b>	Prepares component to exit Deep Sleep.  The “Enable wakeup from Sleep Mode” selection has influence on this function implementation.  This function should not be called before entering Sleep.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	Calling the SCB_Wakeup() function without first calling the SCB_Sleep() function may produce unexpected behavior.



**void SCB\_I2CInit(SCB\_I2C\_INIT\_STRUCT \*config)**

**Description:** Configures the SCB for I2C operation.

This function is **intended specifically** to be used when the SCB configuration is set to “Unconfigured SCB” in the customizer. After initializing the SCB in I2C mode, the component can be enabled using the SCB\_Start() or SCB\_Enable() function.

This function uses a pointer to a structure that provides the configuration settings. This structure contains the same information that would otherwise be provided by the customizer settings.

**Parameters:** config: pointer to a structure that contains the following ordered list of fields. These fields match the selections available in the customizer. Refer to the customizer for further description of the settings.

Field	Description
mode	Mode of operation for I2C. The following defines are available choices: <ul style="list-style-type: none"> <li>• SCB_I2C_MODE_SLAVE</li> <li>• SCB_I2C_MODE_MASTER</li> <li>• SCB_I2C_MODE_MULTI_MASTER</li> <li>• SCB_I2C_MODE_MULTI_MASTER_SLAVE</li> </ul>
oversampleLow	Oversampling factor for the low phase of the I2C clock. Ignored for Slave mode operation. The oversampling factors need to be chosen in conjunction with the clock rate in order to generate the desired rate of I2C operation.
oversampleHigh	Oversampling factor for the high phase of the I2C clock. Ignored for Slave mode operation.
enableMedianFilter	0 – disable 1 – enable
slaveAddr	7-bit slave address. Ignored for non-slave modes.
slaveAddrMask	8-bit slave address mask. Bit 0 must have a value of 0. Ignored for non-slave modes.
acceptAddr	0 – disable 1 – enable When enabled the matching address is received into the Rx FIFO.
enableWake	0 – disable 1 – enable Ignored for non-slave modes.

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_I2CSlaveStatus(void)**

**Description:** Returns the slave's communication status.

**Parameters:** None

**Return Value:** uint32: Current status of I<sup>2</sup>C slave.

This status incorporates read and write status constants. Each constant is a bit field value. The value returned may have multiple bits set to indicate the status of the read or write transfer.

Slave Status Constants	Description
SCB_I2C_SSTAT_RD_CMPLT	Slave read transfer complete. Set when master indicates it is done reading by sending a NAK <sup>2</sup>
SCB_I2C_SSTAT_RD_BUSY	Slave read transfer in progress. Set when master addresses slave with a read, cleared when RD_CMPT is set.
SCB_I2C_SSTAT_RD_OVFL	Master attempted to read more bytes than are in buffer.
SCB_I2C_SSTAT_RD_ERR	Slave captured error on the bus while read transfer. The sources of error are: misplaced Start or Stop condition or lost arbitration while SDA driving.
SCB_I2C_SSTAT_WR_CMPLT	Slave write transfer complete. Set at reception of a Stop or ReStart condition.
SCB_I2C_SSTAT_WR_BUSY	Slave write transfer in progress. Set when the master addresses the slave with a write, cleared when WR_CMPT is set.
SCB_I2C_SSTAT_WR_OVFL	Master attempted to write past end of buffer.
SCB_I2C_SSTAT_WR_ERR	Slave captured error on the bus while write transfer. The sources of error are: misplaced Start or Stop condition or lost arbitration while SDA driving.

**Side Effects:** None

**uint32 SCB\_I2CSlaveClearReadStatus(void)**

**Description:** Clears the read status flags and returns their values. No other status flags are affected.

**Parameters:** None

**Return Value:** uint32: Current read status of slave. See the SCB\_I2CSlaveStatus() function for constants.

**Side Effects:** SCB\_I2C\_SSTAT\_RD\_BUSY is not cleared by this API call.

<sup>2</sup> NAK is an abbreviation for negative acknowledgment or not acknowledged. I<sup>2</sup>C documents commonly use NACK while the rest of the networking world uses NAK. They mean the same thing.

**uint32 SCB\_I2CSlaveClearWriteStatus(void)**

<b>Description:</b>	Clears the write status flags and returns their values. No other status flags are affected.
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Current write status of slave. See the SCB_I2CSlaveStatus() function for constants.
<b>Side Effects:</b>	SCB_I2C_SSTAT_WR_BUSY is not cleared by this API call.

**void SCB\_I2CSlaveSetAddress(uint32 address)**

<b>Description:</b>	Sets the I <sup>2</sup> C slave address
<b>Parameters:</b>	uint32 address: I <sup>2</sup> C slave address. This address is the 7-bit right-justified slave address and does not include the R/W bit.  The address value is not checked whether it violates the I2C spec. The preferred addresses are between 8 and 120 (0x08 to 0x78).
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_I2CSlaveSetAddressMask(uint32 addressMask)**

<b>Description:</b>	Sets the I <sup>2</sup> C slave address
<b>Parameters:</b>	uint32 addressMask: I <sup>2</sup> C slave address mask. Bit value 0 – excludes bit from address comparison. Bit value 1 – the bit needs to match with the corresponding bit of the I2C slave address. This value may be any between 0 and 254 (0x00 to 0xFE). The LSB of address is R/W bit and it ignored independently of addressMask bit value.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_I2CSlaveInitReadBuf(uint8 \* rdBuf, uint32 bufSize)**

<b>Description:</b>	Sets the buffer pointer and size of the read buffer. This function also resets the transfer count returned with the SCB_I2CSlaveGetReadBufSize() function.
<b>Parameters:</b>	uint8* rdBuf: Pointer to the data buffer to be read by the master.  uint32 bufSize: Size of the buffer exposed to the I <sup>2</sup> C master.
<b>Return Value:</b>	None
<b>Side Effects:</b>	If this function is called during a bus transaction, data from the previous buffer location and the beginning of the current buffer may be transmitted.

**void SCB\_I2CSlaveInitWriteBuf(uint8 \* wrBuf, uint32 bufSize)**

- Description:** Sets the buffer pointer and size of the write buffer. This function also resets the transfer count returned with the SCB\_I2CSlaveGetWriteBufSize() function.
- Parameters:** uint8\* wrBuf: Pointer to the data buffer to be written by the master.  
uint32 bufSize: Size of the write buffer exposed to the I<sup>2</sup>C master.
- Return Value:** None
- Side Effects:** If this function is called during a bus transaction, data may be received in the previous buffer and the current buffer location.

**uint32 SCB\_I2CSlaveGetReadBufSize(void)**

- Description:** Returns the number of bytes read by the I<sup>2</sup>C master since an SCB\_I2CSlaveInitReadBuf() or SCB\_I2CSlaveClearReadBuf() function was called. The maximum return value is the size of the read buffer.
- Parameters:** None
- Return Value:** uint32: Bytes read by master. If the transfer is not yet complete, it returns zero until transfer completion.
- Side Effects:** None

**uint32 SCB\_I2CSlaveGetWriteBufSize(void)**

- Description:** Returns the number of bytes written by the I<sup>2</sup>C master since an SCB\_I2CSlaveInitWriteBuf() or SCB\_I2CSlaveClearWriteBuf() function was called. The maximum return value is the size of the write buffer.
- Parameters:** None
- Return Value:** uint32: Bytes written by master. If the transfer is not yet complete, it returns the byte count transferred so far.
- Side Effects:** None

**void SCB\_I2CSlaveClearReadBuf(void)**

- Description:** Resets the read pointer to the first byte in the read buffer. The next byte read by the master will be the first byte in the read buffer.
- Parameters:** None
- Return Value:** None
- Side Effects:** None



**void SCB\_I2CSlaveClearWriteBuf(void)**

**Description:** Resets the write pointer to the first byte in the write buffer. The next byte written by the master will be the first byte in the write buffer.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_I2CMasterStatus(void)**

**Description:** Returns the master's communication status.

**Parameters:** None

**Return Value:** uint32: Current status of I<sup>2</sup>C master. This status incorporates status constants. Each constant is a bit field value. The value returned may have multiple bits set to indicate the status of the read or write transfer.

Master status constants	Description
SCB_I2C_MSTAT_RD_CMPLT	Read transfer complete. The error condition bits must be checked to ensure that read transfer was successful.
SCB_I2C_MSTAT_WR_CMPLT	Write transfer complete. The error condition bits must be checked to ensure that write transfer was successful.
SCB_I2C_MSTAT_XFER_INP	Transfer in progress
SCB_I2C_MSTAT_XFER_HALT	Transfer has been halted. The I <sup>2</sup> C bus is waiting for restart or stop condition generation.
SCB_I2C_MSTAT_ERR_SHORT_XFER	<b>Error condition:</b> Write transfer completed before all bytes were transferred.
SCB_I2C_MSTAT_ERR_ADDR_NAK	Error condition: Slave did not acknowledge address.
SCB_I2C_MSTAT_ERR_ARB_LOST	<b>Error condition:</b> Master lost arbitration during communications with slave.
SCB_I2C_MSTAT_ERR_ABORT_XFER	<b>Error condition:</b> slave was addressed by another master while Master performs Start condition generation. As a result, master has automatically switched to slave mode and is responding. The master transaction was not taken place
SCB_I2C_MSTAT_ERR_BUS_ERROR	<b>Error condition:</b> bus error was occurred while master transfer due to misplaced start or stop condition on the bus.
SCB_I2C_MSTAT_ERR_XFER	<b>Error condition:</b> This is the ORed value of all error conditions provided above.

**Side Effects:** None



**uint32 SCB\_I2CMasterClearStatus(void)**

<b>Description:</b>	Clears all status flags and returns the master status.
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Current status of master. See the SCB_I2CMasterStatus() function for constants.
<b>Side Effects:</b>	None

**uint32 SCB\_I2CMasterWriteBuf(uint32 slaveAddress, uint8 \* wrData, uint32 cnt, uint32 mode)**

<b>Description:</b>	Automatically writes an entire buffer of data to a slave device. Once the data transfer is initiated by this function, further data transfer is handled by the included ISR. Enables the I <sup>2</sup> C interrupt.
<b>Parameters:</b>	uint32 slaveAddress: Right-justified 7-bit Slave address (valid range 8 to 120). uint8 wrData: Pointer to buffer of data to be sent. uint32 cnt: Number of bytes of buffer to send. uint32 mode: Transfer mode defines: (1) Whether a start or restart condition is generated at the beginning of the transfer, and (2) Whether the transfer is completed or halted before the stop condition is generated on the bus. Transfer mode, mode constants may be ORed together.

Mode Constants	Description
SCB_I2C_MODE_COMPLETE_XFER	Perform complete transfer from Start to Stop.
SCB_I2C_MODE_REPEAT_START	Send Repeat Start instead of Start.
SCB_I2C_MODE_NO_STOP	Execute transfer without a Stop

<b>Return Value:</b>	uint32: Error Status. See the SCB_I2CMasterSendStart() function for constants.
<b>Side Effects:</b>	This function clears SCB_I2C_MSTAT_WR_CMPLT status.

**uint32 SCB\_I2CMasterReadBuf(uint32 slaveAddress, uint8 \* rdData, uint32 cnt, uint32 mode)**

- Description:** Automatically reads an entire buffer of data from a slave device. Once the data transfer is initiated by this function, further data transfer is handled by the included ISR. Enables the I<sup>2</sup>C interrupt.
- Parameters:** uint32 slaveAddress: Right-justified 7-bit Slave address (valid range 8 to 120).  
uint8 rdData: Pointer to buffer where to put data from slave.  
uint32 cnt: Number of bytes of buffer to read.  
uint32 mode: Transfer mode defines:  
(1) Whether a start or restart condition is generated at the beginning of the transfer, and  
(2) Whether the transfer is completed or halted before the stop condition is generated on the bus.  
Transfer mode, mode constants may be ORed together. See SCB\_I2CMasterWriteBuf() function for constants.
- Return Value:** uint32: Error Status. See the SCB\_I2CMasterSendStart() function for constants.
- Side Effects:** This function clears SCB\_I2C\_MSTAT\_RD\_CMPLT status.

**uint32 SCB\_I2CMasterSendStart(uint32 slaveAddress, uint32 bitRnW)**

- Description:** Generates start condition and sends slave address with read/write bit.  
Disables the I<sup>2</sup>C interrupt.
- Parameters:** uint32 slaveAddress: Right justified 7-bit Slave address (valid range 8 to 120).  
uint32 bitRnW: Set to zero, send write command; set to nonzero, send read command.
- Return Value:** uint32: Error Status.

Mode Constants	Description
SCB_I2C_MSTR_NO_ERROR	Function complete without error.
SCB_I2C_MSTR_BUS_BUSY	Bus is busy occurred. Start condition generation is not generated.
SCB_I2C_MSTR_NOT_READY	Master is not active master on the bus. The Slave operation may be in progress.
SCB_I2C_MSTR_ERR_LB_NAK	<b>Error condition:</b> Last byte was NAKed.
SCB_I2C_MSTR_ERR_ARB_LOST	<b>Error condition:</b> Master lost arbitration.
SCB_I2C_MSTR_ERR_BUS_ERR	<b>Error condition:</b> Master encountered bus error. Bus error is misplaced start or stop detection.
SCB_I2C_MSTR_ERR_ABORT_START	<b>Error condition:</b> The start condition generation was aborted due to begin of Slave operation. (This status is only valid in Multi-Master-Slave mode.)

- Side Effects:** This function becomes blocking after start condition considered to be generated. It exists after start condition and address is sent and ACK/NACK response is received or one of error occurred.

**uint32 SCB\_MasterSendRestart(uint32 slaveAddress, uint32 bitRnW)**

- Description:** Generates restart condition and sends slave address with read/write bit.  
A valid start or restart condition must be generated before calling this function. This function does nothing if start or restart conditions failed before this function was called.
- Parameters:** uint32 slaveAddress: Right-justified 7-bit Slave address (valid range 8 to 120).  
uint32 bitRnW: Set to zero, send write command; set to nonzero, send read command.
- Return Value:** uint32: Error Status. See SCB\_I2CMasterSendStart() function for constants.
- Side Effects:** This function becomes blocking after start condition considered to be generated. It exists after start condition and address is sent and ACK/NACK response is received or one of error occurred.

**uint32 SCB\_I2CMasterSendStop(void)**

**Description:** Generates I<sup>2</sup>C stop condition on the bus.  
 At least one byte has to be read if start or restart condition with read direction was generated.  
 A valid start or restart condition must be generated before calling this function. This function does nothing if start or restart condition failed before this function was called.

**Parameters:** None

**Return Value:** uint32: Error Status. See the SCB\_MasterSendStart() command for constants.

**Side Effects:** This function is blocking and doesn't exit until a stop condition is generated or error occurred.

**uint32 SCB\_I2CMasterWriteByte(uint32 theByte)**

**Description:** Sends one byte to a slave.  
 A valid start or restart condition must be generated before calling this function. This function does nothing if start or restart conditions failed before this function was called.

**Parameters:** uint32 theByte: Data byte to send to the slave.

**Return Value:** uint32: Error Status.

Mode Constants	Description
SCB_I2C_MSTR_NO_ERROR	Function complete without error.
SCB_I2C_MSTR_NOT_READY	Master is not active master on the bus. The Slave operation may be in progress.
SCB_I2C_MSTR_ERR_LB_NAK	<b>Error condition:</b> Last byte was NAKed.
SCB_I2C_MSTR_ERR_ARB_LOST	<b>Error condition:</b> Master lost arbitration.
SCB_I2C_MSTR_ERR_BUS_ERR	<b>Error condition:</b> Master encountered bus error. Bus error is misplaced start or stop detection.

**Side Effects:** This function is blocking and doesn't exit until byte is transmitted or error occurred.

**uint32 SCB\_I2CMasterReadByte(uint32 acknNak)**

**Description:** Reads one byte from a slave and ACKs or NAKs the transfer.  
 A valid start or restart condition must be generated before calling this function. This function does nothing and returns a zero value if start or restart conditions failed before this function was called.

**Parameters:** uint32 acknNak: If zero, sends a NAK; if nonzero sends an ACK.

**Return Value:** uint32: Byte read from the slave. In case of error the MSB of returned data is set to 1.

**Side Effects:** This function is blocking and doesn't exit until byte is received or error occurred.

**uint32 SCB\_I2CMasterGetReadBufSize(void)**

<b>Description:</b>	Returns the number of bytes that has been transferred with an SCB_I2CMasterReadBuf() function.
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Byte count of transfer. If the transfer is not yet complete, it returns the byte count transferred so far.
<b>Side Effects:</b>	None

**uint32 SCB\_I2CMasterGetWriteBufSize(void)**

<b>Description:</b>	Returns the number of bytes that have been transferred with an SCB_I2CMasterWriteBuf() function.
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Byte count of transfer. If the transfer is not yet complete, it returns zero unit transfer completion.
<b>Side Effects:</b>	None

**void SCB\_I2CMasterClearReadBufSize(void)**

<b>Description:</b>	Resets the read buffer pointer back to the first byte in the buffer.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_I2CMasterClearWriteBufSize(void)**

<b>Description:</b>	Resets the write buffer pointer back to the first byte in the buffer.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

## Bootloader Support

The SCB component can be used as a communication component for the Bootloader. Only SCB in I2C mode can be used as a bootloader. You should use the following configurations to support communication protocol from an external system to the Bootloader:

- Configuration: I2C



- I2C Mode: Slave or Multi-Master-Slave
- Data Rate: Must match Host (boot device) data rate.
- Slave Address: Must match Host (boot device) selected slave address.

See the *System Reference Guide* for more information about the Bootloader.

The SCB component provides a set of API functions for Bootloader use.

Function	Description
SCB_CyBtldrCommStart()	Starts the I <sup>2</sup> C component and enables its interrupt.
SCB_CyBtldrCommStop()	Disable the I <sup>2</sup> C component and disables its interrupt.
SCB_CyBtldrCommReset()	Sets read and write I <sup>2</sup> C buffers to the initial state and resets the slave status.
SCB_CyBtldrCommWrite()	Allows the caller to write data to the bootloader host. This function handles polling to allow a block of data to be completely sent to the host device.
SCB_CyBtldrCommRead()	Allows the caller to read data from the bootloader host. This function handles polling to allow a block of data to be completely received from the host device.

### void SCB\_CyBtldrCommStart(void)

**Description:** Starts the I<sup>2</sup>C component and enables its interrupt.  
 Every incoming I<sup>2</sup>C write transaction is treated as a command for the bootloader.  
 Every incoming I<sup>2</sup>C read transaction returns 0xFF until the bootloader provides a response to the executed command.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

### void SCB\_CyBtldrCommStop(void)

**Description:** Disables the I<sup>2</sup>C component and disables its interrupt.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_CyBtldrCommReset(void)**

<b>Description:</b>	Sets read and write I <sup>2</sup> C buffers to the initial state and resets the slave status.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**cystatus SCB\_CyBtldrCommRead(uint8 pData[], uint16 size, uint16 \* count, uint8 timeOut)**

<b>Description:</b>	Allows the caller to read data from the bootloader host. The function handles polling to allow a block of data to be completely received from the host device.
<b>Parameters:</b>	uint8 pData[]: Pointer to the block of data to send to the device. uint16 size: Number of bytes to write. uint16 *count: Pointer to variable to write the number of bytes actually written. uint8 timeOut: Number of units in 10 ms to wait before returning because of a timeout.
<b>Return Value:</b>	cystatus: Returns CYRET_SUCCESS if no problem was encountered or returns the value that best describes the problem. For more information, refer to the “Return Codes” section of the <i>System Reference Guide</i> .
<b>Side Effects:</b>	None

**cystatus SCB\_CyBtldrCommWrite(const uint8 pData[], uint16 size, uint16 \* count, uint8 timeOut)**

<b>Description:</b>	Allows the caller to write data to the bootloader host. The function handles polling to allow a block of data to be completely sent to the host device.
<b>Parameters:</b>	const pData[]: Pointer to the block of data to send to the device. uint16 size: Number of bytes to write. uint16 *count: Pointer to variable to write the number of bytes actually written. uint8 timeOut: Number of units in 10 ms to wait before returning because of a timeout.
<b>Return Value:</b>	cystatus: Returns CYRET_SUCCESS if no problem was encountered or returns the value that best describes the problem. For more information refer to the “Return Codes” section of the <i>System Reference Guide</i> .
<b>Side Effects:</b>	None

**I2C Functional Description**

This component supports I<sup>2</sup>C Slave, Master, Multi-Master, and Multi-Master-Slave configurations. The following sections provide an overview of how to use the component in these configurations.

This component requires that you enable global interrupts since the I<sup>2</sup>C hardware is interrupt driven. Even though this component requires interrupts, you do not need to add any code to the



ISR (interrupt service routine). The component services all interrupts (data transfers) independent of your code. The memory buffers allocated for this interface look like simple dual-port memory between your application and the I<sup>2</sup>C master/slave.


## Slave Operation

The slave interface consists of two buffers in memory, one for data written to the slave by a master and a second buffer for data read by a master from the slave. Remember that reads and writes are from the perspective of the I<sup>2</sup>C master. The I<sup>2</sup>C slave read and write buffers are set by the initialization commands below. These commands do not allocate memory, but instead copy the array pointer and size to the internal component variables. You must instantiate the arrays used for the buffers because they are not automatically generated by the component. The same buffer may be used for both read and write buffers, but you must be careful to manage the data properly.

```
void SCB_I2CSlaveInitReadBuf(uint8 * rdBuf, uint32 bufSize)
void SCB_I2CSlaveInitWriteBuf(uint8 * wrBuf, uint32 bufSize)
```

Using the functions above sets a pointer and byte count for the read and write buffers. The bufSize for these functions may be less than or equal to the actual array size, but it should never be larger than the available memory pointed to by the rdBuf or wrBuf pointers.

**Figure 1 Slave Buffer Structure**

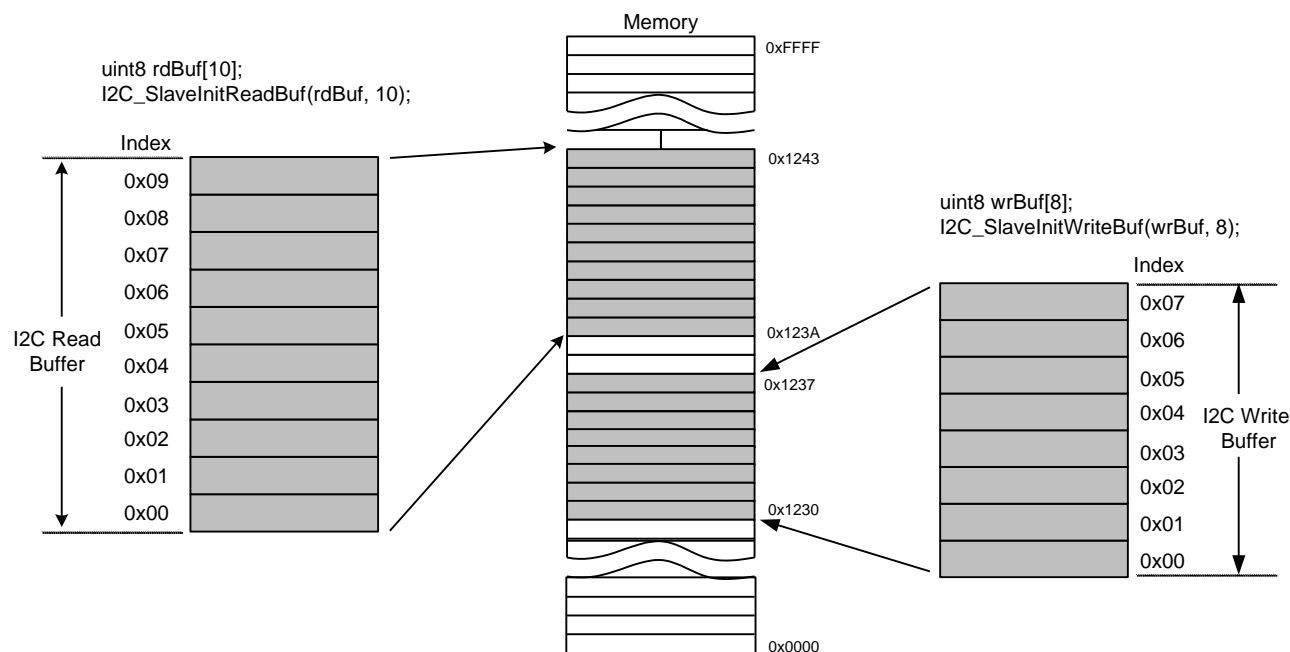

When the SCB\_I2CSlaveInitReadBuf() or SCB\_I2CSlaveInitWriteBuf() functions are called, the internal index is set to the first value in the array pointed to by rdBuf and wrBuf, respectively. As bytes are read or written by the I<sup>2</sup>C master, the index is incremented until the offset is one less than the bufSize. At any time the number of bytes transferred may be queried by calling either



SCB\_I2CSlaveGetReadBufSize() or SCB\_I2CSlaveGetWriteBufSize() for the read and write buffers, respectively. Reading or writing more bytes than are in the buffers causes an overflow. The overflow status is set in the slave status byte and may be read with the SCB\_I2CSlaveStatus() API.

To reset the index back to the beginning of the array, use the following commands.


```
void SCB_I2CSlaveClearReadBuf(void)
void SCB_I2CSlaveClearWriteBuf(void)
```

This resets the index back to zero. The next byte read or written to by the I<sup>2</sup>C master is the first byte in the array. Before these clear buffer commands are used, the data in the arrays should be read or updated.

Multiple reads or writes by the I<sup>2</sup>C master continue to increment the array index until the clear buffer commands are used or the array index attempts to grow beyond the array size. [Figure 2](#) shows an example where an I<sup>2</sup>C master has executed two write transactions. The first write was four bytes and the second write was six bytes. The sixth byte in the second transaction was NAKed by the slave to signal that the end of the buffer had occurred. If the master tried to write a seventh byte for the second transaction or started to write more bytes with a third transaction, each byte would be NAKed and discarded until the buffer is reset.

Using the SCB\_I2CSlaveClearWriteBuf() function after the first transaction resets the index back to zero and causes the second transaction to overwrite the data from the first transaction. Make sure data is not lost by overflowing the buffer. The data in the buffer should be processed by the slave before resetting the buffer index.

**Figure 2 System Memory**

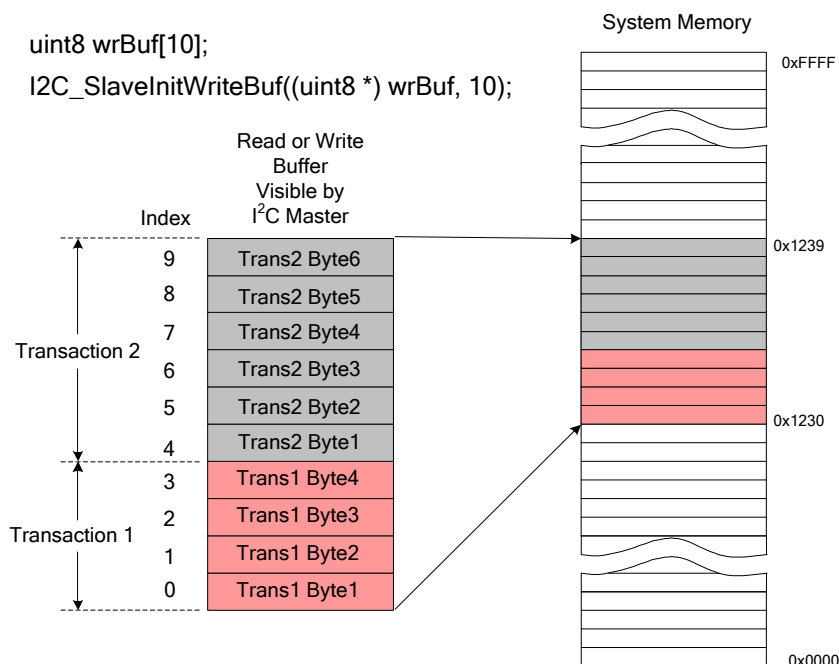

Both the read and write buffers have four status bits to signal transfer complete, transfer in progress, and buffer overflow. When a transfer starts, the busy flag is set. When the transfer is complete, the transfer complete flag is set and the busy flag is cleared. If a second transfer is started, both the busy and transfer complete flags may be set at the same time. The following table shows read and write status flags.

Slave Status Constants	Description
SCB_I2C_SSTAT_RD_CMPLT	Slave read transfer complete.
SCB_I2C_SSTAT_RD_BUSY	Slave read transfer in progress (busy).
SCB_I2C_SSTAT_RD_OVFL	Master attempted to read more bytes than are in buffer.
SCB_I2C_SSTAT_RD_ERR	Slave captured error on the bus while read transfer.
SCB_I2C_SSTAT_WR_CMPLT	Slave write transfer complete.
SCB_I2C_SSTAT_WR_BUSY	Slave Write transfer in progress (busy).
SCB_I2C_SSTAT_WR_OVFL	Master attempted to write past end of buffer.
SCB_I2C_SSTAT_WR_ERR	Slave captured error on the bus while write transfer.

The following code example initializes the write buffer then waits for a transfer to complete. Once the transfer is complete, the data is then copied into a working array to handle the data. In many applications, the data does not have to be copied to a second location, but instead can be processed in the original buffer. You could create an almost identical read buffer example by replacing the write functions and constants with read functions and constants. Processing the data may mean new data is transferred into the slave buffer instead of out.

```
uint8 wrBuf[10];
uint8 userArray[10];
uint32 byteCnt;
/* Initialize write buffer before call SCB_Start */
SCB_I2CSlaveInitWriteBuf((uint8 *) wrBuf, 10);

/* Start I2C Slave operation */
SCB_I2CStart();

/* Wait for I2C master to complete a write */

for(;;) /* loop forever */
{
    /* Wait for I2C master to complete a write */
    if(0u != (SCB_I2CSlaveStatus() & SCB_I2C_SSTAT_WR_CMPLT))
    {
        byteCnt = SCB_I2CSlaveGetWriteBufSize();
        SCB_I2CSlaveClearWriteStatus();
        for(i=0; i < byteCnt; i++)
        {
            userArray[i] = wrBuf[i]; /* Transfer data */
        }
        SCB_I2CSlaveClearWriteBuf();
    }
}
```

**Note** All slave status and buffer operation APIs are not interrupt protected and may be modified by I2C ISR. It is preferred to disable I2C interrupt while status and buffer processing. The interrupt disabling blocks slave operation and causes SCL clock stretching.

## Master/Multi-Master Operation

Master and Multi-Master operation are basically the same, with two exceptions. When operating in Multi-Master mode, the bus should always be checked to see if it is busy. Another master may already be communicating with another slave. In this case, the program must wait until the current operation is complete before issuing a start transaction. The program looks at the return value, which sets an error if another master has control of the bus.

The second difference is that, in Multi-Master mode, two masters can start at the exact same time. If this happens, one of the two masters loses arbitration. You must check for this condition after each byte is transferred. The component automatically checks for this condition and responds with an error if arbitration is lost.

There are two options when operating the I<sup>2</sup>C master: manual and automatic. In the automatic mode, a buffer is created to hold the entire transfer. In the case of a write operation, the buffer is prefilled with the data to be sent. If data is to be read from the slave, a buffer at least the size of the packet needs to be allocated. To write an array of bytes to a slave in automatic mode, use the following function.

```
uint32 SCB_I2CMasterWriteBuf(uint32 slaveAddress, uint8 * wrData, uint32 cnt,
uint32 mode)
```

The slaveAddress variable is a right-justified 7-bit slave address of 0 to 127. The component API automatically appends the write flag to the LSb of the address byte. The array of data to transfer is pointed to with the second parameter, xferData. The cnt parameter is the number of bytes to transfer. The last parameter, mode, determines how the transfer starts and stops. A transaction may begin with a restart instead of a start, or halt before the stop sequence. These options allow back-to-back transfers where the last transfer does not send a stop and the next transfer issues a restart instead of a start.

A read operation is almost identical to the write operation. The same parameters with the same constants are used.

```
uint32 SCB_I2CMasterReadBuf(uint32 slaveAddress, uint8 * rdData, uint32 cnt,
uint32 mode);
```

Both of these functions return status. See the status table for the SCB\_I2CMasterStatus() function return value. Since the read and write transfers complete in the background during the I<sup>2</sup>C interrupt code, the SCB\_I2CMasterStatus() function can be used to determine when the transfer is complete. A code snippet that shows a typical write to a slave follows.

```
SCB_I2CMasterClearStatus(); /* Clear any previous status */
SCB_I2CMasterWriteBuf(8u, (uint8 *) wrData, 10u, SCB_I2C_MODE_COMPLETE_XFER);
for(;;)
{
    if(0u != (SCB_I2CMasterStatus() & SCB_I2C_MSTAT_WR_CMPLT))
    {
```



```

        /* Transfer complete. Check Master status to make sure that transfer
           completed without errors. */

        break;
    }
}

```

The I<sup>2</sup>C master can also be operated manually. In this mode, each part of the write transaction is performed with individual commands.

```

status = SCB_I2CMasterSendStart(8u, SCB_I2C_WRITE_XFER_MODE);
if(SCB_I2C_MSTR_NO_ERROR == status)    /* Check if transfer completed without
errors */
{
    /* Send array of 5 bytes */
    for(i=0; i<5u; i++)
    {
        status = SCB_I2CMasterWriteByte(userArray[i]);
        if(SCB_I2C_MSTR_NO_ERROR != status)
        {
            break;
        }
    }
}
SCB_I2CMasterSendStop();    /* Send Stop */

```

A manual read transaction is similar to the write transaction except the last byte should be NAKed. The example below shows a typical manual read transaction.

```

status = SCB_I2CMasterSendStart(8u, SCB_I2C_READ_XFER_MODE);
if(SCB_I2C_MSTR_NO_ERROR == status)    /* Check if transfer completed without
errors */
{
    /* Read array of 5 bytes */
    for(i=0; i<5u; i++)
    {
        if(i < 4u)
        {
            userArray[i] = SCB_I2CMasterReadByte(SCB_I2C_ACK_DATA);
        }
        else
        {
            userArray[i] = SCB_I2CMasterReadByte(SCB_I2C_NAK_DATA);
        }
    }
}
SCB_I2CMasterSendStop();    /* Send Stop */

```

## Multi-Master-Slave Mode Operation

Both Multi-Master and Slave are operational in this mode. The component may be addressed as a slave, but firmware may also initiate master mode transfers. In this mode, when a master loses arbitration during an address byte, the slave hardware checks whether winning master address it. In case of address match the slave becomes active.

For Master and Slave operation examples look at the [Slave Operation](#) and [Master Operation](#) sections.


**Note** All slave status and buffer operation APIs are not interrupt protected and may be modified by I2C ISR. It is preferred to disable I2C interrupt while status and buffer processing. The interrupt disabling blocks slave operation and causes SCL clock stretching.

Master/Multi-Master Operation sections.

## External Electrical Connections

As [Figure 3](#) shows, the I<sup>2</sup>C bus requires external pull-up resistors. The pull-up resistors ( $R_P$ ) are determined by the supply voltage, clock speed, and bus capacitance. Make the minimum sink current for any device (master or slave) no less than 3 mA at  $V_{OLmax} = 0.4$  V for the output stage. This limits the minimum pull-up resistor value for a 5-V system to about 1.5 k $\Omega$ . The maximum value for  $R_P$  depends upon the bus capacitance and clock speed. For a 5-V system with a bus capacitance of 150 pF, the pull-up resistors are no larger than 6 k $\Omega$ . For more information about sizing pull-up resistors and other physical bus specifications, see *The I<sup>2</sup>C-Bus Specification*.

**Figure 3 Connection of Devices to the I<sup>2</sup>C Bus**

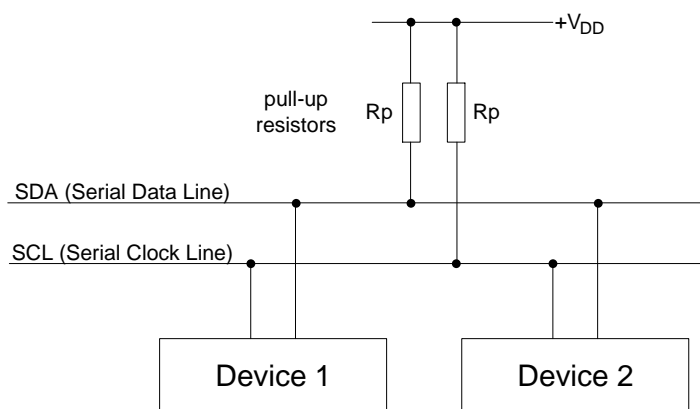

**Note** Purchase of I<sup>2</sup>C components from Cypress or one of its sublicensed Associated Companies, conveys a license under the Philips I<sup>2</sup>C Patent Rights to use these components in an I<sup>2</sup>C system, provided that the system conforms to the I<sup>2</sup>C Standard Specification as defined by Philips. As of October 1, 2006, Philips Semiconductors has a new trade name - NXP Semiconductors.

## Low power modes

The I2C in slave modes (Slave, Multi-Master-Slave) can be used as wakeup sources from Deep Sleep. The “Enable wakeup from Sleep mode” must be checked in the customizer or appropriate field of configuration structure set. The external logic performs address match and generates wakeup interrupt. The slave stretches SCL unit device wakeup time is passed and then I2C\_ISR sets command to ACK the address. Entering Deep Sleep while I2C transaction intended to slave is in progress it is unsafe therefore following code suggested:

```
CyGlobalIntDisable; /* Disable all interrupts to lock I2C bus state */

/* Check if transaction is in process */
status = (SCB_I2CSlaveStatus() & (SCB_I2C_SSTAT_RD_BUSY |
                                   SCB_I2C_SSTAT_WR_BUSY));

if(0u == status) /* Bus is free */
{
    SCB_Sleep(); /* Prepare to Deep Sleep */


    CySysPmDeepSleep();

    CyGlobalIntEnable; /* Disable all interrupts to unlock I2C bus state */

    SCB_Wakeup(); /* Exit Deep Sleep */
}
else
{
    /* Transaction in progress: do not go to Deep Sleep */
    CyGlobalIntEnable;
}
```

**Note** To wakeup device from Sleep leave “Enable wakeup from Sleep mode” option unchecked. There is no reason to call SCB\_Sleep() and SCB\_Wake() in this case.

## SPI

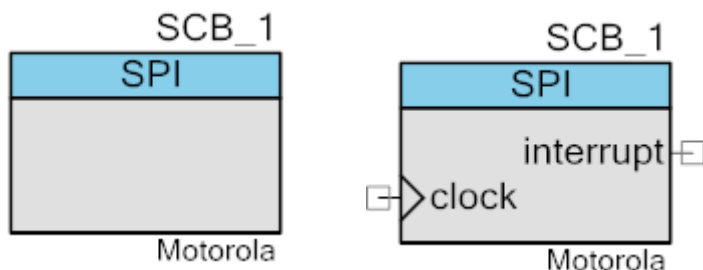

The component provides an industry-standard, 4-wire SPI interface. The original SPI protocol was defined by Motorola. The component supports three additional modes, allowing communication with any SPI device. In addition to the standard 8-bit word length, the component supports a configurable 4 to 16-bit data width for communicating at nonstandard SPI data widths.

### Input/Output Connections

This section describes the various input and output connections for the SCB component. An asterisk (\*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

#### clock – Input\*


Clock that operates this block. The presence of this terminal varies depending on the **Clock from terminal** parameter.

#### interrupt – Output\*

This signal can only be connected to an interrupt component or left unconnected. The presence of this terminal varies depending on the **Interrupt** parameter.

The interface specific pins are buried inside component because these pins use dedicated connections and are not routable as general purpose signals. See the *I/O System* section in chip *Technical Reference Manual (TRM)* for more information.

## Basic SPI Parameters

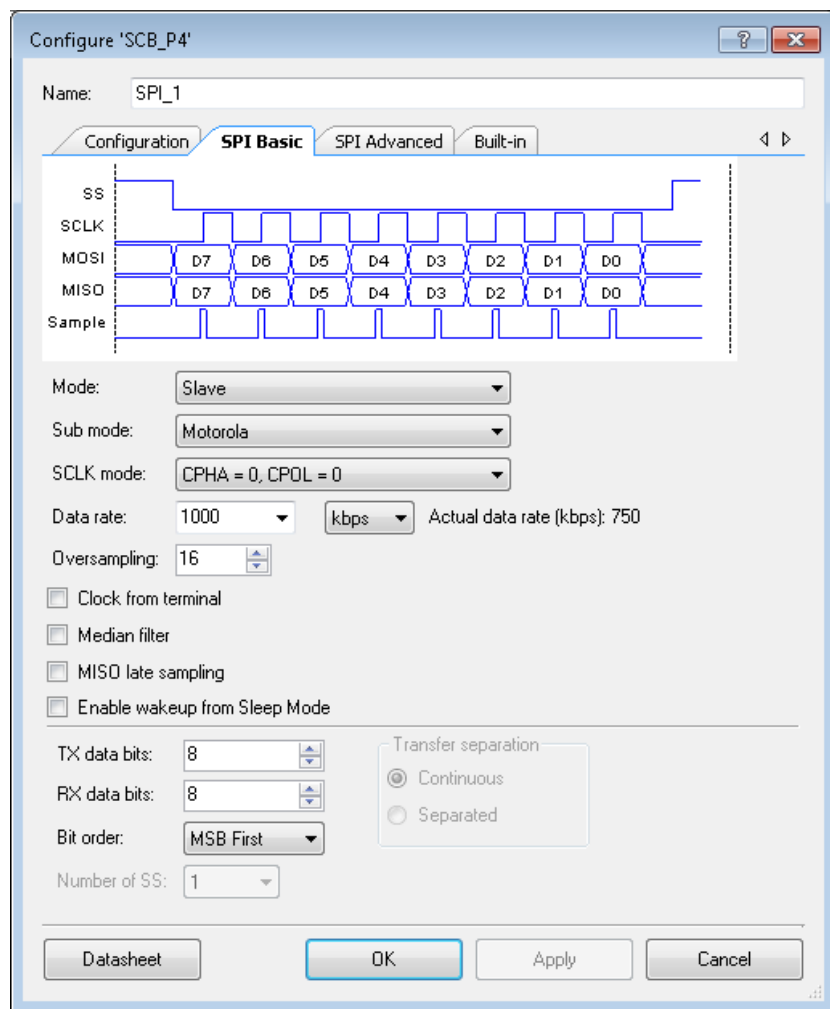

The **SPI Basic** tab contains the following parameters:

### Mode

This option determines in what SPI mode the SCB will be operated in.

- **Slave** – Slave only operation (default)
- **Master** – Master only operation

### Sub mode

This option determines what SPI sub-modes are supported, Motorola, TI (Start Coincides), TI (Start Precedes), or National Semiconductor's Microwire protocol.

- **Motorola** – The original SPI protocol is defined by Motorola (default).



- **TI (Start Coincides)** – The Texas Instruments' SPI protocol.
- **TI (Start Precedes)** – The Texas Instruments' SPI protocol.
- **National Semiconductor** – The National Semiconductor's Microwire protocol.

### SCLK mode

The parameter defines the clock phase and clock polarity mode you want to use in the communication. The CPHA and CPOL selection provided.

- **CPHA = 0, CPOL= 0** – Data is driven on a falling edge of SCLK. Data is captured on a rising edge of SCLK. This is default mode.
- **CPHA = 0, CPOL= 1** – Data is driven on a rising edge of SCLK. Data is captured on a falling edge of SCLK.
- **CPHA = 1, CPOL= 0** – Data is driven on a rising edge of SCLK. Data is captured on a falling edge of SCLK.
- **CPHA = 1, CPOL= 1** – Data is driven on a falling edge of SCLK. Data is captured on a rising edge of SCLK.

### Clock from terminal

This parameter allows choosing between an internally configured clock and an externally configured clock for data rate generation. When option is enabled, the component does not control the data rate but displays the actual data rate based on the user-connected clock source. Otherwise, PSoC Creator calculates and configures the required clock frequency based on the **Data rate** parameter, taking into account the oversampling.

**Note** When setting the data rate or external clock frequency value, make sure that PSoC Creator can provide this value using the current system clock frequency. Otherwise, a warning about the clock accuracy range is generated while building the project. This warning contains the actual clock value set by PSoC Creator. Choose whether the system clock or component clock should be changed to fit the clocking system requirements and achieve an optimal value.

### Data rate

This parameter is used to set the SPI data rate value up to 8000 kbps; the actual rate may differ based on available clock speed and divider range. The standard bit rates are 500, 1000 (default), 2000, 4000 to 8000 in multiples of 2000 kbps. This parameter has no affect if the **Clock from terminal** parameter is enabled.

### Oversampling

This parameter determines the number of internal clocks for each SPI clock period. The default value is a **16**. Any integer from 4 to 16 is a valid setting.



For **Master** this range varies depending on setting of **Median filter** and **Enable late MISO sample**:

- 6 to 16 – **Median filter** is unchecked, **Enable late MISO sample** is unchecked
- 3 to 16 – **Median filter** is unchecked, **Enable late MISO sample** is checked
- 8 to 16 – **Median filter** is checked, **Enable late MISO sample** is unchecked
- 4 to 16 – **Median filter** is checked, **Enable late MISO sample** is checked

In **Slave** mode operation, the **Oversampling factor** is not used (doesn't set any register). It is just used to calculate the clock frequency required to achieve this amount of oversampling. For **Slave** this range varies depending on setting of **Median filter**:

- 6 to 16 – **Median filter** is unchecked
- 8 to 16 – **Median filter** is checked

### Median filter

This parameter applies 3 taps digital median filter on input path of MISO. This filter reduces the susceptibility to errors. However, minimum oversampling factor value is increased. The default value is a **Disabled**.

### Enable late MISO sample

This option allows changing the SCLK edge on which MISO is captured (only applicable for **Master** mode). The default value is a **Disabled**.

### Enable wakeup from Sleep Mode

This option allows the system to be awakened from sleep on slave select. This option is only valid in Slave mode.

### TX data bits

This option defines the bit width in a transmitted data frame. The default number of bits is a single byte (8 bits). Any integer from 4 to 16 is a valid setting.

### RX data bits

This option defines the bit width in a received data frame. The default number of bits is a single byte (8 bits). Any integer from 4 to 16 is a valid setting.

**Note** The number of **TX data bits** and **RX data bits** should be set same for **Motorola** and **Texas Instruments** sub-modes and they can be set different for **National Semiconductor** sub-mode.

### Bit order

The **Bits order** parameter defines the direction in which the serial data is transmitted. When set to **MSB first**, the most-significant bit is transmitted first. When set to **LSB first**, the least-significant bit is transmitted first.

### Number of SS

This parameter determines the number of SPI slave select lines. The default number of lines is a 1 line. Any integer from 1 to 4 is a valid setting. This option is only valid in **Master** mode.

### Transfer separation

The **Transfer separation** parameter defines if individual data transfers are separated by slave select de-selection. These modes are defined in the following table. See table below for more information.

- **Continuous** – The SS goes low at the start of transfer and goes high when transfer completes (default)
- **Separated** – Every data frame 4 -16 bits is separated by SS de-selection by one SCLK period

## Advanced SPI Parameters

Configure 'SCB\_P4'

Name: SPI\_1

Configuration | SPI Basic | **SPI Advanced** | Built-in

Buffer size

RX buffer size: 8

TX buffer size: 8

Interrupt

☐ None

☒ Internal

☐ External

Interrupt sources

☐ SPI done

☐ TX FIFO not full

☐ TX FIFO empty

☐ TX FIFO overflow

☐ TX FIFO underflow

☐ TX FIFO trigger: 0

☐ SPI bus error

☐ RX FIFO not empty

☐ RX FIFO full

☐ RX FIFO overflow

☐ RX FIFO underflow

☐ RX FIFO trigger: 7

Datasheet OK Apply Cancel

The **SPI Advanced** tab contains the following parameters:

### RX buffer size

The **RX buffer size** parameter defines the size (in bytes/words) of memory allocated for a circular receive data buffer. If this parameter is set to 8, the eight bytes/words RX FIFO is implemented in the hardware. All other values up to  $2^{32}$  use the 8-bytes/words RX FIFO and a software buffer controlled by the supplied APIs and internal ISR. The buffer size is limited only available memory. Interrupt mode sets to internal automatically if RX buffer size is greater than 8.

### TX buffer size

The **TX buffer size** parameter defines the size (in bytes/words) of memory allocated for a circular transmit data buffer. If this parameter is set to 8, the eight bytes/words TX FIFO is implemented in the hardware. All other values up to  $2^{32}$  use the 8-bytes/words RX FIFO and a software buffer controlled by the supplied APIs and internal ISR. The buffer size is limited only available memory. Interrupt mode sets to internal automatically if TX buffer size is greater than 8.

### Interrupt

This option determines what interrupt modes are supported None, Internal or External.

- **None** – Removes internal interrupt component
- **Internal** – This option leaves interrupt component inside SCB component. The predefined internal ISR is hooked up to interrupt. The customer function can be registered to call on every entry to ISR. The **Interrupt sources** option defines interrupt events to trigger interrupt.
- **External** – This option removes internal interrupt and provides output terminal. Only the interrupt component can be connected to it if customer interrupt handler desired. The **Interrupt sources** option sets interrupt source which triggers interrupt output.

**Note** For buffer sizes greater than 8 bytes/words, the component automatically enables the internal interrupt sources required for proper internal software buffer operations. In addition, the global interrupt enable must be explicitly enabled for proper buffer handling.

### Interrupt sources

The SPI supports interrupts on the following events:

- **SPI done** – Master transfer done event: all data frames in the TX FIFO are sent and the TX FIFO is empty
- **TX FIFO not full** – TX FIFO is not full
- **TX FIFO empty** – TX FIFO is empty



- **TX FIFO overflow** – Attempt to write to a full TX FIFO
- **TX FIFO underflow** – Attempt to read from an empty TX FIFO
- **TX FIFO trigger** – When the TX FIFO has less entries than the amount of this field, a transmitter trigger event is generated
- **SPI bus error** – SPI slave deselected at an unexpected time in the SPI transfer
- **RX FIFO not empty** – RX FIFO is not empty
- **RX FIFO full** – RX FIFO is full
- **RX FIFO overflow** – Attempt to write to a full RX FIFO
- **RX FIFO underflow** – Attempt to read from an empty RX FIFO
- **RX FIFO trigger** – When the RX FIFO has less entries than the amount of this field, a transmitter trigger event is generated

### Note

When **RX buffer size** is greater than 8 bytes/words, the **RX FIFO not empty** interrupt source is reserved by the component and used for internal software buffer operations.

When **TX buffer size** is greater than 8 bytes/words, the **TX FIFO not full** interrupt source is reserved by the component and used for internal software buffer operations.

## SPI APIs

APIs allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections discuss each function in more detail.

By default, PSoC Creator assigns the instance name “SCB\_1” to the first instance of a component in a given design. You can rename the instance to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is “SCB”.

Function	Description
SCB_Init()	Initialize the SCB component according to defined parameters in the customizer.
SCB_Enable()	Enables SCB component operation.
SCB_Start()	Starts the SCB.
SCB_Stop()	Disable the SCB component.
SCB_Sleep()	Prepares component to enter Deep Sleep.



Function	Description
SCB_Wakeup()	Prepares component to exit Deep Sleep.
SCB_SpiInit()	Configures the SCB for SPI operation.
SCB_SpiSetActiveSlaveSelect()	Selects the active slave select line. Only applicable in Master mode.
SCB_SpiUartWriteTxData()	Places a data entry into the transmit buffer to be sent at the next available bus time.
SCB_SpiUartPutArray()	Places an array of data into the transmit buffer to be sent.
SCB_SpiUartGetTxBufferSize()	Returns the number of elements currently in the transmit buffer.
SCB_SpiUartClearTxBuffer()	Clears the transmit buffer and TX FIFO.
SCB_SpiUartReadRxData()	Retrieves the next data element from the receive buffer.
SCB_SpiUartGetRxBufferSize()	Returns the number of received data elements in the receive buffer.
SCB_SpiUartClearRxBuffer()	Clear the receive buffer and RX FIFO.

## Global Variables

Knowledge of these variables is not required for normal operations.

Variable	Description
SCB_initVar	SCB_initVar indicates whether the SCB component has been initialized. The variable is initialized to 0 and set to 1 the first time SCB_Start() is called. This allows the component to restart without reinitialization after the first call to the SCB_Start() routine. If reinitialization of the component is required, then the SCB_Init() function can be called before the SCB_Start() or SCB_Enable() function.
SCB_rxBufferOverflow	SCB_rxBufferOverflow sets when internal software receive buffer overflow was occurred.

## void SCB\_Init(void)

**Description:** Initializes SCB component to operate in one of selected configurations: I2C, SPI, or UART.  
When configuration is set to “Unconfigured SCB”, this function does not do any initialization.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Enable(void)**

**Description:** Enables SCB component operation. The SCB configuration should be not changed when the component is enabled. Any configuration changes should be made after disabling the component.

When configuration is set to “Unconfigured SCB”, this function does not enable component. The component must be initialized to operate in: I2C, SPI, or UART configuration before.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Start(void)**

**Description:** Invokes SCB\_Init() and SCB\_Enable(). After this function call the component is enabled and ready for operation.

When configuration is set to “Unconfigured SCB”, this function does not enable component. The component must be initialized to operate in: I2C, SPI, or UART configuration before.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Stop(void)**

**Description:** Disables the SCB component.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Sleep(void)**

<b>Description:</b>	Prepares component to enter Deep Sleep. The “Enable wakeup from Sleep Mode” selection has an influence on this function implementation. Call the SCB_Sleep() function before calling the CyPmSysDeepSleep() function. This function should not be called before entering Sleep. Refer to the PSoC Creator <i>System Reference Guide</i> for more information about power-management functions.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_Wakeup(void)**

<b>Description:</b>	Prepares component to exit Deep Sleep. The “Enable wakeup from Sleep Mode” selection has influence to on this function implementation. This function should not be called before entering Sleep.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	Calling the SCB_Wakeup() function without first calling the SCB_Sleep() function may produce unexpected behavior.



**void SCB\_SpiInit(SCB\_SPI\_INIT\_STRUCT \*config)**

**Description:** Configures the SCB for SPI operation.

This function is **intended specifically** to be used when the SCB configuration is set to “Unconfigured SCB” in the customizer. After initializing the SCB in SPI mode, the component can be enabled using the SCB\_Start() or SCB\_Enable() function.

This function uses a pointer to a structure that provides the configuration settings. This structure contains the same information that would otherwise be provided by the customizer settings.

**Parameters:**

config: pointer to a structure that contains the following ordered list of fields. These fields match the selections available in the customizer. Refer to the customizer for further description of the settings.

Field	Description
mode	Mode of operation for SPI. The following defines are available choices: SCB_SPI_SLAVE SCB_SPI_MASTER
submode	Submode of operation for SPI. The following defines are available choices: SCB_SPI_MODE_MOTOROLA SCB_SPI_MODE_TI_COINCIDES SCB_SPI_MODE_TI_PRECEDES SCB_SPI_MODE_NATIONAL
sclkMode	Determines the sclk relationship for Motorola submode. Ignored for other submodes. The following defines are available choices: SCB_SPI_SCLK_CPHA0_CPOL0 SCB_SPI_SCLK_CPHA0_CPOL1 SCB_SPI_SCLK_CPHA1_CPOL0 SCB_SPI_SCLK_CPHA1_CPOL1
oversample	Oversampling factor for the SPI clock. Ignored for Slave mode operation.
enableMedianFilter	0 – disable 1 – enable
enableLateSampling	0 – disable 1 – enable Ignored for slave mode.
enableWake	0 – disable 1 – enable Ignored for master mode.
dataBitsRx	Number of data bits for RX direction. Different dataBitsRx and dataBitsTx are only allowed for National submode.
dataBitsTx	Number of data bits for TX direction. Different dataBitsRx and dataBitsTx are only allowed for National submode.
bitOrder	Determines the bit ordering. The following defines are available choices: SCB_BITS_ORDER_LSB_FIRST SCB_BITS_ORDER_MSB_FIRST
transferSeperation	Determines whether transfers are back to back or have SS disabled between words. Ignored for slave mode. The following defines are available choices:

	SCB_SPI_TRANSFER_CONTINUOUS SCB_SPI_TRANSFER_SEPARATED
rxBufferSize	Size of the RX buffer in words: The value 8 implies the usage of buffering in hardware. A value greater than 8 results in a software buffer. The software RX buffer always keeps one element empty. The buffer size has to be one element greater to receive the whole packet of receive buffer size.
rxBuffer	Buffer space provided for a RX software buffer: The buffer of rxBufferSize in words must be provided. If the dataBitsRx is greater than 8 then (2* rxBufferSize) bytes must be provided. The NULL pointer must be provided if hardware buffering implies.
txBufferSize	Size of the TX buffer in words: The value 8 implies the usage of buffering in hardware. A value greater than 8 results in a software buffer.
txBuffer	Buffer space provided for a RX software buffer: The buffer of rxBufferSize in words must be provided. If the dataBitsRx is greater than 8 then (2* rxBufferSize) bytes must be provided. The NULL pointer must be provided if hardware buffering implies.
enableInterrupt	0 – disable 1 – enable
rxInterruptMask	Mask of interrupt sources to enable in the RX direction. This mask is written regardless of the setting of the enableInterrupt field. Multiple sources are enabled by providing a value that is the OR of all of the following sources to enable: SCB_INTR_RX_TRIGGER SCB_INTR_RX_NOT_EMPTY SCB_INTR_RX_FULL SCB_INTR_RX_OVERFLOW SCB_INTR_RX_UNDERFLOW SCB_INTR_SLAVE_SPI_BUS_ERROR
rxTriggerLevel	FIFO level for an RX trigger interrupt. This value is written regardless of whether the RX trigger interrupt is enabled.
txInterruptMask	Mask of interrupt sources to enable in the TX direction. This mask is written regardless of the setting of the enableInterrupt field. Multiple sources are enabled by providing a value that is the OR of all of the following sources to enable: SCB_INTR_TX_TRIGGER SCB_INTR_TX_NOT_FULL SCB_INTR_TX_EMPTY SCB_INTR_TX_OVERFLOW SCB_INTR_TX_UNDERFLOW SCB_INTR_MASTER_SPI_DONE

txTriggerLevel	FIFO level for a TX trigger interrupt. This value is written regardless of whether the TX trigger interrupt is enabled.
----------------	---

**Return Value:** None

**Side Effects:** None

### void SCB\_SpiSetActiveSlaveSelect(uint32 activeSelect)

**Description:** Selects the active slave select line. This function is only applicable to SPI Master mode of operation.

The component should be in one of the following states to change the active slave select signal source correctly:

- The component is disabled
- The component has completed all transactions (TX FIFO is empty and the SpiDone flag is set)

This function does not check that these conditions are met. After initialization the active slave select line is 0.

**Parameters:** uint32 activeSelect: The four lines available to utilize Slave Select function.

Active Slave Select constants	Description
SCB_SPIM_ACTIVE_SS0	The Slave Select 0 line will be active on the following transaction
SCB_SPIM_ACTIVE_SS1	The Slave Select 1 line will be active on the following transaction
SCB_SPIM_ACTIVE_SS2	The Slave Select 2 line will be active on the following transaction
SCB_SPIM_ACTIVE_SS3	The Slave Select 3 line will be active on the following transaction

**Return Value:** None

**Side Effects:** None

### void SCB\_SpiUartWriteTxData(uint32 txDataByte)

**Description:** Places a data entry into the transmit buffer to be sent at the next available bus time. This function is blocking and waits until there is space available to put the requested data in the transmit buffer.

**Parameters:** uint32 txDataByte: the data to be transmitted.

**Return Value:** None

**Side Effects:** None

**void SCB\_SpiUartPutArray(const uint16/uint8 wrBuf[], uint32 count)**

<b>Description:</b>	Places an array of data into the transmit buffer to be sent. This function is blocking and waits until there is a space available to put all the requested data in the transmit buffer. The array size can be greater than transmit buffer size.
<b>Parameters:</b>	const uint16/uint8 wrBuf[]: pointer to an array with data to be placed in transmit buffer. uint32 count: number of data elements to be placed in the transmit buffer.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**uint32 SCB\_SpiUartGetTxBufferSize(void)**

<b>Description:</b>	Returns the number of elements currently in the transmit buffer. <ul style="list-style-type: none"> <li><u>TX software buffer disabled</u>: returns the number of used entries in TX FIFO.</li> <li><u>TX software buffer enabled</u>: returns the number of elements currently used in the transmit buffer. This number does not include used entries in the TX FIFO. The transmit buffer size is zero until the TX FIFO is not full.</li> </ul>
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Number of data elements ready to transmit.
<b>Side Effects:</b>	None

**void SCB\_SpiUartClearTxBuffer(void)**

<b>Description:</b>	Clears the transmit buffer and TX FIFO.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**uint32 SCB\_SpiUartReadRxData(void)**

<b>Description:</b>	Retrieves the next data element from the receive buffer. <ul style="list-style-type: none"> <li><u>RX software buffer disabled</u>: Returns data element retrieved from RX FIFO. Undefined data will be returned if the RX FIFO is empty.</li> <li><u>RX software buffer enabled</u>: Returns data element from the software receive buffer. Zero value is returned if the software receive buffer is empty.</li> </ul>
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Next data element from the receive buffer.
<b>Side Effects:</b>	None

**uint32 SCB\_SpiUartGetRxBufferSize(void)**

<b>Description:</b>	Returns the number of received data elements in the receive buffer. <u>RX software buffer disabled</u> : returns the number of used entries in RX FIFO. <u>RX software buffer enabled</u> : returns the number of elements which were placed in receive buffer.
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Number of received data elements
<b>Side Effects:</b>	None

**void SCB\_SpiUartClearRxBuffer(void)**


<b>Description:</b>	Clear the receive buffer and RX FIFO.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**SPI Functional Description**

The Serial Peripheral Interface (SPI) protocol is a synchronous serial interface, with “single-master-multi-slave” topology. The original SPI protocol is defined by Motorola. Devices operate in either master or slave mode. The master initiates transfers of data frames. Multiple slaves are supported with individual slave select lines.

The SPI interface consists of 4 signals:

- **SCLK** – Serial clock (output from master, input to the slave).
- **MOSI** – Master output, slave input (output from the master, input to the slave).
- **MISO** – Master input, slave output (input to the master, output from the slave).
- **SELECT** – Slave select (typically an active low signal, output from the master, input to the slave).

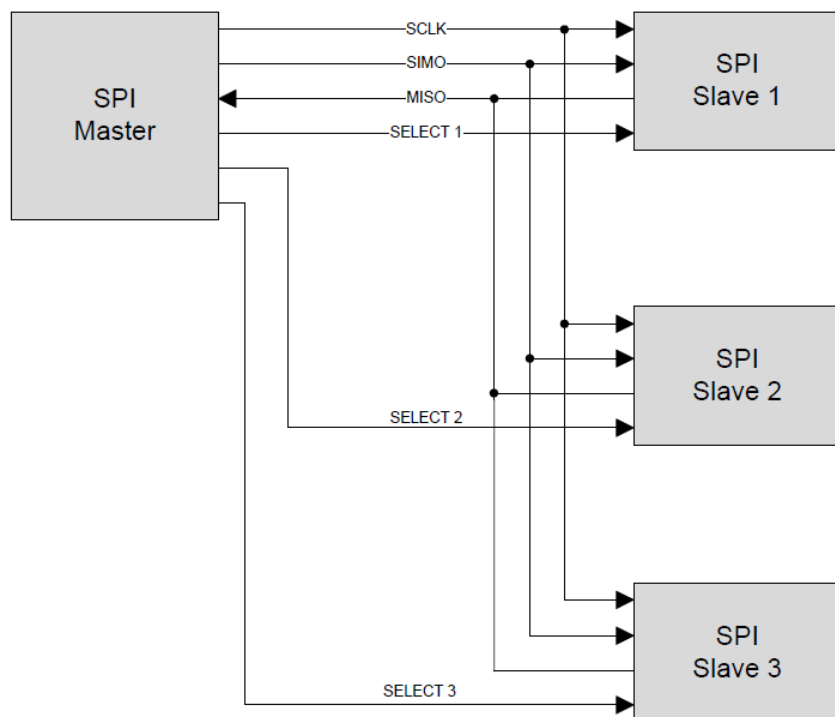**Figure 4 SPI Bus Connections Example****Motorola sub mode operation**

This is the original SPI protocol is defined by Motorola. It is a full duplex protocol: transmission and reception occur at the same time.

The Motorola SPI protocol has 4 different modes that determine how data is driven and captured on the MOSI and MISO lines. These modes are determined by clock polarity (CPOL) and clock phase (CPHA).

- **CPHA = 0, CPOL= 0** – Data is driven on a falling edge of SCLK. Data is captured on a rising edge of SCLK.
- **CPHA = 0, CPOL= 1** – Data is driven on a rising edge of SCLK. Data is captured on a falling edge of SCLK.
- **CPHA = 1, CPOL= 0** – Data is driven on a rising edge of SCLK. Data is captured on a falling edge of SCLK.
- **CPHA = 1, CPOL= 1** – Data is driven on a falling edge of SCLK. Data is captured on a rising edge of SCLK.

Figure 5 illustrates driving and capturing of MOSI/MISO data as a function of CPOL and CPHA.



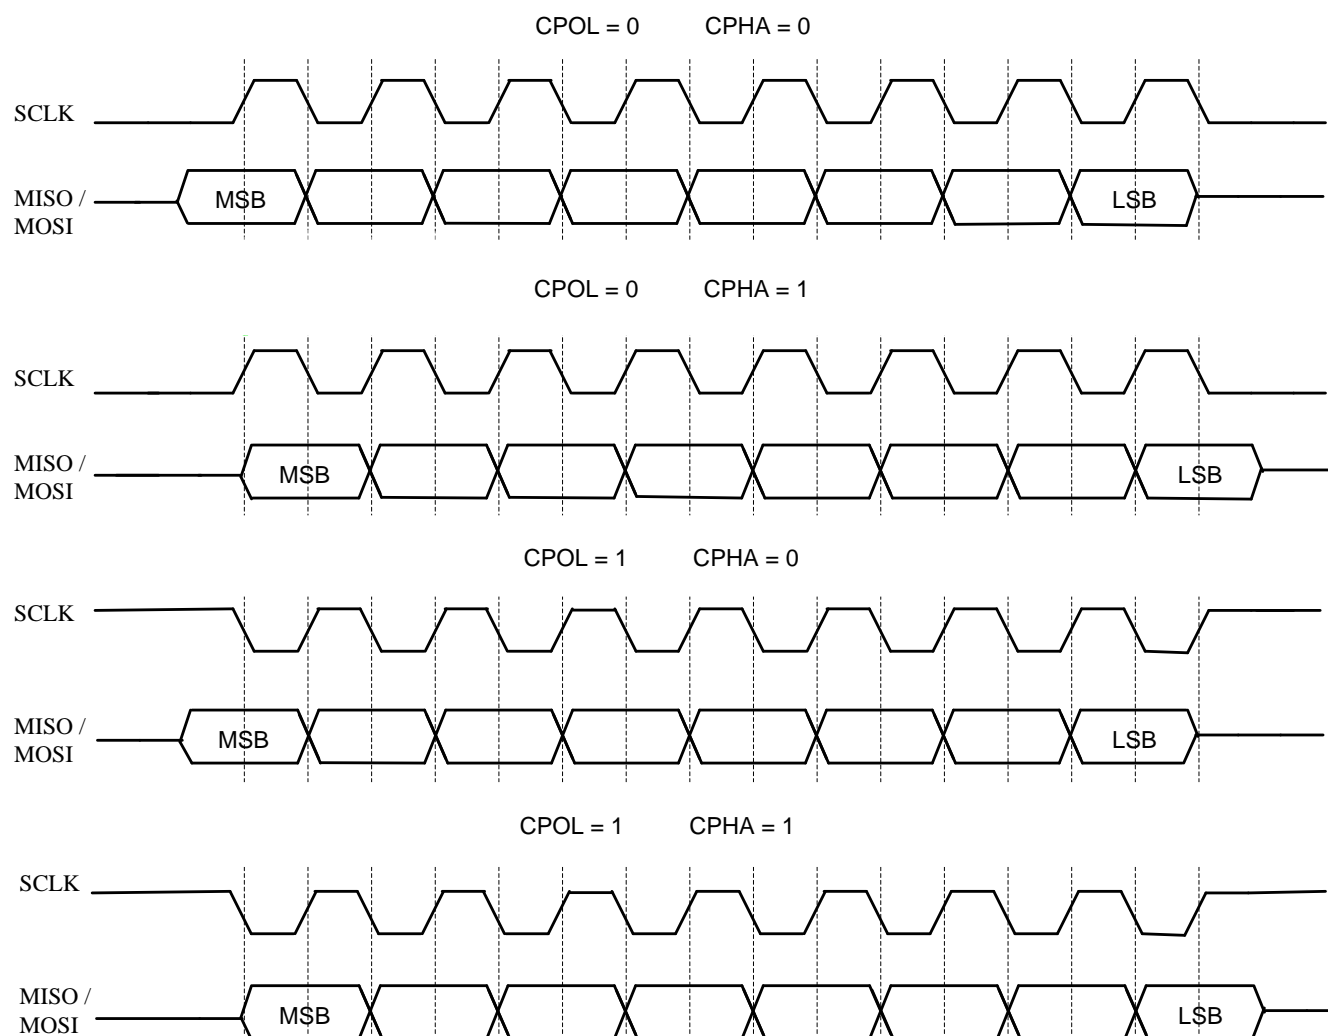
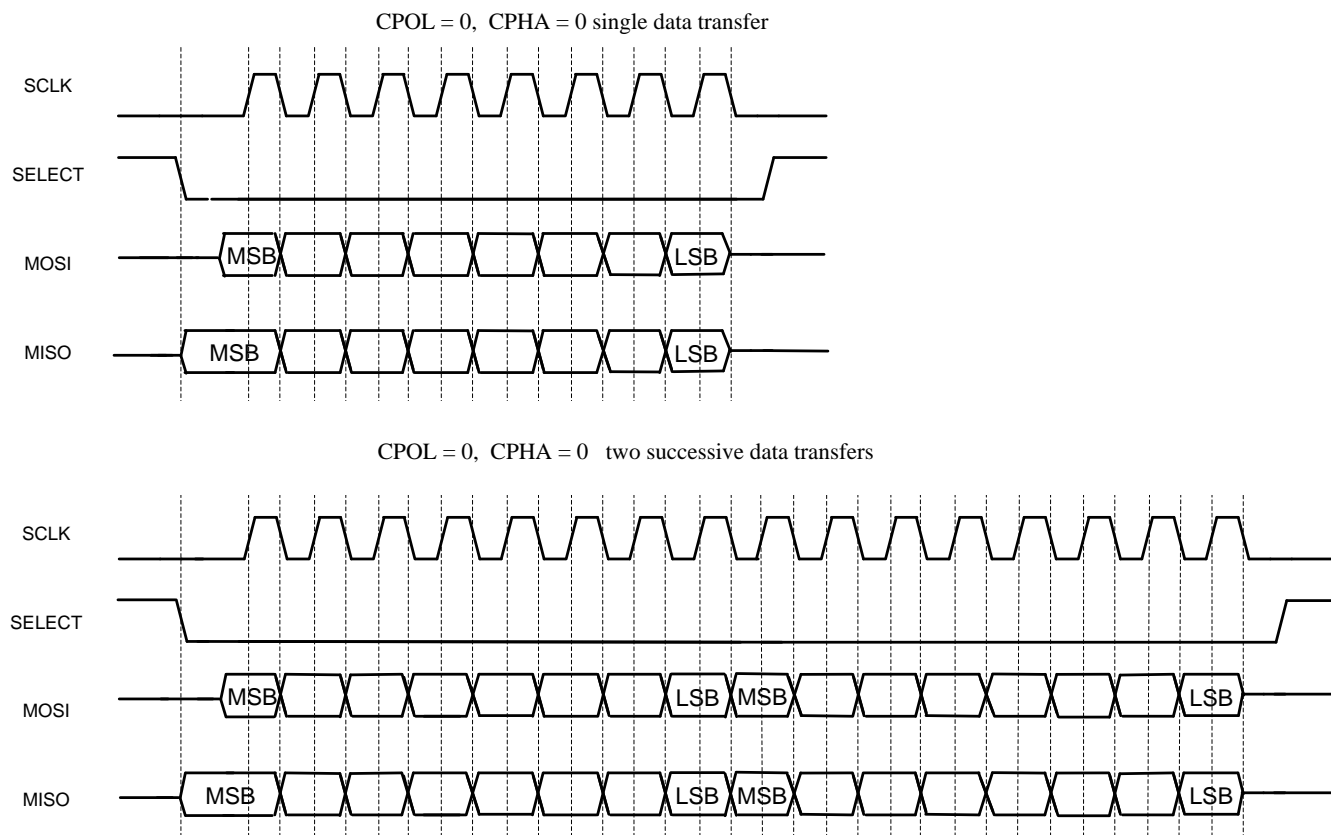
**Figure 5 SPI Motorola frame format**

Figure 6 illustrates a single 8-bit data transfer and two successive 8-bit data transfers in mode 0 (CPOL is '0', CPHA is '0').


**Figure 6 SPI Motorola Data Transfer Example****Texas Instruments sub modes operation**

The Texas Instruments' SPI protocol redefines the use of the SS signal. It uses the signal to indicate the start of a data transfer, rather than a low active slave select signal. This protocol only supports CPHA = 1, CPOL = 0.


The start of a transfer is indicated by a high active pulse of a single bit transfer period. This pulse may precedes the transfer of the first data frame bit on one SCLK period, or may coincide with the transmission of the first data bit. The transmitted clock SCLK is a free running clock.

The [Figure 7](#) illustrates a single 8-bit data transfer and two successive 8-bit data transfers. The SS pulse precedes the first data bit.

**Note** how the SELECT pulse of the second data transfer coincides with the last data bit of the first data transfer.

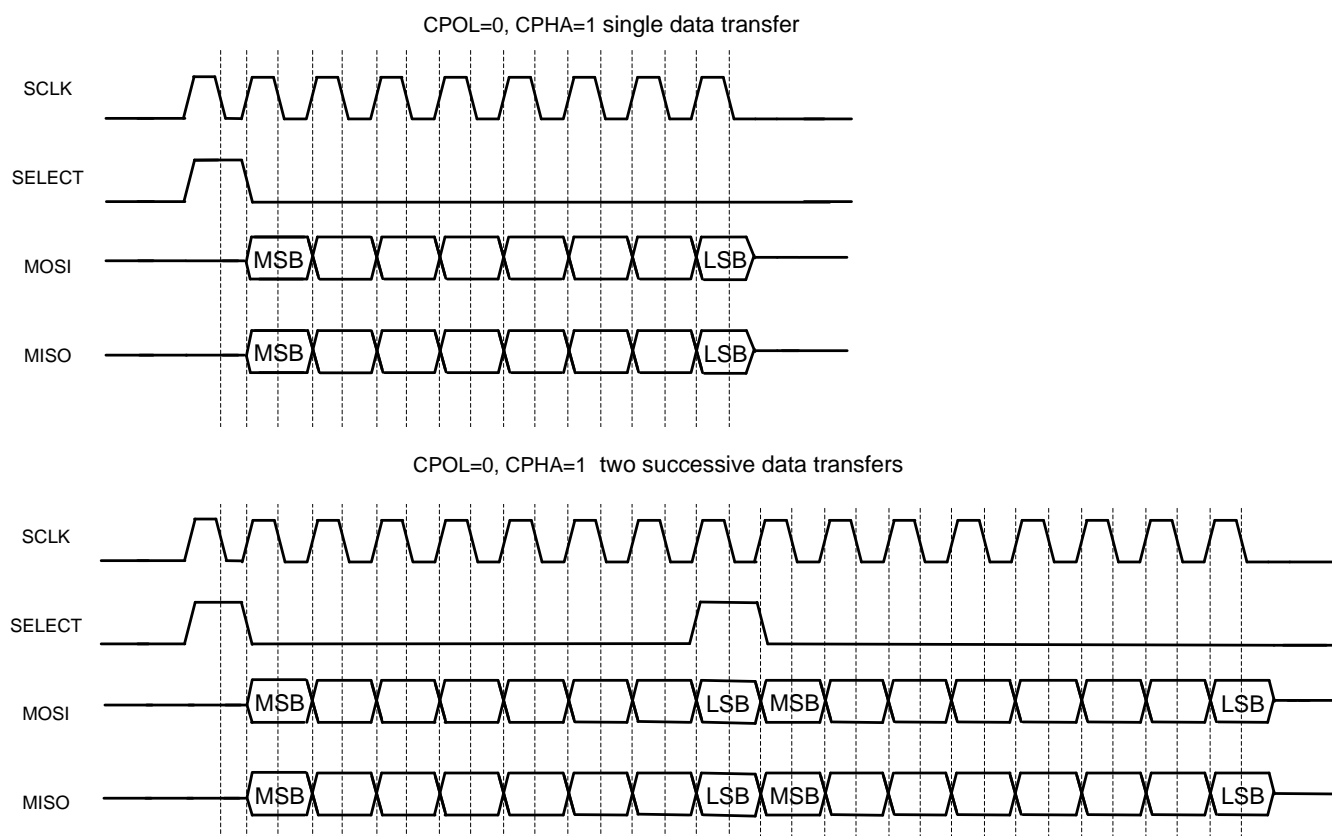**Figure 7 TI (Precede) Data Transfer Example**

**Figure 8** illustrates a single 8-bit data transfer and two successive 8-bit data transfers. The SS pulse coincides with the first data bit.

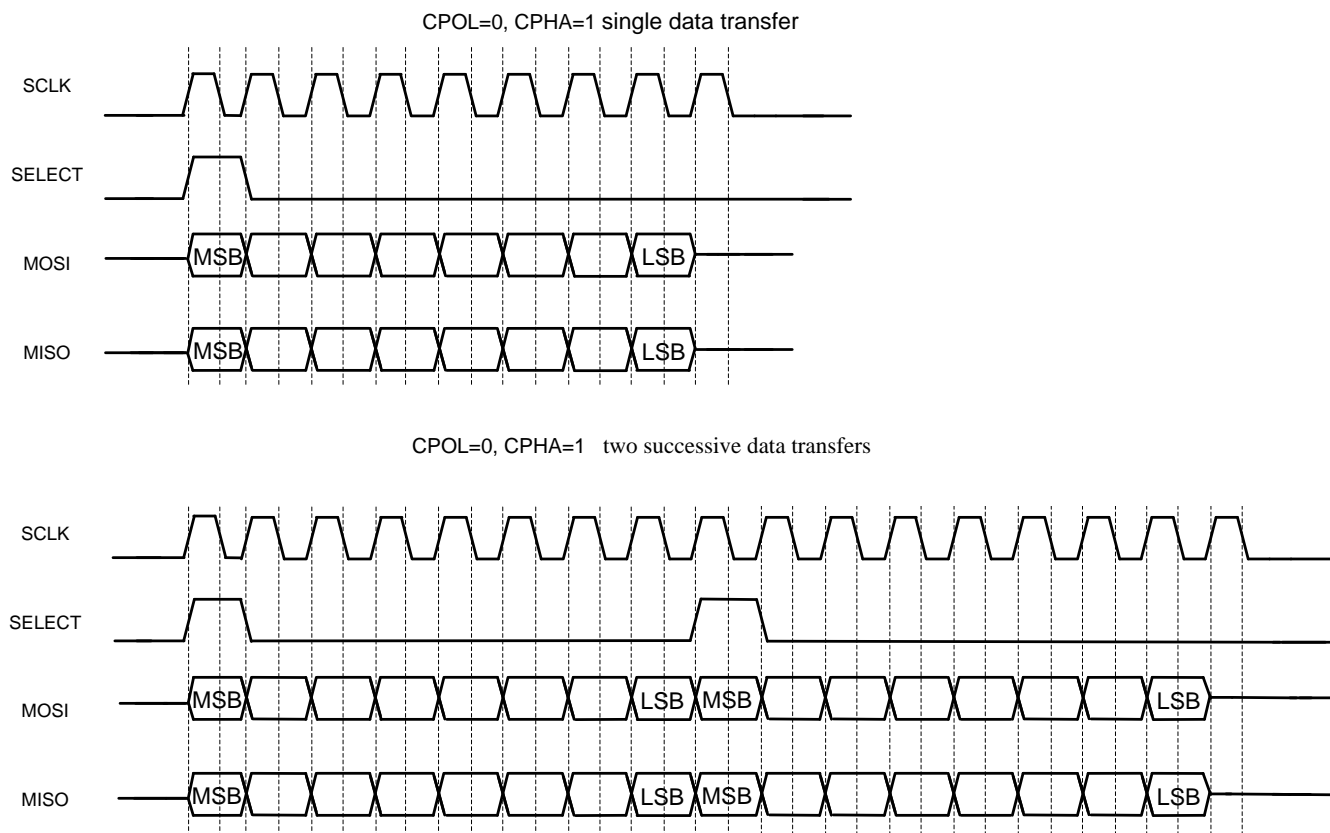
**Figure 8 TI (Coincide) Data Transfer Example****National Semiconductor's Microwire sub modes operation**

The National Semiconductor's Microwire protocol is a half-duplex protocol. Rather than transmission and reception occurring at the same time, transmission and reception take turns (transmission happens before reception). A single "idle" bit transfer period separates transmission from reception. This protocol only supports CPHA = 1, CPOL = 0.

**Note** The successive data transfers are NOT separated by an "idle" bit transfer period.

The transmission data transfer size and reception data transfer size may differ.

Figure 9 illustrates a single data transfer and two successive data transfers. In both cases the transmission data transfer size is 8 bits and the reception transfer size is 4 bits.

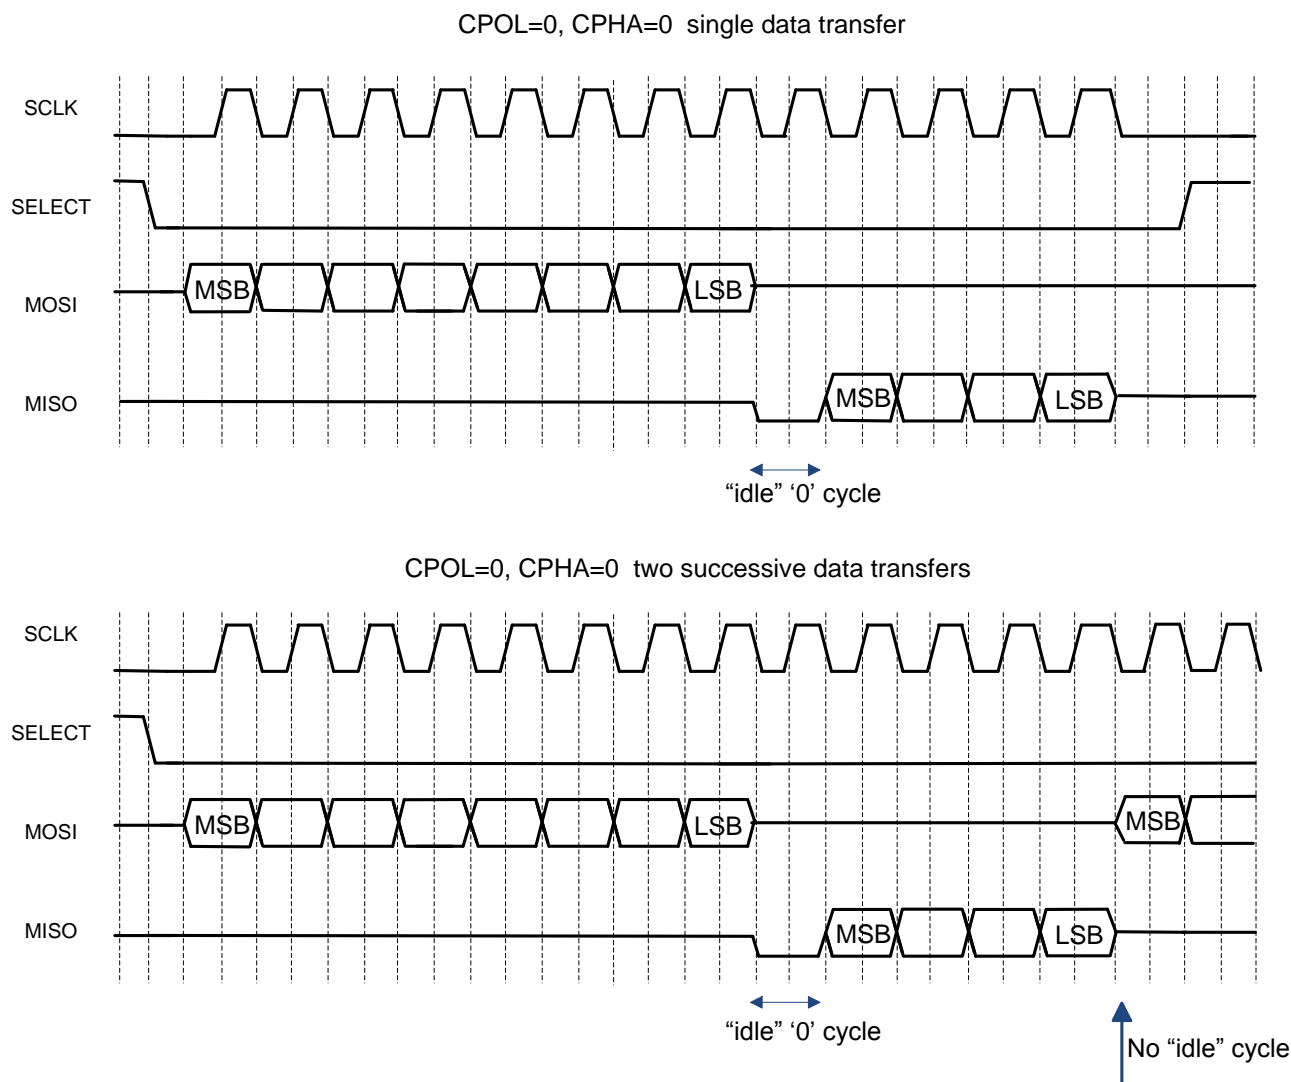**Figure 9 National Semiconductor's Microwire Data Transfer Example**

### Continuous versus Separated Transfer Separation


During separated data transfer the SELECT line always changing from '0' to '1' and back from '1' to '0' between the individual transfers. This process repeats for each individual data transfers.

Multiple data transfers may happen without that SELECT line toggling between the individual transfers. [Figure 10](#) illustrates a two continuous 8-bit data transfers in SCLK mode CPHA=0, CPOL= 0.

### MISO late sampling

The MISO is captured half a SCLK period later (only applicable in Master mode). Late sampling addresses the round trip delay associated with transmitting SCLK from the master to the slave and transmitting MISO from the slave to the master.

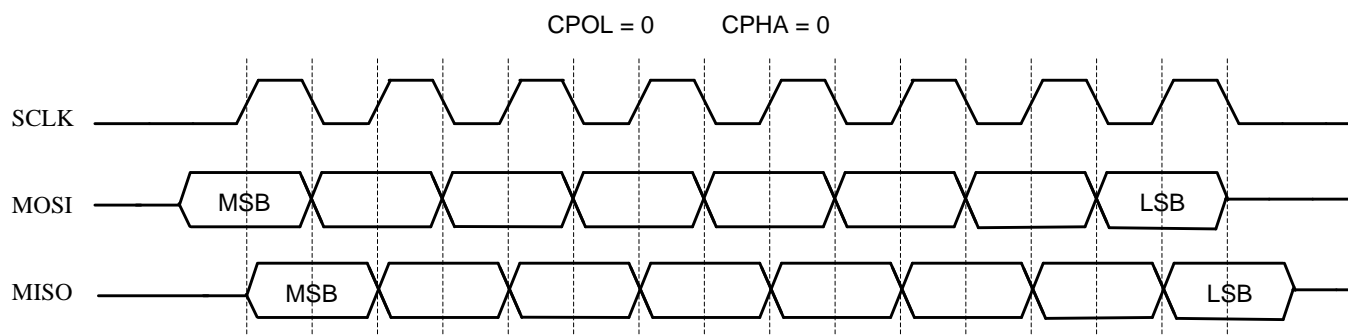

**Figure 10 Late MISO sampling example**

## Software Buffer

The SCB has a FIFO memory, which is a 16-word by 16-bit SRAM, with byte write enable. In SPI mode, the FIFO is split into TX FIFO and RX FIFO. Each has eight entries of 16 bits per entry. The 16-bit width per entry is used to accommodate configurable data width.

The internal interrupt handler is used to provide interaction between software and hardware TX/RX buffers without any changes to your top-level firmware.

You should also consider that using the software buffer leads to greater timing intervals between transmitted words because of the extra time the interrupt handler needs to execute (depending on the selected HFCLK value).

## Interrupts


When **RX buffer size** or **TX buffer size** is greater than 8 bytes/words, the **RX FIFO not empty** and **TX FIFO not full** interrupt sources are reserved by the component for internal software buffer operations. **Do not clear or disable them** because it causes incorrect software buffer operation. But it is user responsibility to clear interrupt events from other sources because they are not cleared automatically. The customer handler function exists to do that.

In case **RX buffer size** or **TX buffer size** is less or equal 8 bytes/words instead of software buffer only the hardware TX or RX FIFO is used. In the **Internal** interrupt mode the interrupts are not cleared automatically. It is user responsibility to do this. The **External** or **None** interrupt selection is preferred in this case.

## Low power modes

In the **Slave** mode operation the device wakes up from sleep on slave select. Waking up takes time and the ongoing SPI transfer is negatively acknowledged "0xff" bytes are send out on the MISO line. Master must poll the component again after device wakeup time is passed.

## UART

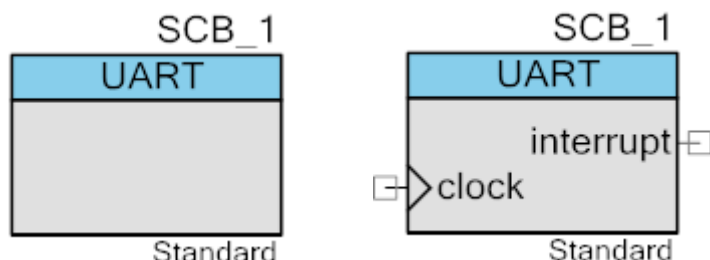

The UART provides asynchronous communications commonly referred to as RS232. Three different UART-like serial interface protocols are supported:

- UART – this is the basic flavor.
- SmartCard – similar to UART, but with the possibility to send a negative acknowledgement.
- IrDA – modification to the modulation scheme used for infrared communication.

### Input/Output Connections

This section describes the various input and output connections for the SCB component. An asterisk (\*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

#### clock – Input\*

Clock that operates this block. The presence of this terminal varies depending on the **Clock from terminal** parameter.

#### interrupt – Output\*

This signal can only be connected to an interrupt component or left unconnected. The presence of this terminal varies depending on the **Interrupt** parameter.

The interface specific pins are buried inside component because these pins use dedicated connections and are not routable as general purpose signals. See the *I/O System* section in chip *Technical Reference Manual (TRM)* for more information.

## Basic UART Parameters

Configure 'SCB\_P4'

Name:

Configuration **UART Basic** UART Advanced Built-in

Mode:

Direction:

Baud rate (kbps):  Actual baud rate (kbps): 117.647

Data bits:

Parity:

Stop bits:

Oversampling:

☐ Clock from terminal

☐ Median filter

☐ Retry on NACK

☐ Inverting RX

☐ Enable wakeup from Sleep Mode

☐ Low power receiving

The **UART Basic** tab contains the following parameters:

### Mode

This option determines the operating mode of the UART: Standard, SmartCard or IrDA. The default mode is **Standard**.

### Direction

This parameter defines the functional components you want to include in the UART. This can be setup to be a bidirectional **TX + RX** (default), Receiver (**RX only**) or Transmitter (**TX only**).

### Baud rate

This parameter defines the baud-rate or bit-width configuration of the hardware for clock generation up to 921600; the actual rate may differ based on available clock speed and divider range. The default is **115200**.

### Data bits

This parameter defines the number of data bits transmitted between start and stop of a single UART transaction. Options are **5**, **6**, **7**, **8** (default), or **9**.



- Eight data bits is the default configuration, sending a byte per transfer.
- The 9-bit mode does not transmit 9 data bits; the ninth bit takes the place of the parity bit as an indicator of address or data.

### Parity

This parameter defines the functionality of the parity bit location in the transfer. This can be set to **None** (default), **Odd** or **Even**.

### Stop bits

This parameter defines the number of stop bits implemented in the transmitter. This parameter can be set to **1** (default), **1.5** or **2** data bits.

### Oversampling

This parameter determines the oversampling rate for the interface. The default value is a **16**. Any integer from 8 to 16 is a valid setting.

### Clock from terminal

This parameter allows choosing between an internally configured clock and an externally configured clock for data rate generation. When option is enabled, the component does not control the data rate but displays the actual data rate based on the user-connected clock source. Otherwise, PSoC Creator calculates and configures the required clock frequency based on the **Baud rate** parameter, taking into account the oversampling.

**Note** When setting the data rate or external clock frequency value, make sure that PSoC Creator can provide this value using the current system clock frequency. Otherwise, a warning about the clock accuracy range is generated while building the project. This warning contains the actual clock value set by PSoC Creator. Choose whether the system clock or component clock should be changed to fit the clocking system requirements and achieve an optimal value.

### Median filter

This parameter applies 3 taps digital median filter on input path of RX line. This filter reduces the susceptibility to errors. However, minimum oversampling factor value is increased. The default value is a **Disabled**.

### Retry on NACK

This parameter enables retry on NACK functionality. Data frame is retransmitted when a negative acknowledgement is received. This option is applicable only for **SmartCard** mode.

## Inverting RX

This parameter enables the inversion of the incoming RX line signal. This option is applicable only for **IrDA** mode.

## Enable wakeup from Sleep Mode

This option allows the system to be awakened from sleep on start bit. This option is applicable only when **RX Direction** is enabled.

## Low power receiving

This parameter enables IrDA low power receiver mode. This option is applicable only when **RX Direction** is enabled.

## Advanced UART Parameters

Configure 'SCB\_P4'

Name: UART\_1

Configuration | **UART Basic** | **UART Advanced** | Built-in

Buffer sizes

RX buffer size: 8

TX buffer size: 8

Interrupt

☒ None

☐ Internal

☐ External

Interrupt sources

☐ UART done

☐ TX FIFO not full

☐ TX FIFO empty

☐ TX FIFO overflow

☐ TX FIFO underflow

☐ TX lost arbitration

☐ TX NACK

☐ TX FIFO trigger: 0

☐ RX FIFO not empty

☐ RX FIFO full

☐ RX FIFO overflow

☐ RX FIFO underflow

☐ RX frame error

☐ RX parity error

☐ RX FIFO trigger: 7

☐ Multiprocessor mode

Address (hex): 2

Mask (hex): FF

☐ Accept matching address in RX FIFO

☐ RX FIFO drop

☐ On parity error

☐ On frame error

Datasheet OK Apply Cancel

## RX buffer size

The **RX buffer size** parameter defines the size (in bytes/words) of memory allocated for a circular receive data buffer. If this parameter is set to 8, the eight bytes/words RX FIFO is implemented in the hardware. All other values up to  $2^{32}$  use the 8-byte/word RX FIFO and a

software buffer controlled by the supplied APIs and internal ISR. The buffer size is limited to available memory. Interrupt mode sets to internal automatically if RX buffer size is greater than 8.

### TX buffer size

The **TX buffer size** parameter defines the size (in bytes/words) of memory allocated for a circular transmit data buffer. If this parameter is set to 8, the eight bytes/words TX FIFO is implemented in the hardware. All other values up to  $2^{32}$  use the 8-byte/word TX FIFO and a software buffer controlled by the supplied APIs and internal ISR. The buffer size is limited to available memory. Interrupt mode sets to internal automatically if TX buffer size is greater than 8.

### Interrupt

This option determines what interrupt modes are supported None, Internal or External.

- **None** – Removes internal interrupt component
- **Internal** – This option leaves interrupt component inside SCB component. The predefined internal ISR is hooked up to interrupt. The customer function can be registered to call on every entry to ISR. The **Interrupt sources** option defines interrupt events to trigger interrupt.
- **External** – This option removes internal interrupt and provides output terminal. The interrupt component can be connected to it if customer interrupt handler desired. The **Interrupt sources** option sets interrupt source which triggers interrupt output.

**Note** For buffer sizes greater than 8 bytes/words, the component automatically enables the internal interrupt sources required for proper internal software buffer operations. In addition, the global interrupt enable must be explicitly enabled for proper buffer handling.

### Interrupt sources

The SPI supports interrupts on the following events:

- **UART done** – UART transmitter done event: all data frames in the TX FIFO are sent and the TX FIFO is empty
- **TX FIFO not full** – TX FIFO is not full
- **TX FIFO empty** – TX FIFO is empty
- **TX FIFO overflow** – Attempt to write to a full TX FIFO
- **TX lost arbitration** – UART lost arbitration: the value driven on the TX line is not the same as the value observed on the RX line. This condition event is useful when transmitter and receiver share a TX/RX line. This is the case in SmartCard mode.



- **TX NACK** – UART transmitter received a negative acknowledgement in SmartCard mode.
- **TX FIFO underflow** – Attempt to read from an empty TX FIFO.
- **TX FIFO trigger** – When the TX FIFO has less entries than the amount of this field, a transmitter trigger event is generated.
- **RX FIFO not empty** – RX FIFO is not empty.
- **RX FIFO full** – RX FIFO is full.
- **RX FIFO overflow** – Attempt to write to a full RX FIFO.
- **RX FIFO underflow** – Attempt to read from an empty RX FIFO.
- **RX frame error** – Frame error in received data frame. This can be either a start or stop bit(s) error:
  - Start bit error – after the detection of the beginning of a start bit period (RX line changes from '1' to '0'), the middle of the start bit period is sampled erroneously (RX line is '1').  
**Note** A start bit error is detected BEFORE a data frame is received.
  - Stop bit error: the RX line is sampled as '0', but a '1' was expected.  
**Note** A stop bit error may result in failure to receive successive data frame(s). A stop bit error is detected AFTER a data frame is received.  
**Note** For stop bit duration equal to 1bit, the frame error is not tracked.
- **RX parity error** – Parity error in received data frame.
- **RX FIFO trigger** – When the RX FIFO has less entries than the amount of this field, a transmitter trigger event is generated.

**Note**

When **RX buffer size** is greater than 8 bytes/words, the **RX FIFO not empty** interrupt source is reserved by the component.

When **TX buffer size** is greater than 8 bytes/words, the **TX FIFO not full** interrupt is reserved by the component.

**Multiprocessor mode**

This parameter enables the multiprocessor mode where the first bit of 9 bits indicates an address. The default value is a **Disabled**. The number of Data bits must be set to 9 bits to get possibility to enable this option.

**Address (hex)**

Slave device address. Used to match when multiprocessor mode is enabled. The default value is 0x02.

**Mask (hex)**

Slave device address mask. These bits are used when matching to the slave address. The default value is **0xFF**.

- Bit value 0 – excludes bit from address comparison.
- Bit value 1 – the bit needs to match with the corresponding bit of the address.

**Accept matching address in RX FIFO**

This parameter determines whether or not to accept a matched address in the RX FIFO.

**Note** Non-matching addresses are never put in the RX FIFO.

**RX FIFO drop**

Provides hardware data drop options from RX FIFO.

- **On parity error** – Defines behavior when a parity check fails. When parity check is passed, received data is sent to the RX FIFO. Otherwise, received data is dropped and lost. Only applicable in **Standard** and **SmartCard** modes.
- **On frame error** – Defines behavior when a frame error is detected. When no frame error captured, received data is sent to the RX FIFO. Otherwise, received data is dropped and lost.

**UART APIs**

APIs allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections discuss each function in more detail.

By default, PSoC Creator assigns the instance name “SCB\_1” to the first instance of a component in a given design. You can rename the instance to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is “SCB”.

Function	Description
SCB_Init()	Initialize the SCB component according to defined parameters in the customizer.
SCB_Enable()	Enables SCB component operation.



Function	Description
SCB_Start()	Starts the SCB.
SCB_Stop()	Disable the SCB component.
SCB_Sleep()	Prepares component to enter Deep Sleep.
SCB_Wakeup()	Prepares component to exit Deep Sleep.
SCB_UartInit()	Configures the SCB for SPI operation.
SCB_UartPutChar()	Places a byte of data in the transmit buffer to be sent at the next available bus time.
SCB_UartPutString()	Places a NULL terminated string in the transmit buffer to be sent at the next available bus time.
SCB_UartPutCRLF()	Places byte of data followed by a carriage return (0x0D) and line feed (0x0A) to the transmit buffer
SCB_UartGetChar()	Retrieves next data element from receive buffer.
SCB_UartGetByte()	Retrieves next data element from the receive buffer
SCB_UartSetRxAddress()	Sets the hardware detectable receiver address for the UART in Multiprocessor mode.
SCB_UartSetRxAddressMask()	Sets the hardware address mask for the UART in Multiprocessor mode.
SCB_SpiUartWriteTxData()	Places a data entry into the transmit buffer to be sent at the next available bus time. This function is common for SPI and UART.
SCB_SpiUartPutArray()	Places an array of data into the transmit buffer to be sent. This function is common for SPI and UART.
SCB_SpiUartGetTxBufferSize()	Returns the number of elements currently in the transmit buffer. This function is common for SPI and UART.
SCB_SpiUartClearTxBuffer()	Clears the transmit buffer and TX FIFO. This function is common for SPI and UART.
SCB_SpiUartReadRxData()	Retrieves the next data element from the receive buffer. This function is common for SPI and UART.
SCB_SpiUartGetRxBufferSize()	Returns the number of received data elements in the receive buffer. This function is common for SPI and UART
SCB_SpiUartClearRxBuffer()	Clear the receive buffer and RX FIFO. This function is common for SPI and UART.

## Global Variables

Knowledge of these variables is not required for normal operations.

Variable	Description
SCB_initVar	SCB_initVar indicates whether the SCB component has been initialized. The variable is initialized to 0 and set to 1 the first time SCB_Start() is called. This allows the component to restart without reinitialization after the first call to the SCB_Start() routine.  If re-initialization of the component is required, then the SCB_Init() function can be called before the SCB_Start() or SCB_Enable() function.
SCB_rxBufferOverflow	SCB_rxBufferOverflow sets when internal software receive buffer overflow was occurred.

### void SCB\_Init(void)

**Description:** Initializes SCB component to operate in one of selected configurations: I2C, SPI, or UART.

When configuration is set to “Unconfigured SCB”, this function does not do any initialization.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

### void SCB\_Enable(void)

**Description:** Enables SCB component operation. The SCB configuration should be not changed when the component is enabled. Any configuration changes should be made after disabling the component.

When configuration is set to “Unconfigured SCB”, this function does not enable component. The component must be initialized to operate in: I2C, SPI, or UART configuration before.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Start(void)**

**Description:** Invokes SCB\_Init() and SCB\_Enable(). After this function call the component is enabled and ready for operation.

When configuration is set to “Unconfigured SCB”, this function does not enable component. The component must be initialized to operate in: I2C, SPI, or UART.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Stop(void)**

**Description:** Disables the SCB component.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void SCB\_Sleep(void)**

**Description:** Prepares component to enter Deep Sleep.

The “Enable wakeup from Sleep Mode” selection has an influence on this function implementation.

Call the SCB\_Sleep() function before calling the CyPmSysDeepSleep() function.

This function should not be called before entering Sleep.

Refer to the PSoC Creator *System Reference Guide* for more information about power-management functions.

**Parameters:** None

**Return Value:** None

**Side Effects:** None



**void SCB\_Wakeup(void)**

<b>Description:</b>	Prepares component to exit Deep Sleep. The “Enable wakeup from Sleep Mode” selection has influence to on this function implementation. This function should not be called before entering Sleep.
<b>Parameters:</b>	None
<b>Return Value:</b>	None
<b>Side Effects:</b>	Calling the SCB_Wakeup() function without first calling the SCB_Sleep() function may produce unexpected behavior.

**void SCB\_UartInit(SCB\_UART\_INIT\_STRUCT \*config)**

**Description:** Configures the SCB for UART operation.

This function is **intended specifically** to be used when the SCB configuration is set to “Unconfigured SCB” in the customizer. After initializing the SCB in UART mode, the component can be enabled using the SCB\_Start() or SCB\_Enable() function.

This function uses a pointer to a structure that provides the configuration settings. This structure contains the same information that would otherwise be provided by the customizer settings.

**Parameters:**

config: pointer to a structure that contains the following ordered list of fields. These fields match the selections available in the customizer. Refer to the customizer for further description of the settings.

Field	Description
mode	Mode of operation for the UART. The following defines are available choices: SCB_UART_MODE_STD SCB_UART_MODE_SMARTCARD SCB_UART_MODE_IRDA
direction	Direction of operation for the UART. The following defines are available choices: SCB_UART_MODE_TX_RX SCB_UART_MODE_RX SCB_UART_MODE_TX
dataBits	Number of data bits
parity	Determines the parity. The following defines are available choices: SCB_UART_PARITY_EVEN SCB_UART_PARITY_ODD SCB_UART_PARITY_NONE
stopBits	Determines the number of stop bits. The following defines are available choices: SCB_UART_STOP_BITS_1 SCB_UART_STOP_BITS_1_5 SCB_UART_STOP_BITS_2
oversample	Oversampling factor for the UART. Note: The oversampling factor values are changed when enableIrdaLowPower is enabled: SCB_UART_IRDA_LP_OVS16 SCB_UART_IRDA_LP_OVS32 SCB_UART_IRDA_LP_OVS48 SCB_UART_IRDA_LP_OVS96 SCB_UART_IRDA_LP_OVS192 SCB_UART_IRDA_LP_OVS768 SCB_UART_IRDA_LP_OVS1536
enableIrdaLowPower	IrDA low power RX mode is enabled. 0 – disable 1 – enable The TX functionality doesn't work when enabled.
enableMedianFilter	0 – disable 1 – enable
enableRetryNack	0 – disable

	1 – enable Ignored for modes other than SmartCard.
enableInvertedRx	0 – disable 1 – enable Ignored for modes other than IrDA.
dropOnParityErr	Drop data from RX FIFO and lost it if parity error detected. 0 – disable 1 – enable
dropOnFrameErr	Drop data from RX FIFO and lost it if frame error detected. 0 – disable 1 – enable
enableWake	0 – disable 1 – enable Ignored for modes other than standard UART. The RX functionality has to be enabled.
rxBufferSize	Size of the RX buffer in words: The value 8 implies the usage of buffering in hardware. A value greater than 8 results in a software buffer. The software RX buffer always keeps one element empty. The buffer size has to be one element greater to receive the whole packet of receive buffer size.
rxBuffer	Buffer space provided for a RX software buffer: The buffer of rxBufferSize in words must be provided. If the dataBitsRx is greater than 8 then (2* rxBufferSize) bytes must be provided. The NULL pointer must be provided if hardware buffering implies.
txBufferSize	Size of the TX buffer in words: The value 8 implies the usage of buffering in hardware. A value greater than 8 results in a software buffer.
txBuffer	Buffer space provided for a RX software buffer: The buffer of rxBufferSize in words must be provided. If the dataBitsRx is greater than 8 then (2* rxBufferSize) bytes must be provided. The NULL pointer must be provided if hardware buffering implies.
enableMultiproc	Enables multiprocessor mode. 0 – disable 1 – enable
multiprocAddr	8 bit address to match in Multiprocessor mode. Ignored for other modes.
multiprocAddrMask	8 bit mask of address bits that are compared for a Multiprocessor address match. Ignored for other modes.
enableInterrupt	0 – disable 1 – enable

rxInterruptMask	Mask of interrupt sources to enable in the RX direction. This mask is written regardless of the setting of the enableInterrupt field. Multiple sources are enabled by providing a value that is the OR of all of the following sources to enable: SCB_INTR_RX_TRIGGER SCB_INTR_RX_NOT_EMPTY SCB_INTR_RX_FULL SCB_INTR_RX_OVERFLOW SCB_INTR_RX_UNDERFLOW SCB_INTR_RX_FRAME_ERROR SCB_INTR_RX_PARITY_ERROR
rxTriggerLevel	FIFO level for an RX trigger interrupt. This value is written regardless of whether the RX trigger interrupt is enabled.
txInterruptMask	Mask of interrupt sources to enable in the TX direction. This mask is written regardless of the setting of the enableInterrupt field. Multiple sources are enabled by providing a value that is the OR of all of the following sources to enable: SCB_INTR_TX_TRIGGER SCB_INTR_TX_NOT_FULL SCB_INTR_TX_EMPTY SCB_INTR_TX_OVERFLOW SCB_INTR_TX_UNDERFLOW SCB_INTR_TX_UART_DONE SCB_INTR_TX_UART_NACK SCB_INTR_TX_UART_ARB_LOST
txTriggerLevel	FIFO level for a TX trigger interrupt. This value is written regardless of whether the TX trigger interrupt is enabled.

**Return Value:** None

**Side Effects:** None

### void SCB\_UartPutChar(uint32 txDataByte)

**Description:** Places a byte of data in the transmit buffer to be sent at the next available bus time. This function is blocking and waits until there is a space available to put requested data in transmit buffer.

For UART Multi Processor mode this function can send 9-bits data as well. Use SCB\_UART\_MP\_MARK to add mark to create address byte.

**Parameters:** uint32 txDataByte: the data to be transmitted.

**Return Value:** None

**Side Effects:** None

**void SCB\_UartPutString(const char8 string[])**

<b>Description:</b>	Places a NULL terminated string in the transmit buffer to be sent at the next available bus time.  This function is blocking and waits until there is a space available to put all requested data in transmit buffer.
<b>Parameters:</b>	const char8 string[]: pointer to the null terminated string array to be placed in the transmit buffer.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_UartPutCRLF(uint32 txDataByte)**

<b>Description:</b>	Places byte of data followed by a carriage return (0x0D) and line feed (0x0A) to the transmit buffer  This function is blocking and waits until there is a space available to put all requested data in transmit buffer.
<b>Parameters:</b>	uint32 txDataByte : the data to be transmitted
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**uint32 SCB\_UartGetChar(void)**

<b>Description:</b>	Retrieves next data element from receive buffer. This function is designed for ASCII characters and returns a char where 1 to 255 is valid characters and 0 indicates an error occurred or no data is present. <ul style="list-style-type: none"><li>• <u>RX software buffer disabled</u>: Returns data element retrieved from RX FIFO.</li><li>• <u>RX software buffer enabled</u>: Returns data element from the software receive buffer.</li></ul>
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Next data element from the receive buffer. ASCII character values from 1 to 255 are valid. A returned zero signifies an error condition or no data available.
<b>Side Effects:</b>	The errors bits may not correspond with reading characters due to RX FIFO and software buffer usage.  <u>RX software buffer disabled</u> : The internal software buffer overflow does not treat as an error condition. Check SCB_rxBufferOverflow to capture that error condition.

**uint32 SCB\_UartGetByte(void)**

<b>Description:</b>	Retrieves next data element from the receive buffer, returns received byte and error condition. <u>RX software buffer disabled:</u> Returns data element retrieved from RX FIFO. Undefined data will be returned if the RX FIFO is empty <u>RX software buffer enabled:</u> Returns data element from the software receive buffer
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Bits 15-8 contains status and bits 7-0 contains the next data element from receive buffer. If the bits 15-8 are nonzero, an error has occurred
<b>Side Effects:</b>	The errors bits may not correspond with reading characters due to RX FIFO and software buffer usage. <u>RX software buffer disabled:</u> The internal software buffer overflow does not treat as an error condition. Check SCB_rxBufferOverflow to capture that error condition.

**void SCB\_UartSetRxAddress(uint32 address)**

<b>Description:</b>	Sets the hardware detectable receiver address for the UART in Multiprocessor mode.
<b>Parameters:</b>	uint32 address: Address for hardware address detection.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_UartSetRxAddressMask(uint32 addressMask)**

<b>Description:</b>	Sets the hardware address mask for the UART in Multiprocessor mode.
<b>Parameters:</b>	uint32 addressMask: Address mask. Bit value 0 – excludes bit from address comparison. Bit value 1 – the bit needs to match with the corresponding bit of the address.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None



**void SCB\_SpiUartWriteTxData(uint32 txDataByte)**

<b>Description:</b>	Places a data entry into the transmit buffer to be sent at the next available bus time. The data transmit direction is LSB.  This function is blocking and waits until there is space available to put the requested data in the transmit buffer.  For UART Multi Processor mode this function can send 9-bits data as well. Use SCB_UART_MP_MARK to add mark to create address byte.
<b>Parameters:</b>	uint32 txDataByte: the data to be transmitted.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SpiUartPutArray(const uint16/uint8 wrBuf[], uint32 count)**

<b>Description:</b>	Places an array of data into the transmit buffer to be sent.  This function is blocking and waits until there is a space available to put all the requested data in the transmit buffer.  The array size can be greater than transmit buffer size.
<b>Parameters:</b>	const uint16/uint8 wrBuf[]: pointer to an array with data to be placed in transmit buffer. uint32 count: number of data elements to be placed in the transmit buffer.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**uint32 SCB\_SpiUartGetTxBufferSize(void)**

<b>Description:</b>	Returns the number of elements currently in the transmit buffer. <ul style="list-style-type: none"><li>• <u>TX software buffer disabled:</u> returns the number of used entries in TX FIFO.</li><li>• <u>TX software buffer enabled:</u> returns the number of elements currently used in the transmit buffer. This number does not include used entries in the TX FIFO. The transmit buffer size is zero until the TX FIFO is full.</li></ul>
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Number of data elements ready to transmit.
<b>Side Effects:</b>	None

**void SCB\_SpiUartClearTxBuffer(void)**

**Description:** Clears the transmit buffer and TX FIFO.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_SpiUartReadRxData(void)**

**Description:** Retrieves the next data element from the receive buffer.

- RX software buffer disabled: Returns data element retrieved from RX FIFO. Undefined data will be returned if the RX FIFO is empty.
- RX software buffer enabled: Returns data element from the software receive buffer. Zero value will be returned if receive software buffer is empty.

**Parameters:** None

**Return Value:** uint32: Next data element from the receive buffer.

**Side Effects:** None

**uint32 SCB\_SpiUartGetRxBufferSize(void)**

**Description:** Returns the number of received data elements in the receive buffer.

RX software buffer disabled: returns the number of used entries in RX FIFO.

RX software buffer enabled: returns the number of elements which were placed in receive buffer.

**Parameters:** None

**Return Value:** uint32: Number of received data elements

**Side Effects:** None

**void SCB\_SpiUartClearRxBuffer(void)**

**Description:** Clear the receive buffer and RX FIFO.

**Parameters:** None

**Return Value:** None

**Side Effects:** None


## UART Functional Description

The Universal Asynchronous Receiver/Transmitter (UART) protocol is an asynchronous serial interface. The UART transmit and receive interfaces consists of 2 signals:

- **TX** – Transmitter
- **RX** – Receiver

**Note** SCB does NOT support RS232 side band signals associated with flow control, such as DTR (Data Terminal Ready), DCD (Data Carrier Detect), etc.

**Figure 11 UART typical connection**

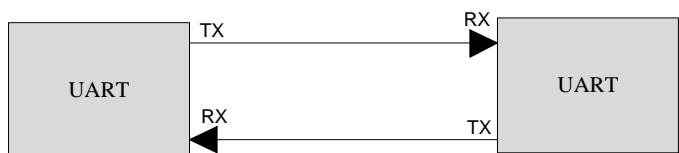

### Standard mode operation


Standard UART is defined with “peer to peer” topology.

A typical UART transfer consists of a “Start Bit” followed by multiple “Data Bits”, optionally followed by a “Parity Bit” and finally completed by one or more “Stop Bits”. The “Start Bit” value is always ‘0’, the “Data Bits” values are dependent on the data transferred, the “Parity Bit” value is set to a value guaranteeing an even or odd parity over the “Data Bits” and the “Stop Bits” value is ‘1’. The “Parity Bit” is generated by the transmitter and can be used by the receiver to detect single bit transmission errors. When not transmitting data, the TX line is ‘1’; i.e. the same value as the “Stop Bits”.

The transition of a “Stop Bit” to a “Start Bit” is represented by a change from ‘1’ to ‘0’ on the TX line. This transition can be used by the receiver to synchronize with the transmitter clock. Synchronization at the start of each data transfer allows error-free transmission even in the presence of frequency drift between transmitter and receiver clocks. The required clock accuracy is dependent on the data transfer size.

The stop period or the amount of “Stop Bits” between successive data transfers is typically agreed upon between transmitter and receiver, and is typically in the range of 1 to 3 bit transfer periods.

 **Figure 12 UART Protocol**



## UART 9<sup>th</sup> data bit usage

The 9<sup>th</sup> bit is sent in the parity bit position and most typically used to define whether the data sent was an address or standard data. A mark (1) in the parity bit indicates an address was sent and a space (0) in the parity bit indicates data was sent. The data flow is "Start Bit, Data Bits, Parity, Stop Bits," similar to the other parity modes but this bit has to be control by user software before the transfer rather than being calculated based on the data bit values.

```
tx_data = 0x31;
tx_data |= 0x100; /* Set 9th bit to indicate 'address' */
UART_SpiUartWriteTxData(tx_data)
```


## Multiprocessor mode operation

This mode is defined with “single-master-multi-slave” topology. The multiprocessor mode is also known as UART 9-bits protocol, while standard UART protocol uses 5 to 8-bits data field.


The main properties of multiprocessor mode are:

- Single master with multiple slave concept (multi-drop network)
- Each slave is identified by a unique address
- Using 9 bits data field, with the 9th bit (MSB) as address/data flag. When set ‘1’, it indicates an address byte; when set ‘0’ it indicates a data byte.
- Parity bit is disabled

**Figure 13 Multiprocessor Bus Connections**

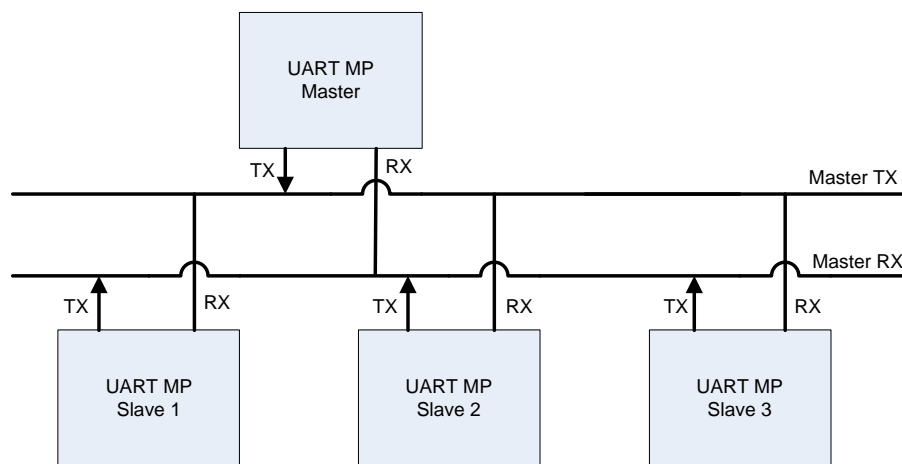

To enable Multiprocessor mode configure the UART with the following options: **Mode:** Standard, **Data bits:** 9 bits, **Parity:** None.

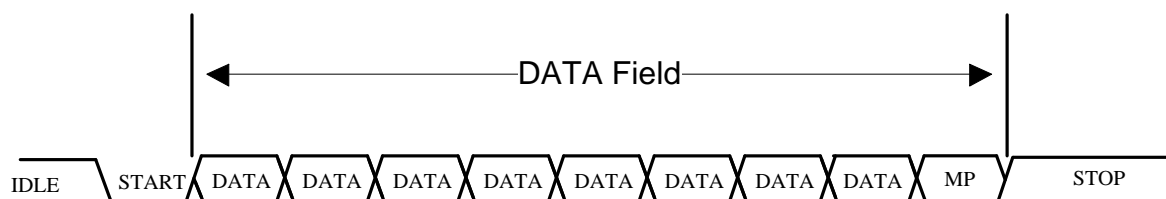**Figure 14 UART data frame in Multiprocessor mode**

Because the data link layer of a multi-drop network is a user-defined protocol, it offers a flexible way of composing the data field.

All the bits in an address frame can be used to represent a device address. Alternatively, some bit can be used to represent the address, while remaining bits can represent a command to the slave device, and some bits can represent the length of data in following data frames.

The SCB can be used as master or slave device in multiprocessor mode.

When UART works as slave device. The received address is matched with **Address** and **Mask**. The matched address is written in the RX FIFO when **Accept matching address in RX FIFO** is checked. In the case of a match, subsequent received data are sent to the RX FIFO. In the case of no match, subsequent received data are dropped, until next address received for compare.

### SmartCard (ISO7816) mode operation

ISO7816 is asynchronous serial interface, defined with “single-master-single-slave” topology. Only master (reader) function is supported in component.

SCB provides the basic physical layer support with asynchronous character transmission, and only “I/O” pin interface of standard ISO7816<sup>3</sup> pin list is provided. SCB UART TX line will be connected to SmartCard I/O line, by internally multiplexing between TX and RX control modules.


The higher level protocol implementation are left for firmware to handle from the user level.

### SmartCard data transfer

The SmartCard transfer is similar to a UART transfer, with the addition of a negative acknowledgement (NACK) that may be send from the receiver to the transmitter. A NACK is always ‘0’. Both transmitter and receiver may drive the same I/O line, although never at the same time. [Figure 15](#) illustrates the SmartCard protocol.

Typically, implementations use a tri-state driver with a pull up resistor, such that when the line is not driven, its value is ‘1’ (the same value as when not transmitting data or the value of the “Stop Bit”).

<sup>3</sup> Refer to the *ISO/IEC 7816-3:2006 – Identification cards – Integrated circuit cards – Part 3: Cards with contacts – Electrical interface and transmission protocols* (1997) on the ISO web site at [www.iso.org](http://www.iso.org)

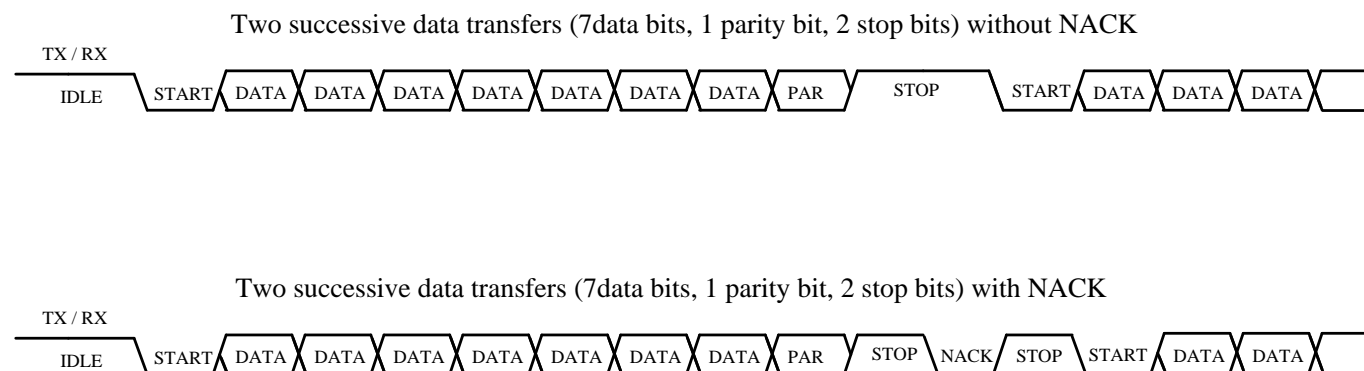**Figure 15 SmartCard Data Transfer Example**

A SmartCard transfer has the transmitter drive the “Start Bit” and “Data Bits” and a “Parity Bit”. After these bits, it enters its stop period by releasing the bus. Releasing results in the line being ‘1’ (the value of a “Stop Bit”). After half bit transfer period into the stop period, the receiver may drive a NACK on the line (a value of ‘0’) for one to two bit transfer period. This NACK is observed by the transmitter, which reacts by extending its stop period by one bit transfer period. For this protocol to work, the stop period should be larger than one bit transfer period.

**Note** Data transfer with a NACK takes one bit transfer period longer, than a data transfer without a NACK.

### Protocol T=0 and T=1

There are two transmission protocols in ISO7816 specification, T=0 (half-duplex transmission of asynchronous characters), and T=1 (half duplex transmission of asynchronous blocks). At physical layer, T=1 blocks are implemented with asynchronous characters.

### Answer-to-reset (ATR)


By definition, the Answer-To-Reset is the value of the sequence of the bytes sent by the card (slave) to the interface device (reader or master), as the answer to a reset. On the I/O line, each byte is conveyed in an asynchronous character.

The process of communication setup (ATR, answer to reset), PPS (protocol and parameter selection), selection of classes of operating conditions, operation mode selection and switching, retransmission on NACK, and other high level protocol implementation is left for user firmware to handle.

### Example implementation of SmartCard reader

You have to consider how to implement a complete SmartCard system with other available system resources for “RST” signal, “CLK” signal, card detect signal, card power supply control signals.

Figure 16 is example of implementing SmartCard reader function with TCPWM and pins components.

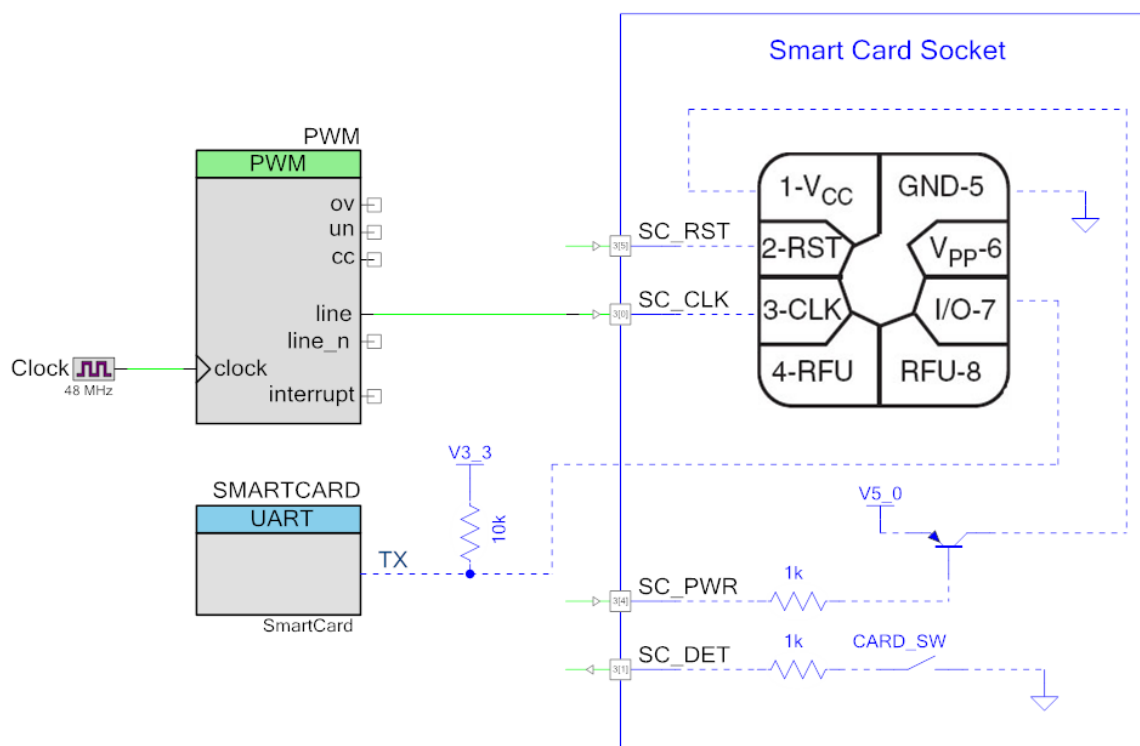**Figure 16 SmartCard reader implementation example**

The UART component is connected to I/O card contact. Pull-up resistor must be connected to this line. SC\_RST, SC\_CLK are standard card contacts. SC\_DET is for card insertion detection. SC\_PWR is for control of card power on or off. Refer to the *ISO7816 specification* for more details.

### IrDA mode operation

IrDA is defined with “peer to peer” topology. SCB only provides support<sup>4</sup> for IrDA from the basic physical layer with rates from 1200 bps to 115200 bps. The physical layer is responsible for the definition of hardware transceivers for the data transmission. The higher level protocol implementation are left for firmware to handle from the user level.


The minimum demand for transmission rates for IrDA is only 9600 bps. All transmissions must be started at this rate to enable compatibility. Higher rates are a matter of negotiation of the ports after establishing the links.

The IrDA protocol adds a modulation scheme to the UART signaling. At the transmitter, bits are modulated. At the receiver, bits are demodulated. The modulation scheme uses a Return-to-Zero-Inverted (RZI) format. A bit value of ‘0’ is signaled by a short ‘1’ pulse on the line and a bit value of ‘1’ is signaled by holding the line to ‘0’. IrDA is using 3/16 RZI modulation.

<sup>4</sup> Refer to the *IrPHY (IrDA Physical Layer Link Specification)* (Rev. 1.4 from May 2001) on the IrDA web site at [www.irda.org](http://www.irda.org)

The [Figure 17](#) shows UART frame and IR frame, comprised a Start Bit, 8 Data Bits, no Parity Bit and ending with a Stop Bit.

**Figure 17 UART Frame and IR Frame example**

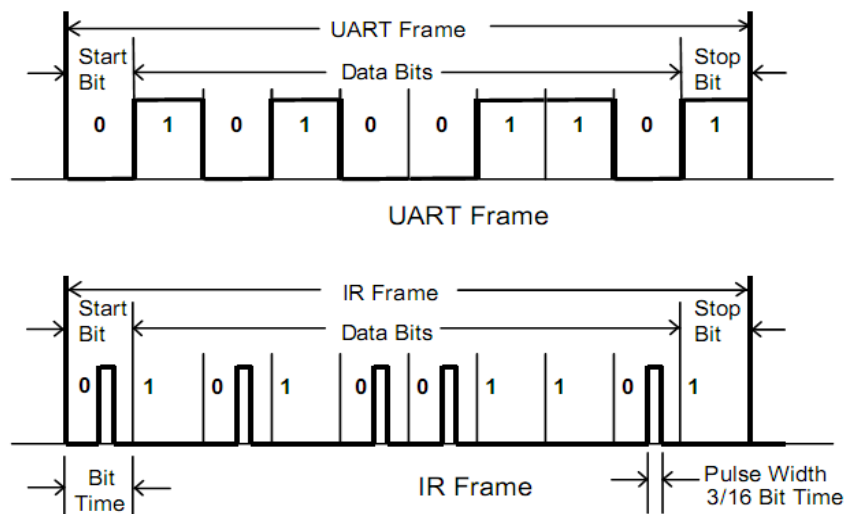

### Overampling Selection

IrDA is using 3/16 RZI modulation, so the sampling clock frequency should be set 16x of selected **Baud rate**, by configuring **Oversampling**. **Oversampling** should always be 16 for IrDA.

### Normal versus Low power transmitting

There are two modes of IrDA operation:


- **Normal transmission** – pulse width is roughly 3/16 of the bit period (for all baud rates)
- **Low power transmission** – pulse width is potentially smaller (down to 1.62μs typical and 1.41μs minimal) than 3/16 of the bit period (for rates less 115200 bps). Supported only for **RX only** direction.

### Inverting RX


This option is used for support two possible demodulation scheme described below.

According to IrPHY specification, IR frame modulation (encoding) scheme is shown on [Figure 18](#).

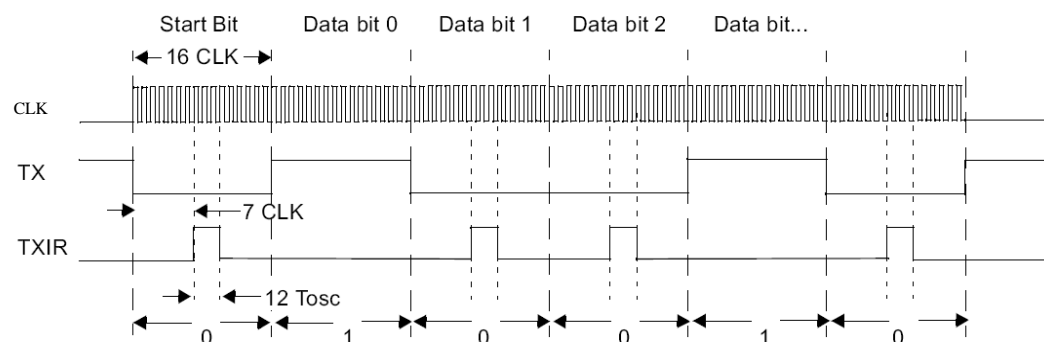


**Figure 18 IR frame modulation scheme**

And IR frame demodulation (decoding) scheme is shown on [Figure 19](#). RXIR line voltage level is default low, active high.

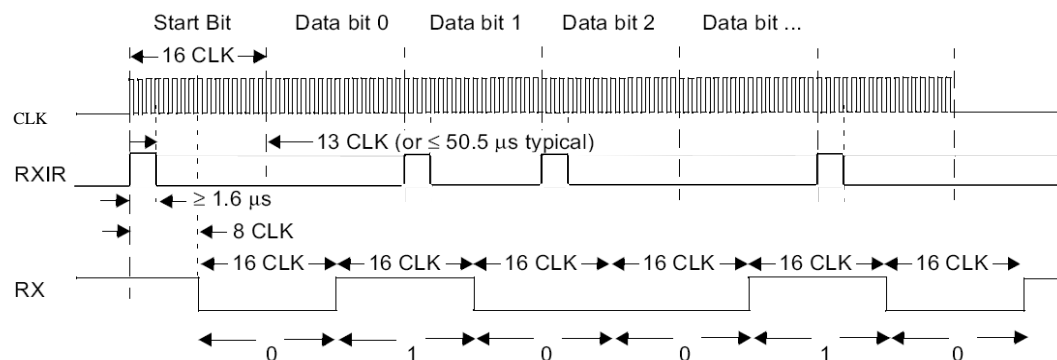**Figure 19 IR frame demodulation scheme 1 (active high)**

In application, the RXIR frame output from IrDA transceiver is often pull-up, default high, active low. [Figure 20](#) shows another demodulation scheme.

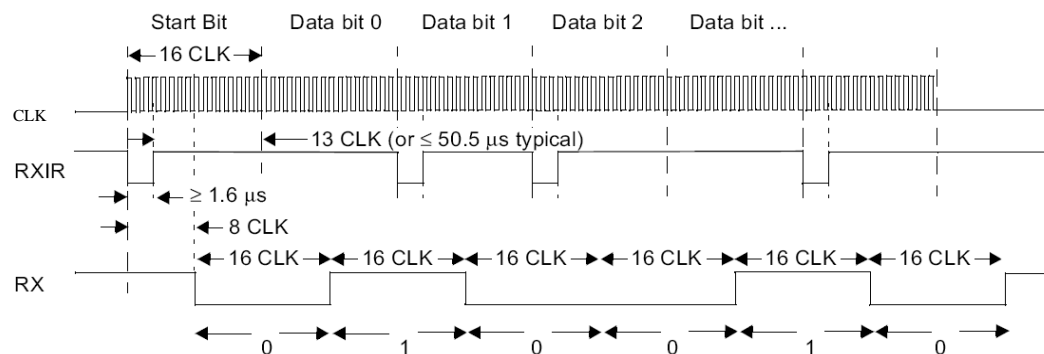**Figure 20 IR frame demodulation scheme 2 (active low)**

## Software Buffer

The SCB has a FIFO memory, which is a 16 word by 16 bit SRAM, with byte write enable. In UART mode, the FIFO is split into TX FIFO and RX FIFO. Each has eight entries of 16 bits per entry. The 16-bit width per entry is used to accommodate configurable data width.

The internal interrupt handler is used to provide interaction between software and hardware TX/RX buffers without any changes to your top-level firmware.

You should also consider that using the software buffer leads to greater timing intervals between transmitted words because of the extra time the interrupt handler needs to execute (depending on the selected HFCLK value).

## Interrupts

When **RX buffer size** or **TX buffer size** is greater than 8 bytes/words, the **RX FIFO not empty** and **TX FIFO not full** interrupt sources are reserved by the component for internal software buffer operations. **Do not clear or disable them** because it causes incorrect software buffer operation. But it is user responsibility to clear interrupt from other sources because they are not cleared automatically. The customer handler function exists to do that.

In case **RX buffer size** or **TX buffer size** is less or equal 8 bytes/words instead of software buffer only the hardware TX or RX FIFO is used. In the **Internal** interrupt mode the interrupts are not cleared automatically. It is user responsibility to do this. The **External** interrupt mode is preferred in this case.

## Low power modes

The device wakes up by the RX GPIO falling edge event that is generated by incoming start bit. There are two constraints for wakeup:

- the 1<sup>st</sup> data bit of wakeup transaction has to be '1'. The UART skips start bit and synchronizes on the 1<sup>st</sup> data bit.
- the wakeup time of device has to be less than one bit duration. In other case the received data will be incorrect.
- **Note** RX GPIO interrupt restricts usage of all GPIO interrupts from the port where UART rx pin is placed.

## Common SCB Component Information

### Interrupt APIs

These functions are common for most SCB modes.

By default, PSoC Creator assigns the instance name “SCB\_1” to the first instance of a component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is “SCB.”

Function	Description
SCB_EnableInt()	When using an Internal interrupt, this enables the interrupt in the NVIC.
SCB_DisableInt()	When using an Internal interrupt, this disables the interrupt in the NVIC.
SCB_GetInterruptCause()	Returns a mask of bits showing what the source of the current triggered interrupt.
SCB_SetCustomInterruptHandler()	Registers a function to be called by the internal interrupt handler.
SCB_SetTxInterruptMode()	Configures which bits of TX interrupt request register will trigger an interrupt event.
SCB_GetTxInterruptMode()	Returns TX interrupt mask
SCB_GetTxInterruptSourceMasked()	Returns TX interrupt request register masked by interrupt mask
SCB_GetTxInterruptSource()	Returns the bit-mask of pending TX interrupt sources
SCB_ClearTxInterruptSource()	Clears the bit-mask of pending TX interrupt sources
SCB_SetTxInterrupt()	Generates interrupt event from bit-mask of TX interrupt sources
SCB_SetRxInterruptMode()	Configures which bits of RX interrupt request register will trigger an interrupt event
SCB_GetRxInterruptMode()	Returns RX interrupt mask
SCB_GetRxInterruptSourceMasked()	Returns RX interrupt request register masked by interrupt mask
SCB_GetRxInterruptSource()	Returns the bit-mask of pending RX interrupt sources
SCB_ClearRxInterruptSource()	Clears the bit-mask of pending RX interrupt sources
SCB_SetRxInterrupt()	Generates interrupt event from bit-mask of RX interrupt sources
SCB_SetMasterInterruptMode()	Configures which bits of Master interrupt request register will trigger an interrupt event
SCB_GetMasterInterruptMode()	Returns Master interrupt mask
SCB_GetMasterInterruptSourceMasked()	Returns Master interrupt request register masked by interrupt mask

Function	Description
SCB_GetMasterInterruptSource()	Returns the bit-mask of pending Master interrupt sources
SCB_ClearMasterInterruptSource()	Clears the bit-mask of pending Master interrupt sources
SCB_SetMasterInterrupt()	Generates interrupt event from bit-mask of Master interrupt sources
SCB_SetSlaveInterruptMode()	Configures which bits of Slave interrupt request register will trigger an interrupt event
SCB_GetSlaveInterruptMode()	Returns Slave interrupt mask
SCB_GetSlaveInterruptSourceMasked()	Returns Slave interrupt request register masked by interrupt mask
SCB_GetSlaveInterruptSource()	Returns the bit-mask of pending Slave interrupt sources
SCB_ClearSlaveInterruptSource()	Clears the bit-mask of pending Slave interrupt sources
SCB_SetSlaveInterrupt()	Generates interrupt event from bit-mask of Slave interrupt sources

### Interrupt Function Appliance

Function	I2C	SPI	UART
SCB_EnableInt()	+	+	+
SCB_DisableInt()	+	+	+
SCB_GetInterruptCause()	+	+	+
SCB_SetCustomInterruptHandler()	+	+	+
SCB_SetTxInterruptMode()	+	+	+
SCB_GetTxInterruptMode()	+	+	+
SCB_GetTxInterruptSourceMasked()	+	+	+
SCB_GetTxInterruptSource()	+	+	+
SCB_ClearTxInterruptSource()	+	+	+
SCB_SetTxInterrupt()	+	+	+
SCB_SetRxInterruptMode()	+	+	+
SCB_GetRxInterruptMode()	+	+	+
SCB_GetRxInterruptSourceMasked()	+	+	+
SCB_GetRxInterruptSource()	+	+	+
SCB_ClearRxInterruptSource()	+	+	+
SCB_SetRxInterrupt()	+	+	+
SCB_SetMasterInterruptMode()	+	+	–
SCB_GetMasterInterruptMode()	+	+	–

Function	I2C	SPI	UART
SCB_GetMasterInterruptSourceMasked()	+	+	–
SCB_GetMasterInterruptSource()	+	+	–
SCB_ClearMasterInterruptSource()	+	+	–
SCB_SetMasterInterrupt()	+	+	–
SCB_SetSlaveInterruptMode()	+	+	–
SCB_GetSlaveInterruptMode()	+	+	–
SCB_GetSlaveInterruptSourceMasked()	+	+	–
SCB_GetSlaveInterruptSource()	+	+	–
SCB_ClearSlaveInterruptSource()	+	+	–
SCB_SetSlaveInterrupt()	+	+	–

### void SCB\_EnableInt(void)

**Description:** When using an Internal interrupt, this enables the interrupt in the NVIC. When using an external interrupt the API for the interrupt component must be used to enable the interrupt.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

### void SCB\_DisableInt(void)

**Description:** When using an Internal interrupt, this disables the interrupt in the NVIC. When using an external interrupt the API for the interrupt component must be used to disable the interrupt.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_GetInterruptCause(void)**

**Description:** Returns a mask of bits showing what the source of the current triggered interrupt. This is useful for modes of operation where an interrupt can be generated by conditions in multiple interrupt registers.

**Parameters:** None

**Return Value:** uint32: Mask with the OR of the following conditions that have been triggered:

Interrupt causes constants	Description
SCB_INTR_CAUSE_MASTER	Interrupt from Master
SCB_INTR_CAUSE_SLAVE	Interrupt from Slave
SCB_INTR_CAUSE_TX	Interrupt from TX
SCB_INTR_CAUSE_RX	Interrupt from RX

**Side Effects:** None

**void SCB\_SetCustomInterruptHandler(void (\*func) (void))**

**Description:** Registers a function to be called by the internal interrupt handler. First the function that is registered is called, then the internal interrupt handler performs any operations such as software buffer management functions before the interrupt returns. It is user's responsibility to not break the software buffer operations. Only one custom handler is supported, which is the function provided by the most recent call. At initialization time no custom handler is registered.

**Parameters:** func: Pointer to the function to register. The value NULL indicates to remove the current custom interrupt handler.

**Return Value:** None

**Side Effects:** None

**void SCB\_SetTxInterruptMode(uint32 interruptMask)**

**Description:** Configures which bits of TX interrupt request register will trigger an interrupt event

**Parameters:** uint32 interruptMask: bit-mask of TX interrupt sources to be enabled.

Interrupt causes constants	Description
SCB_INTR_TX_TRIGGER	Fewer entries in the transmitter FIFO than the value specified by trigger level
SCB_INTR_TX_NOT_FULL	Transmitter FIFO is not full
SCB_INTR_TX_EMPTY	Transmitter FIFO is empty
SCB_INTR_TX_OVERFLOW	Attempt to write to a full transmitter FIFO
SCB_INTR_TX_UNDERFLOW	Attempt to read from an empty transmitter FIFO
SCB_INTR_TX_UART_NACK	UART received a NACK in SmartCard mode
SCB_INTR_TX_UART_DONE	UART transfer is complete and the TX FIFO is empty
SCB_INTR_TX_UART_ARB_LOST	Value on the TX line of the UART doesn't match the value on the RX line

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_GetTxInterruptMode(void)**

**Description:** Returns TX interrupt mask

**Parameters:** None

**Return Value:** uint32: Mask of enabled TX interrupt sources (refer to SCB\_SetTxInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetTxInterruptSourceMasked(void)**

**Description:** Returns TX interrupt request register masked by interrupt mask

**Parameters:** None

**Return Value:** uint32: Status only of enabled TX interrupt sources (refer to SCB\_SetTxInterruptMode() function for return values)

**Side Effects:** None



**uint32 SCB\_GetTxInterruptSource(void)**

<b>Description:</b>	Returns the bit-mask of pending TX interrupt sources
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Status of TX interrupt sources (refer to SCB_SetTxInterruptMode() function for return values)
<b>Side Effects:</b>	None

**void SCB\_ClearTxInterruptSource(uint32 interruptMask)**

<b>Description:</b>	Clears the bit-mask of pending TX interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of pending TX interrupt sources to clear (refer to SCB_SetTxInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetTxInterrupt(uint32 interruptMask)**

<b>Description:</b>	Generates interrupt event from bit-mask of TX interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of TX interrupt sources to generate an interrupt event (refer to SCB_SetTxInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None



**void SCB\_SetRxInterruptMode(uint32 interruptMask)**

**Description:** Configures which bits of RX interrupt request register will trigger an interrupt event

**Parameters:** uint32 interruptMask: Bit-mask of RX interrupt sources to be enabled.

Interrupt causes constants	Description
SCB_INTR_RX_TRIGGER	More entries in the receiver FIFO than the value specified by trigger level
SCB_INTR_RX_NOT_EMPTY	Receiver FIFO is not empty
SCB_INTR_RX_FULL	Receiver FIFO is full
SCB_INTR_RX_OVERFLOW	Attempt to write to a full receiver FIFO
SCB_INTR_RX_UNDERFLOW	Attempt to read from an empty receiver FIFO
SCB_INTR_RX_FRAME_ERROR	UART framing error detected
SCB_INTR_RX_PARITY_ERROR	UART parity error detected

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_GetRxInterruptMode(void)**

**Description:** Returns RX interrupt mask

**Parameters:** None

**Return Value:** uint32: Mask of enabled RX interrupt sources (refer to SCB\_SetRxInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetRxInterruptSourceMasked(void)**

**Description:** Returns RX interrupt request register masked by interrupt mask

**Parameters:** None

**Return Value:** uint32: Status only of enabled RX interrupt sources (refer to SCB\_SetRxInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetRxInterruptSource(void)**

<b>Description:</b>	Returns the bit-mask of pending RX interrupt sources
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Status of RX interrupt sources (refer to SCB_SetRxInterruptMode() function for return values)
<b>Side Effects:</b>	None

**void SCB\_ClearRxInterruptSource(uint32 interruptMask)**

<b>Description:</b>	Clears the bit-mask of pending RX interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of pending RX interrupt sources to clear (refer to SCB_SetRxInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetRxInterrupt(uint32 interruptMask)**

<b>Description:</b>	Generates interrupt event from bit-mask of RX interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of RX interrupt sources to generate an interrupt event (refer to SCB_SetRxInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetMasterInterruptMode(uint32 interruptMask)**

**Description:** Configures which bits of Master interrupt request register will trigger an interrupt event

**Parameters:** uint32 interruptMask: Bit-mask of RX interrupt sources to be enabled.

Interrupt causes constants	Description
SCB_INTR_MASTER_SPI_DONE	SPI Master transfer is complete and the TX FIFO is empty
SCB_INTR_MASTER_I2C_ARB_LOST	I2C master lost arbitration
SCB_INTR_MASTER_I2C_NACK	I2C master negative acknowledgement
SCB_INTR_MASTER_I2C_ACK	I2C master acknowledgement
SCB_INTR_MASTER_I2C_STOP	I2C master generated STOP
SCB_INTR_MASTER_I2C_BUS_ERROR	I2C master bus error (unexpected detection of START or STOP condition)

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_GetMasterInterruptMode(void)**

**Description:** Returns Master interrupt mask

**Parameters:** None

**Return Value:** uint32: Mask of enabled Master interrupt sources (refer to SCB\_SetMasterInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetMasterInterruptSourceMasked(void)**

**Description:** Returns Master interrupt request register masked by interrupt mask

**Parameters:** None

**Return Value:** uint32: Status only of enabled Master interrupt sources (refer to SCB\_SetMasterInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetMasterInterruptSource(void)**

<b>Description:</b>	Returns the bit-mask of pending Master interrupt sources
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Status of Master interrupt sources (refer to SCB_SetMasterInterruptMode() function for return values)
<b>Side Effects:</b>	None

**void SCB\_ClearMasterInterruptSource(uint32 interruptMask)**

<b>Description:</b>	Clears the bit-mask of pending Master interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of pending Master interrupt sources to clear (refer to SCB_SetMasterInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetMasterInterrupt(uint32 interruptMask)**

<b>Description:</b>	Generates interrupt event from bit-mask of Master interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of Master interrupt sources to generate an interrupt event (refer to SCB_SetMasterInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetSlaveInterruptMode(uint32 interruptMask)**

**Description:** Configures which bits of Slave interrupt request register will trigger an interrupt event

**Parameters:** uint32 interruptMask: Bit-mask of Slave interrupt sources to be enabled.

Slave interrupt sources	Description
INTR_SLAVE_I2C_ARB_LOST	Slave lost arbitration: the value driven on the SDA line is not the same as the value observed on the SDA line.
INTR_SLAVE_I2C_NACK	Slave negative acknowledgement received.
INTR_SLAVE_I2C_ACK	Slave acknowledgement received.
INTR_SLAVE_I2C_WRITE_STOP	Stop or Repeated Start event for write transfer intended for this slave (address matching is performed).
INTR_SLAVE_I2C_STOP	Stop or Repeated Start event for (read or write) transfer intended for this slave (address matching is performed).
INTR_SLAVE_I2C_START	I2C slave Start received.
INTR_SLAVE_I2C_ADDR_MATCH	I2C matching address received.
INTR_SLAVE_I2C_GENERAL	Slave general call address received.
INTR_SLAVE_I2C_BUS_ERROR	Slave bus error (unexpected detection of START or STOP condition).
INTR_SLAVE_SPI_BUS_ERROR	SPI slave deselected at an expected time in the SPI transfer.

**Return Value:** None

**Side Effects:** None

**uint32 SCB\_GetSlaveInterruptMode(void)**

**Description:** Returns Slave interrupt mask

**Parameters:** None

**Return Value:** uint32: Mask of enabled Slave interrupt sources (refer to SCB\_SetSlaveInterruptMode() function for return values)

**Side Effects:** None

**uint32 SCB\_GetSlaveInterruptSourceMasked(void)**

<b>Description:</b>	Slave interrupt request register masked by interrupt mask
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Status only of enabled Slave interrupt sources (refer to SCB_SetSlaveInterruptMode() function for return values)
<b>Side Effects:</b>	None

**uint32 SCB\_GetSlaveInterruptSource(void)**

<b>Description:</b>	Returns the bit-mask of pending Slave interrupt sources
<b>Parameters:</b>	None
<b>Return Value:</b>	uint32: Status of Slave interrupt sources (refer to SCB_SetSlaveInterruptMode() function for return values)
<b>Side Effects:</b>	None

**void SCB\_ClearSlaveInterruptSource(uint32 interruptMask)**

<b>Description:</b>	Clears the bit-mask of pending Slave interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of pending Slave interrupt sources to clear (refer to SCB_SetSlaveInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**void SCB\_SetSlaveInterrupt(uint32 interruptMask)**

<b>Description:</b>	Generates interrupt event from bit-mask of Slave interrupt sources
<b>Parameters:</b>	uint32 interruptMask: Bit-mask of Slave interrupt sources to generate an interrupt event (refer to SCB_SetSlaveInterruptMode() function for return values)
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**Clock Selection**

The SCB is clocked by a single dedicated clock connection. Depending on the mode of operation the frequency of this clock may be calculated by the component based on the customizer configuration or may be provided externally.

Since the Unconfigured mode customizer is not aware of the end mode of operation the clock must be provided externally in this case.



## MISRA Compliance

This section describes the MISRA-C:2004 compliance and deviations for the component. There are two types of deviations defined:

- project deviations – deviations that are applicable for all PSoC Creator components
- specific deviations – deviations that are applicable only for this component

This section provides information on component-specific deviations. Project deviations are described in the MISRA Compliance section of the *System Reference Guide* along with information on the MISRA compliance verification environment.

The SCB component has the following specific deviations:

MISRA-C: 2004 Rule	Rule Class <sup>5</sup>	Rule Description	Description of Deviation(s)
1.1	R	This rule states that code shall conform to C ISO/IEC 9899:1990 standard.	Nesting of control structures (statements) exceeds 15 - program does not conform strictly to ISO:C90. In practice, most compilers will support a much more liberal nesting limit and therefore this limit may only be relevant when strict conformance is required. By comparison, ISO:C99 specifies a limit of 127 "nesting levels of blocks. The supported compilers (GCC 4.1.1, RVDS and MDK) support larger number nesting of control structures.
17.4	R	Array indexing shall be the only allowed form of pointer arithmetic.	Component uses array indexing operation to access buffers. The buffer size is checked before access. It is safe operation unless user provides incorrect buffer size.
19.7	A	A function should be used in preference to a function-like macro.	Deviated since function-like macros are used to allow more efficient code.

This component has the following embedded components: Pins and Interrupt. Refer to the corresponding component datasheets for information on their MISRA compliance and specific deviations.

---

<sup>5</sup> Required / Advisory

## Sample Firmware Source Code

PSoC Creator provides many example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the “Find Example Project” topic in the PSoC Creator Help for more information.

## Interrupt Service Routine

The SCB supports interrupts on the various events, depends on mode which is working on. All of the interrupt events are ORed together before being sent to the interrupt controller, so the SCB can only generate a single interrupt request to the controller at any given time. This signal goes high when any of the enabled interrupt sources are true.

Some of the modes expose this signal as terminal when it is not needed for internal operation as described in the Input/Output Connections section. If it is needed for internal operation the terminal is not present.

Software can service multiple interrupt events in a single interrupt service routine by using various interrupt APIs.

PSoC Creator generates the necessary interrupt service routines for handling internal operation. However there is possible to register a custom function using *SCB\_SetCustomInterruptHandler()* function. This user function will be called first, before the internal interrupt handler performs any operations such as software buffer management functions. Only one custom handler is supported.

**Note** Interrupt sources managed by user are not cleared automatically. It is user responsibility to do that. Interrupt sources are cleared by writing a ‘1’ in corresponding bit position. The preferred way to clear interrupt sources is usage APIs (for example: *SCB\_ClearRxInterruptSource()*).

```
void CustomInterruptHandler(void);
void main()
{
    /* Register custom function */
    SCB_SetCustomInterruptHandler(&CustomInterruptHandler);

    /* Initialize SCB component in UART mode.
    * The SCB_INTR_RX_PARITY_ERROR is already enabled in GUI:
    * UART Advanced Tab.
    */
    SCB_Start();
    CyGlobalIntEnable; /* Enable global interrupts. */
    for(;;)
    {
        /* Place your application code here. */
    }
}
/* User interrupt handler to insert into SCB interrupt handler.
```



```

* Note: SCB interrupt set to Internal in GUI.
*/
void CustomInterruptHandler(void)
{
    if(0u != (SCB_GetRxInterruptSourceMasked() & SCB_INTR_RX_PARITY_ERROR))
    {
        /* Interrupt sources does not clear automatically if it is managed by
        * user. The interrupt sources clearing becomes user responsibility.
        */
        SCB_ClearRxInterruptSource(SCB_INTR_RX_PARITY_ERROR);

        /*
        * Add user interrupt code to manage SCB_INTR_RX_PARITY_ERROR.
        */
    }
}

```

### TX FIFO interrupt sources

The following interrupt sources have specific behavior: TX FIFO empty, TX FIFO not full, and TX FIFO trigger. These interrupt sources trigger current status of the TX FIFO and keep it until clear operation. When the SCB component is disabled, TX FIFO becomes empty and TX interrupt sources trigger its state. Clearing these interrupt sources do not make any sense if TX FIFO is empty because they are restored back. The restore operation takes one clock cycle; therefore, the interrupt source is cleared during this time. While filling TX FIFO, it is better to monitor the number of entries in it rather than try to clear TX FIFO not full or trigger interrupt source after each byte put in TX FIFO. The restore time causes false clearing of TX FIFO not full or trigger interrupt source. To start TX FIFO interrupt sources processing, the suggested flow is: fill TX FIFO with data, cleared triggered “old” interrupt source and enable it.

To clear interrupt source, write ‘1’ to corresponding bit position.

**Note** The TX FIFO trigger interrupt source behavior depends on value of trigger level.

### RX FIFO interrupt sources

The following interrupt sources have specific behavior: RX FIFO not empty, RX FIFO full and RX FIFO trigger. These interrupt sources trigger current status of the RX FIFO and keep it until clear operation. When SCB component is disabled RX FIFO becomes empty and triggered interrupt source can be cleared. Clearing these interrupt sources do not make any sense when RX FIFO is full because they are restored back. The restore operation takes one clock cycle; therefore, the interrupt source is cleared while this time. While getting data from RX FIFO it is better to monitor number of entries in it rather than try to clear RX FIFO not empty or trigger interrupt source after each read byte. The restore time causes false clearing of RX FIFO not empty or trigger interrupt source. To start RX FIFO interrupt sources processing the suggested flow is: cleared triggered “old” interrupt source and enable it. In most cases the clear operation is not required.

To clear interrupt source, write ‘1’ to corresponding bit position.

**Note** The RX FIFO trigger interrupt source behavior depends on value of trigger level.



## Placement

The SCB is placed as Fixed Function block and all placement information is provided to the API through the *cyfitter.h* file.

## Registers

See the chip *Technical Reference Manual (TRM)* for more information about registers.

## Resources

SCB is implemented as a fixed-function block.

Mode		Resource Type		
		SCB Fixed Blocks		Interrupts
Unconfigured SCB		1		1
I <sup>2</sup> C	Slave	1		1
	Master	1		1
	Multi-Master	1		1
	Multi-Master-Slave	1		1
SPI	Slave	Hardware buffers	1	–
		Software buffers	1	1
	Master	Hardware buffers	1	–
		Software buffers	1	1
UART	Standard	Hardware buffers	1	–
		Software buffers	1	1
	Standard (Multiprocessor mode)	Hardware buffers	1	–
		Software buffers	1	1
	SmartCard	Hardware buffers	1	–
		Software buffers	1	1
	IrDA	Hardware buffers	1	–
		Software buffers	1	1

## API Memory Usage

The component memory usage varies significantly, depending on the compiler, device, number of APIs used and component configuration. The following table provides the memory usage for all APIs available in the given component configuration.

The measurements have been done with the associated compiler configured in Release mode with optimization set for Size. For a specific design the map file generated by the compiler can be analyzed to determine the memory usage.

Mode			PSoC 4 (GCC)	
			Flash	RAM
Unconfigured SCB			3518	37
I <sup>2</sup> C	Slave		1672	46
	Master		2966	49
	Multi-Master		2966	49
	Multi-Master-Slave		4154	49
SPI	Slave	Hardware buffers <sup>6</sup>	384	12
		Software buffers <sup>7</sup>	1062	53
	Master	Hardware buffers	420	12
		Software buffers	1098	53
UART	Standard	Hardware buffers	568	12
		Software buffers	1222	53
	Standard (Multiprocessor mode)	Hardware buffers	622	12
		Software buffers	1284	69
	SmartCard	Hardware buffers	580	12
		Software buffers	1234	53
	IrDA	Hardware buffers	580	12
		Software buffers	1230	53

<sup>6</sup> Hardware buffers – RX and TX buffers size equal 8 bytes. Interrupt mode is None.

<sup>7</sup> Software buffers – RX and TX buffers size equal 9 bytes. Internal interrupt is automatically enabled in this case.

## DC and AC Electrical Characteristics

Specifications are valid for  $-40\text{ }^{\circ}\text{C} \leq T_A \leq 85\text{ }^{\circ}\text{C}$  and  $T_J \leq 100\text{ }^{\circ}\text{C}$ , except where noted.  
Specifications are valid for 1.71 V to 5.5 V, except where noted.

### I<sup>2</sup>C DC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
I <sub>I2C1</sub>	Block current consumption at 100 KHz	—	-	10.5	μA	
I <sub>I2C2</sub>	Block current consumption at 400 KHz	—	-	135	μA	
I <sub>I2C3</sub>	Block current consumption at 1 Mbps	—	-	310	μA	
I <sub>I2C4</sub>	I <sup>2</sup> C enabled in Deep Sleep mode	—	-	1.4	μA	

### I<sup>2</sup>C AC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
F <sub>I2C1</sub>	Bit rate	—	—	1	Mbps	

### UART DC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
I <sub>UART1</sub>	Block current consumption at 100 Kbits/sec	—	-	9	μA	
I <sub>UART2</sub>	Block current consumption at 1000 Kbits/sec	—	-	312	μA	

### UART AC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
F <sub>UART</sub>	Bit rate	—	—	1	Mbps	

### SPI DC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
I <sub>SPI1</sub>	Block current consumption at 1 Mbits/sec	—	-	360	μA	
I <sub>SPI2</sub>	Block current consumption at 4 Mbits/sec	—	-	560	μA	
I <sub>SPI3</sub>	Block current consumption at 8 Mbits/sec	—	-	600	μA	

## SPI AC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
F <sub>SPI</sub>	SPI operating frequency (master; 6X oversampling)	–	–	8	MHz	

## SPI Master AC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
T <sub>DMO</sub>	MOSI valid after Sclock driving edge	–	–	15	ns	
T <sub>DSI</sub>	MISO valid before Sclock capturing edge. Full clock, late MISO Sampling used	20	–	–	ns	
T <sub>HMO</sub>	Previous MOSI data hold time with respect to capturing edge at Slave	0	–	–	ns	

## SPI Slave AC Specifications

Parameter	Description	Min	Typ	Max	Units	Conditions
T <sub>DMI</sub>	MOSI valid before Sclock capturing edge	40	–	–	ns	
T <sub>DSO</sub>	MISO valid after Sclock driving edge	–	–	42 + 3 × F <sub>CPU</sub>	ns	
T <sub>DSO_ext</sub>	MISO valid after Sclock driving edge in Ext. Clock mode	–	–	48	ns	
T <sub>HSO</sub>	Previous MISO data hold time	0	–	–	ns	
T <sub>SSELCK</sub>	SSEL Valid to first SCK Valid edge	100	–	–	ns	

## Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.0.b	Minor datasheet edit.	
1.0.a	Edits to the component datasheet to match the GUI.	
1.0	The first release of the SCB component	

© Cypress Semiconductor Corporation, 2013-2016. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control, or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

