

### 40 A single-phase buck regulator

#### **About this document**

#### **Scope and purpose**

This user guide describes the operation, schematic, and bill of materials (BOM) for the EVAL\_TDA38640A\_1.0VOUT Evaluation Board. Detailed application information for TDA38640A is available in the TDA38640A datasheet [1].

#### **Intended audience**

This document is intended as a guide for design engineers evaluating TDA38640A performance with EVAL\_TDA38640A\_1.0VOUT Evaluation Board.

#### 40 A single-phase buck regulator

**Important notice** 



#### Important notice

"Evaluation Boards and Reference Boards" shall mean products embedded on a printed circuit board (PCB) for demonstration and/or evaluation purposes, which include, without limitation, demonstration, reference and evaluation boards, kits and design (collectively referred to as "Reference Board").

Environmental conditions have been considered in the design of the Evaluation Boards and Reference Boards provided by Infineon Technologies. The design of the Evaluation Boards and Reference Boards has been tested by Infineon Technologies only as described in this document. The design is not qualified in terms of safety requirements, manufacturing, and operation over the entire operating temperature range or lifetime.

The Evaluation Boards and Reference Boards provided by Infineon Technologies are subject to functional testing only under typical load conditions. Evaluation Boards and Reference Boards are not subject to the same procedures as regular products regarding returned material analysis (RMA), process change notification (PCN) and product discontinuation (PD).

Evaluation Boards and Reference Boards are not commercialized products, and are solely intended for evaluation and testing purposes. In particular, they shall not be used for reliability testing or production. The Evaluation Boards and Reference Boards may therefore not comply with CE or similar standards (including but not limited to the EMC Directive 2004/EC/108 and the EMC Act) and may not fulfill other requirements of the country in which they are operated by the customer. The customer shall ensure that all Evaluation Boards and Reference Boards will be handled in a way, which is compliant with the relevant requirements and standards of the country in which they are operated.

The Evaluation Boards and Reference Boards as well as the information provided in this document are addressed only to qualified and skilled technical staff, for laboratory usage, and shall be used and managed according to the terms and conditions set forth in this document and in other related documentation supplied with the respective Evaluation Board or Reference Board.

It is the responsibility of the customer's technical departments to evaluate the suitability of the Evaluation Boards and Reference Boards for the intended application, and to evaluate the completeness and correctness of the information provided in this document with respect to such application.

The customer is obliged to ensure that the use of the Evaluation Boards and Reference Boards does not cause any harm to persons or third-party property.

The Evaluation Boards and Reference Boards and any information in this document is provided "as is" and Infineon Technologies disclaims any warranties, express or implied, including but not limited to warranties of noninfringement of third-party rights and implied warranties of fitness for any purpose, or for merchantability.

Infineon Technologies shall not be responsible for any damages resulting from the use of the Evaluation Boards and Reference Boards and/or from any information provided in this document. The customer is obliged to defend, indemnify, and hold Infineon Technologies harmless from and against any claims or damages arising out of or resulting from any use thereof.

Infineon Technologies reserves the right to modify this document and/or any information provided herein at any time without further notice.

V 1.0

#### 40 A single-phase buck regulator

**Safety precautions** 



### **Safety precautions**

Note: Please note the following warnings regarding the hazards associated with development systems.

#### Table 1 Safety precautions



**Caution:** The evaluation or reference board contains parts and assemblies sensitive to electrostatic discharge (ESD). Electrostatic control precautions are required when installing, testing, servicing or repairing the assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with electrostatic control procedures, refer to the applicable ESD protection handbooks and guidelines.



**Caution:** The evaluation or reference board is shipped with packing materials that need to be removed prior to installation. Failure to remove all packing materials that are unnecessary for system installation may result in overheating or abnormal operating conditions.







### **Table of contents**

Abo	out this document	
mp	portant notice	2
Safe	ety precautions	3
Γab	ole of contents	4
1	Introduction	
2	Evaluation Board	
2.1	Evaluation Kit	
3	Board information	7
3.1	Board parameters and technical data	7
3.2	Connections and operating instructions	<del>1</del>
3.3	Layout	
3.4	PCB layout	
3.5	Schematic	14
3.6	Bill of materials	15
3.7	XDP™ Designer GUI	17
4	Typical operating waveforms	19
Refe	erences	24
Revi	vision history	25
	claimer	20

#### 40 A single-phase buck regulator

#### Introduction



#### 1 Introduction

The TDA38640A is a synchronous buck converter with both serial voltage identification (SVID) and PMBus communication interface, providing a compact, high-performance, and flexible solution in a small 5 mm X 6 mm Power QFN package. This Evaluation Board is to be used during the designing process for evaluating and measuring characteristic curves, and for understanding various features of the part.

The key programmable features offered by the TDA38640A are:

- Soft start
- Thermal protection
- Switching-frequency
- Enable input, output under-voltage lockout
- Over-voltage and -current protection
- High-side short detection
- Load-line, and pre-bias start-up
- All faults have configurable responses via the available XDP™ Designer GUI from Infineon
- Output over-current protection function is implemented by sensing the voltage developed across the onresistance of the synchronous (low-side) MOSFET for optimum cost and performance and the current limit is thermally compensated.

#### **Evaluation Board**



### 2 Evaluation Board

EVAL\_TDA38640A\_1.0VOUT Evaluation Board is a synchronous buck converter that steps down 12 V<sub>in</sub> to 1.0 V<sub>out</sub>. It consists of an integrated point-of-load TDA38640A part. The TDA38640A is an easy-to-use, fully-integrated, and highly efficient DC-DC regulator. The onboard pulse width modulation (PWM) controller and OPTIMOS™ FETs with integrated bootstrap diode make TDA38640A a small footprint solution, providing high-efficiency power delivery. Additionally, it uses a fast Constant On-Time (COT) control scheme, which simplifies the design efforts and achieves fast transient response.

This document provides description of the Evaluation Board mentioned in this document. Figure 1 shows the bench set up of this Evaluation Board using  $1.0\,V_{out}$  configuration as an example:

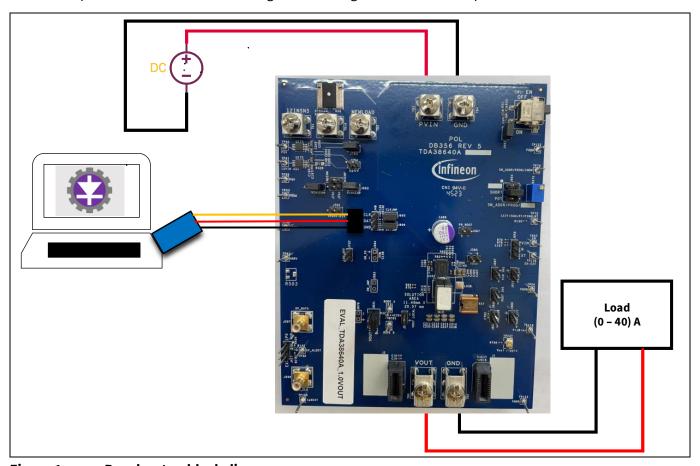


Figure 1 Bench setup block diagram

#### 2.1 Evaluation Kit

The Evaluation Kit consists of only the Evaluation Board.

The user of this Evaluation Kit should order the USB005 dongle separately. Contact your distribution partner, account managers, or the Infineon support for more information about ordering USB005 dongles.

#### 40 A single-phase buck regulator

**Board information** 



### **3** Board information

### 3.1 Board parameters and technical data

 $PV_{in} = V_{in} = +12 V$ 

F<sub>sw</sub>= 800 kHz (this is the default value, but it is configurable using the XDP™ Designer GUI)

 $C_{in}$ = 8 x 22  $\mu$ F (25 V, Ceramic 0805) + 1 x 2.2  $\mu$ F (25 V, Ceramic 0402) + 1x 4.7  $\mu$ F (25 V, Ceramic 0603) + 1 x 390  $\mu$ F (20 V, Electrolytic, optional).

Table 2 TDA38640A default output inductor and capacitor bank for each output voltage

Output voltage	Inductor	Output capacitors (Cout)
1.0 V	100 nH	12 x 22 μF, 8 x 47μF, 2 x 470 μF (2.5 V, SP, 3 mΩ ESR)
1.1 V	150 nH	12 x 47 μF, 4 x 22 μF, 1 x 470 μF (2.5 V, SP, 3mΩ ESR)
1.8 V	470 nH	2 x 22 μF, 8 x 47 μF

### 3.2 Connections and operating instructions

EVAL\_TDA38640A\_1.0VOUT Evaluation Board require a single +12 V for the input power and can deliver up to 40 A load current. The operation modes and over-current protection (OCP) limits are programmable via XDP™ Designer GUI.

## 40 A single-phase buck regulator



### **Board information**

<b>T</b> . I. I	A
Table 3	Connections

Label		Descriptions	
	PVIN	Connect input power (+12 V) to this pin.	
lanut	GND	Return of input power.	
Input	VIN_Eff (J616)	Sense pins for input voltage.	
	VIN_SEN (J687)	Sense pins for the input voltage.	
	VOUT	V <sub>out</sub> , connect a load (40 A max) to this pin.	
Output	GND	Return of V <sub>out</sub>	
Output	VOUT_Eff (J586)	Sense pins for efficiency.	
	VOUT_SEN (J686)	Sense pins for the output voltage.	
	ENABLE	Connect a scope probe to this pin to monitor the Enable signal.  An external Enable signal can be applied to this pin to overdrive the on-board Enable signal by connecting a	
Enable	GND	jumper on EXT-EN header J740.  Alternatively, the Enable signal can be generated using PVIN using a resistor divider by connecting a jumper on PVIN-EN header J740	
PODE	А	For bode plot measurement.	
BODE	В	For bode plot measurement.	
SM_ADDR/PROG	I2C Slave Address Offset	Use this jumper to add an offset to the I2C Slave base address of 0x10h. By default, this is set to zero.	
I2C/PMbus	J48	This is used to establish communication with the Infineon XDP™ Designer GUI, which is used to change the default configuration of the part. The dongle USB005 is used for communication.	
VRRDY	TP49	This is used to indicate that the SVID communication is ready to accept the commands from the master or the VID has reached a window about the commanded VID	
PROG	J664	This jumper is used to select between 16-programmed files stored in the part. By default, it is set to accept the most recent programmed config file into the part.	
Vcc	J737	This jumper should be open to use internal LDO.	
SVID Comm	SV_DATA & SV_CLK	These SMB connectors are used to probe and talk to the part using the SVID communication.	
SVID Pull-Up	PULL-UP (J617)	The jumper decides if one wants to use the 1 V <sub>out</sub> or an external 1 V for pull ups on the SVID lines	

### 40 A single-phase buck regulator





#### 3.3 Layout

The PCB is an 8-layer board (5.25-inch x 4.1-inch) using FR4 material. The PCB thickness is 0.062 inch. TDA38640A and other major power components are mounted on the top side of the board. Table 4 details the layer stack-up order and Copper weight for each layer.

Table 4 PCB layer stack up

Layer	Layer description	Trace material	
1	Тор	0.5-Ounce Copper + 1.5-Ounce plating	
2	Ground 1	2-Ounce Copper	
3	Signal 1	2-Ounce Copper	
4	Power 1	2-Ounce Copper	
5	Power ground	2-Ounce Copper	
6	Signal 2	2-Ounce Copper	
7	Ground 2	2-Ounce Copper	
8	Bottom	0.5-Ounce Copper + 1.5-Ounce plating	

#### **PCB** layout 3.4

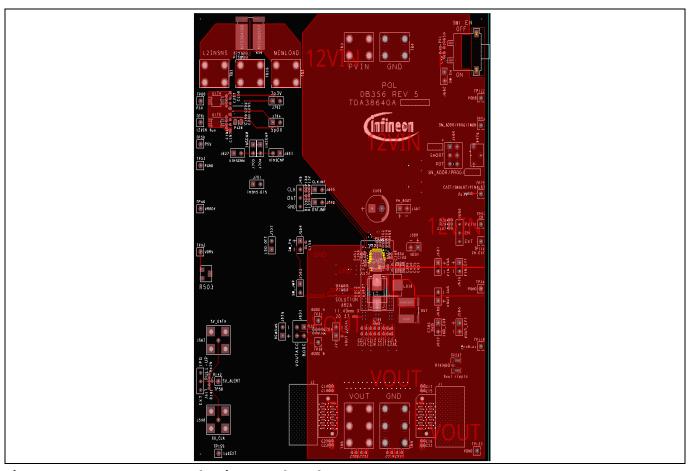


Figure 2 **TDA38640A Evaluation Board top-layer** 

#### **Board information**



V 1.0 2024-08-20

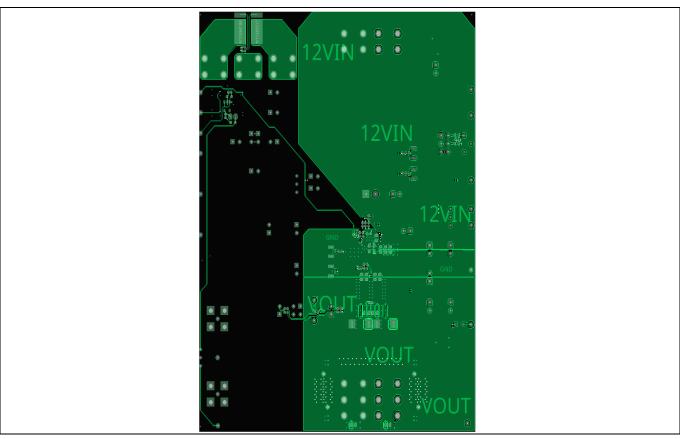


Figure 3 TDA38640A Evaluation Board bottom-layer

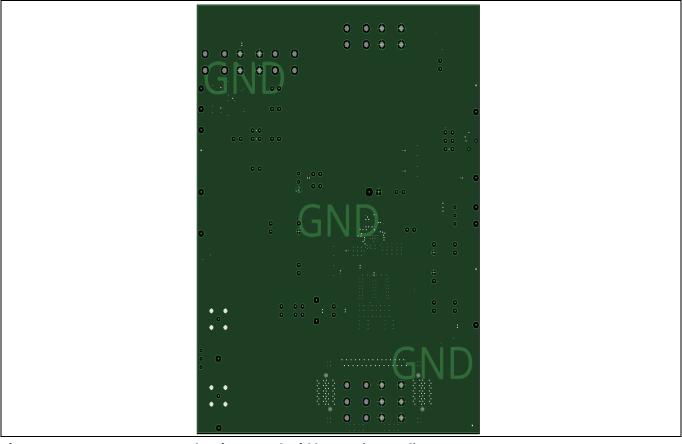


Figure 4 TDA38640A Evaluation Board mid layer 1 (ground)

### 40 A single-phase buck regulator





V 1.0


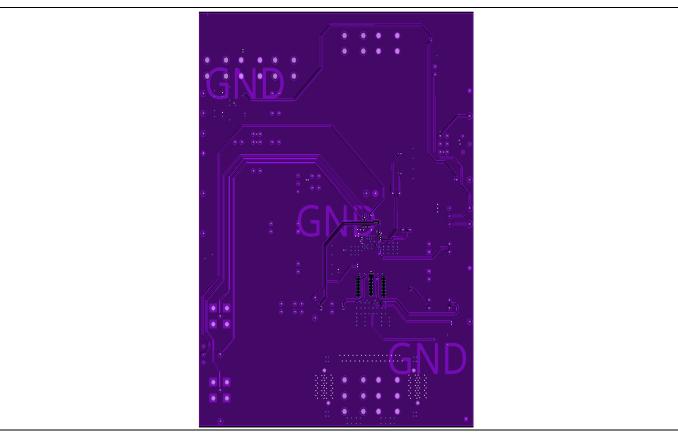


Figure 5 TDA38640A Evaluation Board mid layer 2 (signal 1)

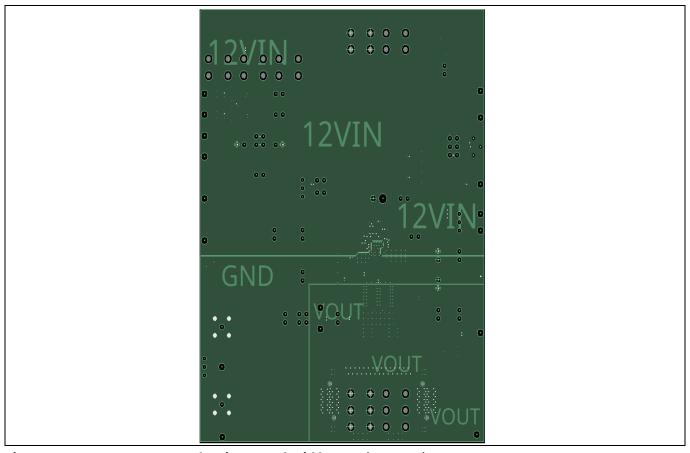

TDA38640A Evaluation Board mid layer 3 (power 1) Figure 6

### 40 A single-phase buck regulator





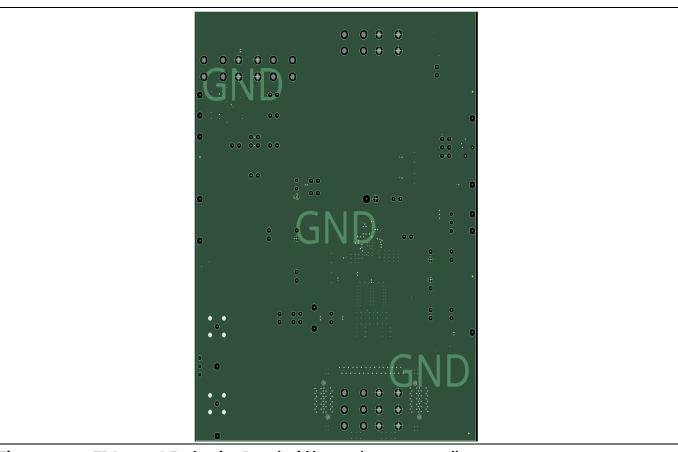


Figure 7 TDA38640A Evaluation Board mid layer 4 (power ground)

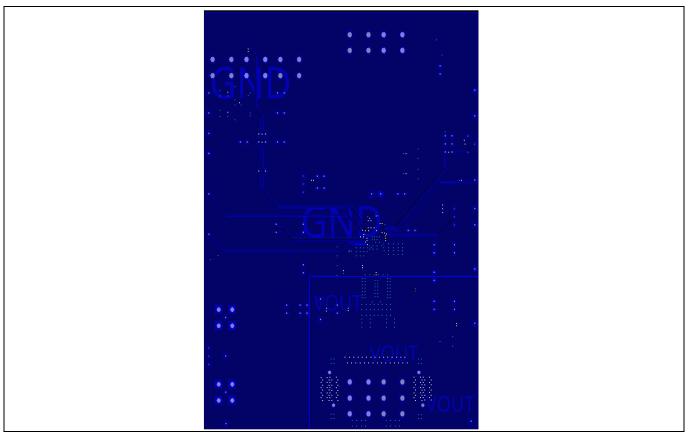


Figure 8 TDA38640A Evaluation Board mid layer 5 (signal 2)

### 40 A single-phase buck regulator





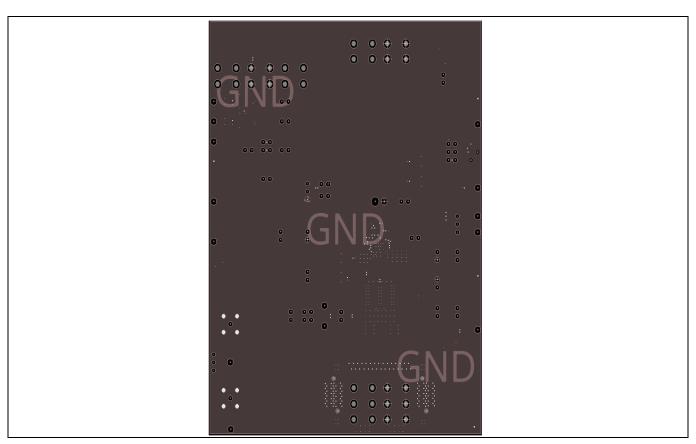


Figure 9 TDA38640A Evaluation Board mid layer 6 (ground 2)

**Board information** 



## 3.5 Schematic

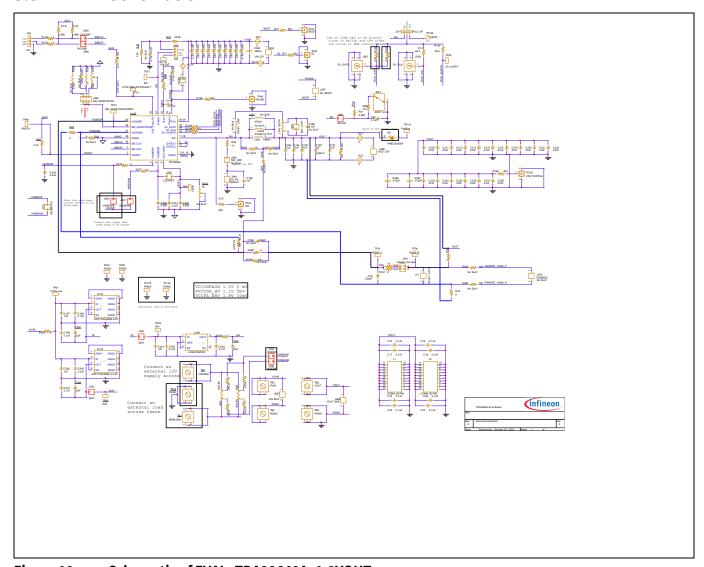


Figure 10 Schematic of EVAL\_TDA38640A\_1.0VOUT

## 40 A single-phase buck regulator

**Board information** 



#### **Bill of materials** 3.6

#### Table 5 **Bill of materials**

Item	Qty	Reference	Value	Description	Manufacturer	Part number
1	1	C196	+	-	TDK	C1005X7R1E104K
т	1	C196	0.1 μF	0.1 μF-0402-25 V-X7R-10%	IDK	C1005X/K1E104K
2	1	C285	No Stuff	100 pF-0402-50 V-C0G-5%	JDI	500R07N101JV4T
3	1	C159	No Stuff	1 μF-0603-25 V-X5R-10%	Samsung	CL10A105KA8NNNC
4	3	C451, C398, C162	2.2 μF	2.2 μF-0402-16 V-X6S-10%	TDK	C1005X6S1C225K050BC
5	1	C478	2.2 μF	2.2 μF-0603-25 V-X7S-10%	Murata	GRM188C71E225KE11D
6	1	C399	2.2 μF	2.2 μF-0402-25 V-X5R-10%	Murata	GRT155R61E225KE13D
7	8	C401, C402, C403, C404, C405, C406, C407, C408	22 μF	22 μF-0805-25 V-X5R-20%	Murata	GRM21BR61E226ME44 L
8	1	C400	4.7 μF	4.7 μF-0603-25 V-X6S-20%	Murata	GRM188C81E475KE11
9	1	C409	390 μF	CAP, 8 mm, 20 V, TOL%	Panasonic	20SEPF390M
10	12	C209, C211 C212, C213 C214, C215 C233, C234 C235, C236 C237, C238	47 μF	47 μF-0603-6.3 V-X5R-10%	Murata	GRM188R60J476ME15 D
11	1	R78	49.9k	Res,0402,1/16 W,1%	Yageo	RC0402FR-0749K9L
12	2	R576, R577	0	Res,0402,1/16 W,1%	Yageo	RC0402FR-070RL
13	1	R79	7.5k	Res,0402,1/16 W,1%	Yageo	RC0402FR-077K5L
14	1	R433	No stuff	Res,0603,1/10 W,1%	Yageo	RC0603FR-07####L
15	1	R80	No stuff	Res,0402,1/16 W,1%	Yageo	RC0402FR-07####L
16	1	R86	4.7k	Res,0402,1/16 W,1%	Yageo	RC0402FR-074K7L
17	1	R494	0	Res,0603,1/10 W,1%	Yageo	RC0603FR-070RL
18	1	R32	10	Res,0402,1/16 W,1%	Yageo	RC0402FR-0710RL
19	1	R479, R480	No stuff	Res,0402,1/16 W,1%	Yageo	RC0402FR-07####L
20	1	U182	TDA3 8640A	TDA38640A 40 A single-voltage synchronous buck regulator	Infineon	TDA38640A-0000

## 40 A single-phase buck regulator



### **Board information**

Item	Qty	Reference	Value	Description	Manufacturer	Part number
21	8	C144, C145 C160, C161 C219, C220 C221, C222	47 μF	47 uF-0805-4 V-X6S-20%	Murata	GRT21BC80G476ME13L
22	2	C287, C288	470 μF	SP Cap, Dcase, 2.5 V,20%	Panasonic	EEFGX0E471R
23	1	L922	100 nH	IR_Inter_Tech_L101247A_10x6 p4mm	Inter-technical	L101247A-100L
24	1	R496	0	Res,0402,1/16 W,1%	Yageo	RC0402FR-070RL
25	1	R764	No Stuff	Res,0402,1/16 W,1%	Yageo	RC0402FR-0730K9L
26	1	R762	No Stuff	Res,0402,1/16 W,1%	Yageo	RC0402FR-07499RL

#### 40 A single-phase buck regulator

#### **Board information**



### 3.7 XDP™ Designer GUI

Infineon XDP™ Designer GUI is needed to communicate with the TDA38640A part via I2C. The GUI is a part of the Infineon XDP™ Designer.

Note that Dongle driver v59.4 or higher is necessary to communicate with the TDA38640A.

#### Installing and configuring XDP™ Designer

- 1. Launch the Infineon Developer Center.
- 2. Locate and click on the **Manage tools** Section.
- 3. In the search bar of the **Manage tools** Section, search for **XDP™ Designer**.
- 4. Install the **XDP™ designer** from the search results.
- 5. Once the installation is complete, launch the XDP™ Designer.

#### **Configure the XDP™ Designer**

- 1. Power the Evaluation Board with +12 V V<sub>in</sub> and connect to your computer with the USB005 dongle.
- 2. Update system or scan devices: There are two ways to establish connection with your board:
- Click the **Tuning & Debugging** button within XDP™ Designer. This should automatically update the system section with the connected device and its configuration.
- If the automatic update doesn't work, click the **Scan Devices** button.

  The device will show with the part number and I2C address, with green circles (if the connection is correct and there are no faults).
- 3. Use the **XDP™ Designer toolbar** to alter any system configurations or read the telemetry. See Figure 11 for an annotated version of the XDP™ Designer home screen shown for EVAL\_TDA38640A\_1.0VOUT.

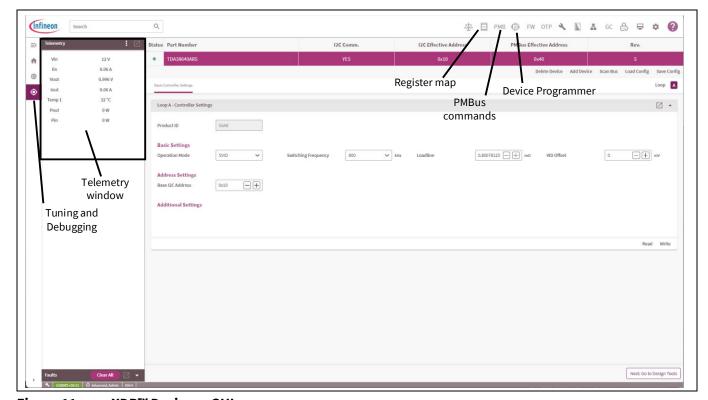


Figure 11 XDP™ Designer GUI

### 40 A single-phase buck regulator



#### **Board information**

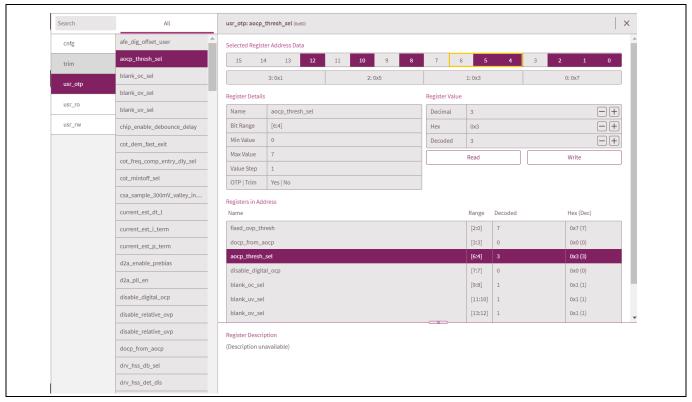


Figure 12 **Register map window** 

**Typical operating waveforms** 



# 4 Typical operating waveforms

**Operating conditions:**  $PV_{in} = 12.0 \text{ V}$ ,  $V_{out} = 1.0 \text{ V}$ ,  $I_{out} = 0$  - 40 A, room temperature, no airflow

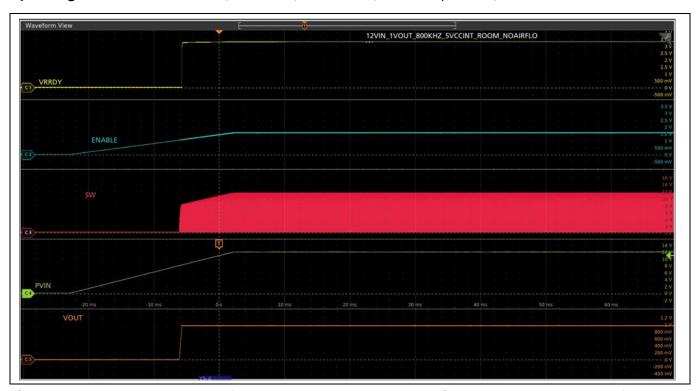


Figure 13 Start up at 0 A load (Ch<sub>1</sub>: VRRDY, Ch<sub>2</sub>: Enable, Ch<sub>3</sub>: Switch node, Ch<sub>4</sub>: PV<sub>in</sub>, Ch<sub>6</sub>: V<sub>out</sub>)

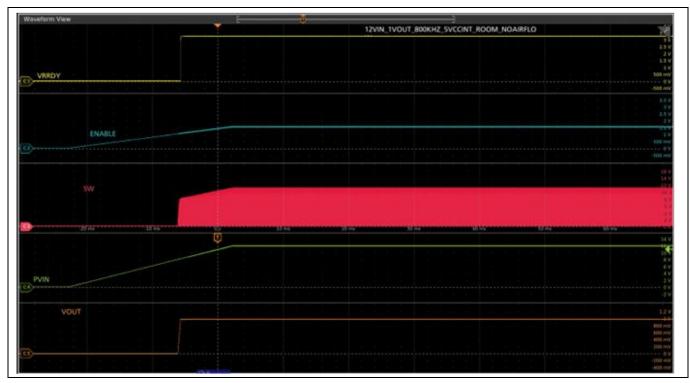


Figure 14 Start up at 30 A load (Ch<sub>1</sub>: VRRDY, Ch<sub>2</sub>: Enable, Ch<sub>3</sub>: Switch node, Ch<sub>4</sub>: PV<sub>in</sub>, Ch<sub>5</sub>: V<sub>out</sub>)

### 40 A single-phase buck regulator





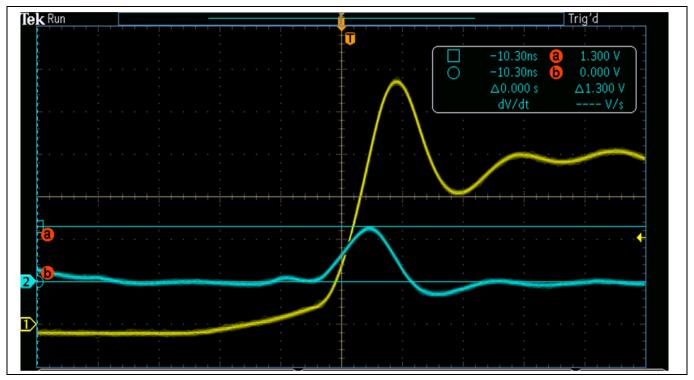


Figure 15 SW and GL, 30 A load, f<sub>sw</sub> = 800 kHz

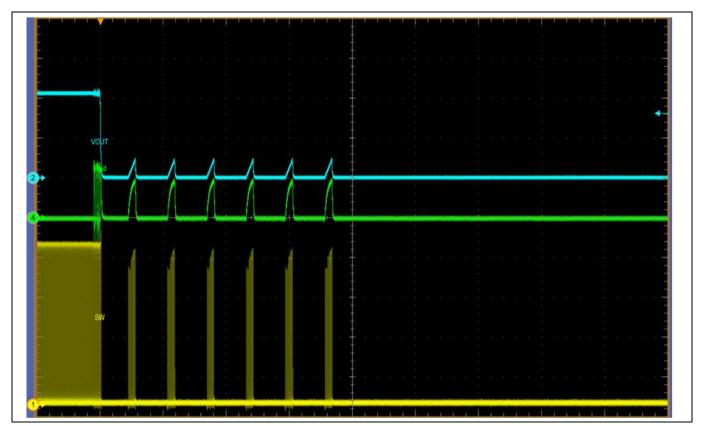


Figure 16 Short circuit and retry 6 times and shutdown (Ch<sub>1</sub>: Switch node, Ch<sub>2</sub>: V<sub>out</sub>, Ch<sub>3</sub>: I<sub>out</sub>)

### 40 A single-phase buck regulator

Typical operating waveforms



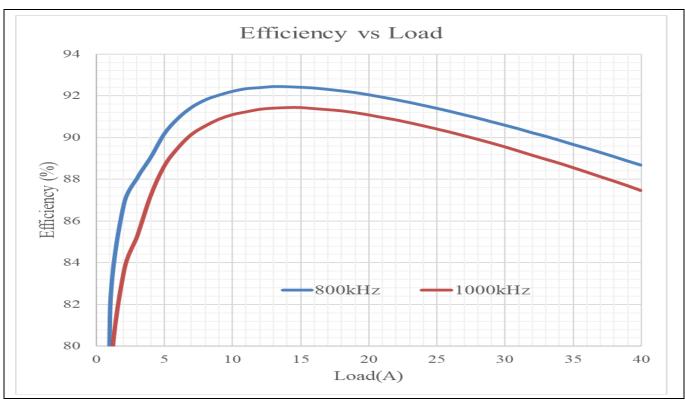


Figure 17 TDA38640A efficiency versus load current without airflow in FCCM with external  $V_{cc}$  (12  $V_{in}$ , 1.0  $V_{out}$ , no air flow, 150 nH, 800 kHz/1000 kHz,  $T_a = 25^{\circ}$ C)

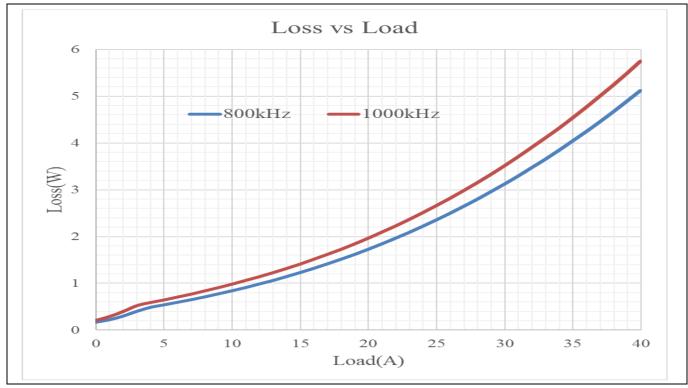


Figure 18 Power loss versus load current without airflow in FCCM with external  $V_{cc}$  (12  $V_{in}$ , 1.0  $V_{out}$ , no air flow, 150 nH, 800 kHz/1000 kHz,  $T_a = 25^{\circ}C$ )

#### 40 A single-phase buck regulator

**Typical operating waveforms** 



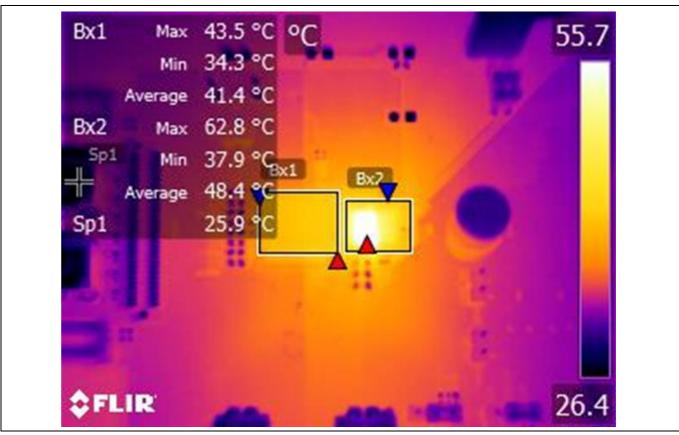


Figure 19 Thermal image of the board at 1.0 V, 40 A load, TDA38640A = 62.8°C, L = 43°C, Amb = 25.9°C, natural convection, fsw = 800 kHz

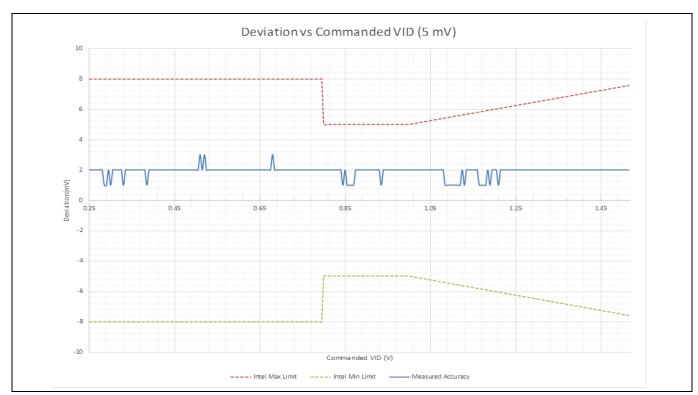


Figure 20 TDA38640A VID regulation (12  $V_{in}$ , 1.0  $V_{out}$ , 5 mV step size, no air flow, 150 nH, 800 kHz,  $T_a$  = 25°C)

### 40 A single-phase buck regulator



**Typical operating waveforms** 


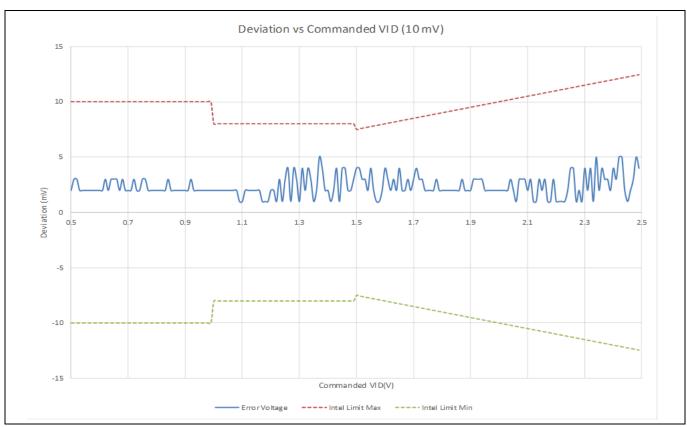


Figure 21 TDA38640A VID regulation (12  $V_{in}$ , 1.0  $V_{out}$ , 10 mV step size, no air flow, 150 nH, 800 kHz,  $T_a = 25^{\circ}$ C)

### 40 A single-phase buck regulator



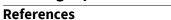

### References

[1] Infineon Technologies AG: TDA38640A OptiMOS™ IPOL 40 A single-voltage synchronous buck regulator datasheet.







**Revision history** 

# **Revision history**

Document revision	Date	Description of changes	
V 1.0	2024-08-20	Initial release	

#### Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2024-08-20 Published by

Infineon Technologies AG 81726 Munich, Germany

© 2024 Infineon Technologies AG. All Rights Reserved.

Do you have a question about this document?

Email: erratum@infineon.com

Document reference UG142913

#### Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.