

XENSIV™ Wireless Presence Detection Sensor

Getting started guide

About this document

Scope and purpose

This user guide provides instructions on how to set up and run the XENSIV™ Wireless Presence Detection Sensor ([DEMO_60LTR11_AUTO_BLE](#)). It also includes troubleshooting tips and instructions for how to reprogram the DEMO_60LTR11_AUTO_BLE sensor when firmware updates are needed.

The battery-powered XENSIV™ wireless presence detection sensor demonstrates the [XENSIX™ BGT60LTR11AIP](#) 60 GHz autonomous radar MMIC capabilities with [AIROC™ CYBLE-222014-01](#) Bluetooth® module, wirelessly connected to Infineon's "60 GHz Radar" smartphone application, available for Android and iOS, showing motion detection and direction of motion. This sensor demo will enable users to evaluate a working solution and envision the possibilities of radar in Internet of Things (IoT) edge applications.

Intended audience

The intended audience for this document are design engineers, technicians, and developers of electronic systems working with the XENSIV™ Wireless Presence Detection Sensor.

Reference Board/Kit

Product(s) embedded on a PCB with a focus on specific applications and defined use cases that may include software. PCB and auxiliary circuits are optimized for the requirements of the target application.

Note: Boards do not necessarily meet safety, EMI, quality standards (for example UL, CE) requirements.

Important notice

Important notice

“Evaluation Boards and Reference Boards” shall mean products embedded on a printed circuit board (PCB) for demonstration and/or evaluation purposes, which include, without limitation, demonstration, reference and evaluation boards, kits and design (collectively referred to as “Reference Board”).

Environmental conditions have been considered in the design of the Evaluation Boards and Reference Boards provided by Infineon Technologies. The design of the Evaluation Boards and Reference Boards has been tested by Infineon Technologies only as described in this document. The design is not qualified in terms of safety requirements, manufacturing and operation over the entire operating temperature range or lifetime.

The Evaluation Boards and Reference Boards provided by Infineon Technologies are subject to functional testing only under typical load conditions. Evaluation Boards and Reference Boards are not subject to the same procedures as regular products regarding returned material analysis (RMA), process change notification (PCN) and product discontinuation (PD).

Evaluation Boards and Reference Boards are not commercialized products, and are solely intended for evaluation and testing purposes. In particular, they shall not be used for reliability testing or production. The Evaluation Boards and Reference Boards may therefore not comply with CE or similar standards (including but not limited to the EMC Directive 2004/EC/108 and the EMC Act) and may not fulfill other requirements of the country in which they are operated by the customer. The customer shall ensure that all Evaluation Boards and Reference Boards will be handled in a way which is compliant with the relevant requirements and standards of the country in which they are operated.

The Evaluation Boards and Reference Boards as well as the information provided in this document are addressed only to qualified and skilled technical staff, for laboratory usage, and shall be used and managed according to the terms and conditions set forth in this document and in other related documentation supplied with the respective Evaluation Board or Reference Board.

It is the responsibility of the customer’s technical departments to evaluate the suitability of the Evaluation Boards and Reference Boards for the intended application, and to evaluate the completeness and correctness of the information provided in this document with respect to such application.

The customer is obliged to ensure that the use of the Evaluation Boards and Reference Boards does not cause any harm to persons or third party property.

The Evaluation Boards and Reference Boards and any information in this document is provided "as is" and Infineon Technologies disclaims any warranties, express or implied, including but not limited to warranties of non-infringement of third party rights and implied warranties of fitness for any purpose, or for merchantability.

Infineon Technologies shall not be responsible for any damages resulting from the use of the Evaluation Boards and Reference Boards and/or from any information provided in this document. The customer is obliged to defend, indemnify and hold Infineon Technologies harmless from and against any claims or damages arising out of or resulting from any use thereof.

Infineon Technologies reserves the right to modify this document and/or any information provided herein at any time without further notice.

Safety precautions

Note: Please note the following warnings regarding the hazards associated with development systems

Table 1 **Safety precautions**


	Caution: <i>The reference board contains parts and assemblies sensitive to electrostatic discharge (ESD). Electrostatic control precautions are required when installing, testing, servicing or repairing the assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with electrostatic control procedures, refer to the applicable ESD protection handbooks and guidelines.</i>
---	--

Table of contents

About this document.....	1
Important notice	2
Safety precautions.....	3
Table of contents.....	4
1 Introduction	5
2 Setup and operating instructions.....	6
3 Assembly and battery replacement	9
3.1 Enclosure	9
3.2 Battery installation and replacement	9
4 Programming and UART debug interface	10
4.1 Instructions for programming the .hex file	10
4.2 UART debug interface	12
5 Troubleshooting	14
5.1 “60 GHz Radar” app reports “Cannot find device”	14
5.2 PSOC™ Programmer communication failure	14
6 Frequently asked questions (FAQs)	16
References.....	17
Revision history.....	18
Disclaimer.....	19

1 Introduction

The XENSIV™ Wireless Presence Detection Sensor ([DEMO_60LTR11_AUTO_BLE](#)) is a battery-operated application with Infineon's XENSIV™ BGT60LTR11AIP 60 GHz radar and a Bluetooth module, CYBLE-222014-01, that wirelessly connects via Bluetooth low energy (BLE) with a smartphone running Infineon's 60 GHz Radar sensor app.

The smartphone app will communicate with the CYBLE-222014-01 to display the data from the BGT60LTR11AIP 60 GHz radar for presence detection and direction of motion.

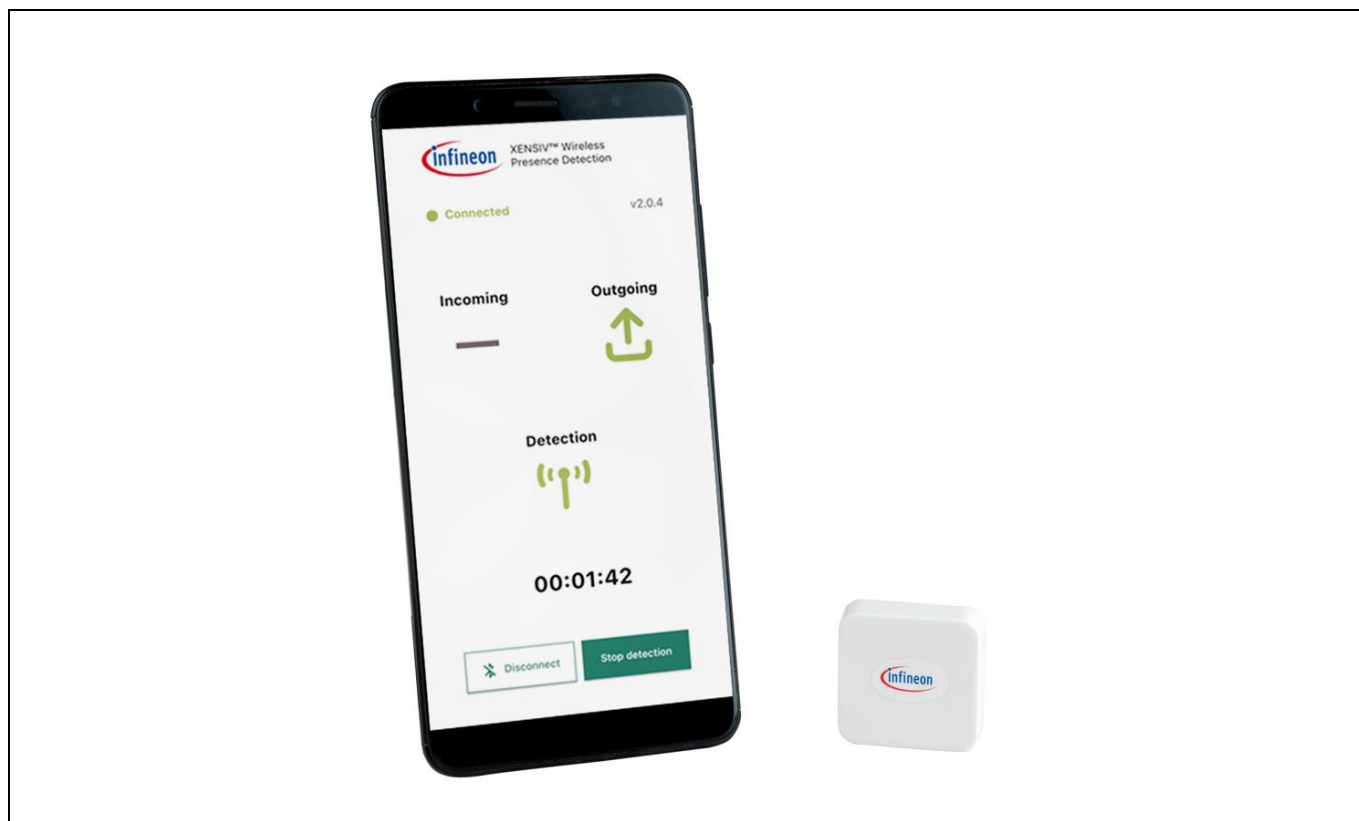


Figure 1 XENSIV™ Wireless Presence Detection Sensor

2 Setup and operating instructions

Follow the steps below to set up and run the XENSIV™ Wireless Presence Detection Sensor:

1. Install Infineon's 60 GHz radar app from [Apple App Store](#) or the [Google Play Store](#). Search for "Infineon 60 GHz radar" and choose "Install" and then "Open".
2. Install a CR2032 battery in the unit with the negative side down toward the PCB.

Note: *Note: J1 is the positive contact, J2 is the negative contact. J1 and J2 labels can be seen on the PCB silkscreen when the battery is not installed. For more information on battery installation see Section 3.2.*

3. There is a switch, SW1, that will be put in the "ON" position to operate. It can be switched off to conserve battery life when it is not in use, as shown in [Figure 2](#).



Figure 2 Turn ON the sensor

4. Open the Infineon's "60 GHz Radar" dedicated app on either an Android or an iOS phone. Please Make sure Bluetooth is enabled on the phone.



Figure 3 60 GHz Radar smartphone app

5. Tap the "Connect" button on the app to connect to the sensor.

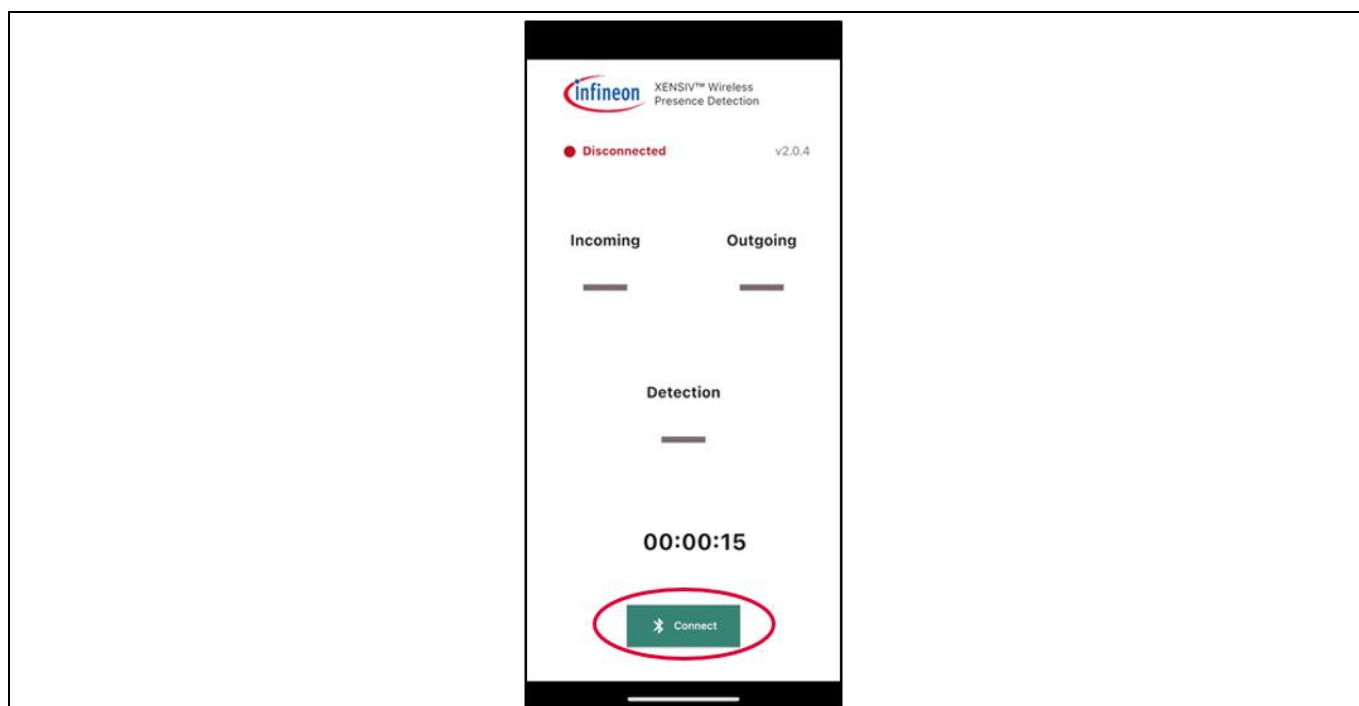


Figure 4 Connect your device

6. The “60 GHz Radar” app will give the message “Found device” and will automatically start radar detection. If it fails to connect and reports “Cannot find device”, see Section [5.1](#) to resolve.

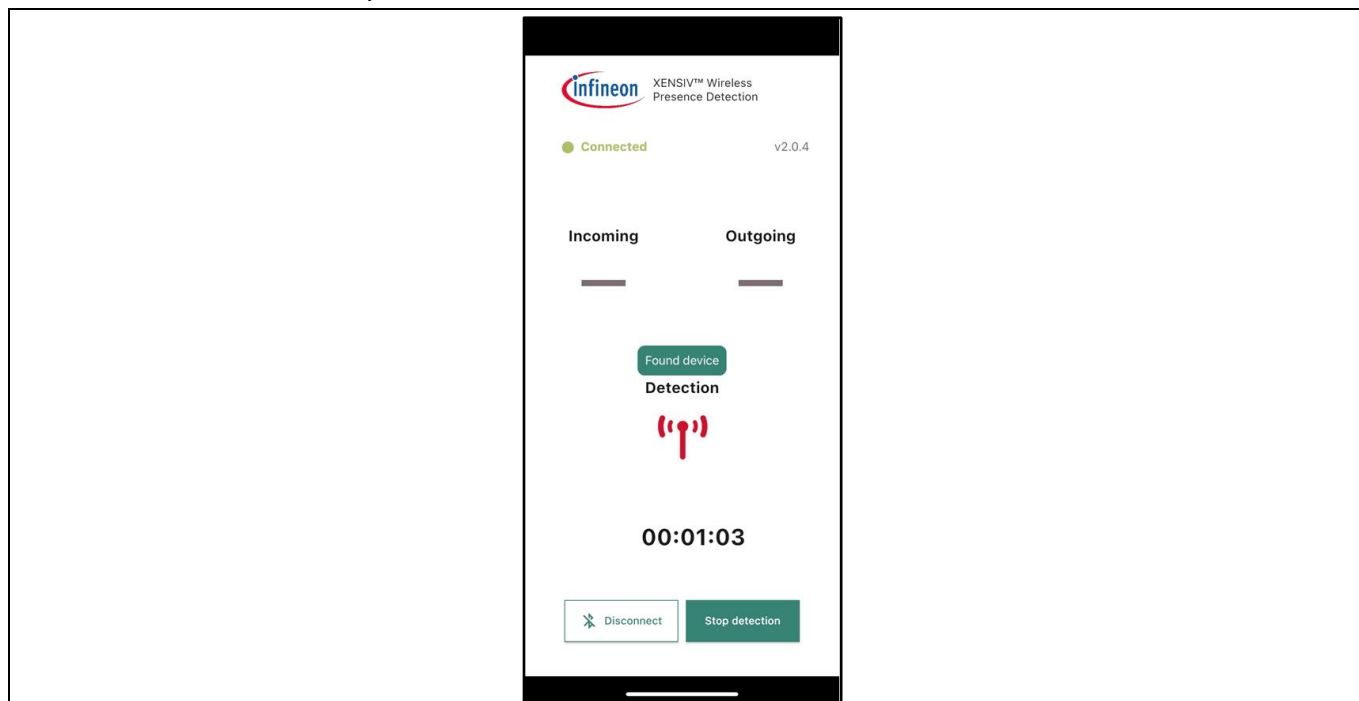


Figure 5 Found device

7. The “60 GHz Radar” app includes a detection indicator. The indicator will be green when the BGT60LTR11AIP detects a presence. It will be a red circle when no presence is detected. Hitting the “Stop detection” button will stop the radar, and a gray bar will replace the circle. Similarly, the incoming and outgoing labels on the app will show a green arrow pointing in the direction of motion.

When the XENSIV™ Wireless Presence Detection Sensor is fully operational and connected to the smartphone running the app, the output is as shown in [Figure 6](#).

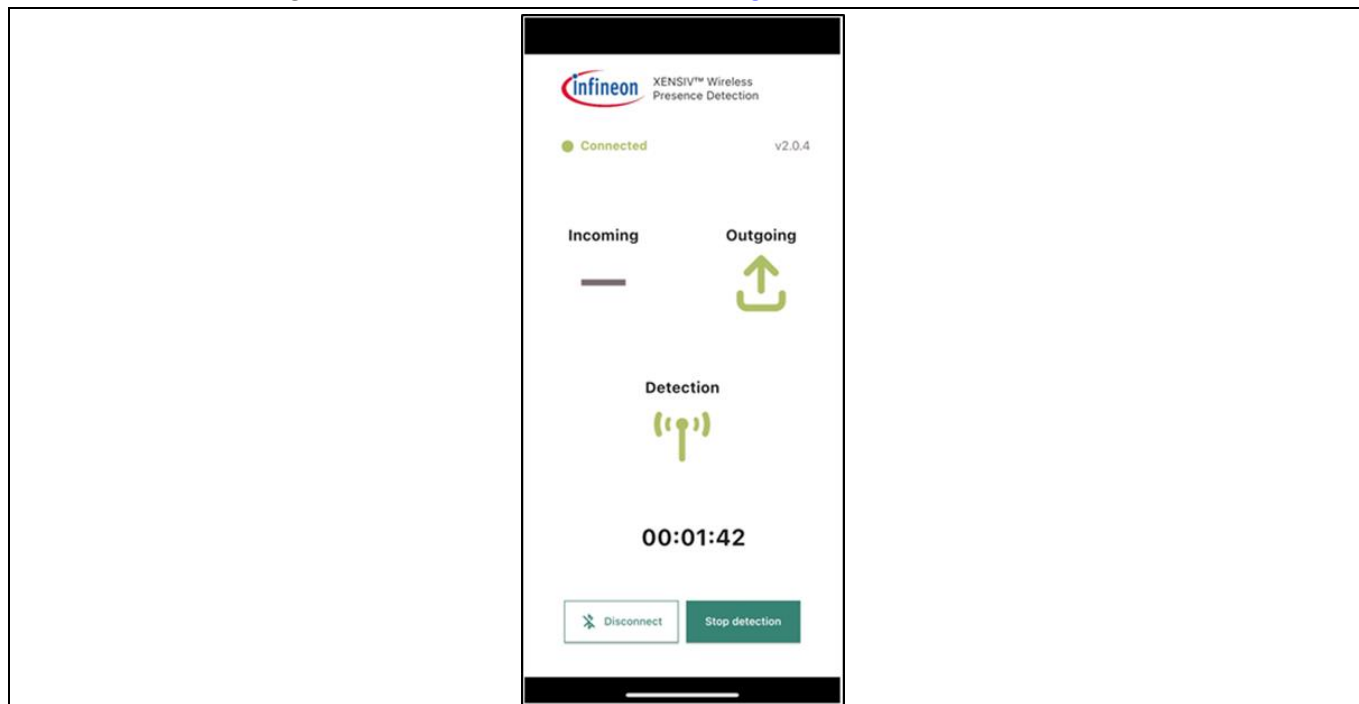


Figure 6 Device is successfully connected

8. The best method to demonstrate the XENSIV™ Wireless Presence Detection Sensor is to place it on a stationary platform with no moving objects behind it (for example, against a wall). The user should hold the connected phone and stand 1 to 8 m from the sensor, and then walk toward or away from the sensor to see the detection and directional sensing. To demonstrate detection vs. no detection, place the sensor facing a door, where the user can step behind a wall.

3 Assembly and battery replacement

3.1 Enclosure

The XENSIV™ Wireless Presence Detection Sensor consists of the plastic enclosure, the back cover and the battery insert holder with four screws to hold it in place.



Figure 7 Pictures of assembly

3.2 Battery installation and replacement

The battery is a CR2032 coin cell. The back cover snaps on and off; use the small indentation to pry it off. The screws must be installed to hold the battery in its proper position to make good contact with the positive and negative terminals on the PCB. Place the battery with the positive side up, as shown in [Figure 7](#).

4 Programming and UART debug interface

The XENSIV™ Wireless Presence Detection Sensor will come programmed to be fully operational. However, it may be necessary to program updates or customization.

4.1 Instructions for programming the .hex file

1. Remove the XENSIV™ Wireless Presence Detection Sensor PCB from the enclosure and attach it to the programming dongle. JTAG header J3 on the radar sensor will connect to JTAG header D4 on the programming dongle. Connection should be made such that pin 1 of D4 on the programming dongle will be mated to pin 2 of J3 on the XENSIV™ Wireless Presence Detection Sensor J3 connector. See [Figure 8](#) for the proper position. Battery power is not needed, as power and ground connections will be supplied by the dongle when it is connected to the USB port on the computer.

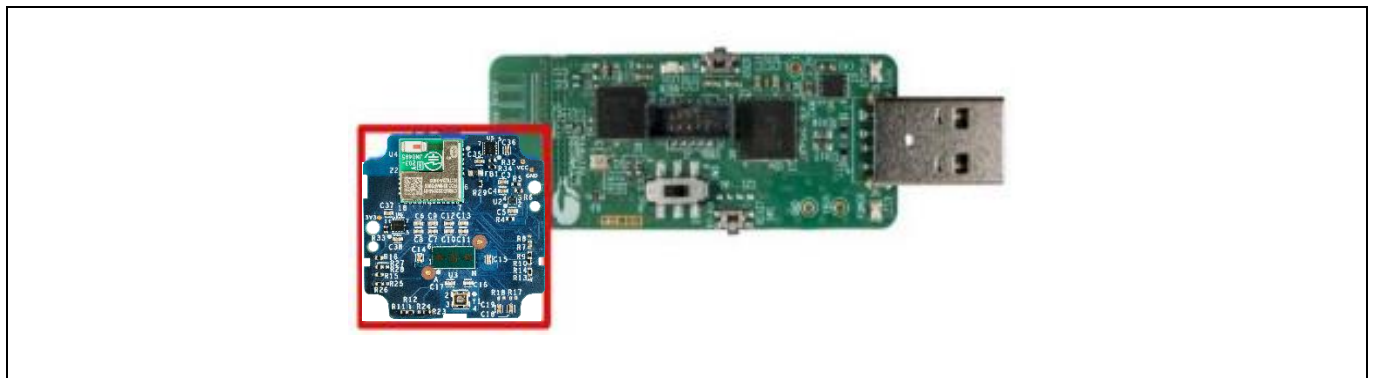


Figure 8 Connect the XENSIV™ Wireless Presence Detection Sensor to the programming dongle

Note: SW1 button on the dongle will touch the demo board and hold the demo board at a slight angle when attached via the JTAG snap connector. This will not interfere or cause issues with the programming operation. On the dongle board, ensure that switch SW3 is in the 3rd position (EZ-BLE).

2. Download and install the PSoC™ Programmer at: <https://www.infineon.com/cms/en/design-support/software/free-and-open-source-software-foss/cypress-programmer-foss-packages/>. The download will be an .exe file that will open an installer for the programming graphical user interface (GUI). Click through the installation steps.
3. Open the PSoC™ Programmer and plug the dongle into a USB port on the computer. It should look like [Figure 9](#).

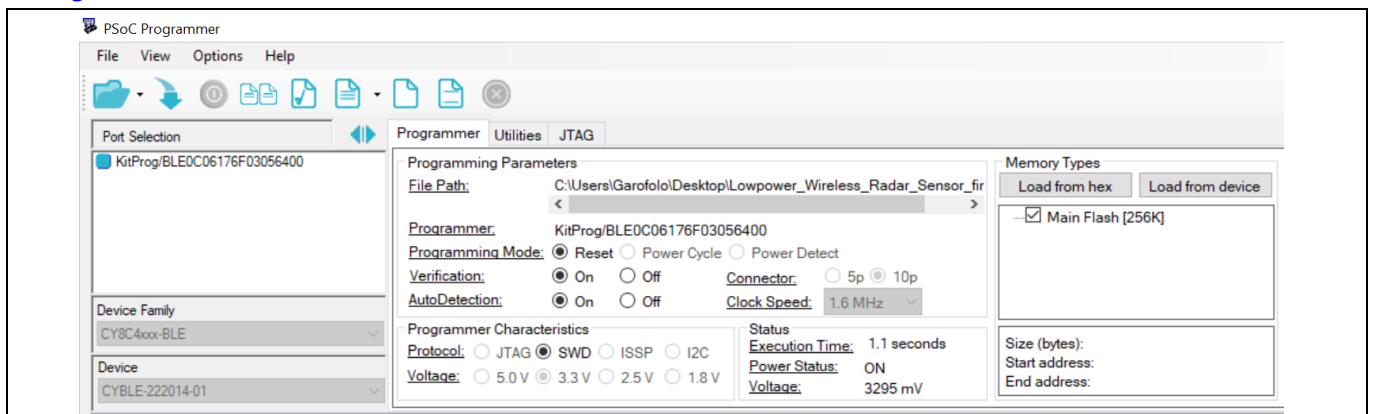


Figure 9 PSoC™ Programmer

XENSIV™ Wireless Presence Detection Sensor

Getting started guide

Programming and UART debug interface

- Click on “KitProg/BLE0C6176F03056400” under “Port selection”. This will connect the dongle, and “Actions” will report the following:

Actions	Results
Successfully Connected to KitProg/BLE0C6176F03056400 at 4:58:18 PM	KitProg Version 2.21
Opening Port at 4:58:18 PM	

Figure 10 Actions tab result

If a pop-up message states that Kitprog is out of date, see Section 5.2 to resolve.

- Click on the folder icon at the top left-hand corner and a file browser will open. Browse to filename “**Lowpower_Wireless_Radar_Sensor_final.hex**”. The .hex file will show in the file path of the “Programming Parameters” section. A PSOC™ programmer GUI window should be set up like the illustration in Figure 11.

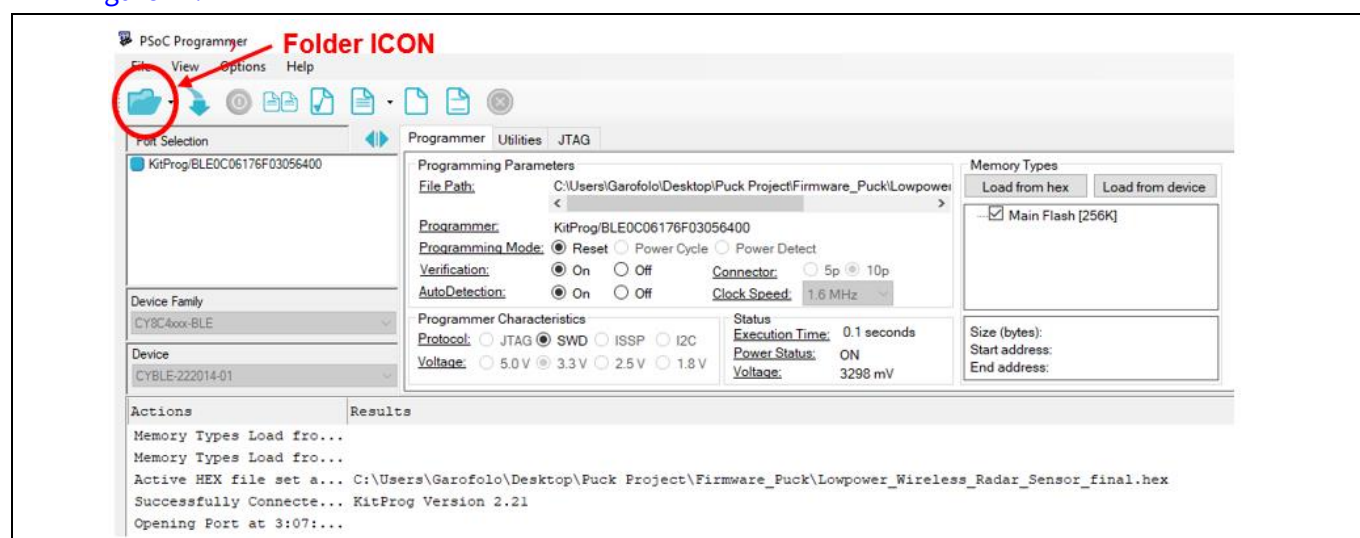



Figure 11 Browse firmware binary image

- Click on the programming arrow icon at the top left-hand corner next to the folder icon.  This will start the process of programming the PSOC™ 4 BLE device.
- Once programming is complete, the “Actions” window will return “Programming Succeeded”, as shown in Figure 12.

Actions	Results
Program Finished at 5:12:03 PM	Programming Succeeded
	Doing Checksum
	Doing Protect
	Verifying of Flash Succeeded
	Verifying of Flash Starting...
	Programming of Flash Succeeded
	> Transfer rate: 10.51 KB/sec. 84480 bytes transferred (330 blocks x 256 bytes) in 7851 ms
	Programming of Flash Starting...
	Erase Succeeded
	262144 FLASH bytes
Device set to CYBLE-222014-01 at 5:11:40 PM	Automatically Detected Device: CYBLE-222014-01
Device Family set to CY8C4xxx-BLE at 5:11:40 PM	Silicon: 1A6B, Family: AA, Major/Minor Rev: AC
Program Requested at 5:11:39 PM	KitProg Version 2.21
Successfully Connected to KitProg/BLE0C6176F03056400 at 5:11:37 PM	KitProg/BLE0C6176F03056400
Opening Port at 5:11:35 PM	
Connected at 5:11:34 PM	

Figure 12 Program your device

8. Close the PSOC™ Programmer GUI.

4.2 UART debug interface

The firmware programmed into the PSoC™ 4 BLE enables the UART to view serial data output of the XENSIV™ Wireless Presence Detection Sensor's execution steps.

1. Open Tera Term (or another serial terminal) and set the following: Serial, COM: choose "KitProg USB-UART (COMx)", as shown in [Figure 13](#).

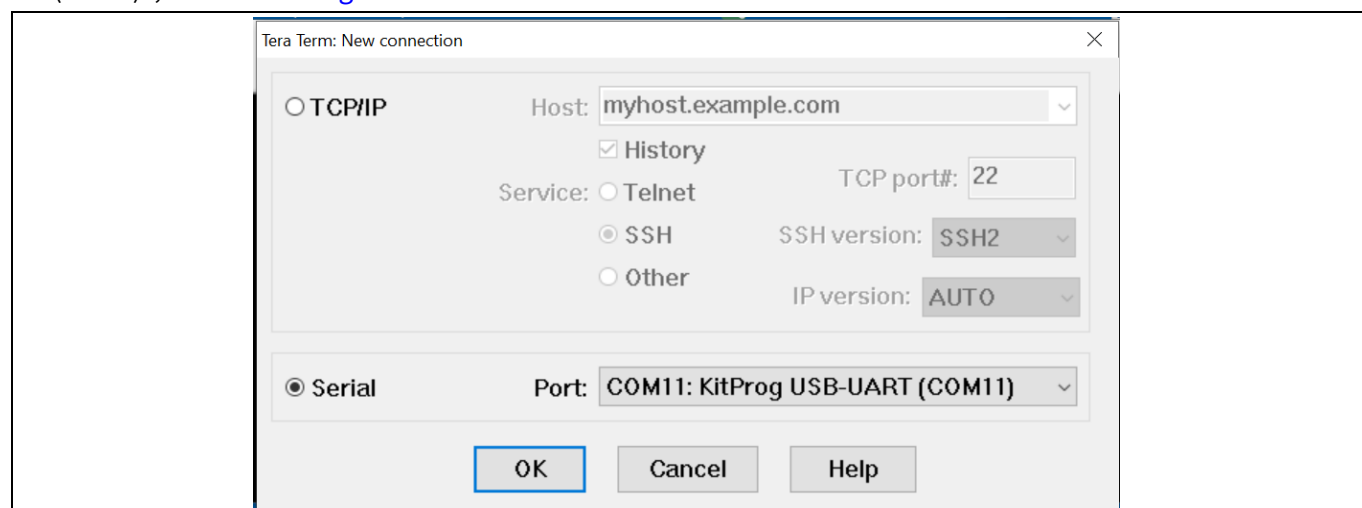


Figure 13 New connection using Tera Term

Setup the Serial COM Port, with the configuration shown in [Figure 14](#).

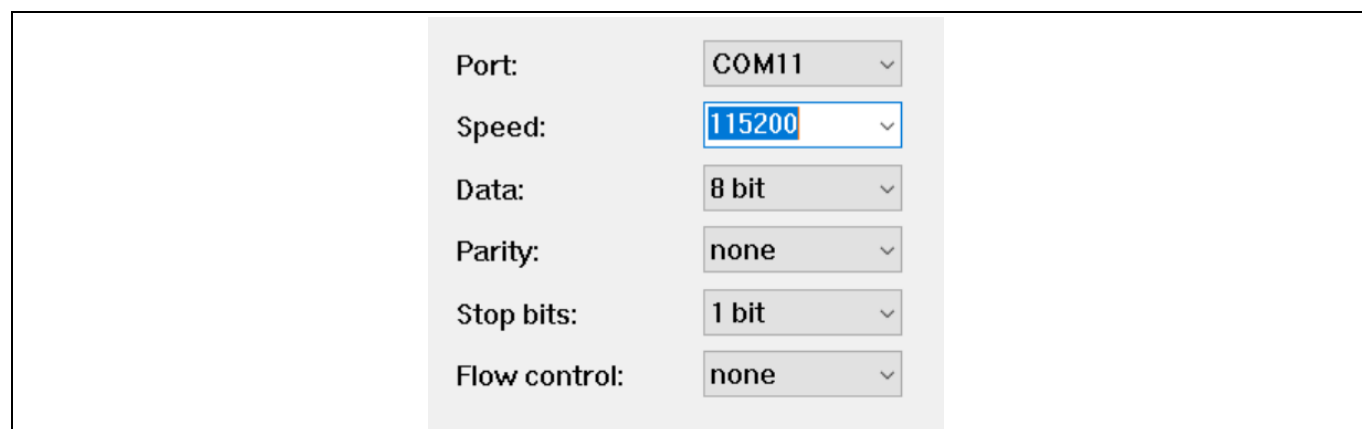


Figure 14 Serial COM Port configuration

2. Hit the "RESET SW1" button on the dongle with the XENSIV™ Wireless Presence Detection Sensor attached. [Figure 15](#) shows the serial terminal output.

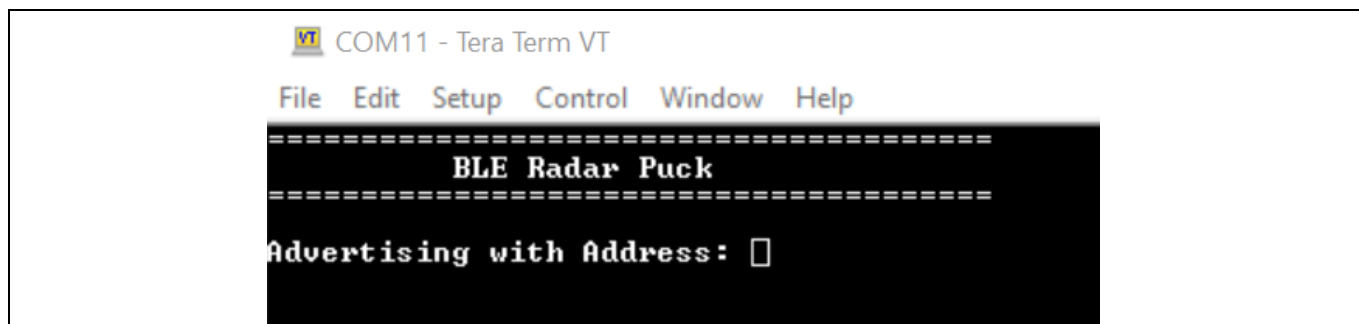


Figure 15 Serial terminal output after device reset

3. Open the Infineon's "60 GHz Radar" app and click "Connect". The serial terminal will then output the presence detection status and direction of motion, as shown in [Figure 16](#).

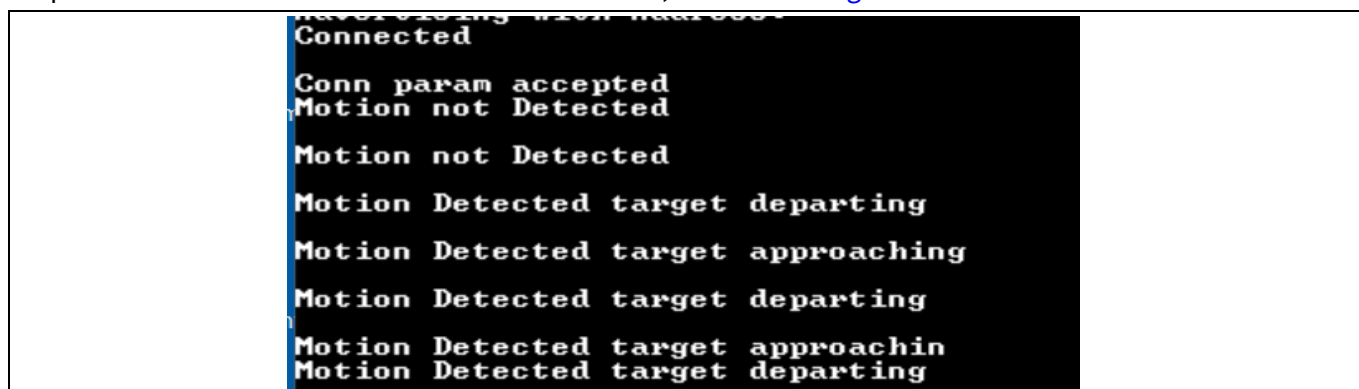


Figure 16 Serial terminal output showing motion detection status

5 Troubleshooting

5.1 “60 GHz Radar” app reports “Cannot find device”

- Measure the voltage of the CR2032 to ensure that it measures 2.7 V or greater. If it is lower than 2.7 V, replace the battery.
- Check to make sure Bluetooth is enabled on the smartphone that is running the "60 GHz Radar" app.
- Check to make sure the BLE device is showing in the XENSIV™ Wireless Presence Detection Sensor. It will show as "BLEPuck". Any scanner app can be used to check if it is broadcasting, e.g., CySmart, which is downloadable from the Apple App Store or Google Play Store. Open the scanner app, and BLEPuck should show up in the list of BLE devices, as shown in [Figure 17](#).

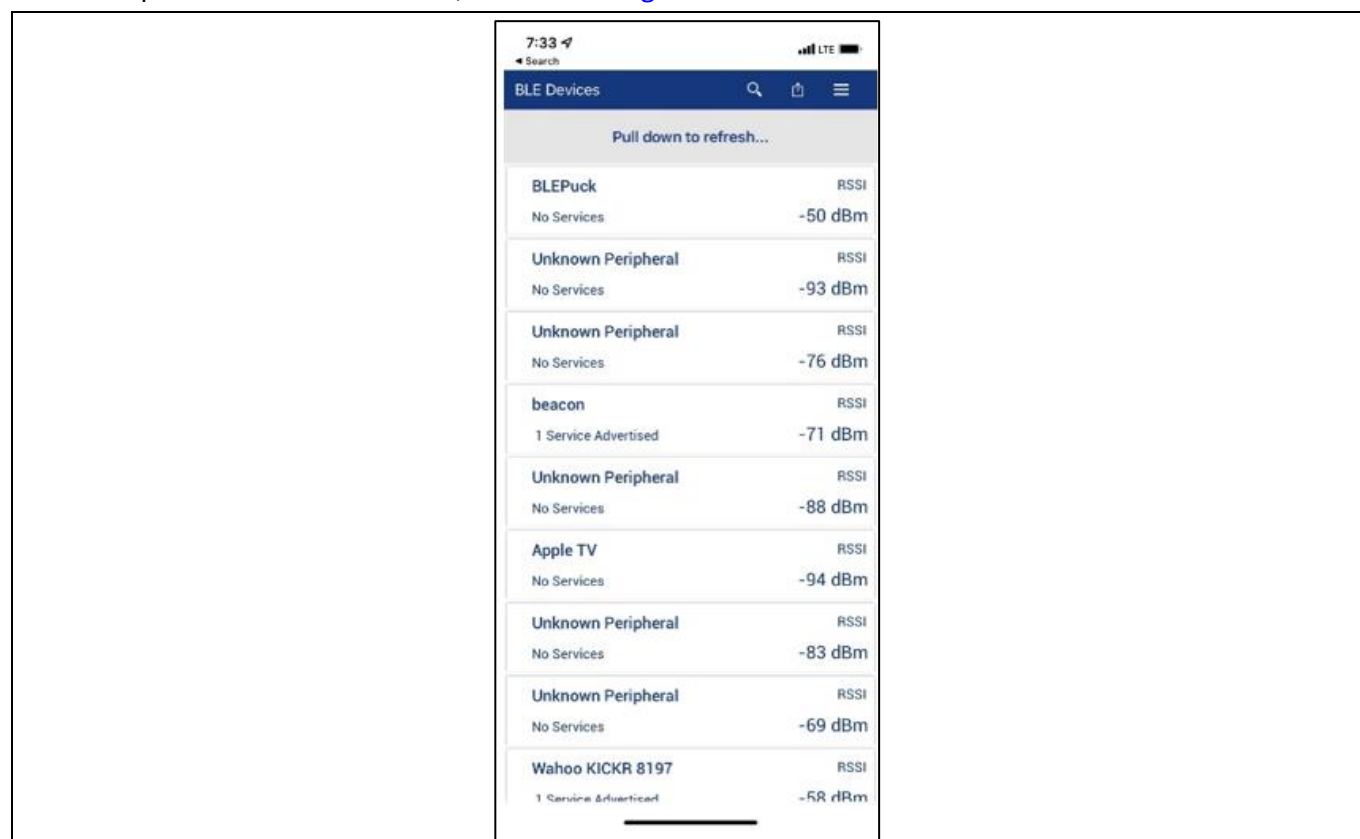


Figure 17 BLEPuck in BLE found devices list

- If BLEPuck still does not show after refreshing and waiting for more than a minute or two, power-cycle the XENSIV™ Wireless Presence Detection Sensor using SW1, as explained in [Section 2](#), [Step 3](#). Power-cycling the CYBLE-222014-01 device will put it back into broadcasting mode.
- Make sure the smartphone running the Infineon’s “60 GHz Radar” app is at least Bluetooth v4.2 compliant.

5.2 PSOC™ Programmer communication failure

- If the PSOC™ Programmer fails to communicate, a pop-up window will show the message shown in [Figure 18](#).

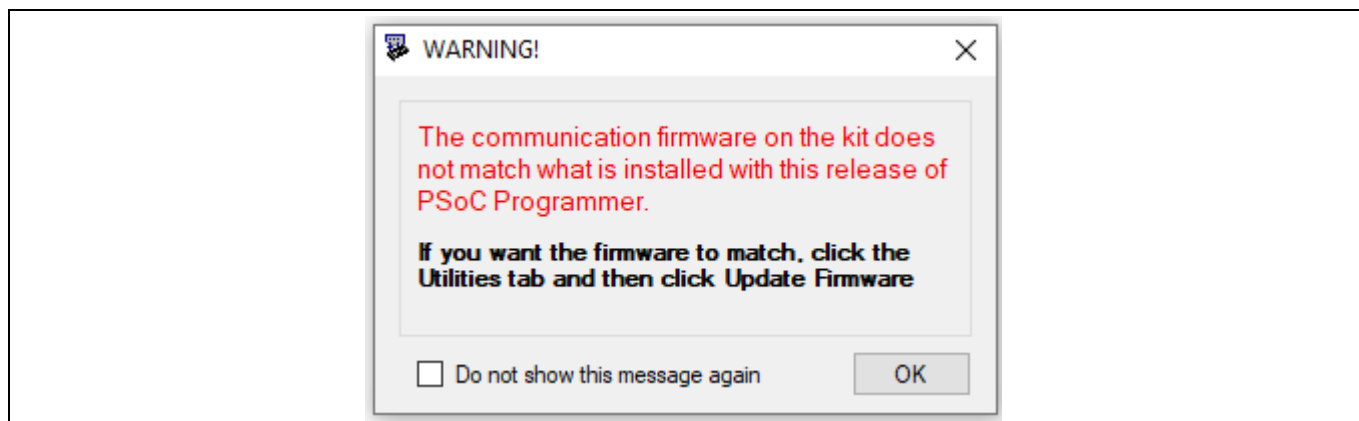


Figure 18 Programmer fails to communicate warning message

Click “OK”, and select the “Utilities” tab, then click the “Upgrade Firmware” button, as depicted in [Figure 19](#).

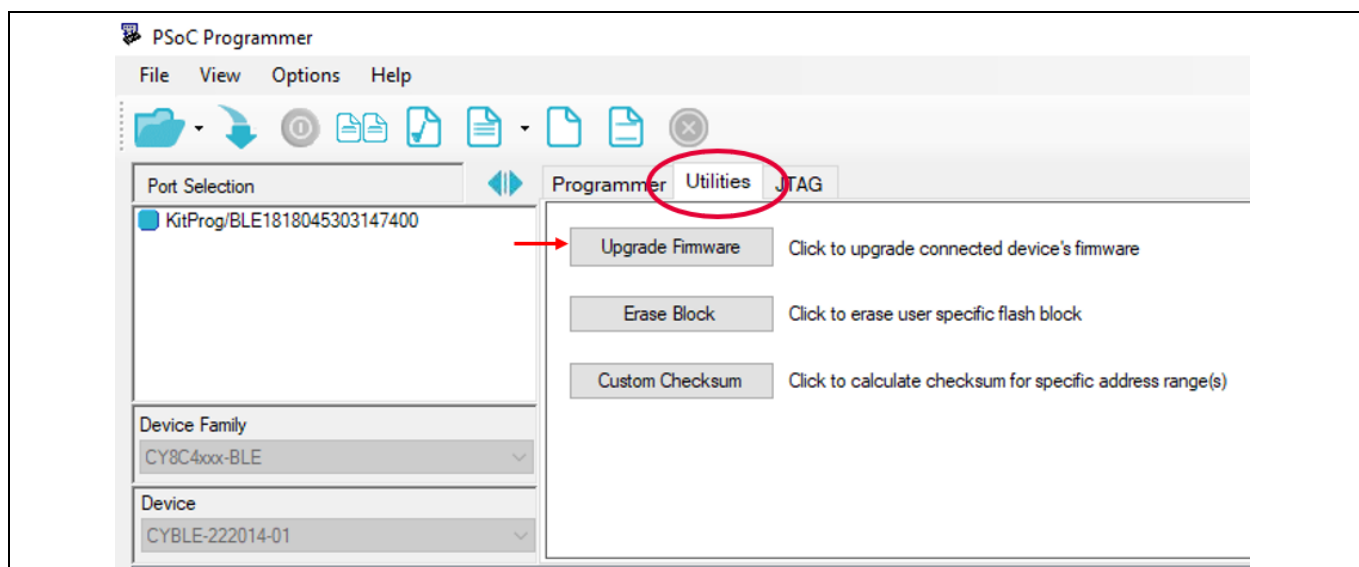


Figure 19 Upgrade firmware

This will upgrade the firmware of the programming dongle. The “Actions and Results” window will report the status during the update. The update will take several seconds before a “Firmware Update Finished” message is given.

Attention: *DO NOT remove the dongle during the updating process.*

6 Frequently asked questions (FAQs)

Q: What is the method to show demo to customers for BEST user experience?

A: The XENSIV™ Wireless Presence Detection Sensor should be placed on a stationary platform where there will be no moving objects behind it (for example, against a wall.) The user should hold the connected phone and stand 1 to 8 m from the sensor and walk towards or away from the sensor to see the directional sensing. To demonstrate detection versus no detection, place the sensor facing a door where the user can step behind a wall.

Q: What is the system architecture the demo?

A: Refer to [DEMO_60LTR11_AUTO_BLE](#) for the block diagram.

Q: How long will the battery last?

A: The demo is not optimized for the lowest achievable power. If the demo is left running continuously, the battery will run for approximately 24 hours. In theory, with proper power optimization, a similar design could run for months depending on the implementation. Application notes are available for optimizing both PSOC™ 4 BLE (CYBLE-222014-01) and 60 GHz radar (BGT60LTR11AIP) to achieve the best low power performance for battery operation.

Q: What is the range?

A: The demo can cover an approximate range of 8.5 m and has a field of view (FOV) of around 90°. The plastic enclosure is not designed to provide optimal performance. For details on optimal performance see AN644 BGT60LTR11AIP radome design guide [\[1\]](#).

Q: What is needed to run the demo?

A: You will need a smartphone with Bluetooth capability, to host the Infineon “60GHz Radar” app, which is available for download in both the Apple and Google stores and can be found by searching for "XENSIV™ Wireless Presence Detection." Additionally, you will need a CR2032 battery to power the device

Q: What are typical application use cases for an application similar to the demo?

A: Thermostat, room occupancy, lighting control, automatic door, intrusion alarm, and many more.

Q: Can this demo be used to as an evaluation platform to fully analyze all the features of the BGT60LTR11AIP for a custom design?

A: No, this is an enablement demo to illustrate the BGT60LTR11AIP as an IoT edge application.

Q: Can this demo be used as a basis for a custom design application?

A: Yes, all hardware design files and source code for the smartphone app and PSOC™ 4 MCU with AIROC™ Bluetooth LE are available to use as a reference to start custom applications.

Q: Does the 60 GHz radar (BGT60LTR11AIP) require FCC certification?

A: Yes, 60 GHz radar is subject to rules and operational policies as stipulated in Section §15.255 of the Commission's Rules. For pre-certified solutions, please contact your Infineon sales team for information on 60 GHz radar modules.

References

- [1] Infineon Technologies AG. *XENSIV™ BGT60LTR11AIP MMIC datasheet*; [Available online](#)
- [2] Infineon Technologies AG. *AIROC™ CYBLE-222014-01 Bluetooth® Module datasheet*; [Available online](#)
- [3] Infineon Technologies AG. *AN091611: Radome design guide for XENSIV™ BGT60LTR11AIP application note*; [Available online](#)

Revision history

Document revision	Date	Description of changes
1.00	2023-01-20	Initial version
1.10	2024-10-22	Changed document ID Updated document title

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2024-10-22

Published by

Infineon Technologies AG

81726 Munich, Germany

**© 2024 Infineon Technologies AG.
All Rights Reserved.**

Do you have a question about this document?

Email: erratum@infineon.com

Document reference

UG225112

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.