

**Please note that Cypress is an Infineon Technologies Company.**

The document following this cover page is marked as “Cypress” document as this is the company that originally developed the product. Please note that Infineon will continue to offer the product to new and existing customers as part of the Infineon product portfolio.

**Continuity of document content**

The fact that Infineon offers the following product as part of the Infineon product portfolio does not lead to any changes to this document. Future revisions will occur when appropriate, and any changes will be set out on the document history page.

**Continuity of ordering part numbers**

Infineon continues to support existing part numbers. Please continue to use the ordering part numbers listed in the datasheet for ordering.



THIS SPEC IS OBSOLETE

Spec No: 002-05215

Spec Title: AN205215 - FLASHING MB91F109 WITH FLASH  
PROGRAMMING TOOL

Replaced by: None

**AN205215****Flashing MB91F109 With Flash Programming Tool**

This application note explains how to flash the MB91F109 with Flash-programming tool. The Tool runs under Windows 95/98 and NT. The Flashing is achieved serial asynchronous with the Uart0 of the MCU. With an oscillation frequency of 12.5MHz the baud rate of Uart0 is 9600.

**Contents**

1	Introduction.....	1	Document History.....	5
2	Settings for Flash-programming .....	2		

**1 Introduction**

This application note explains how to flash the MB91F109 with Flash-programming tool. The Tool runs under Windows™ 95/98 and NT. The Flashing is achieved serial asynchronous with the Uart0 of the MCU. With an oscillation frequency of 12.5MHz the baud rate of Uart0 is 9600.

## 2 Settings for Flash-programming

First the Mode pins have to be set to the required operation. The Table 2.0 shows the settings for the Mode pins. Uart0 of the MCU is used to enable the device to read the user application into Flash.

Table 2-0. Operation modes for MB91F109

MD0	MD1	MD2	P20	P21	Description
1	1	0	X	X	Run mode "Single Chip"
1	0	0	X	X	Run mode "External-ROM, External-BUS" 16 BIT
0	0	0	X	X	Run mode "External-ROM, External-BUS" 8 BIT
0	1	1	0	0	Flashing mode

The figure 2.1 shows a screen shot of the Flash tool with the necessary settings to download the user application into Flash. There are two possibilities to use the Flash tool.

### 1. Use Download button:


When using the Download button, a small program is downloaded to the MCU. This program initialises the Uart0 and starts the communication with the Flash tool. After successful download the buttons below (Erase, Blank Check, Write + Verify and Read + Compare) are active. Now this buttons have to be clicked on one after the other.

### 2. Use Auto button:

When using the Auto button everything described above is done automatically.


Figure 2-1. Screen shot of the Flash-programming tool

For 12.5MHz oscillation frequency

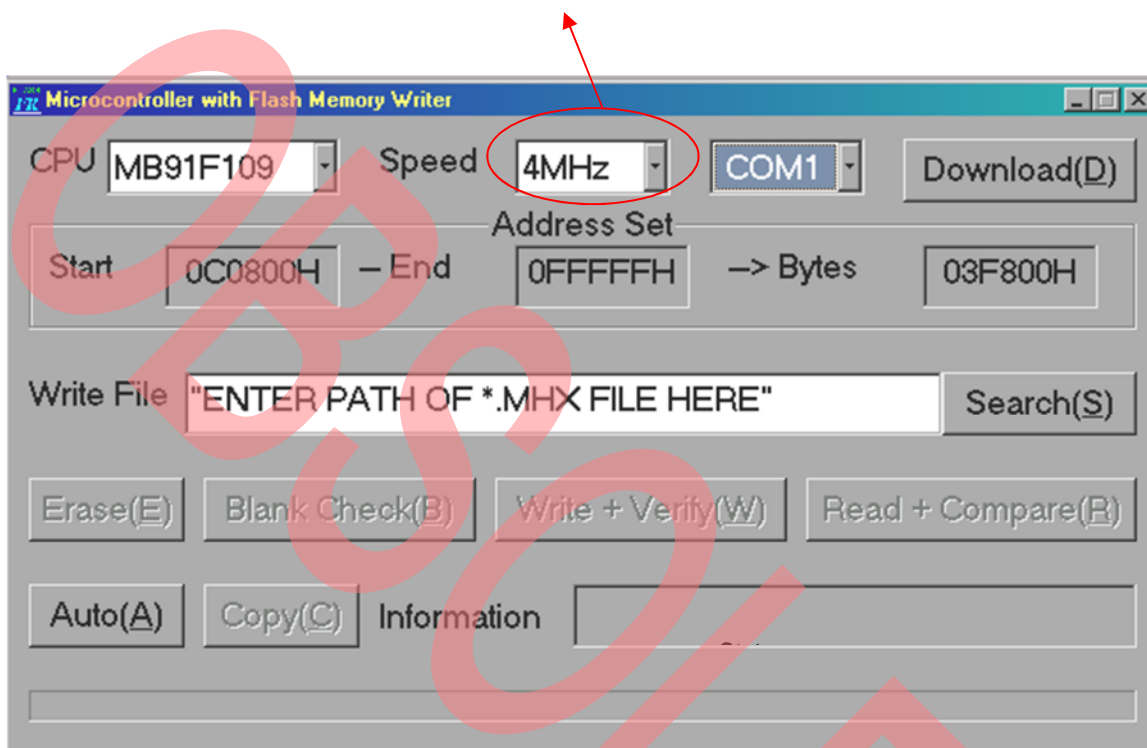

After successful Flashing the MCU switch the Mode Pins back to the required setting. The figure 2.2 shows the connection to the MCU via RS232.

Figure 2-2. Connection to the MCU (MB91F109)

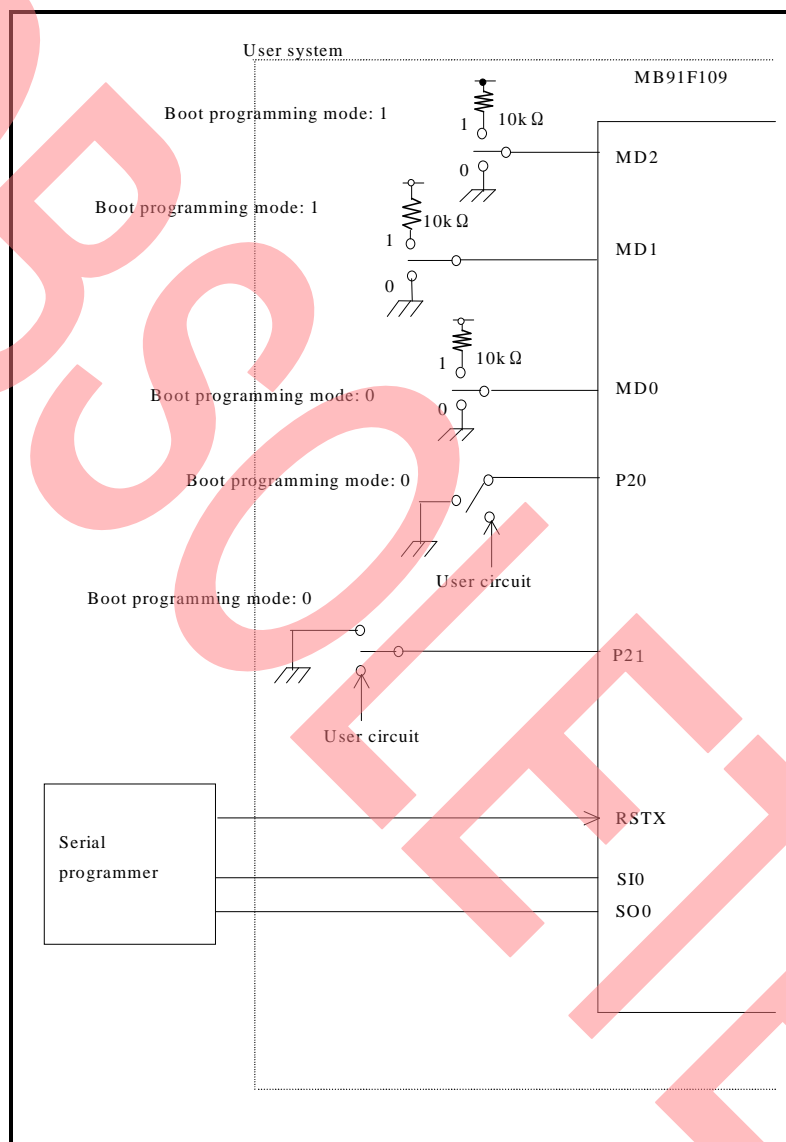

## Document History

Document Title: AN205215 - Flashing MB91F109 with Flash programming Tool

Document Number:002-05215

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	Men	07/04/2000	V1.0, New Format, new updated version
*A	5082333	WOFR	01/12/2016	Converted Spansion Application Note "MCU-AN-391018-E-V10" to Cypress format
*B	5573001	WOFR	01/03/2017	Spec obsoleted, no further updates planned

## Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at [Cypress Locations](#).

## Products

Automotive	<a href="http://cypress.com/go/automotive">cypress.com/go/automotive</a>
Clocks & Buffers	<a href="http://cypress.com/go/clocks">cypress.com/go/clocks</a>
Interface	<a href="http://cypress.com/go/interface">cypress.com/go/interface</a>
Lighting & Power Control	<a href="http://cypress.com/go/powerpsoc">cypress.com/go/powerpsoc</a>
Memory	<a href="http://cypress.com/go/memory">cypress.com/go/memory</a>
PSoC	<a href="http://cypress.com/go/psoc">cypress.com/go/psoc</a>
Touch Sensing	<a href="http://cypress.com/go/touch">cypress.com/go/touch</a>
USB Controllers	<a href="http://cypress.com/go/usb">cypress.com/go/usb</a>
Wireless/RF	<a href="http://cypress.com/go/wireless">cypress.com/go/wireless</a>
Spansion Products	<a href="http://cypress.com/spansionproducts">cypress.com/spansionproducts</a>

## PSoC® Solutions

[psoc.cypress.com/solutions](http://psoc.cypress.com/solutions)

[PSoC 1](#) | [PSoC 3](#) | [PSoC 4](#) | [PSoC 5LP](#)

## Cypress Developer Community

[Community](#) | [Forums](#) | [Blogs](#) | [Video](#) | [Training](#)

## Technical Support

[cypress.com/go/support](http://cypress.com/go/support)

All other trademarks or registered trademarks referenced herein are the property of their respective owners.



Cypress Semiconductor  
198 Champion Court  
San Jose, CA 95134-1709

Phone : 408-943-2600  
Fax : 408-943-4730  
Website : [www.cypress.com](http://www.cypress.com)

© Cypress Semiconductor Corporation, 2000-2017. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

This Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.