

Please note that Cypress is an Infineon Technologies Company.

The document following this cover page is marked as “Cypress” document as this is the company that originally developed the product. Please note that Infineon will continue to offer the product to new and existing customers as part of the Infineon product portfolio.

Continuity of document content

The fact that Infineon offers the following product as part of the Infineon product portfolio does not lead to any changes to this document. Future revisions will occur when appropriate, and any changes will be set out on the document history page.

Continuity of ordering part numbers


Infineon continues to support existing part numbers. Please continue to use the ordering part numbers listed in the datasheet for ordering.

Frequency Divider

1.0

Features

- Divides a clock or arbitrary signal by a specified value.
- Enable and Reset inputs to control and align divided output.

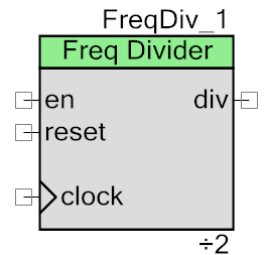

General Description

The Frequency Divider component produces an output that is the clock input divided by the specified value.

When to Use a Frequency Divider

Use the Frequency Divider as a simple clock divider for UDB components, or to divide the frequency of another signal.

The global clock dividers provided by the Clock component are more efficient and have more features, but the Frequency Divider is especially useful when all global clock dividers are used.

Input/Output Connections

This section describes the various input and output connections for the Edge Detector.

en – Input

The en input enables or disables the internal counter. When this signal is low, rising edges on the **clock** input will not be counted, and the **div** output will not change.

reset – Input

The reset input resets the internal counter on the next rising edge of the **clock** input. This causes the **div** output to go low until reset goes low again, restarting the counter.

clock – Input


The clock input determines the signal to divide.

div – Output

The div outputs the **clock** signal divided by the specified value.

Component Parameters

Drag a Frequency Divider onto your design and double-click it to open the **Configure** dialog.

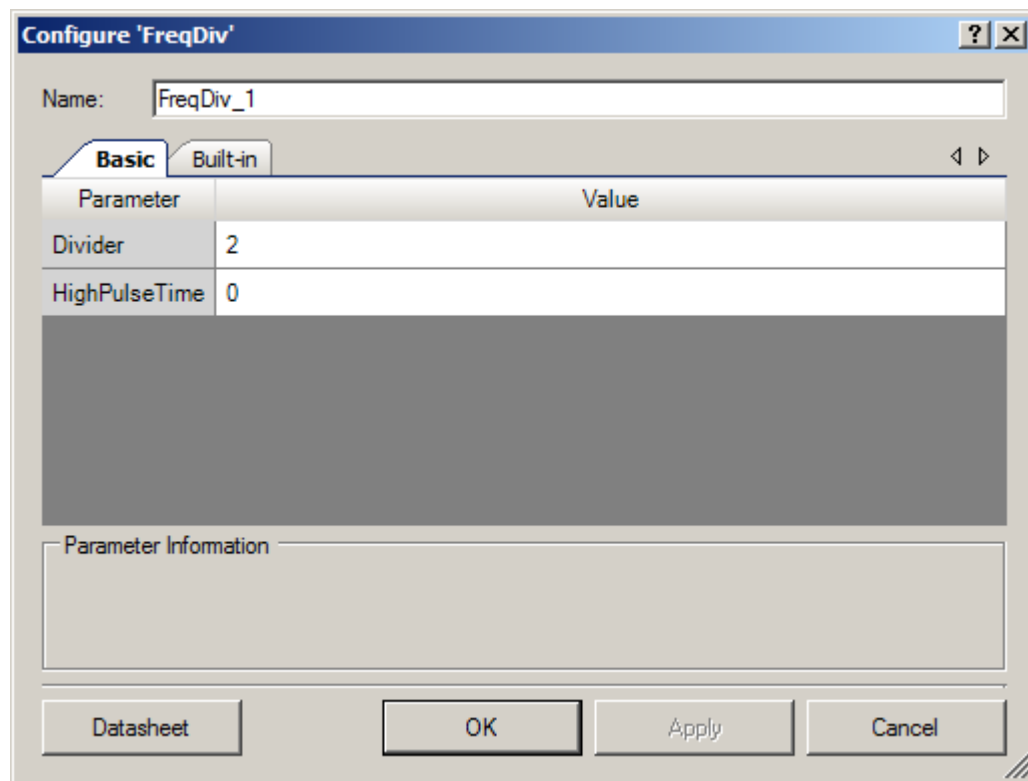

The Frequency Divider provides the following parameters.

Divider

The value by which to divide the **clock** input. The value must be between 2 and 4294967295. The default is **2**.

HighPulseTime

This parameter controls the duty cycle of the **div** output. Its value specifies the number of rising edges of the **clock** input for which the **div** output will pulse high for each period. HighPulseTime set to **0** is a special case, and indicates a 50% duty cycle (or slightly greater than 50% for odd values of Divider). The value of HighPulseTime must be less than Divider. The default is **0**.

Functional Description

The Frequency Divider internally uses an N-bit up-counter synthesized in PLDs, where N is the smallest integer greater than or equal to $\log_2(\text{Divider})$. This counter value is compared to the Divider parameter and the HighPulseTime parameter to produce the div output.

Figure 1. Divide-by-2 Example




Figure 1 shows the waveform of a Frequency Divider with the Divider parameter set to 2, and the HighPulseTime parameter set to 0, indicating a 50% duty cycle.

Figure 2. Divide-by-3 Example




Figure 2 shows the waveform of a Frequency Divider with the Divider parameter set to 3, and the HighPulseTime parameter set to 0, indicating that the duty cycle should be just above 50%.

The duty cycle of the div output can be customized by modifying the HighPulseTime parameter to something other than 0.

Figure 3. Divide-by-4 Example

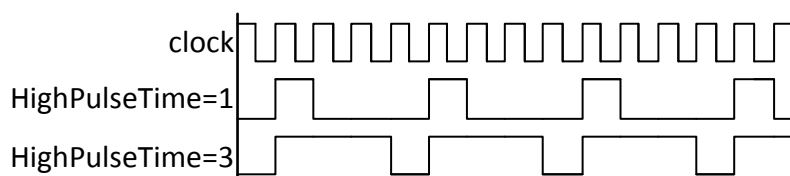


Figure 3 shows two waveforms produced by a Frequency Divider with the Divider parameter set to 4. One waveform has the HighPulseTime parameter set to 1, resulting in a 25% duty cycle. The other has the HighPulseTime parameter set to 3, resulting in a 75% duty cycle.

The Frequency Divider provides optional enable and reset inputs to allow further control of the div output.

The reset input provides control over when the first rising edge of the div output occurs. As long as the reset is high, the div output will remain low. As soon as the reset goes low, the div output will begin generating its specified waveform. Multiple Frequency Divider components can be phase-aligned by connecting them to a common reset signal.

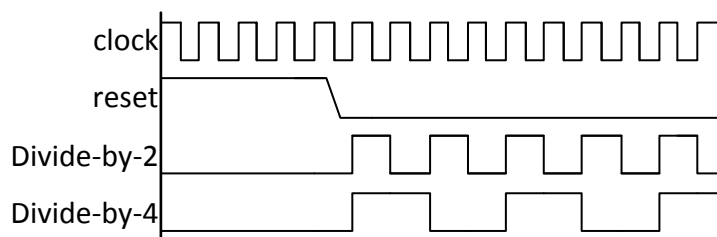
Figure 4. Phase Alignment Using Reset Input

Figure 4 shows the waveforms produced when two Frequency Dividers are connected to the same reset signal in order to phase-align their outputs.

The en input provides a way to gate the clock input, effectively stalling the div output.

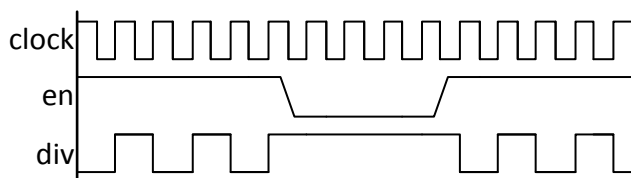
Figure 5. Clock Gating Using Enable Input

Figure 5 shows the resulting waveform when the enable input is held low for a period of time.

Resources

The Frequency Divider is synthesized to macrocells in the UDB array. Macrocell usage is dependent on optimizations performed during synthesis. Table 1 provides an estimate of the resource usage for different Divider values. For large divider values, it is usually more efficient to use the built-in clock divider in the Clock component.

Table 1. Resource Usage

Configuration	Resource Type					
	Datapath Cells	Macrocells	Status Cells	Control Cells	DMA Channels	Interrupts
Divider = 2	—	3	—	—	—	—
Divider = 10	—	6	—	—	—	—
Divider = 100	—	9	—	—	—	—
Divider = 1000	—	19	—	—	—	—
Divider = 10000	—	36	—	—	—	—
Divider = 100000	—	51	—	—	—	—
Divider = 1000000	—	63	—	—	—	—

MISRA Compliance

This section describes the MISRA-C:2004 compliance and deviations for the component. There are two types of deviations defined: project deviations – deviations that are applicable for all PSoC Creator components and specific deviations – deviations that are applicable only for this component. This section provides information on component specific deviations. The project deviations are described in the MISRA Compliance section of the *System Reference Guide* along with information on the MISRA compliance verification environment.

The Frequency Divider component does not have any C source code APIs.

DC and AC Electrical Characteristics

Specifications are valid for $-40\text{ }^{\circ}\text{C} \leq T_A \leq 85\text{ }^{\circ}\text{C}$ and $T_J \leq 100\text{ }^{\circ}\text{C}$, except where noted.
Specifications are valid for 1.71 V to 5.5 V, except where noted.

Table 2. AC Characteristics

Parameter	Description	Min	Typ	Max ^[1]	Units
f _{CLOCK}	Component clock frequency				
	Divider = 2	–	–	67	MHz
	Divider = 10	–	–	67	MHz
	Divider = 100	–	–	67	MHz
	Divider = 1000	–	–	43	MHz
	Divider = 10000	–	–	34	MHz
	Divider = 100000	–	–	28	MHz
	Divider = 1000000	–	–	21	MHz

Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.0.d	Minor datasheet edits.	
1.0.c	Minor datasheet edits.	

¹ The values provide a maximum safe operating frequency of the component. The component may run at higher clock frequencies, at which point validation of the timing requirements with STA results is necessary.

Version	Description of Changes	Reason for Changes / Impact
1.0.b	Added note about built-in global clock dividers provided by Clock component.	Guide users to use the built-in clock dividers when it makes sense.
1.0.a	Corrected description of “reset” terminal	Previous version of datasheet incorrectly stated that “div” output is held high until reset goes low.
1.0	First version of the component.	

© Cypress Semiconductor Corporation, 2012-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC (“Cypress”). This document, including any software or firmware included or referenced in this document (“Software”), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress’s patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage (“Unintended Uses”). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

