

Terminal Reserve

1.50



Features

- Prevents an analog router from using an analog block terminal routing resource
- Allows safe firmware access to an analog block terminal routing resource

General Description

The Terminal Reserve component reserves the analog routing resource connected to a component, such as the analog wire connected to a comparator or pin. This is an advanced feature that is not needed for most designs, and should be used with caution.

When to Use a Terminal Reserve

The Terminal Reserve component is used when user firmware modifies the analog routing registers that connect to the specified terminal. The Terminal Reserve component protects against conflicting use of analog resources by user firmware and automatic analog routing.

Input/Output Connections

This section describes the various input and output connections for the Terminal Reserve component.

connect – Input/Output

Connects to a terminal to reserve it from automatic routing. The Terminal Reserve can only be connected to a single terminal. Note that some components may connect a terminal to several components internally. In this case, you cannot use the Terminal Reserve. The component that the Terminal Reserve is attached to must have a fixed placement (in the Design-Wide Resources Directives Editor).

Component Parameters

The Terminal Reserve has no configurable parameters, other than the Built-in parameters that exist for all components.

Placement


The component to which the Terminal Reserve is connected must have a fixed placement directive. This is to ensure that the terminal being reserved is well defined. The Terminal Reserve component itself has no placement controls.

Resources

The connected terminal is consumed by the Terminal Reserve component, because it specifies the routing resource that may not be used by the analog router.

Functional Description

Normally, the analog router may use the terminals of unused hardware blocks to route signals. For example, the analog router could use a comparator input terminal to connect AGL[0] to AGL[1]. If the firmware uses a terminal for manual routing, the design should include a Terminal Reserve component connected to that terminal. This will prevent conflicts with automatic analog routing. You should also use the Analog Constraint or Analog Reserve component to identify or protect the resource to which the terminal is being connected. The following example reserves the '+' input of the comparator:

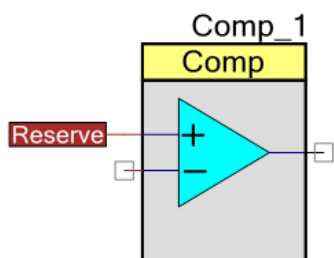

Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes
1.50.g	The component was made visible for PSoC 6.
1.50.f	Minor datasheet edits
1.50.e	Minor datasheet edits
1.50.d	Minor datasheet edits
1.50.c	Cosmetic change; updated symbol and diagram
1.50.b	Cosmetic change removing wire guide from terminal

Version	Description of Changes
1.50.a	Minor datasheet edits and updates

© Cypress Semiconductor Corporation, 2010-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.

