

QUICK START GUIDE

HYPERRAM™ self-refresh DRAM (PSRAM) Evaluation Kit

EVAL-S80KS5123

Get started

1. Register your kit by scanning the QR code on the box or go to softwaretools.infineon.com
2. Connect it to any host platform that supports xSPI (Octal) interface

www.infineon.com/hyperram

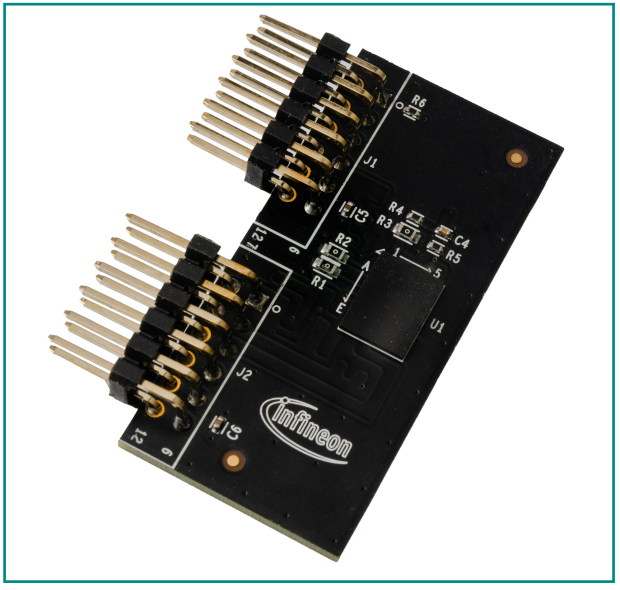

- Connects to any host platform (MCU/SoC), which supports xSPI(Octal) with 1.8 V I/Os

For more information, please visit:
www.infineon.com/hyperram

Document number: 002-42707 Rev. **
Date: 02/2026

Published by Infineon Technologies AG
Am Campeon 1-15, 85579 Neubiberg Germany

All rights reserved. © 2026
Infineon Technologies AG