Please note that Cypress is an Infineon Technologies Company.
The document following this cover page is marked as “Cypress” document as this is the company that originally developed the product. Please note that Infineon will continue to offer the product to new and existing customers as part of the Infineon product portfolio.

Continuity of document content
The fact that Infineon offers the following product as part of the Infineon product portfolio does not lead to any changes to this document. Future revisions will occur when appropriate, and any changes will be set out on the document history page.

Continuity of ordering part numbers
Infineon continues to support existing part numbers. Please continue to use the ordering part numbers listed in the datasheet for ordering.



THIS SPEC IS OBSOLETE

Spec No: 002-04941

Spec Title: AN204941 - F2MC - 8L FAMILY, MB89210, GETTING STARTED

Replaced By: NONE

AN204941

F²MC - 8L Family, MB89210, Getting Started

This application note describes the development tool chain for the MB89210series.

OBSOLETE

Contents

1 Introduction....1
1.1 Product line-up....1
1.2 Tool line-up....1
2 Evaluation system configuration....2
2.1 Optional Sub-D9 connector for RS232-UART....4
2.2 Using the LIN-interface....5
3 Software....5
3.1 New project....6
3.2 Flash programming....8
Document History....10

1 Introduction

This application note describes the development tool chain for the MB89210series.

1.1 Product line-up

The MB89210series includes the following device members:

MB89PV210: Evaluation chip (MQP-48C-P02)

MB89215: Mask-ROM (FPT-30P-M02, FPT-48P-M13)

MB89P215: OTP-ROM (FPT-30P-M02)

MB89F217: Flash-ROM (FPT-48P-M13)

1.2 Tool line-up

1.2.1 Evaluation board

The following evaluation board for the MB89210series is available from Sunhayato Corp.

BBF2003-8L-48PS: Evaluation board (Main board + Daughter board for MQP-48C-P02)

BBF2003-8L-MB: Evaluation board (Main board)

BBF2003-8L-48PB: Evaluation board (Daughter board for MB89PV210 / MQP-48C-P02)

1.2.2 Emulator system

MSE1001C: F²MC-8L Compact ICE (In Circuit Emulator)

MB2144-203: Probe cable for use with evaluation board BBF2003-8L-48PS / -48PB

1.2.3 Package conversion adapter

The package conversion adapter allows using the evaluation chip MB89PV210 on the target system.

48QF-30SOP-8L: Package conversion adapter MQP-48C-P02 --> FPT-30P-M02

48QF2-48QF2-8L: Package conversion adapter MQP-48C-P02 --> FPT-48P-M13

1.2.4 Flash programmer software

The freeware “8bit Cypress Flash MCU Programmer” version V01L08 or newer can be downloaded from our webpage: http://www.spansion.com/Products/microcontrollers/Pages/default.aspx


2 Evaluation system configuration

The evaluation system BBF2003-8L-48PS for the MB89210series includes the main board BBF2003-8L-MB and the 48-pin daughter board BBF2003-8L-48PB.

The main board supports the following features

- DCin, on-board voltage regulator (+5V / +3V), power-LED
- Reset-button
- All signals routed to pin-header
- Port 0 (P00 to P07) routed via jumpers to LEDs
- UART RS232 transceiver, optional Sub-D9 connector
- LIN transceiver TJA1020

The default jumper setting for the MB89210series is shown below:

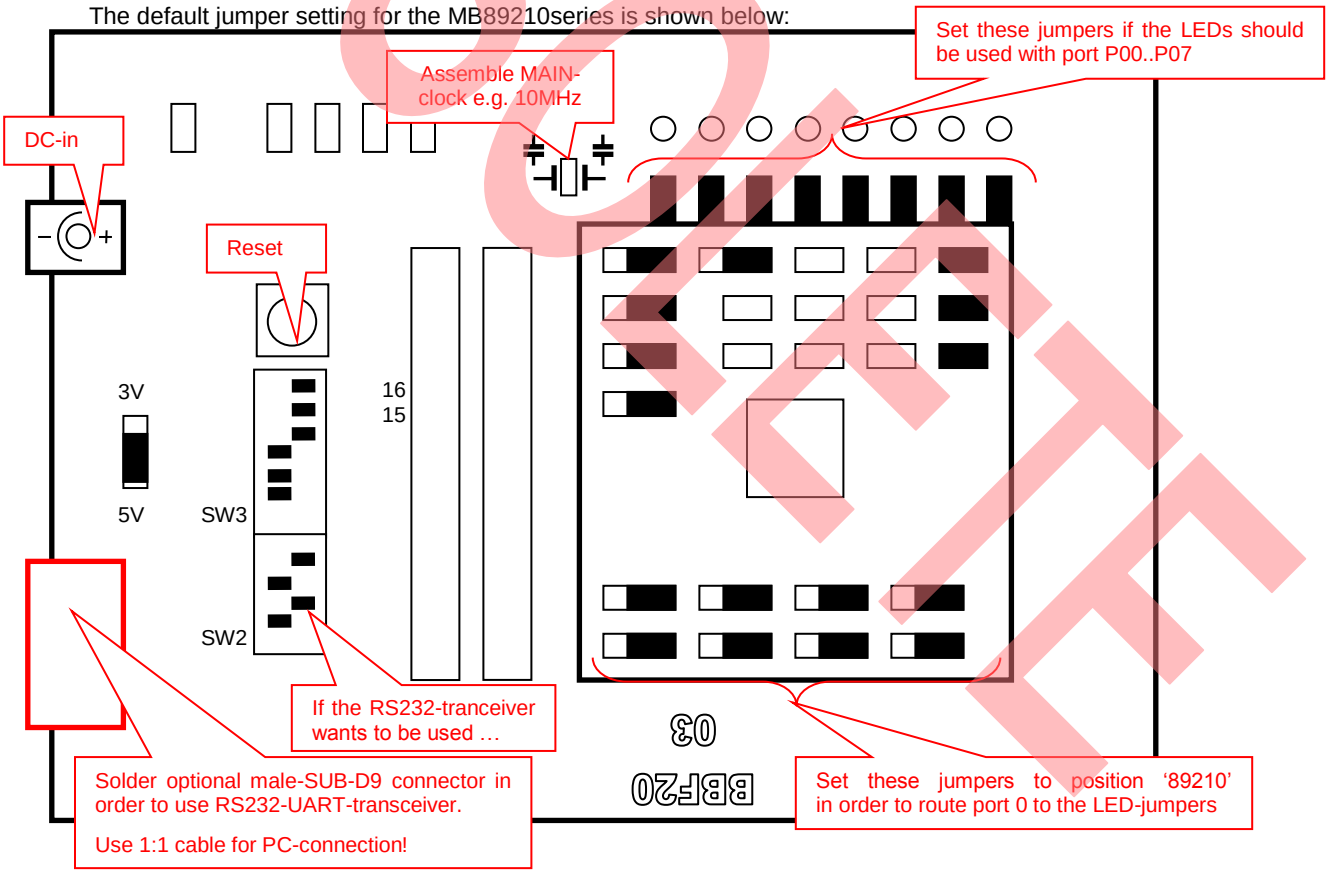

On the main board close the jumpers JP0 to JP7 (if the LEDs on the main board want to be used), set JP10 to +5V position.

Set Dip-SW2 to (1:ON, 2:OFF, 3:ON, 4:OFF)
and Dip-SW3 to (1: ON, 2:ON, 3:ON, 4:OFF, 5:OFF, 6:OFF).

OBSOLETE

On the daughter board set the jumpers AVCC, RST, X1, X0, MODE and P00 to P07 (if the LEDs on the main board want to be used) to position 89210 and close the jumpers VSS1, VSS2, AVSS.

Use the probe cable MB2144-203 to connect the evaluation system to the emulator-system.

OBSOLETE

2.1 Optional Sub-D9 connector for RS232-UART


A Sub-D9 male connector can be soldered to position CN3 on the main board. By use of a standard 1:1 female/female cable the main-board can be connected to the COM port of the PC.

In order to use the UART of the MB89210 device with the on-board RS232-transceiver, two connections have to be wired manually:

Connect SOT and LUO on the daughter board as shown below.

Connect SIN and LUI on the daughter board as shown below.

Set Dip-SW2 to (1:ON, 2:OFF, 3:ON, 4:OFF).

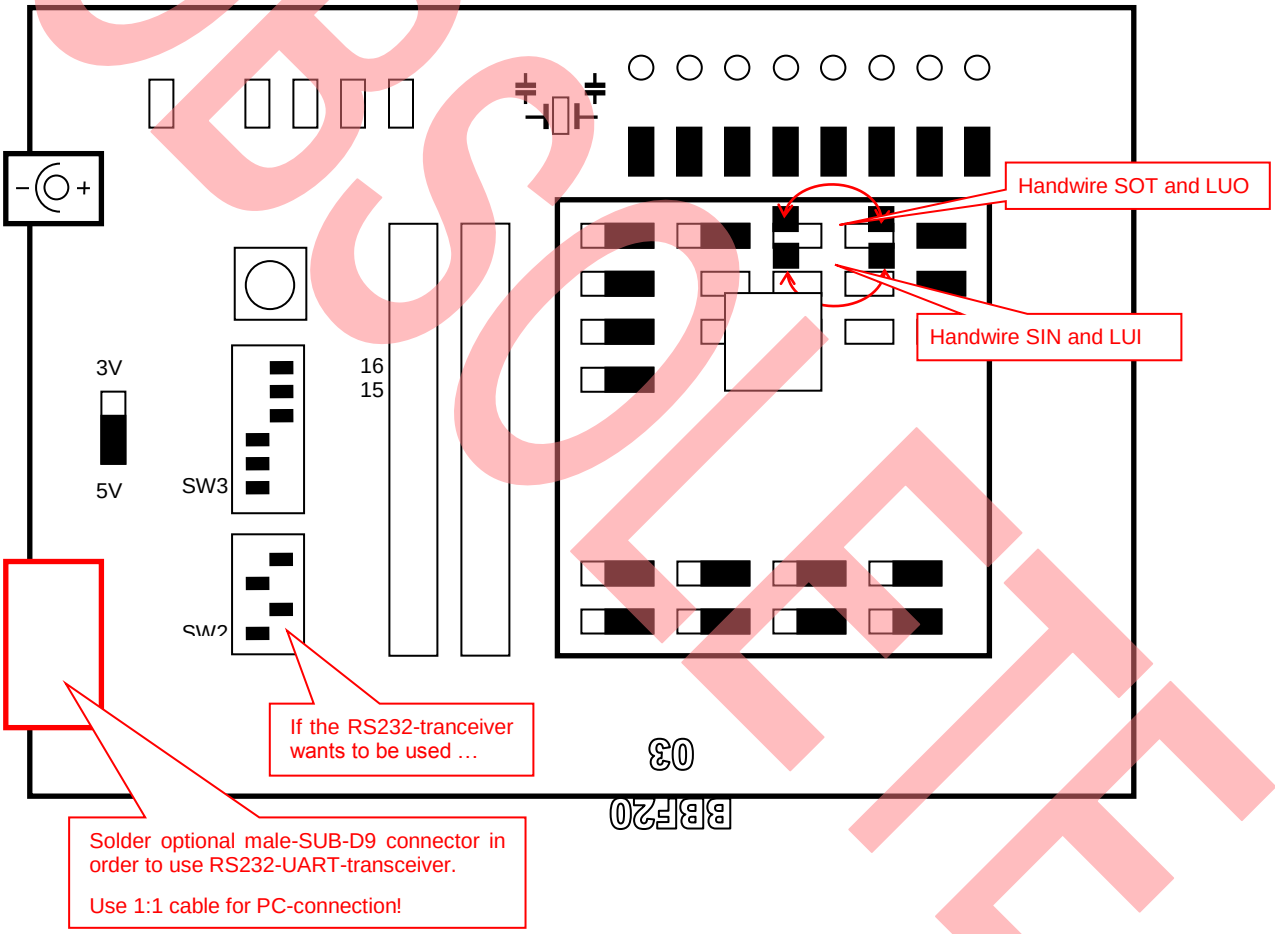


OBSOLETE

2.2 Using the LIN-interface

The UART of the MB89210series supports the LIN-protocol. A LIN-transceiver is available on the evaluation board. Set the jumpers shown below in order to use the LIN-interface

The jumpers LUO, LUI and LUC have to be shortcut on the daughter board, as well as the jumpers LIN-RxD, LIN-TxD and LNP on the main board.

Do not connect the jumper LMP of the main board, because the MB89210series does not support the master bus-mode.

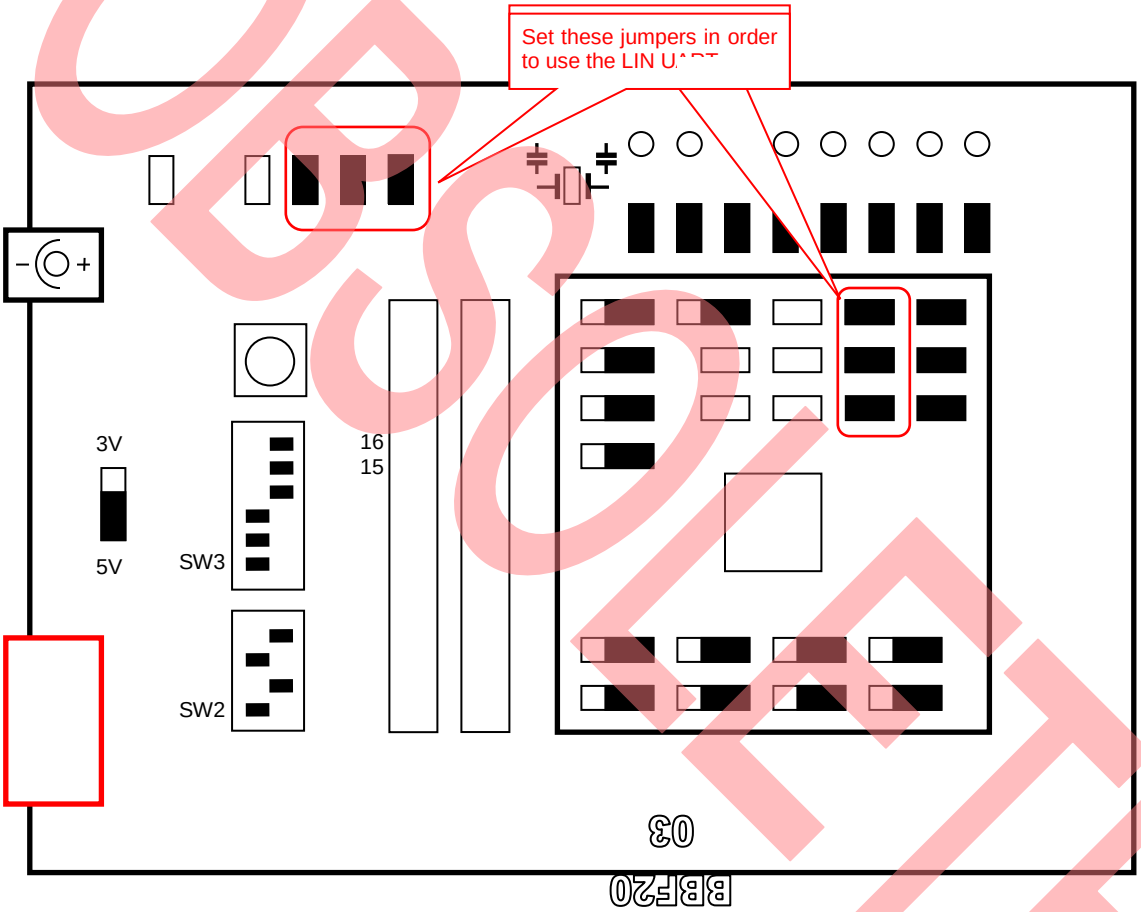

Take care to enable the on board LIN-transceiver by setting the signal LUC to 'high' level. The signal LUC is controlled by port P17:

```
DDR1_D17 = 1;    // enable LIN-transceiver
PDR1_P17 = 1;    // set Jumper LUC
```

NOTE:

LIN-interface and RS232-interface cannot be used at the same time, because the MB89210series supports only one UART that can be directed either to the LIN- or to the RS232-interface!

3 Software


On our website http://www.spansion.com/Products/microcontrollers/Pages/default.aspx a template project as well as some example projects regarding the peripheral resources of the MB89210series are available.

OBSOLETE

3.1 New project

In order to start a new user-project the template project of the MB89210series should be used always. This project includes the startup code, header files and vector table for the MB89210series.


Copy the folder ‘Template’ within the example-folder and rename ‘Copy of Template’ into ‘my_application’.

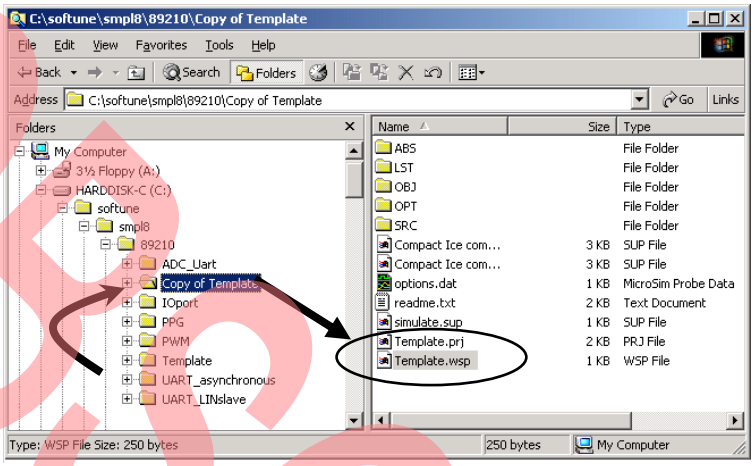


Enter ‘my_application’-folder and rename ‘template.prj‘ into ‘my_application.prj‘ and ‘template.wsp‘ into ‘my_application.wsp’

Edit ’my_application.prj’ and rename the symbol ‘template’ into ‘my_application’.

Edit ‘my_application.wsp’ and rename the symbol ‘template’ into ‘my_application’.

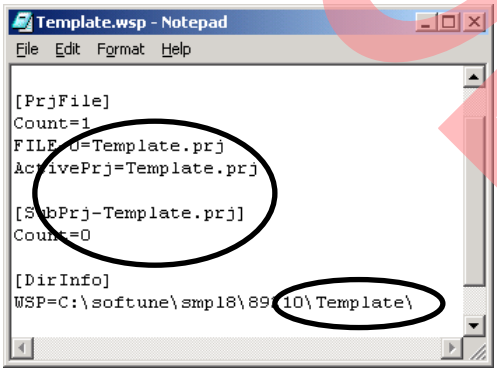


my_application.wsp

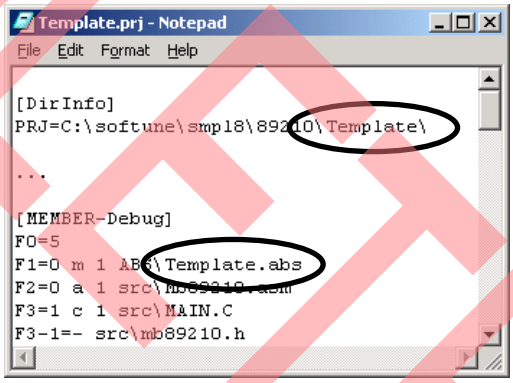

my_application.prj

OBSOLETE

Start Softune Workbench and open your project ‘my_application.wsp’:

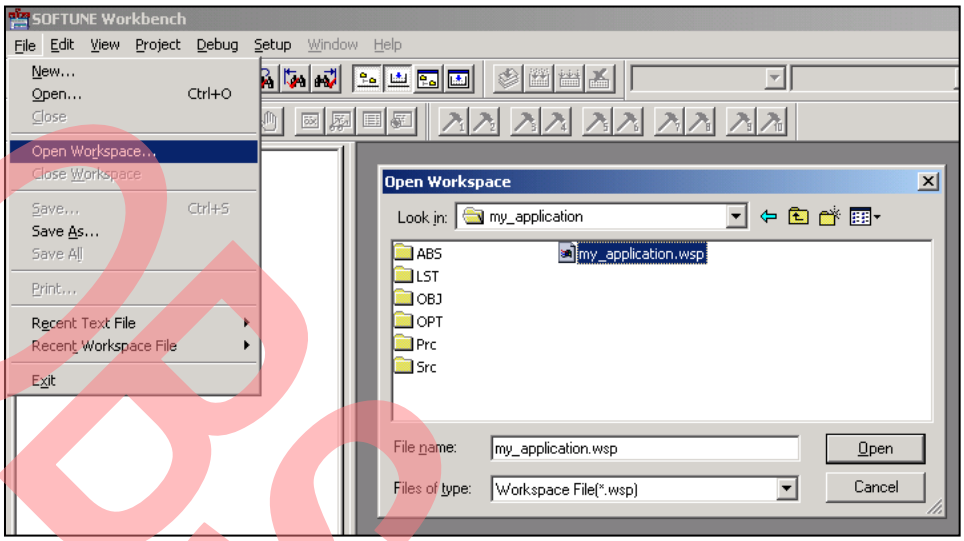

Write your application code:

- Start.asm: Startup code
- Vector.c: Vector table
- Main.c: Your application

Compile & build your project.

The generated MHX-file can be flashed into the Flash-device; the ABS-file can be used for emulation and simulation.

OBSOLETE


3.2 Flash programming

The Flash devices of the MB89210series, e.g. MB89F217 have a burn-in bootloader. By this bootloader the internal flash can be programmed via the COM-port of a PC.

3.2.1 Hardware

In order to select the asynchronous burn-in bootloader the microcontroller port pin P07 has to be connected to GND, P30 and MODA have to be connected to VCC (see table and schematic below).

Pin	MB89F217 FPT-48P-M13	Connect to
MOD0	37	VSS
MOD1	38	VSS
MODA	1	VCC (for programming only) GND (for 'RUN' mode)
UO	22	PC RxD via RS232 transceiver
UI	23	PC TxD via RS232 transceiver
P07	47	VSS (for programming only)
P30	11	VCC (for programming only)
VSS	8, 19, 43	GND
VCC	42	VCC
X0, X1	10, 9	Crystal (e.g. 10MHz)
/RST	2	Pull-up resistor to high, Switch-button to VSS

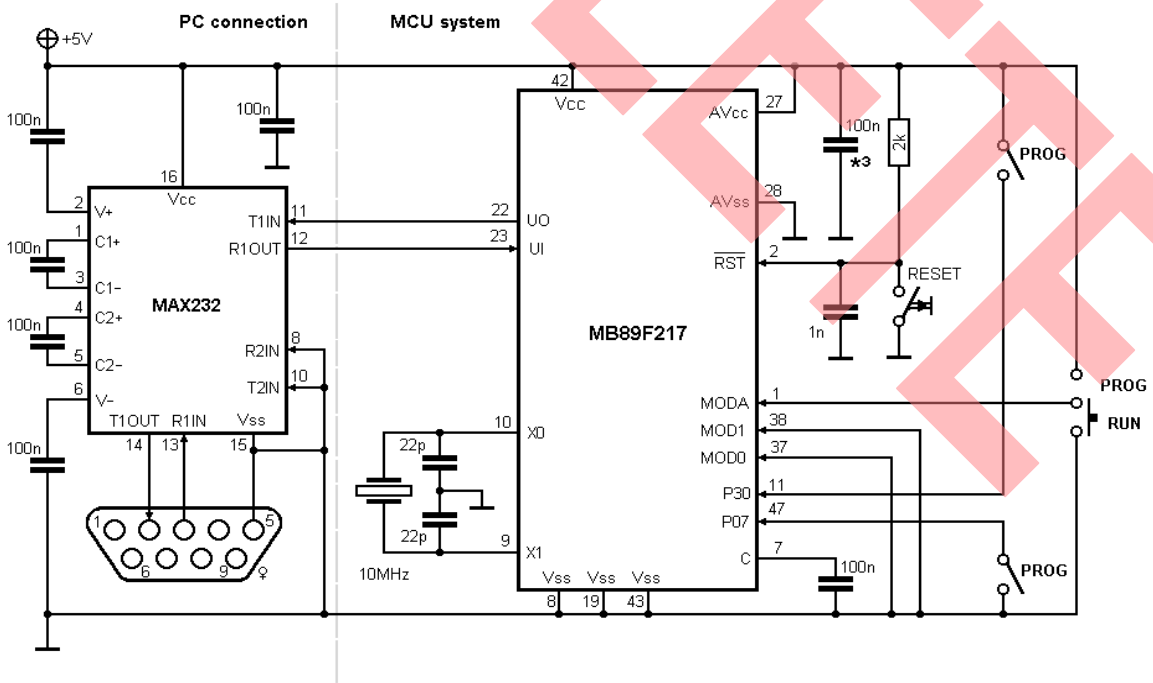


OBSOLETE

3.2.2 Software

Install the latest version of the 8bit Fujitsu Flash MCU Programmer, which should be version V01L08 or newer.

Select the Target Microcontroller [MB89F217] and the crystal frequency depending on your external crystal [e.g.: 10MHz].

Select the Hex File (ABS/*.MHX) of your project.

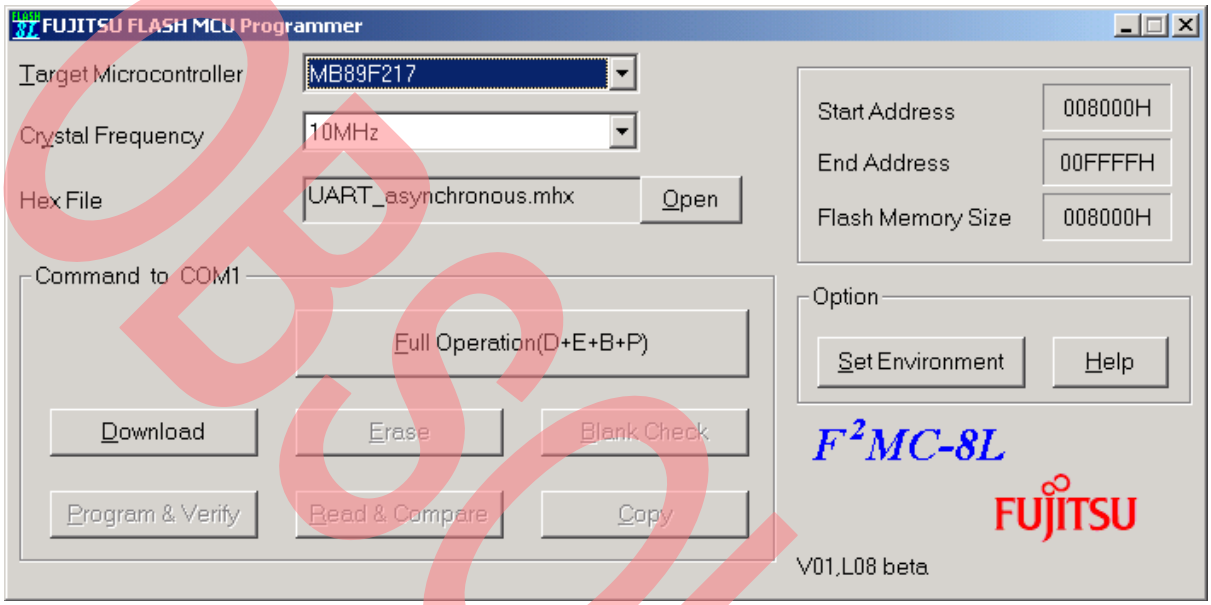

Take care that the asynchronous burn-in bootloader of the microcontroller is selected (P07='L', P30 = MODA = 'H').

Press "Full Operation" and reset your target system when prompted.

After the device is programmed successfully, select the 'RUN' mode ((P07=open, P30 = open, MODA = 'L') and reset the target system. The application should start automatically.

OBSOLETE

Document History

Document Title: AN204941 – F²MC - 8L Family, MB89210, Getting Started

Document Number: 002-04941

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	WOFR	08/06/2004	V1.0, HWe, First release
*A	5281511	WOFR	05/23/2016	Migrated Spansion Application Note “MCU-AN-389023-E-V10” to Cypress format.
*B	5612317	WOFR	01/31/2017	Spec obsoleted, no further updates planned.

OBSOLETE

Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at Cypress Locations.

Products

ARM® Cortex® Microcontrollers	cypress.com/arm
Automotive	cypress.com/automotive
Clocks & Buffers	cypress.com/clocks
Interface	cypress.com/interface
Lighting & Power Control	cypress.com/powerpsoc
Memory	cypress.com/memory
PSoC	cypress.com/psoc
Touch Sensing	cypress.com/touch
USB Controllers	cypress.com/usb
Wireless/RF	cypress.com/wireless

PSoC® Solutions

PSoC 1 | PSoC 3 | PSoC 4 | PSoC 5LP

Cypress Developer Community

Forums | Projects | Videos | Blogs | Training | Components

Technical Support

cypress.com/support

OBSOLETE

PSoC is a registered trademark and PSoC Creator is a trademark of Cypress Semiconductor Corporation. All other trademarks or registered trademarks referenced herein are the property of their respective owners.

Cypress Semiconductor
198 Champion Court
San Jose, CA 95134-1709

Phone : 408-943-2600
Fax : 408-943-4730
Website : www.cypress.com

© Cypress Semiconductor Corporation, 2004-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.