Getting started with PSOC™ Control C3M/P6 MCU on ModusToolbox™ software

About this document

Scope and purpose

This application note is to introduce the PSC3M/P6 MCU, which is a single-core, high-performance, low-power, and secure MCU designed for real-time control, enhanced sensing, and secure and low-power applications. This application note helps you to explore the PSC3M/P6 MCU architecture and development tools and shows you how to create your first project using the Eclipse IDE for ModusToolbox™ software. This application note also guides you to more resources available online to accelerate your learning about the PSC3M/P6 MCU.

Intended audience

This document is intended for the users who are new to PSC3M/P6 and ModusToolbox™ software.

Associated part family

All PSC3M/P6 devices.

Software version

ModusToolbox™ software 3.8 or above.

More code examples? We heard you.

To access an ever-growing list of PSC3M/P6 code examples using ModusToolbox™, please visit the GitHub site.

Table of contents

About this document . . . 1
Table of contents . . . 2
1 Introduction . . . 4
1.1 Architecture and product lines . . . 4
1.2 PSC3M/P6 features . . . 6
1.3 Target applications . . . 8
2 PSC3M/P6 resources . . . 10
3 PSC3M/P6 development kits . . . 11
4 PSC3M/P6 software ecosystem for firmware/application development . . . 12
4.1 Installing the ModusToolbox™ tools package . . . 12
4.2 Choosing an IDE . . . 12
4.3 ModusToolbox™ help . . . 13
5 Getting started with PSC3M/P6 design . . . 14
5.1 Prerequisites . . . 14
5.1.1 Hardware . . . 14
5.1.2 Software . . . 14
5.2 Application development instructions . . . 14
5.3 About the design . . . 14
5.4 Create a new application . . . 14
5.4.1 Eclipse IDE for ModusToolbox™ . . . 15
5.4.1.1 View and modify the design . . . 18
5.4.1.1.1 Open the Device Configurator . . . 20
5.4.1.1.2 Add retarget-io middleware . . . 22
5.4.1.2 Write firmware . . . 23
5.4.1.3 Build the application . . . 30
5.4.1.4 Program the device . . . 31
5.4.1.5 Test your design . . . 34
5.4.1.6 Debugging the application using J-link . . . 36
5.4.2 Visual Studio Code (VS Code) for ModusToolbox™ . . . 38
5.4.3 IAR Embedded Workbench for ModusToolbox™ . . . 38
5.4.4 Keil µVision for ModusToolbox™ . . . 38
6 Summary . . . 39
References . . . 40
Glossary . . . 41
Revision history . . . 42
Trademarks . . . 43

Table of contents

Disclaimer 44

1 Introduction

The PSC3M/P6 device is a microcontroller targeted at industrial applications. The PSC3M/P6 integrates the following features on a single chip:

- High-performance, low-power 32-bit single-core Arm® Cortex® M33-based microcontroller with digital signal processor (DSP), floating-point unit (FPU), and state-of-the-art security features; 512 KB Read-While-Write (RWW) Flash with ECC support, and 128 KB SRAM with ECC support
- High-performance, programmable analog subsystem (HPPASS):
  - 1 x 12-bit, 9-Msps SAR ADC supporting up to 24 inputs on 16 parallel idle samplers; 16 dedicated analog inputs and up to 8 analog-capable GPIOs
  - Up to 9 x comparators with <11 ns built-in 10-bit DAC and slope generator
  - Up to 4 x OpAmps, 2 x 12-bit DAC, 3x 3P3Z hardware filter
- Real-time control peripherals:
  - Coordinate rotation digital computer (CORDIC)
  - 16 x 16-bit and 8 x 32 bit timer/counter pulse-width modulator (TCPWM) supporting <100 ps high-resolution pulse-width modulator (HRPWM); 2 x MOTIF
- Communication interfaces: 6x serial communication blocks (SCBs), including 1x SCB with PMBus support, 1x I3C, up to 1x USB FS host/device and up to 2x CAN FD
- Low-power operation modes down to 300 nA: Sleep, Deep Sleep (three modes) and Hibernate
- Up to 86 functional pins: 16 dedicated analog pins; 70 GPIOs with programmable drive modes, strengths, and slew rates, which includes up to 8 analog-capable GPIO pins
- Up to 7x Smart I/O programmable logic blocks supporting 30 Smart I/O capable pins
- Security: Cryptolite (SHA-2, VU, TRNG), AES; PSA L3 ready, DICE ready, and PQC support
- Safety: Class B and SIL 2 capable
- Packages: E-LQFP-64, E-LQFP-80, E-LQFP-100, with T_A = - 40°C to 115°C
- ModusToolbox™ development environment with installable SDKs and libraries, industry standard Arm® tools, and RTOS support

This application note introduces you to the capabilities of the PSC3M/P6, gives an overview of the development ecosystem, and gets you started with a simple 'Hello World' application wherein you learn to use the PSC3M/P6. Additionally, it shows you how to create an application from an empty starter application. The completed design of this application is available as a code example for ModusToolbox™ on GitHub.

For hardware design considerations, see the Hardware design guide for the PSC3M/P6 family.

1.1 Architecture and product lines

Figure 1 shows a detailed block diagram of the MCU.

1 Introduction

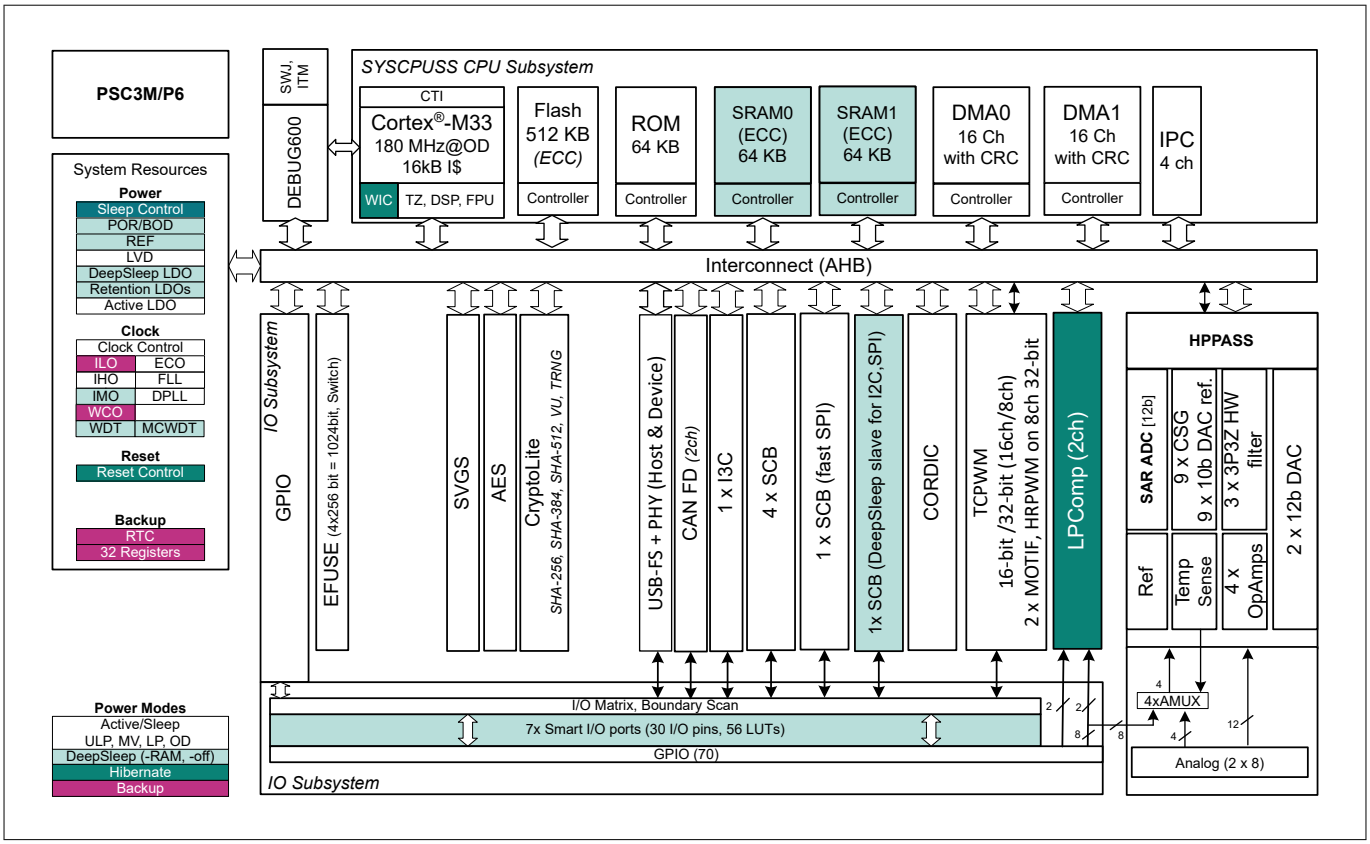


Figure 1 Functional block diagram

There are four variants in the PSC3M/P6. Table 1 provides an overview of different product lines.

Table 1 PSC3M/P6 product lines

Product line	Device series	Details
Performance line	PSC3M6	Single-core 180 MHz Arm® Cortex®-M33, up to 512 KB flash and 128 KB RAM, 24-channel 9 Msps ADC, 3P3Z, CORDIC, MOTIF
	PSC3P6	Single-core 180 MHz Arm® Cortex®-M33, up to 512 KB flash and 128 KB RAM, 24-channel 9 Msps ADC, 3P3Z

1.2 PSC3M/P6 features

PSC3M/P6 MCUs have extensive features as shown in Architecture and product lines. The following is a list of major features. For more information, see the device datasheet, reference manuals, and References section.

- CPU subsystem
  - Arm® Cortex®-M33 running up to 180 MHz
  - Digital signal processor (DSP), floating-point unit (FPU), memory protection unit (MPU), 16 KB I-cache
  - 2x 16-channel direct memory access (DMA) controllers with configurable cyclic redundancy check (CRC)
- Memory
  - On-chip flash with ECC support
    - Up to 512-KB flash with read while write (RWW) capability, 64 KB ROM for boot code, and bootloader functions
    - Built-in device firmware upgrade (DFU) support in boot ROM via serial interface (UART/I2C/SPI)
  - Up to 128 KB SRAM with ECC support
    - Full SRAM available in Deep Sleep
    - SRAM data path is protected with a hardware mechanism (ECC) for soft error detection and correction
- Security
  - Platform security architecture level 3 (PSA L3) ready
  - TrustZone framework that establishes an isolated device root of trust (RoT) for trust attestation and software management
  - Step-wise authentication of execution images until the control is handed over to the user code
  - Image authentication and integrity check
  - Cryptography accelerator
    - Hardware acceleration for symmetric (AES-128, AES-256) and asymmetric cryptographic algorithms (RSA and elliptic curve cryptography (ECC)) supported by vector unit (VU) and hash functions (SHA-256, SHA-384, SHA-512)
    - Signature verification: ECDSA NIST P-256, ECDSA NIST P-384 (Default), ECDSA NIST P-521 , LMS SHA256_M32_H10, XMSS-SHA2_10_256
    - True random number generator (TRNG) function
  - Post-quantum cryptography (PQC) algorithm support for ML_DSA and ML_KEM using wolfSSL crypto library
  - DICE ready: Device identifier composition engine (DICE) mechanism support
- Clocking subsystem
  - 8 MHz IMO with Deep Sleep operation offering ±2% accuracy
  - 48 MHz internal high-frequency oscillator (IHO) offering ±1% accuracy
  - 32 kHz internal low frequency oscillator (ILO) offering ±10% accuracy
  - 4 to 36 MHz external crystal oscillator (ECO) support
  - 32.768 kHz external watch crystal oscillator (WCO) usable for real-time clock (RTC)
  - External clock (EXTCLK): Maximum frequency 80 MHz
  - One frequency lock loop (FLL) with 24-100 MHz output range
  - One digital phase-locked loops, DPLL#0, with 25-240 MHz output range

- Low power (1.71 V to 3.63 V) operation
  - Six power modes (Active, Sleep, Deep Sleep, Deep Sleep-RAM, Deep Sleep-OFF, and Hibernate) for fine-grained power management
  - Four power profiles (Ultra Low Power, Medium Frequency, Low Power, Overdrive) to optimize speed vs power consumption in Active mode
- Communication peripherals
  - Serial communication blocks (SCBs)
    - 6x independent run-time-reconfigurable SCBs; each software-configurable as I2C, SPI, or UART in master or slave mode
    - 1x SCB supports Deep Sleep operation and wake-up from Deep Sleep in I2C slave and SPI slave modes
    - 1x SCB supports fast SPI operation at up to 50 MHz
    - All SCBs support single-wire, half-duplex UART mode
    - 1x SCB additionally supports PMBus protocol:
      - Baud rates of up to 1 Mbps
      - Timeout event generation (TGS) for wrong or stuck commands
      - Hardware address screening with support for a minimum of five slave address masks (MSAs) to reject or NACK incoming address commands
      - Compliance with PMBus (v1.4) and SMBus (v3.2) specifications
  - CAN FD
    - Up to 2x CAN FD; 1 instance supports 8 Mbps operation
  - Up to 1x Universal serial bus full-speed host and device with USB PHY
  - 1x I3C interface with over-voltage-tolerant (OVT) I/O support
- High-performance, programmable analog subsystem (HPPASS)
  - Analog-to-digital converter (ADC)
    - 1x 12-bit, 9-Msps SAR ADC with support up to 24 analog inputs
    - 16x parallel sample/hold (S/H) stages supporting simultaneous idle sampling of up to 16 inputs; 12x direct samplers and 4x multiplexed samplers
    - Up to 8 additional GPIOs can be used as ADC inputs
    - 4x multiplexed samplers can be connected to:
      - Dedicated analog pads
      - Analog-capable GPIOs
      - OpAmp outputs
      - Internal references and internal temperature sensor
    - Configurable input gain of 1×, 3×, 6×, and 12× on all 16 S/H circuits
    - Up to 4x OpAmps for signal amplification and conditioning
    - 2x 12-bit R2R DACs. DAC output can be connected to OpAmp inputs or to dedicated analog pin
    - Digital comparator at the output to compare the ADC result against programmed boundary values
    - Digital comparator outputs can be connected to timer/counter pulse-width modulator (TCPWM) (low latency between the modules)
  - Comparator with slope generator (CSG)
    - Up to 9x Active comparators without Deep Sleep functionality, each with a 10-bit DAC to generate the comparator reference
    - Each comparator supports an external reference/threshold through pins

  - Active comparator can be used with the built-in DAC in Hysteresis mode
  - Comparator outputs can be brought to pins for control loop applications
  - Comparator outputs can be connected to TCPWM (low latency between the modules)
  - Logical OR of multiple comparator trigger outputs connected as an input trigger to TCPWM via triggerMUX
- Low-power comparator (LPComp):
  - 2x comparators in LPComp are available in Active, Deep Sleep, and Hibernate modes
  - Comparator inputs and outputs can be connected to external pins; outputs can also be routed internally to TCPWM
  - Option to internally route same signal to multiple comparator inputs
  - Internal fixed reference voltage of 0.6 V ± 0.2 V can be connected to inverting input of the comparators
- Real-time control peripherals
  - Coordinate rotation digital computer (CORDIC)
    - Supports all CORDIC operating modes for solving circular (trigonometric), hyperbolic functions, and integrated independent lookup tables to accelerate calculation
  - Timer/counter pulse-width modulator (TCPWM)
    - 16 x 16-bit TCPWM channels
    - 8 x 32-bit TCPWM channels supporting high-resolution PWM generation (HRPWM) for PWM outputs
    - Center-aligned, edge, and pseudorandom modes
    - Comparator-based triggering of kill signals
    - Shadow update of duty, period, dead-time, output signal polarity, and dithering (pseudorandom mode)
    - Multichannel control: In a group of eight TCPWM channels, one channel within a group can trigger another channel
    - Ability to logically combine the outputs of multiple channels through Smart I/O
    - Dedicated output triggers mux in a group to allow flexibility to the PWM channel as a trigger and/or gate signals to the HPPASS
    - HRPWM feature for period, duty, and dead-time insertion
    - 2x motion interface (MOTIF) supporting:
      - Standalone multi-channel mode
      - Hall sensor interface with autonomous BLDC block commutation support
      - Quadrature encoder interface to decode motor speed and rotor position
- I/O subsystem
  - Programmable GPIO pins
    - Up to 86 functional pins (70 GPIOs; 8 out of 70 GPIOs can be used for analog inputs + 16 dedicated analog-only inputs)
    - Programmable drive modes, strengths, and slew rates
  - Programmable digital
    - Up to 7 Smart I/O-capable ports (28 I/Os, 56 LUTs) enable Boolean operations on I/O signals

1.3 Target applications

The versatile, secured, low-power, feature-rich offerings in the PSC3M/P6 make it an ideal choice for a wide variety of end applications. Some of these applications are listed below.

- Power tools

- Home appliances
- Industrial drives
- Light electric vehicles
- Switched-mode power supplies (SMPS)
- LED lighting
- Solar inverters

The ModusToolbox™ software environment supports PSC3M/P6 application development with a set of tools for configuring the device, setting up peripherals, and complementing your projects with world-class middleware. See the Infineon GitHub repos for board support packages (BSPs) for all kits, libraries for popular functionality like motor control and power stage converter, and a comprehensive array of example applications to get you started.

Figure 2 shows an application-level block diagram for a real-world use case using PSC3M/P6.

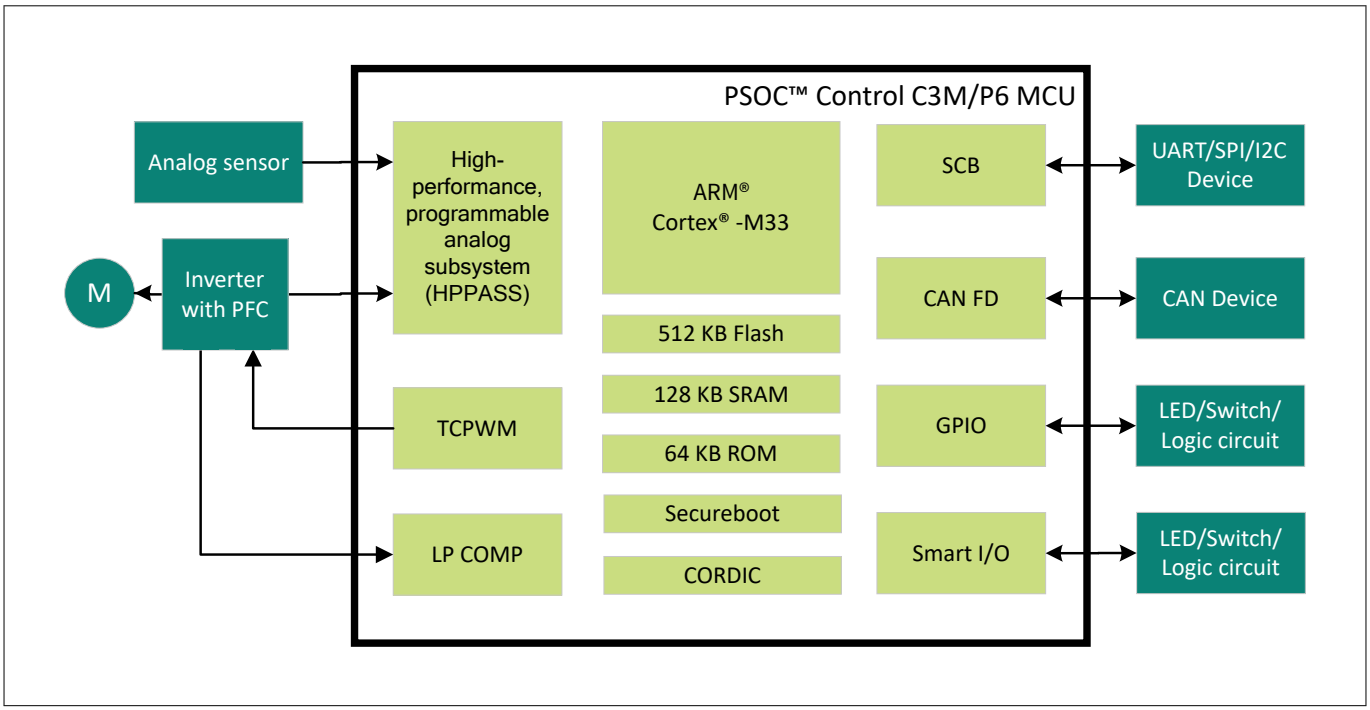


Figure 2 Application-level block diagram using PSC3M/P6

PSC3M/P6 is a highly capable and flexible solution for industrial applications. For example, the real-world use case in the Figure 2 takes advantage of the following features:

- TCPWM to drive the gates in the motor inverter and the power factor correction (PFC) circuit
- ADC in the HPPASS for reading data from analog sensors
- ADC in the HPPASS for reading the analog feedback, such as voltage and currents from the motor inverter and PFC circuit
- CORDIC peripheral to do the mathematical operations used in motor control application
- LPCOMP to compare the analog signals for protection
- Inbuilt security features for firmware protection
- Serial communication blocks (SCBs) to interface with external devices like motion sensors
- Programmable Smart I/O to implement CPU independent simple logical operations on internal/external inputs
- CAN FD channels to communicate with CAN FD capable peripherals
- High bandwidth, fast slew rate, rail-to-rail OpAmps suitable for implementing the analog front end

2 PSC3M/P6 resources

A wealth of technical resources is available to develop applications with the PSC3M/P6. These resources are listed below.

- **Overview**: PSC3M/P6 webpage
- **Product selectors**: PSC3M/P6
- **Performance line datasheet** describes each device family and provides electrical specifications
- **Application notes** and **code examples** cover a broad range of topics, from basic to advanced level. You can also browse our collection of code examples
- **Reference manuals** (architecture and register) provide detailed descriptions of the architecture and registers in each device family
- **Development tools**: Many low-cost kits are available for evaluation, design, and development of different applications using PSC3M/P6
- **Training videos**: Video training on our products and tools, including PSC3M/P6
- **Technical support**: PSC3M/P6 community forum

3 PSC3M/P6 development kits

Infineon provides a wide variety of hardware development kits in various form factors and features to enable easy and rapid evaluation and prototyping of PSC3M/P6 based applications.

The following table lists the PSC3M/P6 MCU kits with various features.

ModusToolbox™ software is the software development platform for creating embedded applications using the development kits.

Table 2 Development kits

Kit MPN	Product	Kit name	BSP GitHub repo
KIT_PSC3M6_EVAL	PSC3M6GES3AHQ1	PSOC™ Control C3M6 Evaluation Kit	BSP
KIT_PSC3M6_CC1	PSC3M6GES3AHQ1	PSOC™ Control C3P6 Digital Power Control Card	BSP
KIT_PSC3M6_CC2	PSC3M6GES3AHQ1	PSOC™ Control C3P6 Motor Control Card	BSP

For the complete list of kits for the PSC3M/P6 along with the shield modules, see the PSC3M/P6 webpage.

4 PSC3M/P6 software ecosystem for firmware/application development

Infineon provides the ModusToolbox™ software for firmware/application development based on MCUs.

ModusToolbox™ software is a modern, extensible development ecosystem supporting a wide range of Infineon microcontroller devices, including PSOC™ Arm® Cortex® Microcontrollers, TRAVEO™ T2G Arm® Cortex® Microcontroller, XMC™ Industrial Microcontrollers, AIROC™ Wi-Fi devices, AIROC™ Bluetooth® devices, and USB-C Power Delivery Microcontrollers. This software includes configuration tools, low-level drivers, middleware libraries, and other packages that enable you to create MCU and wireless applications. All tools run on Windows, macOS, and Linux. ModusToolbox™ includes an Eclipse IDE, which provides an integrated flow with all the ModusToolbox™ tools. Other IDEs such as Visual Studio Code, IAR Embedded Workbench and Arm® MDK (µVision) are also supported.

ModusToolbox™ software supports stand-alone device and middleware configurators. Use the configurators to set the configuration of different blocks in the device and generate code that can be used in firmware development.

Libraries and enablement software are available at the GitHub site.

ModusToolbox™ tools and resources can also be used on the command line. See the build system chapter in the ModusToolbox™ tools package user guide for detailed documentation.

4.1 Installing the ModusToolbox™ tools package

Refer to the ModusToolbox™ tools package installation guide for details.

4.2 Choosing an IDE

ModusToolbox™ software, the latest-generation toolset, is supported across Windows, Linux, and macOS platforms. ModusToolbox™ software supports 3rd-party IDEs, including the Eclipse IDE, Visual Studio Code, Arm® MDK (µVision), and IAR Embedded Workbench. The tools package includes an implementation for all the supported IDEs. The tools support all PSC3M/P6 devices. The associated BSP and library configurators also work on all three host operating systems.

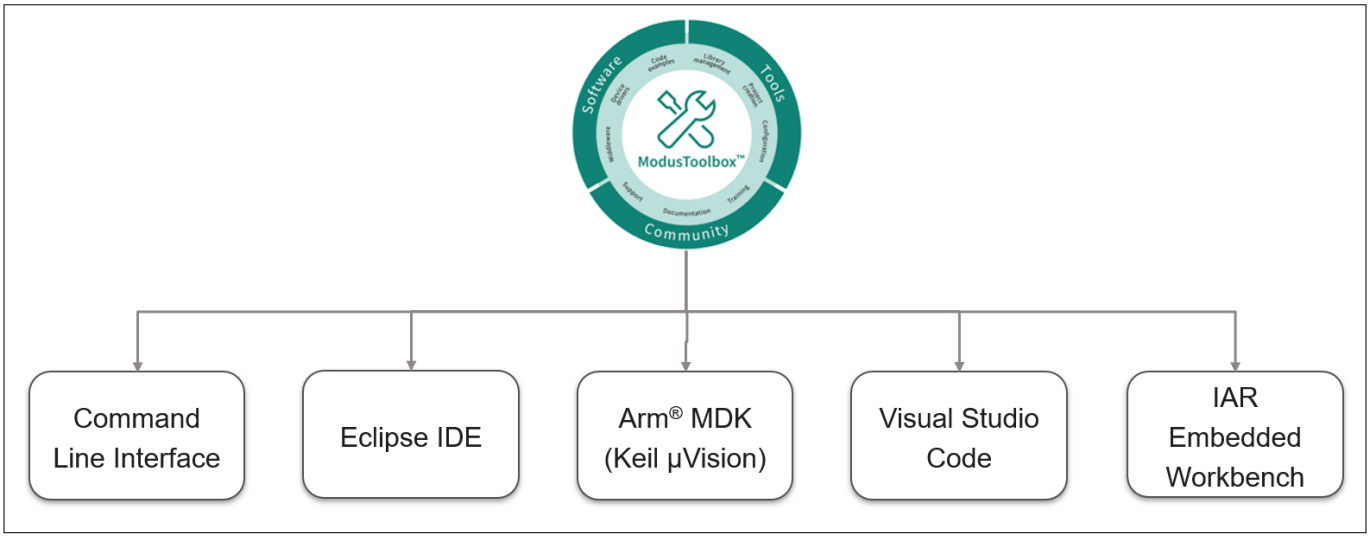


Figure 3 ModusToolbox™ environment

4.3 ModusToolbox™ help

The ModusToolbox™ ecosystem provides documentation and training. Launch the Eclipse IDE for ModusToolbox™ software and navigate to the following Help menu items:

Choose **Help** > **ModusToolbox™ General Documentation**:

- **ModusToolbox™ Documentation Index:** Provides brief descriptions and links to various types of documentation included as part of the ModusToolbox™ software
- **ModusToolbox™ Installation Guide:** Provides instructions for installing the ModusToolbox™ software
- **ModusToolbox™ User Guide:** This guide primarily covers the ModusToolbox™ aspects of building, programming, and debugging applications. Additionally, it covers various aspects of the tools installed along with the IDE
- **ModusToolbox™ Training Material:** Links to the training material available at ModusToolbox™ Training
- **Release notes:** Describes the features and known limitations for the ModusToolbox™ software, provided as part of the ModusToolbox™ tools package included with the installer

For documentation on Eclipse IDE for ModusToolbox™, choose **Help** > **Eclipse IDE for ModusToolbox™ documentation**.

- **User Guide:** Provides descriptions about creating applications as well as building, programming, and debugging them using Eclipse IDE
- **Eclipse IDE Survival Guide:** This is a link to a forum with answers for questions about how to get common tasks done

5 Getting started with PSC3M/P6 design

This section does the following:

- Demonstrate how to build a simple PSC3M/P6-based design and program into the development kit
- Makes it easy to learn PSC3M/P6 design techniques and how to use the ModusToolbox™ software with different IDEs.

5.1 Prerequisites

Before you get started with the application development instructions, make sure that you have the appropriate development kit for your PSC3M/P6 product line and have installed the required software. You also need internet to access the GitHub repositories during project creation.

5.1.1 Hardware

The following design example is developed for the PSOC™ Control C3M6 Evaluation Kit (KIT_PSC3M6_EVAL). However, you can build the application for other development kits also. For more details, see the section Application development instructions.

5.1.2 Software

Install ModusToolbox™ software 3.8 or later.

After installing the software, see the ModusToolbox™ tools package user guide to get an overview of the software.

5.2 Application development instructions

These instructions are grouped into several sections. Each section is dedicated to a phase of the application development workflow. The major sections are:

1. Create a new application
2. View and modify the design
3. Write firmware
4. Build the application
5. Program the device
6. Test your design

This design is developed for the PSOC™ Control C3M6 Evaluation Kit. You can use other supported kits to test this example by selecting the appropriate kit while creating the application.

5.3 About the design

This design uses the PSC3M/P6 to execute two tasks: UART communication and LED control.

After device reset, the CPU uses the UART to print a "Hello World" message to the serial port stream and starts blinking the user LED on the kit. When you press the 'Enter' key on the serial console, the blinking of the LED is paused or resumed.

5.4 Create a new application

This section takes you on a step-by-step guided tour of the new application creation process. It uses the **Empty App** starter application and manually adds the functionality from the **Hello World** starter application.

As mentioned in section Choosing an IDE, ModusToolbox™ software supports the following third-party IDEs:

1. Eclipse IDE
2. Visual Studio Code (VS Code)
3. IAR Embedded Workbench
4. Keil µvision

The following sections provide details on how to create a new application on different IDEs.

5.4.1 Eclipse IDE for ModusToolbox™

If you are familiar with developing applications with ModusToolbox™ software, you can use the **Hello World** starter application directly. It is a complete design, with all the firmware written for the supported kits. You can walk through the instructions and observe how the steps are implemented in the code example.

If you start from scratch and follow all the instructions in this application note, you can use the **Hello World** code example as a reference while following the instructions.

Launch the Dashboard 3.8 application to get started.

***Note**: Ensure that the Dashboard 3.8 application is connected to the internet to clone the starter application onto your machine.*

The Dashboard 3.8 application helps you get started using the various tools with easy access to documentation and training material, and provides a simple path for creating applications and creating and editing BSPs.

1. Open the Dashboard 3.8 application. Do one of the following:
   - **Windows:** Navigate to `[ModusToolbox™ installation path]/tools_3.8/dashboard/dashboard.exe` or you can also select the "ModusToolbox™ Dashboard 3.8" item from the Windows Start menu
   - **Linux:** Navigate to `[ModusToolbox™ installation path]/tools_3.8/dashboard` and run the executable
   - **macOS:** Run the "dashboard" app
2. On the Dashboard 3.8 window, in the right pane, in the **Target IDE** drop-down list, select **Eclipse IDE for ModusToolbox™**, and click **Launch Eclipse IDE for ModusToolbox™**

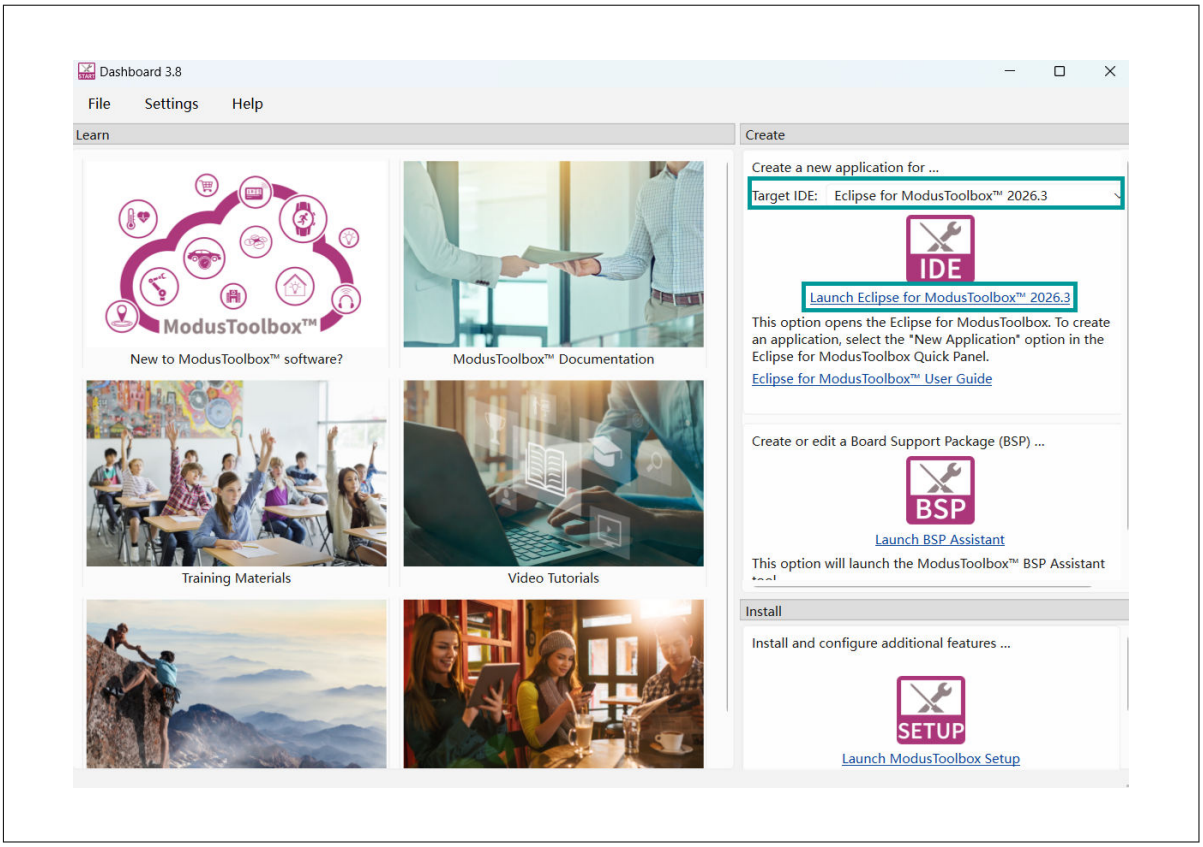


Figure 4 Dashboard 3.8 application

3. Select a new workspace

At launch, Eclipse IDE for ModusToolbox™ displays a dialog to choose a directory for use as the workspace directory. The workspace directory is used to store workspace preferences and development artifacts. You can choose an existing empty directory by clicking the **Browse** button, as shown in the following figure. Alternatively, you can type in a directory name to be used as the workspace directory along with the complete path, and the IDE will create the directory.

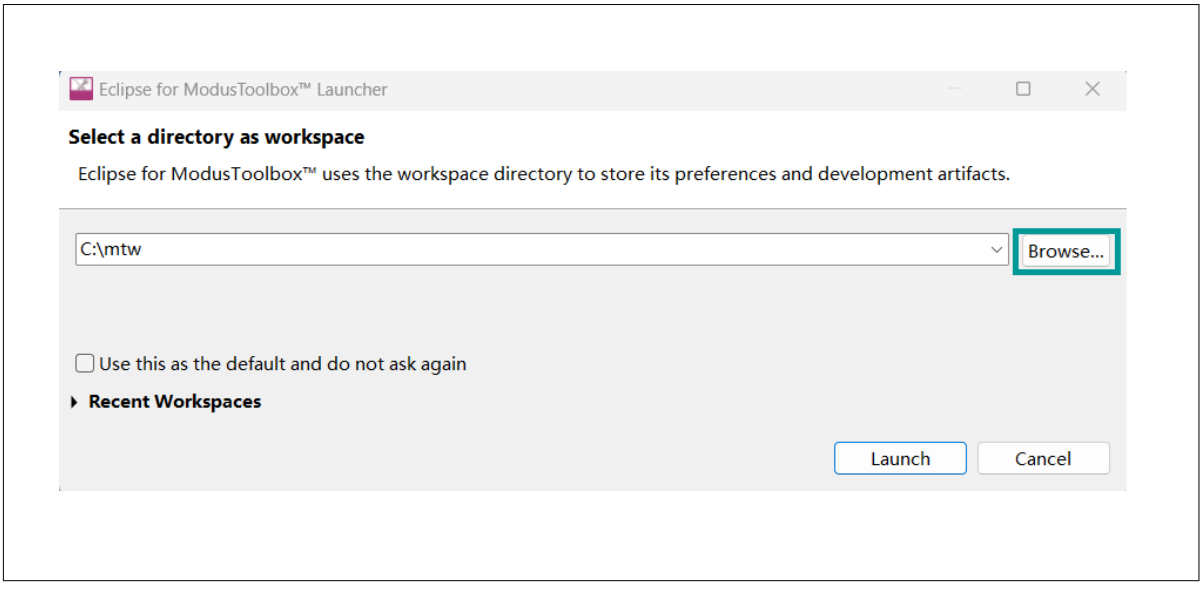


Figure 5 Select a directory as the workspace

4. Create a new ModusToolbox™ application

a. Click **New Application** in the Start group of the Quick Panel

b. Alternatively, you can choose **File** > **New** > **ModusToolbox™ Application**, as Figure 6 shows. This displays the Eclipse IDE for ModusToolbox™ Application window

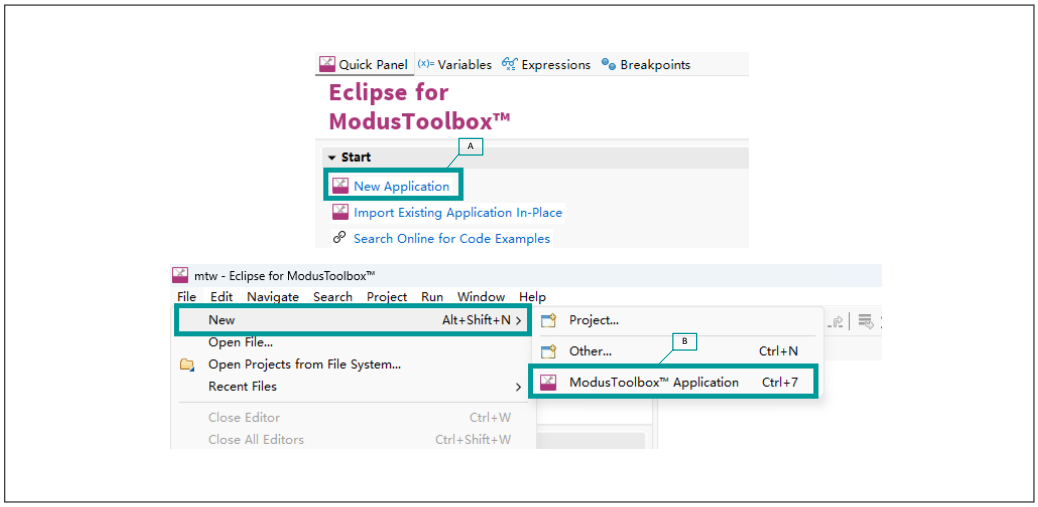


Figure 6 Create a New ModusToolbox™ Application

5. Select a target PSOC™ Control C3M6 Evaluation Kit

ModusToolbox™ speeds up the development process by providing BSPs that set various workspace/ project options for the specified development kit in the new application dialog.

a. In the **Choose Board Support Package (BSP)** dialog, choose the **Kit Name** that you have. The steps that are followed use **KIT_PSC3M6_EVAL**, as shown in Figure 7

b. Click **Next**

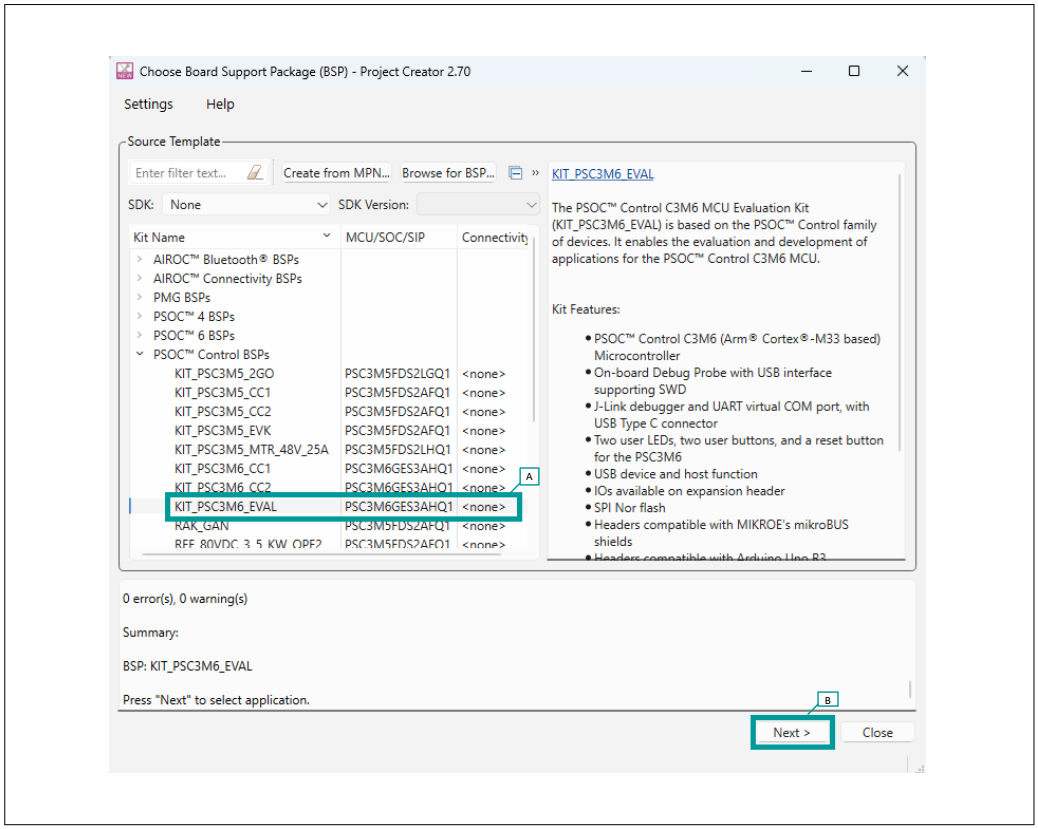


Figure 7 Choose target hardware

c. In the **Select Application** dialog, select **Empty App** starter application, as shown in the following figure

d. In the **Name** field, type in a name for the application, such as **Hello_World**. You can choose to leave the default name if you prefer

***Note**: Try to use a short name without spaces in between.*

e. Click **Create** to create the application, as shown in the following figure and wait for the Project Creator to automatically close once the project is successfully created

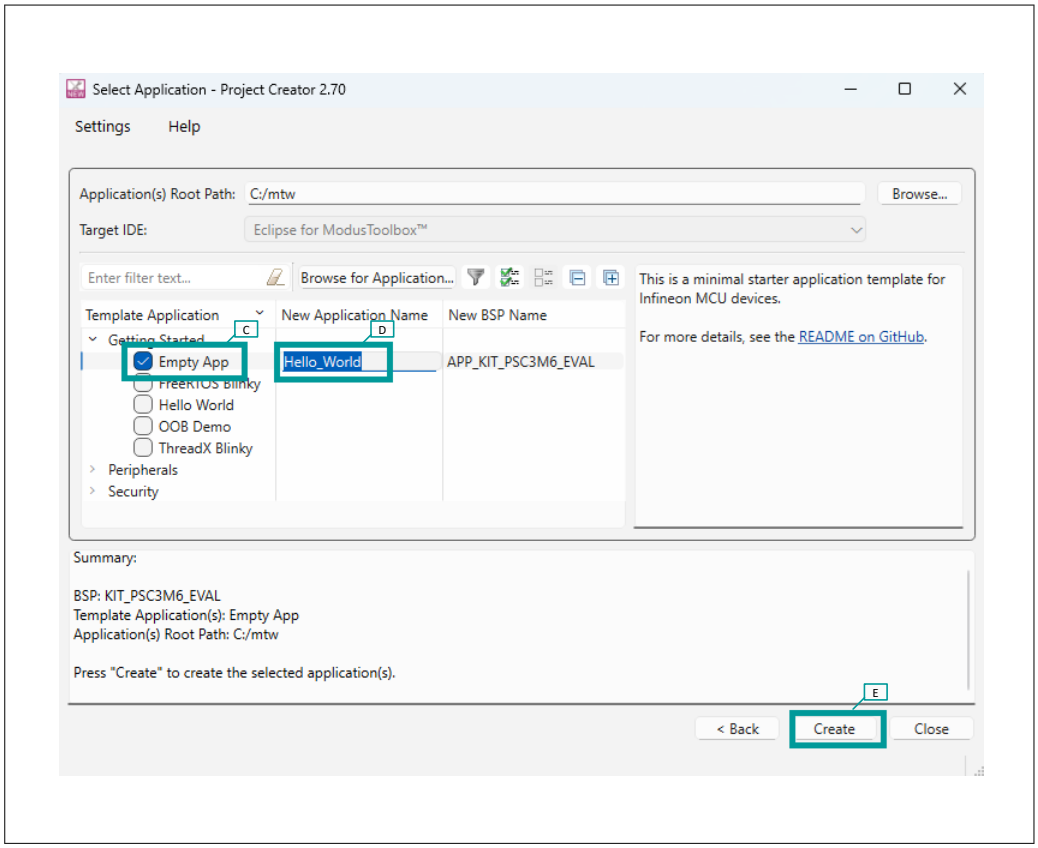


Figure 8 Choose starter application

You have successfully created a new ModusToolbox™ application for PSC3M/P6 MCU.

If you are using custom hardware based on the PSC3M/P6 MCU or a different PSC3M/P6 MCU part number, see the "Creating your Own BSP" section in the ModusToolbox™ user guide.

5.4.1.1 View and modify the design

Figure 9 shows the ModusToolbox™ Project Explorer interface displaying the structure of the application project.

The PSC3M/P6 MCU has one CM33 core. This application note shows an example code for firmware development using ModusToolbox™ software.

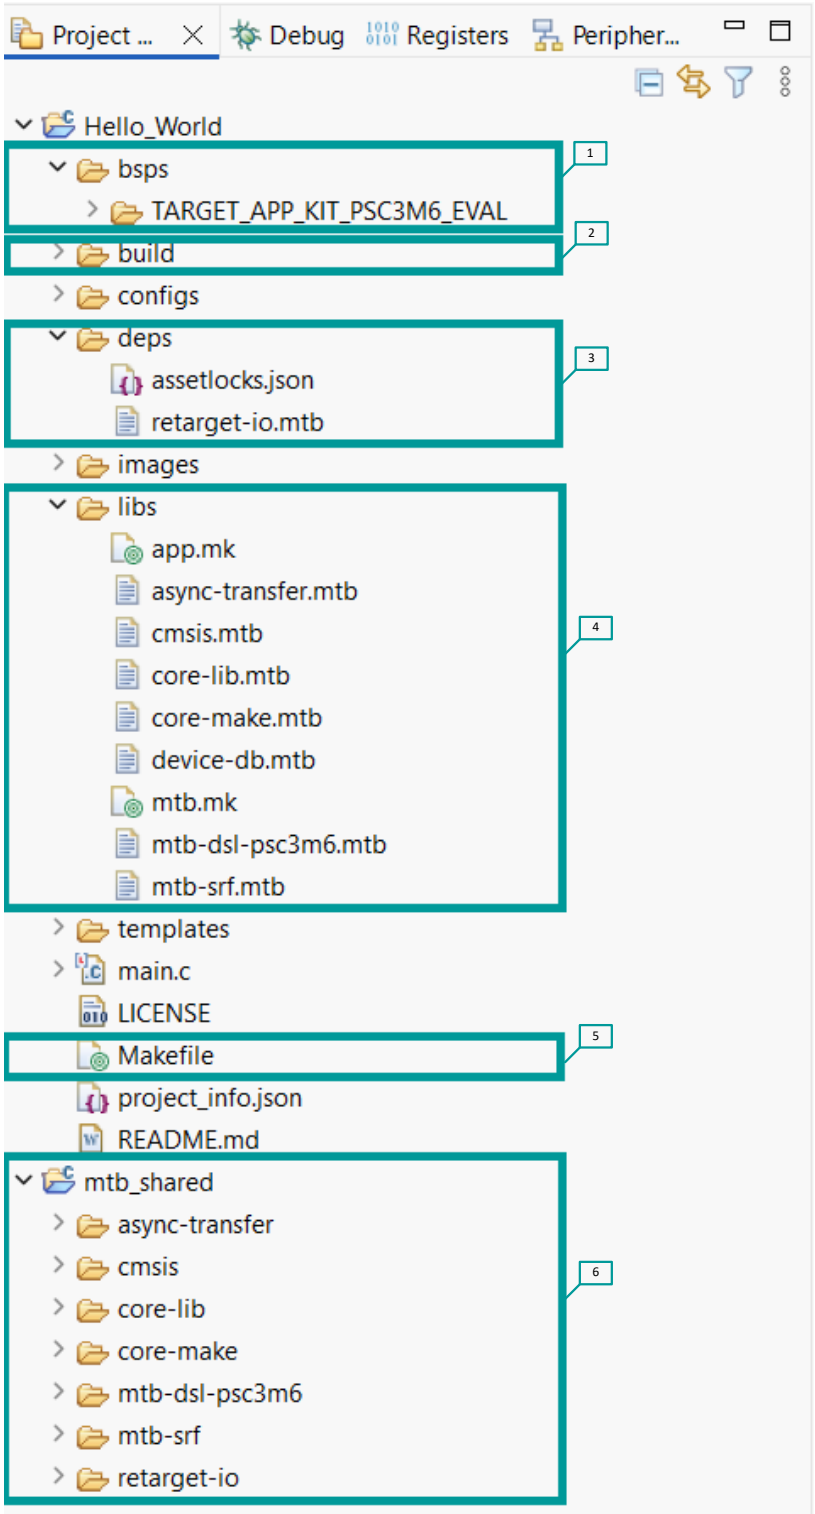


Figure 9 Project Explorer view

A project folder consists of various subfolders – each denoting a specific aspect of the project.

1. The files provided by the BSP are available in the *bsps* folder and are listed under *TARGET_<bsp name>* subfolders. All the input files for the device and peripheral configurators are in the *config* folder inside the BSP. The *GeneratedSource* folder in the BSP contains the files that are generated by the configurators and are prefixed with *cycfg_*. These files contain the design configuration as defined by the BSP. From ModusToolbox™ 3.x or later, you can directly customize the configurator files of the BSP for your application rather than overriding the default design configurator files with custom design configurator files because BSPs are completely owned by the application. The *bsps* folder also contains the linker scripts and the start-up code for the PSC3M/P6 MCU used on the board
2. The *build* folder contains all the artifacts resulting from a build of the project. The output files are organized by target BSPs
3. The *deps* folder contains *.mtb* files, which provide the locations from which ModusToolbox™ pulls the libraries that are directly referenced by the application. These files typically contain the GitHub location of a library. The *.mtb* files also contain a git commit hash or tag that tells which version of the library is to be fetched and a path as to where the library should be stored locally. For example, here, `retarget-io.mtb` points to `mtb://retarget-io#latest-v1.X#$$ASSET_REPO$$/retarget-io/latest-v1.X`. The variable `$$ASSET_REPO$$` points to the root of the shared location, which defaults to `mtb_shared`. If the library must be local to the application instead of shared, use `$$LOCAL$$` instead of `$$ASSET_REPO$$`
4. The *libs* folder also contains *.mtb* files. In this case, they point to libraries that are included indirectly as a dependency of a BSP or another library. For each indirect dependency, the Library Manager places a *.mtb* file in this folder. These files have been populated based on the targets available in the *deps* folder

   For example, using the **KIT_PSC3M6_EVAL** BSP populates the *libs* folder with the following *.mtb* files: cmsis.mtb, core-lib.mtb, core-make.mtb, deivce-db.mtb, mtb-dsl-psc3m6.mtb

   The *libs* folder contains the *mtb.mk* file, which stores the relative paths of all the libraries required by the application. The build system uses this file to find all the libraries required by the application. Everything in the *libs* folder is generated by the Library Manager so you should not manually edit anything in that folder
5. An application contains a Makefile, which is at the application's root folder. This file contains the set of directives that the make tool uses to compile and link the application project. There can be more than one project in an application. In that case, there is a Makefile at the application level and one inside each project
6. By default, when creating a new application or adding a library to an existing application and specifying it as shared, all libraries are placed in an *mtb_shared* directory adjacent to the application directories

   The *mtb_shared* folder is shared between different applications within a workspace. Different applications may use different versions of shared libraries if necessary

5.4.1.1.1 Open the Device Configurator

BSP configurator files are in the `bsps/TARGET_<BSP-name>/config` folder. Click **<Application-name>** from **Project Explorer** and then click **Device Configurator** link in the **Quick Panel** to open the `design.modus` file in the **Device Configurator** as shown in the following figure. You can also open other configuration files in their respective configurators or click the corresponding links in the **Quick Panel**.

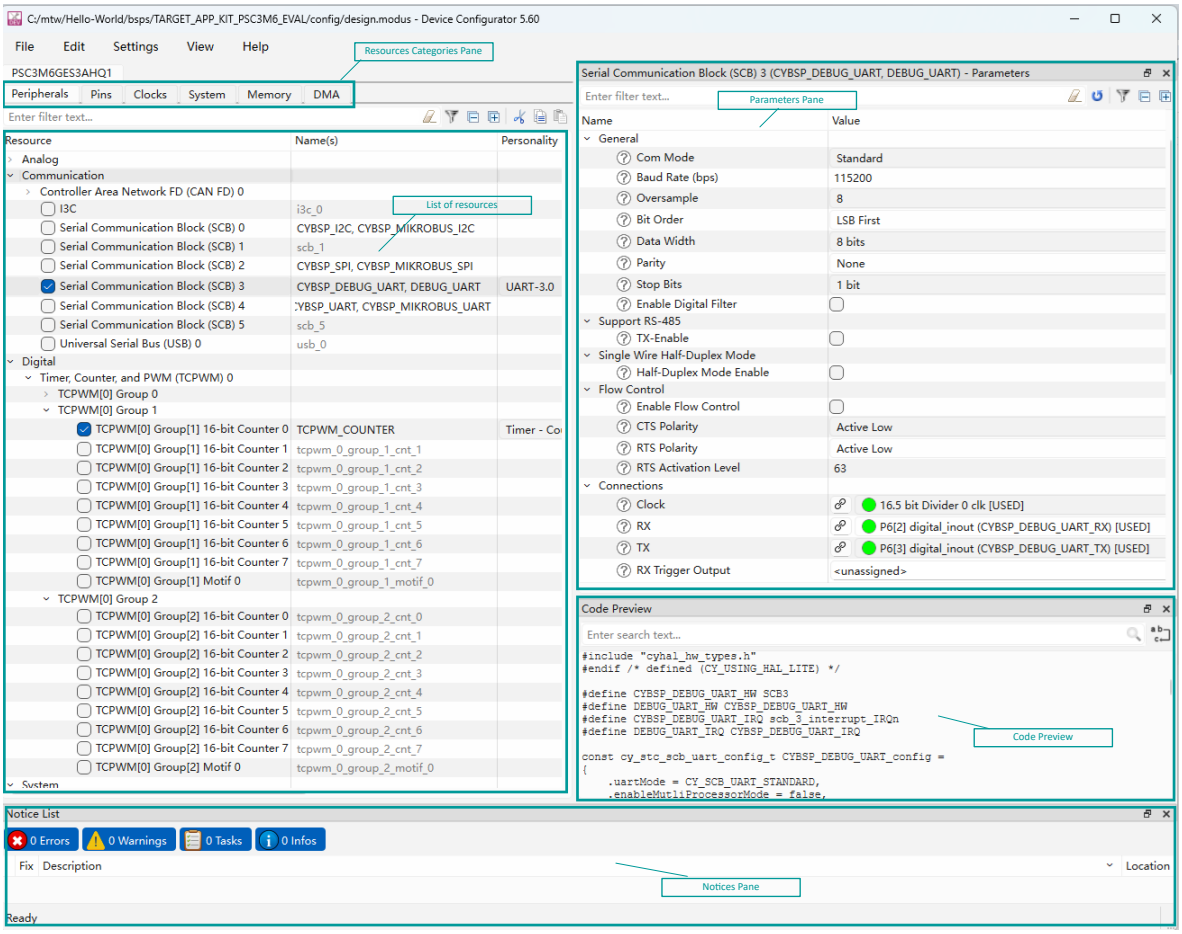


Figure 10 Device Configurator-UART configuration

The **Device Configurator** provides a set of **Resources Categories** tabs. Here, you can choose between different resources available in the device such as peripherals, pins, and clocks from the **List of Resources**.

You can choose how a resource behaves by choosing a **Personality** for the resource. For example, a **Serial Communication Block (SCB)** resource can have **EZI2C**, **I2C**, **SPI**, or **UART** personalities. The **Name(s)** is your name for the resource, which is used in firmware development. One or more aliases can be specified by using a comma to separate them (with no spaces).

The **Parameters** pane is where you enter the configuration parameters for each enabled resource and the selected personality. The **Code Preview** pane shows the configuration code generated per the configuration parameters selected. This code is populated in the `cycfg_` files in the `GeneratedSource` folder. The **Parameters** pane and **Code Preview** pane may be displayed as tabs instead of separate windows but the contents will be the same.

Any errors, warnings, and information messages arising out of the configuration are displayed in the **Notices** pane. Configuring the peripheral is required for both PDL- and HAL-based implementations to work.

Figure 10 also shows that SCB 3 is enabled and configured. As SCB 3 is used for communicating with the user through the debug UART terminal, replicate the same configuration in your setup for the "Hello World" application.

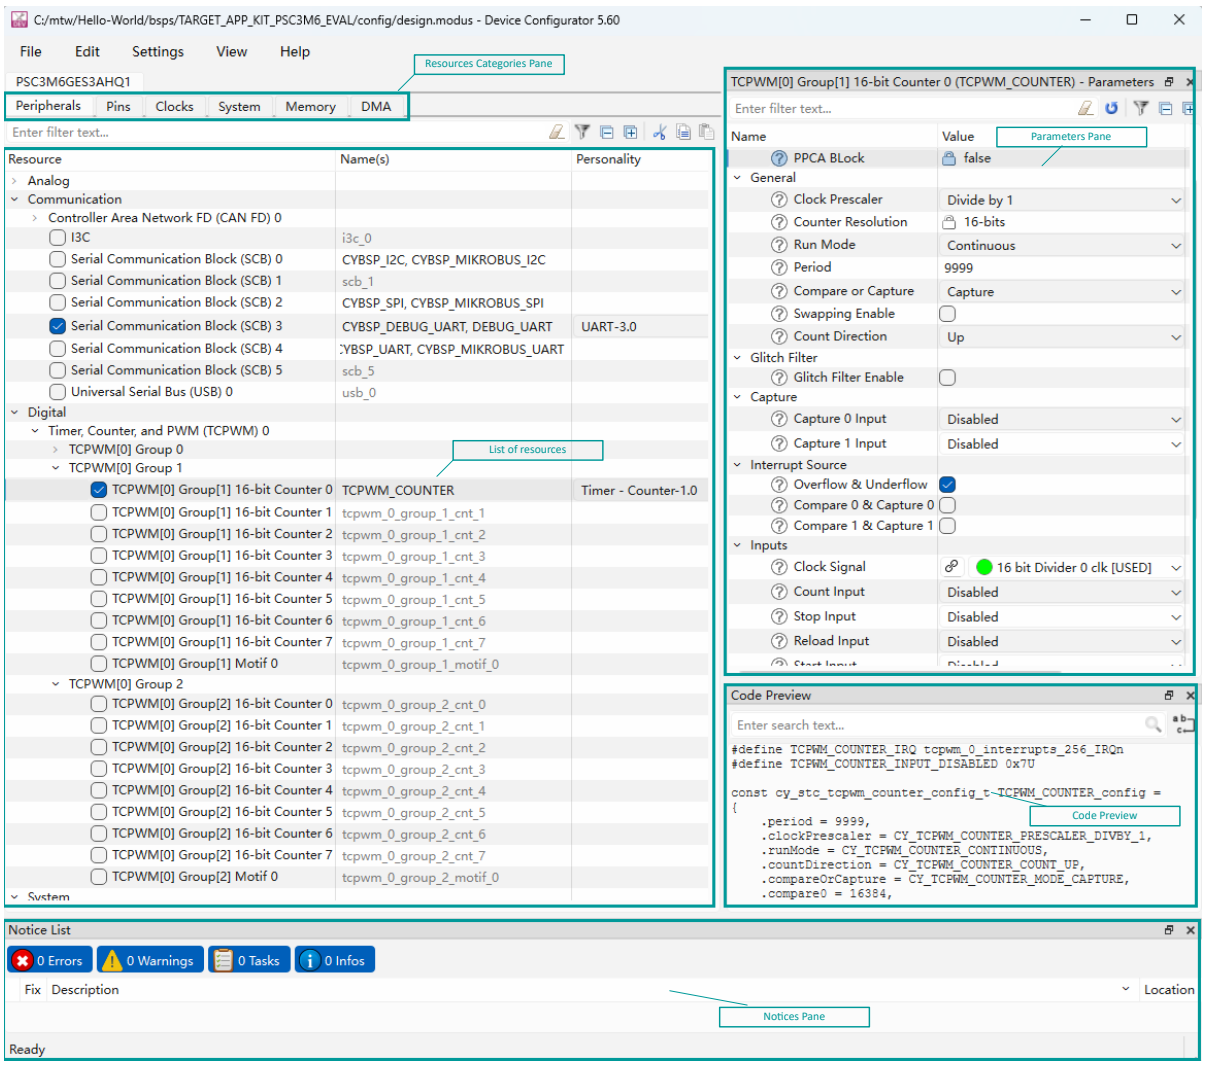


Figure 11 Device Configurator - Timer configuration

Figure 11 shows that the timer TCPWM[0] Group[1] 16-bit Counter 0 is configured in Timer - Counter mode.

This configuration is used in the code to generate interrupts for LED toggling. Make the same configuration in your setup. To make the LED toggle every second, the input clock frequency is set to 1 MHz. Ensure that this configuration is also made in your setup.

In the "Hello World" application, you are using a GPIO connected to the LED on the EVK. To use the GPIO, enable pin P8.4 in the **Pins** tab in the Resource Categories pane. Also, make sure that the Drive Mode is set to **'Strong Drive. Input buffer off'**.

At this point in the development process, the required middleware is ready to be added to the design. The middleware required for the "Hello World" application is the retarget-io library.

5.4.1.1.2 Add retarget-io middleware

This section explains how to add the retarget-io middleware to redirect standard input and output streams to the UART configured by the BSP. The initialization of the middleware will be done in the `main.c` file.

1. In the **Quick Panel**, click the **Library Manager** link

2. In the subsequent dialog, click **Add Libraries**
3. Under **Peripherals**, select and enable retarget-io
4. Click **OK** and then **Update**

The files required to use the retarget-io middleware are added to the `mtb_shared > retarget_io` folder, and the `.mtb` file is added to the `deps` folder, as shown in the following figure.

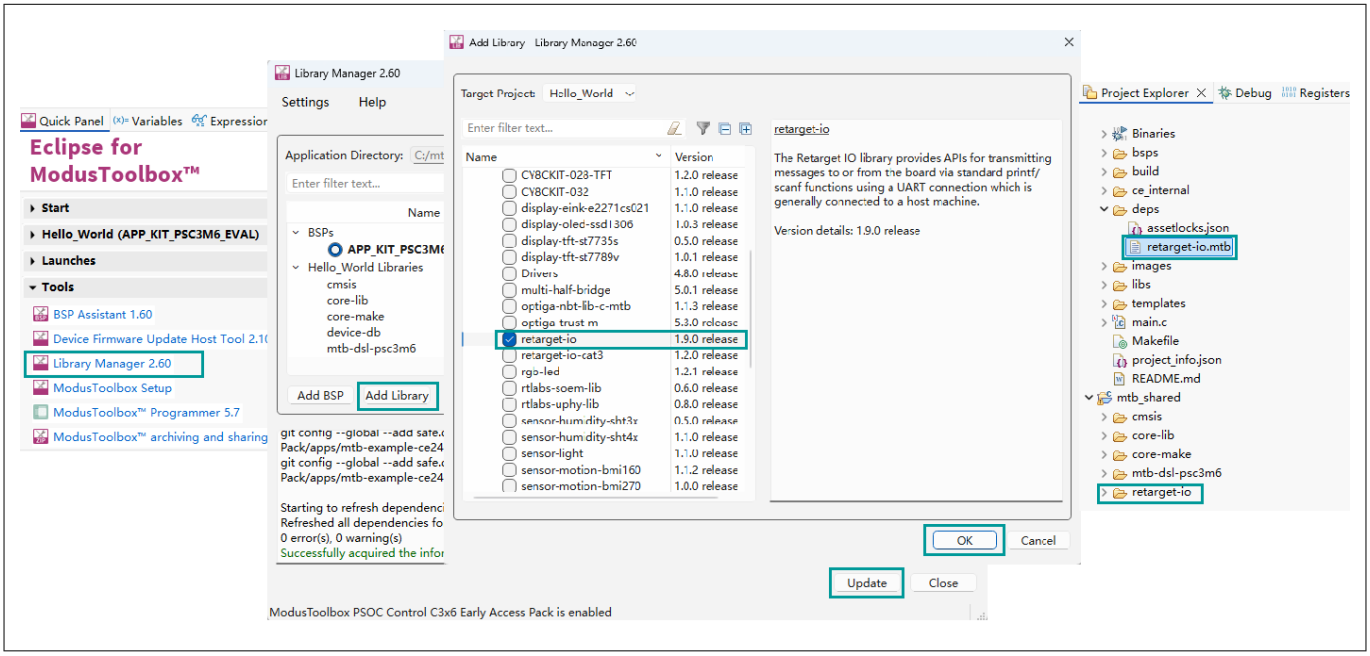


Figure 12 Add the retarget-io middleware

5.4.1.2 Write firmware

At this point in the development process, you have created an application with the assistance of an application template and modified it to add the retarget-io middleware. In this part, you write the firmware that implements the design functionality.

If you are working from scratch using the empty PSC3M/P6 MCU family starter application, you can copy the respective source code to the `main.c` file of the application project from the code snippet provided in this section. If you are using the "Hello World" code example, all the required files are already in the application.

Firmware flow

Examine the code in the `main.c` file of the application. Figure 13 shows the firmware flowchart.

After reset, resource initialization for this example is performed by the CM33 CPU. It configures the system clocks, pins, clock to peripheral connections, and other platform resources.

Then, the clocks and system resources are initialized by the BSP initialization function. The retarget-io middleware is configured to use the debug UART, and the user LED is initialized. The debug UART prints a “Hello World!” message on the terminal emulator – the onboard KitProg3 acts as the USB-to-UART bridge to create the virtual COM port. A timer object is configured to generate an interrupt every 1000 milliseconds. At each timer interrupt, the CPU toggles the LED state on the kit.

The firmware is designed to accept the 'Enter' key as an input, and on every press of the 'Enter' key, the firmware starts or stops the blinking of the LED.

Note that this application code uses BSP/HAL/middleware functions to execute the intended functionality.

`cybsp_init()` – This BSP function initializes all the system resources of the device, including but not limited to the system clocks and power regulators.

`Cy_SCB_UART_Init()` – This function initializes the debug UART.

`mtb_hal_uart_setup()` and `cy_retarget_io_init()` – These functions set up the HAL UART and redirect the input/output stream to the debug UART.

`mtb_hal_uart_get()` – The while loop calls this function to detect the pressing of the 'Enter Key', which start or stop the LED toggling.

`timer_init()` – This function wraps a set of timer function calls to instantiate and configure a hardware timer. It also sets up a callback for the timer interrupt.

`isr_timer()` – This is the timer ISR getting executed in every 1000 milliseconds. This function sets a flag for toggling the LED.

The flag set by the timer ISR is checked in the main loop, and the LED is toggled based on it.

Copy the following code snippet to the main.c file of your application project.

```
/*******************************************************************************
* Header Files
*******************************************************************************/
#include "cy_pdl.h"
#include "cybsp.h"
#include "cy_retarget_io.h"
#include "mtb_hal.h"

/*******************************************************************************
* Macros
*******************************************************************************/

/*******************************************************************************
* Global Variables
*******************************************************************************/
/* Interrupt configuration */
const cy_stc_sysint_t intrCfg1 =
{
    .intrSrc = TCPWM_COUNTER_IRQ,
    .intrPriority = 7u
};

volatile bool timer_interrupt_flag = false;
bool led_blink_active_flag = true;

/* Variable for storing character read from terminal */
uint8_t uart_read_value;

/* For the Retarget -IO (Debug UART) usage */
static cy_stc_scb_uart_context_t    DEBUG_UART_context;          /** UART context */
static mtb_hal_uart_t               DEBUG_UART_hal_obj;          /** Debug UART HAL object  */

/*******************************************************************************
* Function Prototypes
*******************************************************************************/
void timer_init(void);
void isr_timer(void);

/*******************************************************************************
* Function Definitions
*******************************************************************************/

/*******************************************************************************
* Function Name: main
********************************************************************************
* Summary:
* This is the main function. It sets up a timer to trigger a periodic interrupt.
* The main while loop checks for the status of a flag set by the interrupt and
* toggles an LED at 1Hz to create an LED blinky. Will be achieving the 1Hz Blink
* rate. The while loop also checks whether the 'Enter' key was pressed and
```

```
* stops/restarts LED blinking.
*
* Parameters:
*  void
*
* Return:
*  int
*
*******************************************************************************/
int main(void)
{
    cy_rslt_t result;

    /* Initialize the device and board peripherals */
    result = cybsp_init();

    /* Board init failed. Stop program execution */
    if (result != CY_RSLT_SUCCESS)
    {
        CY_ASSERT(0);
    }

    /* Enable global interrupts */
    __enable_irq();

    /* Debug UART init */
    result = (cy_rslt_t)Cy_SCB_UART_Init(DEBUG_UART_HW, &DEBUG_UART_config,
&DEBUG_UART_context);

    /* UART init failed. Stop program execution */
    if (result != CY_RSLT_SUCCESS)
    {
        CY_ASSERT(0);
    }

    Cy_SCB_UART_Enable(DEBUG_UART_HW);

    /* Setup the HAL UART */
    result = mtb_hal_uart_setup(&DEBUG_UART_hal_obj, &DEBUG_UART_hal_config,
&DEBUG_UART_context, NULL);

    /* HAL UART init failed. Stop program execution */
    if (result != CY_RSLT_SUCCESS)
    {
        CY_ASSERT(0);
    }

    result = cy_retarget_io_init(&DEBUG_UART_hal_obj);

    /* HAL retarget_io init failed. Stop program execution */
    if (result != CY_RSLT_SUCCESS)
    {
        CY_ASSERT(0);
```

```
    }

    /* \x1b[2J\x1b[;H - ANSI ESC sequence for clear screen */
    printf("\x1b[2J\x1b[;H");

    printf("****************** "
           "PDL: Hello World! Example "
           "****************** \r\n\n");

    printf("Hello World!!!\r\n\n");
    printf("For more projects, "
           "visit our code examples repositories:\r\n\n");

    printf("https://github.com/Infineon/"
           "Code-Examples-for-ModusToolbox-Software\r\n\n");

    /* Initialize timer to toggle the LED */
    timer_init();

    printf("Press 'Enter' key to pause or "
           "resume blinking the user LED \r\n\r\n");

    for (;;)
    {
        /* Check if 'Enter' key was pressed */
        uart_read_value = Cy_SCB_UART_Get(DEBUG_UART_HW);
        if (uart_read_value == '\r')
        {
            /* Pause LED blinking by stopping the timer */
            if (led_blink_active_flag)
            {
                Cy_TCPWM_TriggerStopOrKill_Single(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM);

                printf("LED blinking paused \r\n");
            }
            else /* Resume LED blinking by starting the timer */
            {
                Cy_TCPWM_TriggerStart_Single(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM);

                printf("LED blinking resumed\r\n");
            }

            /* Move cursor to previous line */
            printf("\x1b[1F");

            led_blink_active_flag ^= 1;
        }

        /* Check if timer elapsed (interrupt fired) and toggle the LED */
        if (timer_interrupt_flag)
        {
            /* Clear the flag */
            timer_interrupt_flag = false;
```

```
            /* Invert the USER LED state */
            Cy_GPIO_Inv(CYBSP_USER_LED_PORT, CYBSP_USER_LED_PIN);
        }
    }
}

/*******************************************************************************
* Function Name: timer_init
********************************************************************************
* Summary:
* This function creates and configures a Timer object. The timer ticks
* continuously and produces a periodic interrupt on every terminal count
* event. The period is configured by Device Configurator. Without any changes,
* this application is designed to produce an interrupt every 1 second.
*
* Parameters:
*  none
*
*******************************************************************************/
void timer_init(void)
{
    /*TCPWM Counter Mode initial*/
    if (CY_TCPWM_SUCCESS != Cy_TCPWM_Counter_Init(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM,
&TCPWM_COUNTER_config))
    {
        CY_ASSERT(0);
    }

    /* Enable the initialized counter */
    Cy_TCPWM_Counter_Enable(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM);

    /* Configure GPIO interrupt */
    Cy_TCPWM_SetInterruptMask(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM, CY_GPIO_INTR_EN_MASK);

    /* Configure CM4+ CPU GPIO interrupt vector for Port 0 */
    Cy_SysInt_Init(&intrCfg1, isr_timer);
    NVIC_EnableIRQ(TCPWM_COUNTER_IRQ);

    /* Start the counter */
    Cy_TCPWM_TriggerStart_Single(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM);
}

/*******************************************************************************
 * Function Name: isr_timer
 ********************************************************************************
 * Summary:
 * This is the interrupt handler function for the timer interrupt.
 *
 * Parameters:
 *  none
 *
 *******************************************************************************/
```

```
void isr_timer(void)
{
    uint32_t interrupts = Cy_TCPWM_GetInterruptStatusMasked(TCPWM_COUNTER_HW,
TCPWM_COUNTER_NUM);

    /* Clear the interrupt */
    Cy_TCPWM_ClearInterrupt(TCPWM_COUNTER_HW, TCPWM_COUNTER_NUM, interrupts);

    if (0UL != (CY_TCPWM_INT_ON_TC & interrupts))
    {
        /* Set the interrupt flag and process it from the main while(1) loop */
        timer_interrupt_flag = true;
    }
}

/* [] END OF FILE */
```

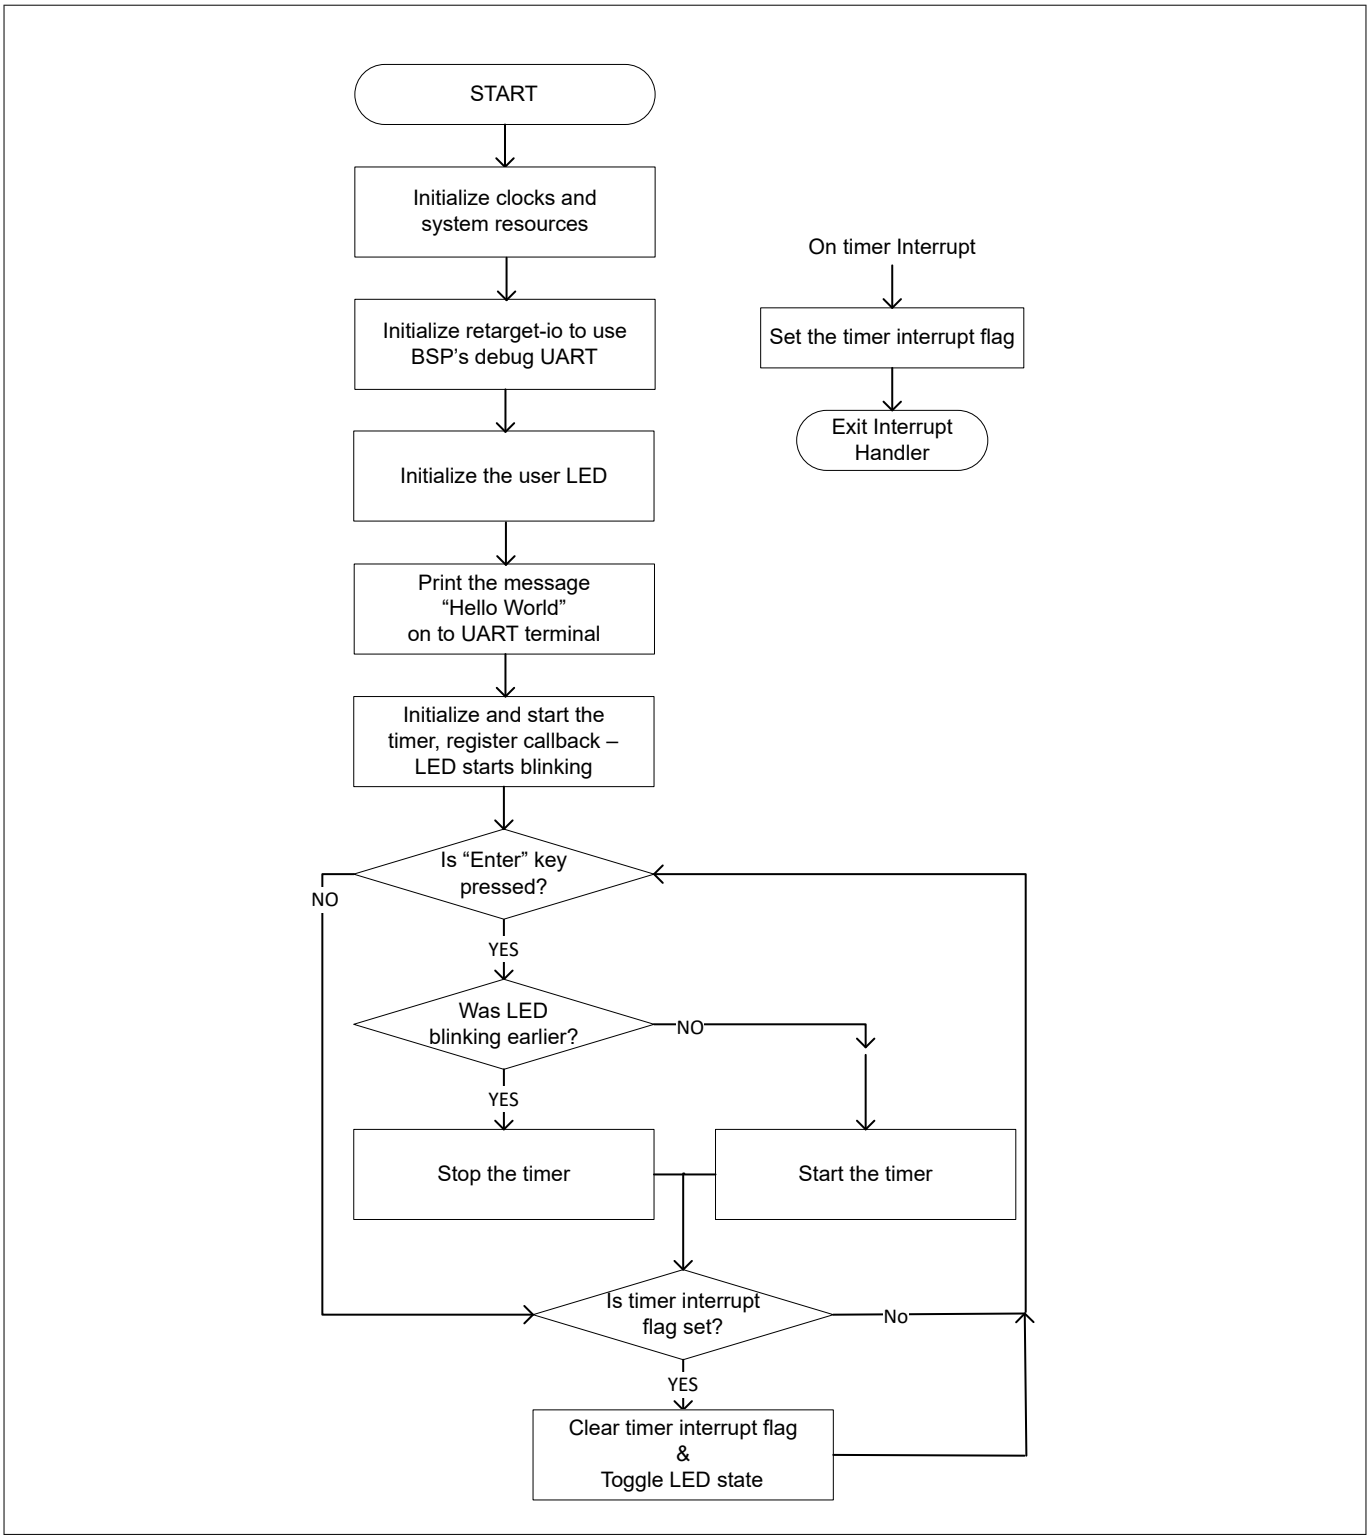


Figure 13 Firmware flowchart

This completes the summary of how the firmware works in the code example. Explore the source files for a deeper understanding.

5.4.1.3 Build the application

This section shows how to build the application.

1. Select the application project in the **Project Explorer** view
2. Click the **Build Project** shortcut under the **Hello_World** group in the **Quick Panel**

   It selects the build configuration from the Makefile and compiles/links all projects that constitute the application. By default, Debug configurations are selected.
3. The **Console view** lists the results of the build operation, as Figure 14 shows

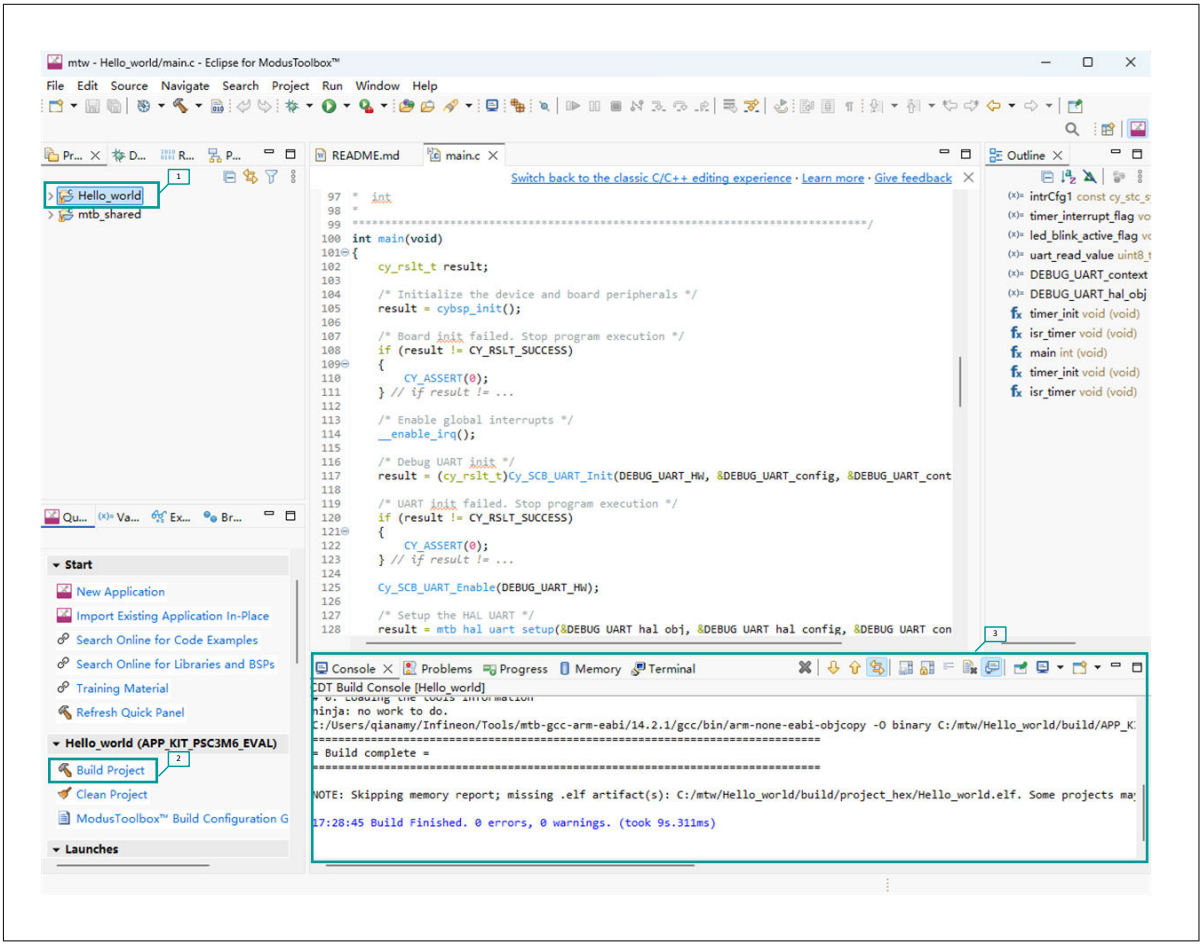


Figure 14 Build the application

If you encounter errors, revisit earlier steps to ensure that you completed all the required tasks.

***Note**: You can also use the command-line interface (CLI) to build the application. See the **Build system** section in the ModusToolbox™ tools package user guide. This document is located in the `/docs_<version>/` folder in the ModusToolbox™ installation.*

5.4.1.4 Program the device

This section shows how to program the PSC3M/P6 MCU.

ModusToolbox™ software uses the OpenOCD protocol to program and debug applications on PSC3M/P6 MCU on the evaluation kit.

As the evaluation kit is with a built-in J-Link programmer, connect the board to your computer using the provided USB cable.

***Note**: Follow below steps to use J-Link debugger:*

1. *Download and install the latest J-Link Software (PSC3M/P6 devices require J-Link version 9.68 or later) and Documentation pack from https://www.segger.com/downloads/jlink/*
2. *Add the J-Link installation folder to your environment variables using the variable name "MTB_JLINK_DIR"*

If you are developing on your own hardware, you may need a hardware programmer/debugger, for example, a J-Link or ULinkpro, or MiniProg.

1. Program the application:
   a. Connect to the board
   b. Select the application project and click the **Hello_World Program** shortcut under the **Launches** group in the Quick Panel, as Figure 15 shows. The IDE will select and run the appropriate run configuration. Note that this step will also perform a build if any files have been modified since the last build

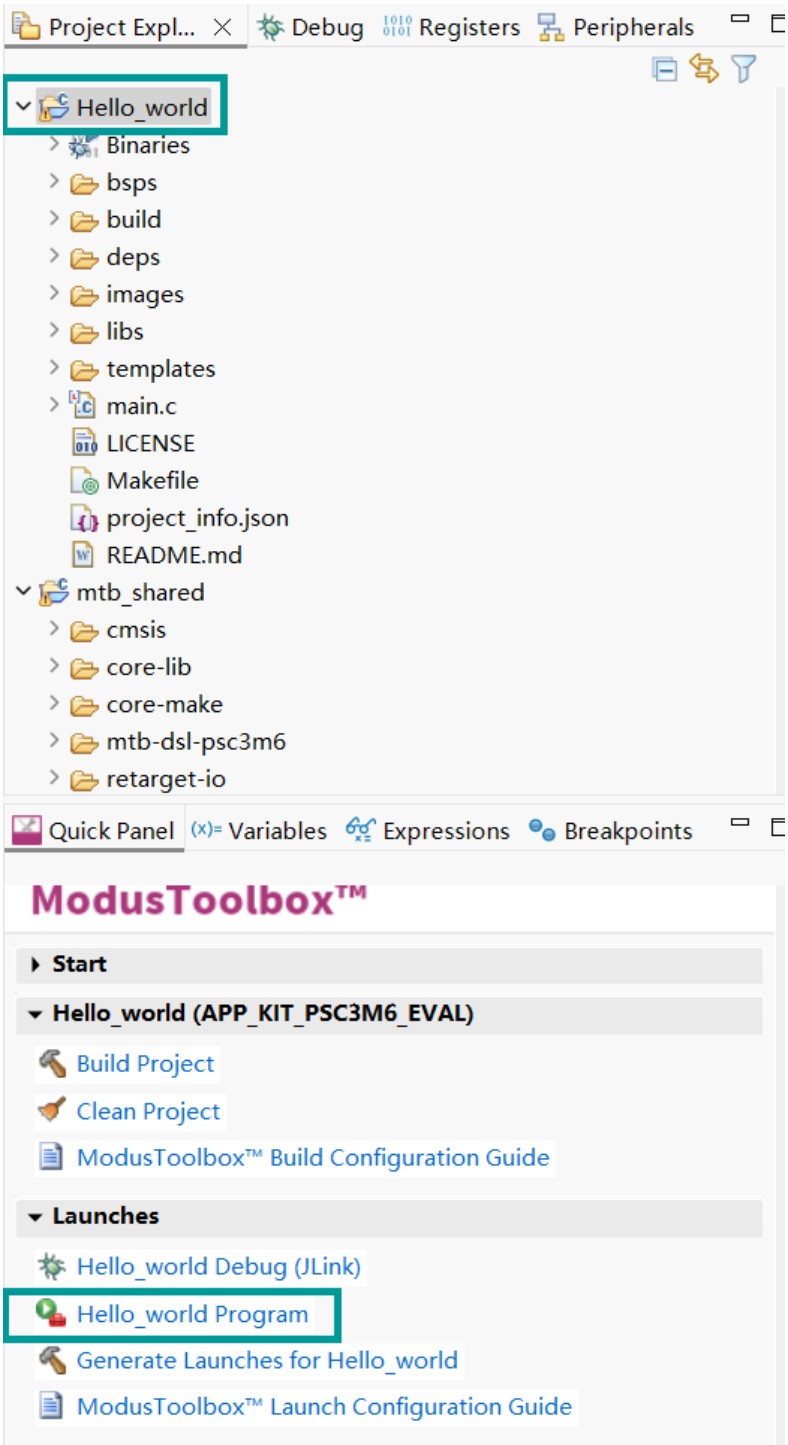


Figure 15 Programming an application to a device

The Console view lists the results of the programming operation, as Figure 16 shows.

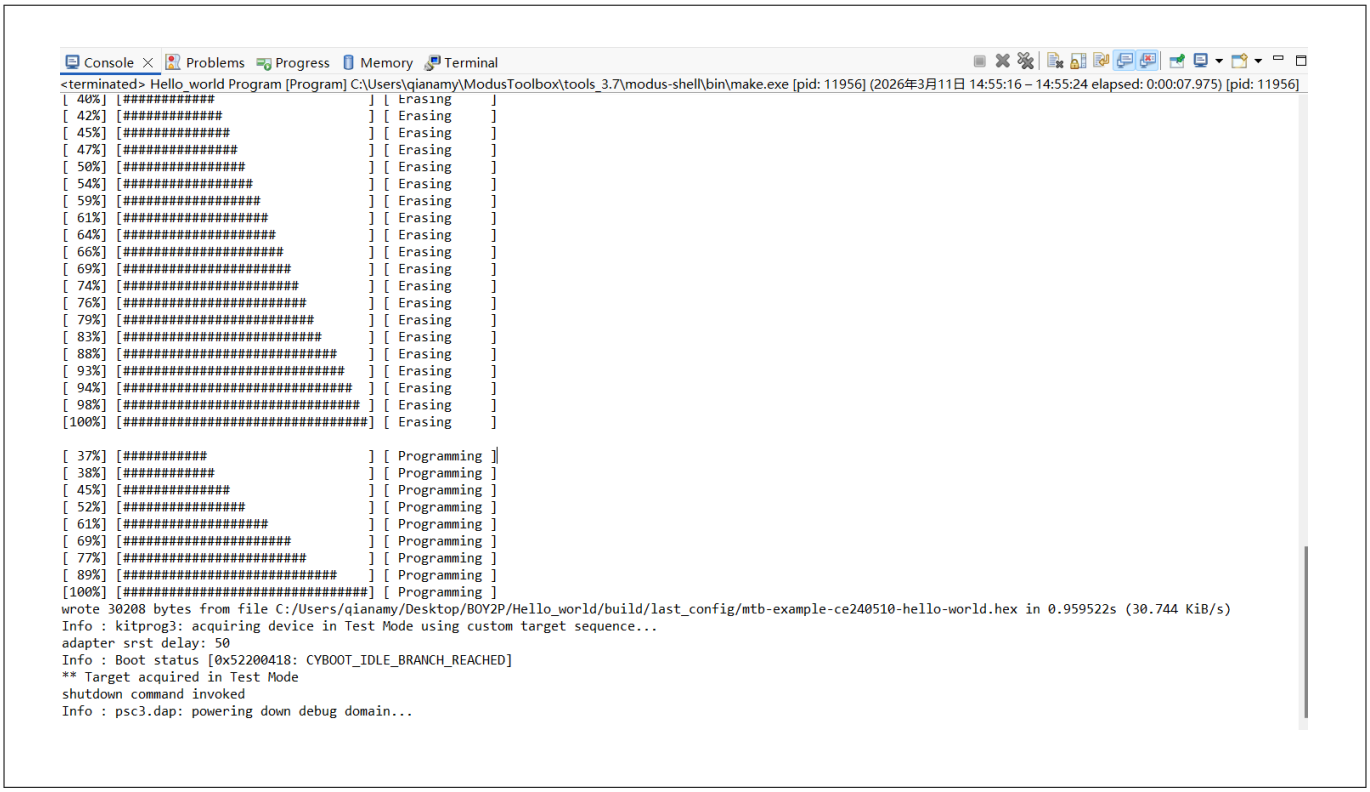


Figure 16 Console – programming results

5.4.1.5 Test your design

This section describes how to test your design.

Follow these steps to observe the output of your design. This note uses Tera Term as the UART terminal emulator to view the results, but you can use any terminal of your choice to view the output.

1. **Select the serial port**

   Launch Tera Term and select the USB-UART COM port as Figure 17 shows. Note that your COM port number may be different.

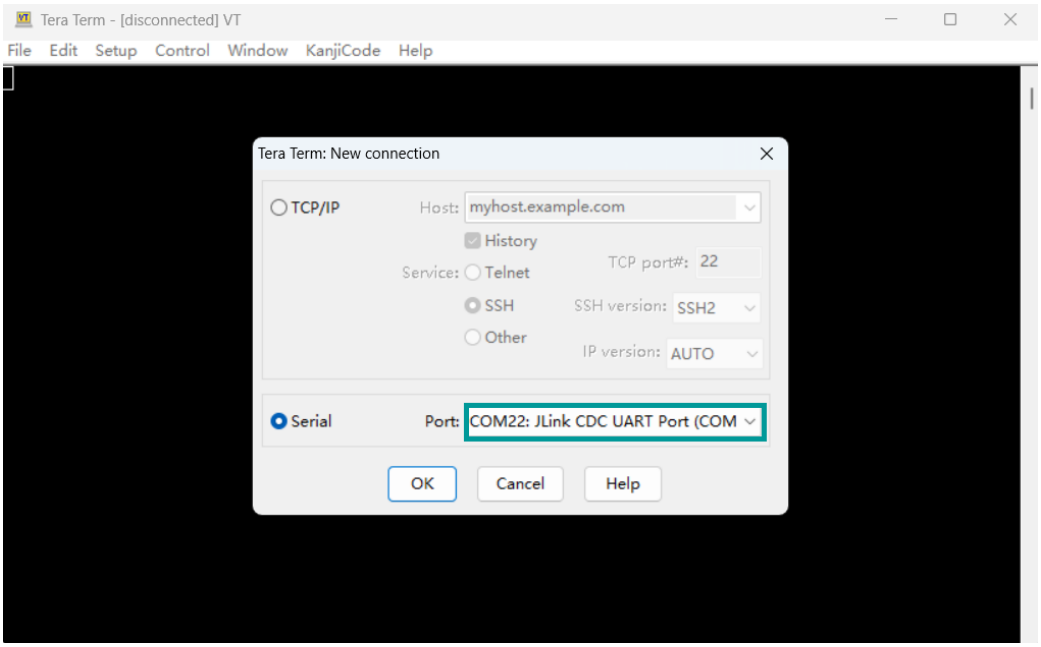


Figure 17 Selecting the Jlink COM port in Tera Term

2. Set the baud rate

Set the baud rate to 115200 under **Setup** > **Serial port** as Figure 18 shows.

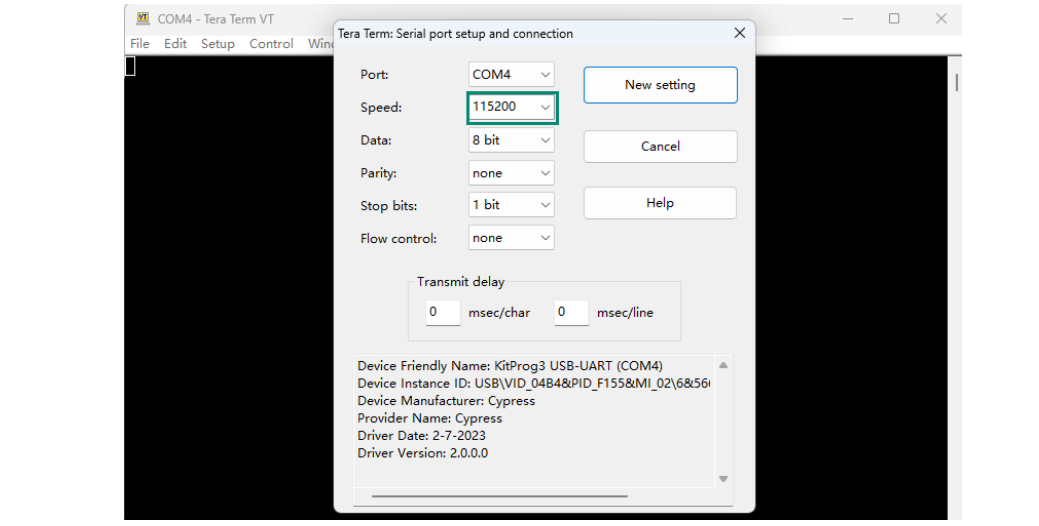


Figure 18 Configuring the baud rate in Tera Term

3. Reset the device

Press the reset switch (**SW1**) on the kit. The message shown in Figure 19 appears on the terminal. The user LED on the kit will start blinking.

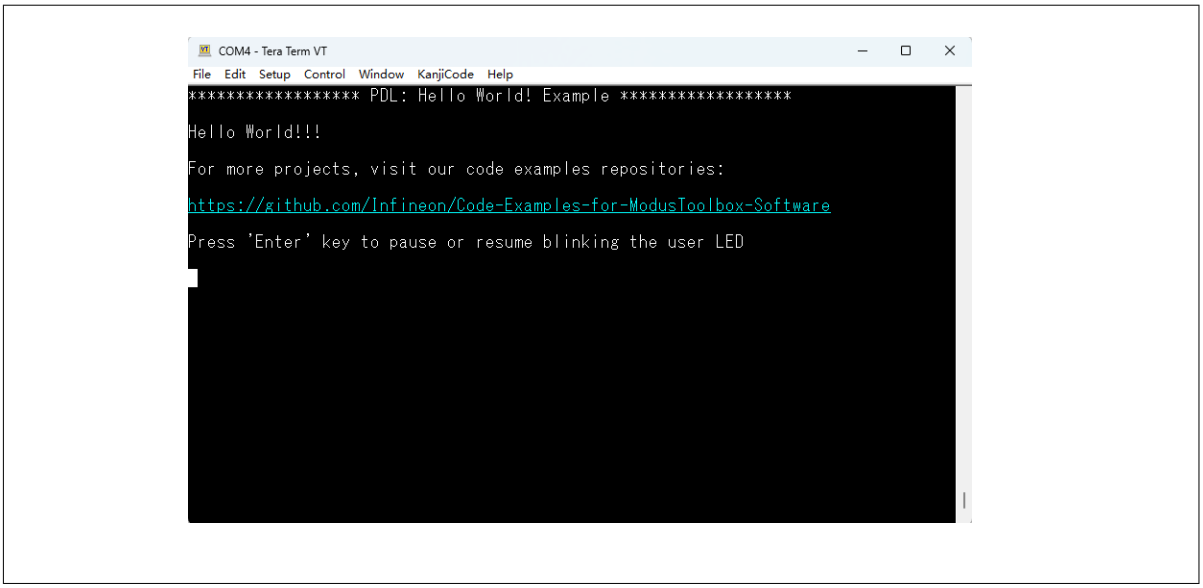


Figure 19 Printed UART message

4. Pause/resume LED blinking functionality

Press the **Enter** key to pause/resume blinking the LED. When the LED blinking is paused, a corresponding message will be displayed on the terminal as shown in Figure 20.

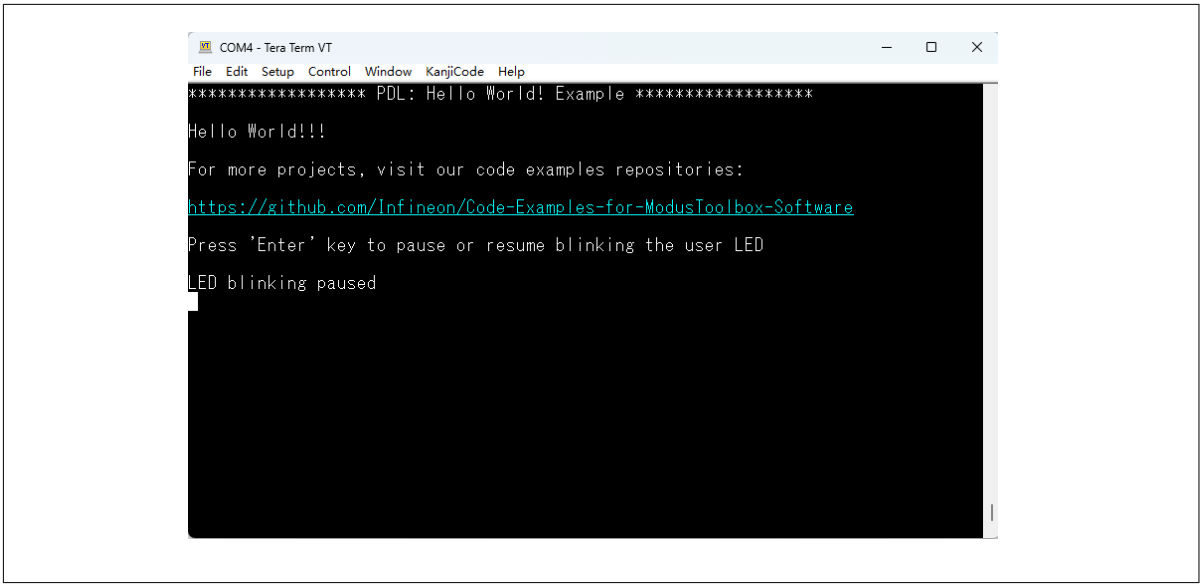


Figure 20 Printed UART message

5.4.1.6 Debugging the application using J-link

PSC3M/P6 kits come with J-Link onboard programmer/debugger. see the J-Link user guide for the details of J-Link.

The Eclipse IDE contains several launch configurations that control various settings for programming the devices and launching the debugger. Depending on the kit and the type of applications you are using, there are various launch configurations available. One such configuration is the J-Link launch configuration. Refer to the 'PSOC™ MCU programming/debugging' section in the Eclipse IDE for ModusToolbox™ user guide for more details on the launch configurations.

When an application is created, the tool generates the launch configurations for J-link under **Launches** in the **Quick Panel**. For the PSOC™ Control C3M6 Evaluation Kit, it will generate launch configurations for J-link, as shown in the following figure.

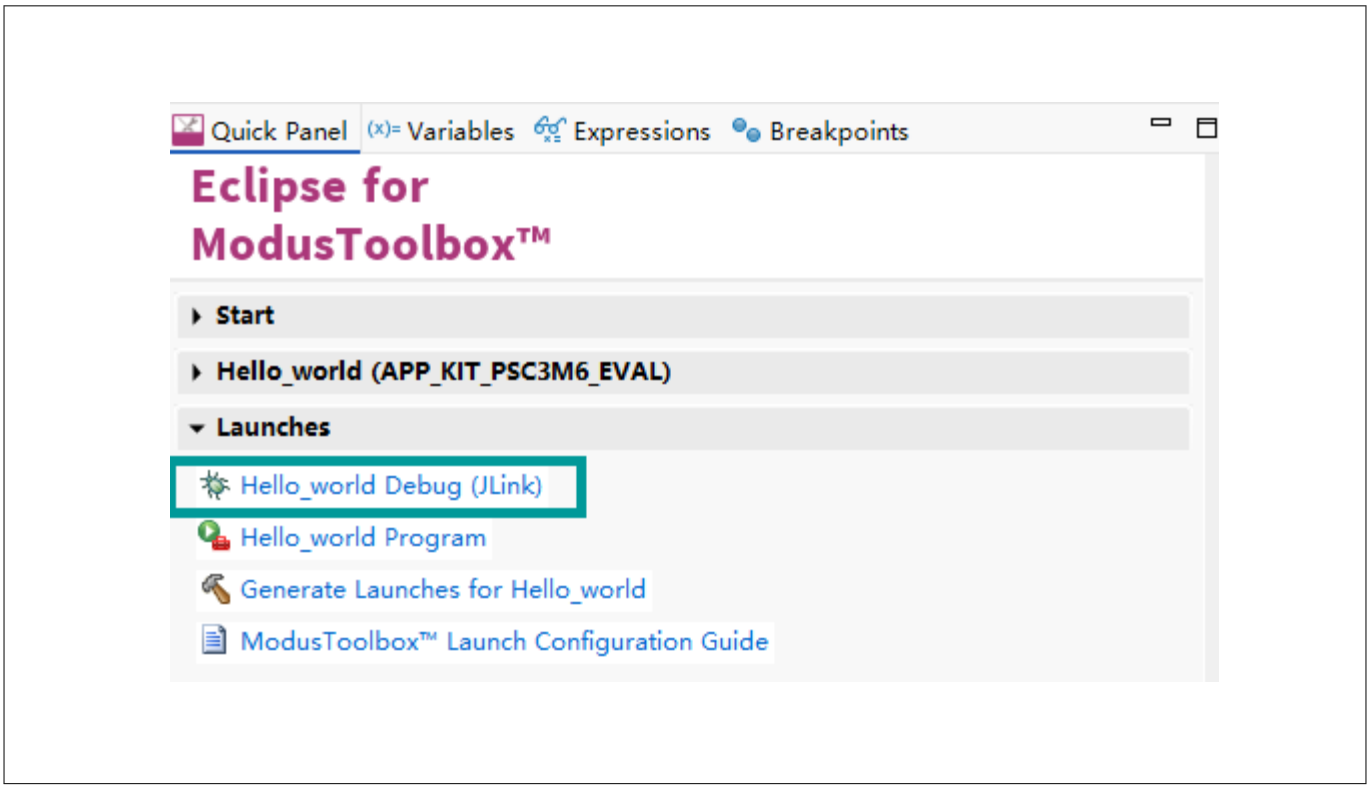


Figure 21 J-Link launch configuration

Connect the device to the host machine and click the **Hello_World Debug (Jlink)** launch to start debugging, as shown in Figure 21. Once the debugging starts, the execution halts at the `main()` function, and the user can start debugging from the start of `main()` as shown in the following figure.

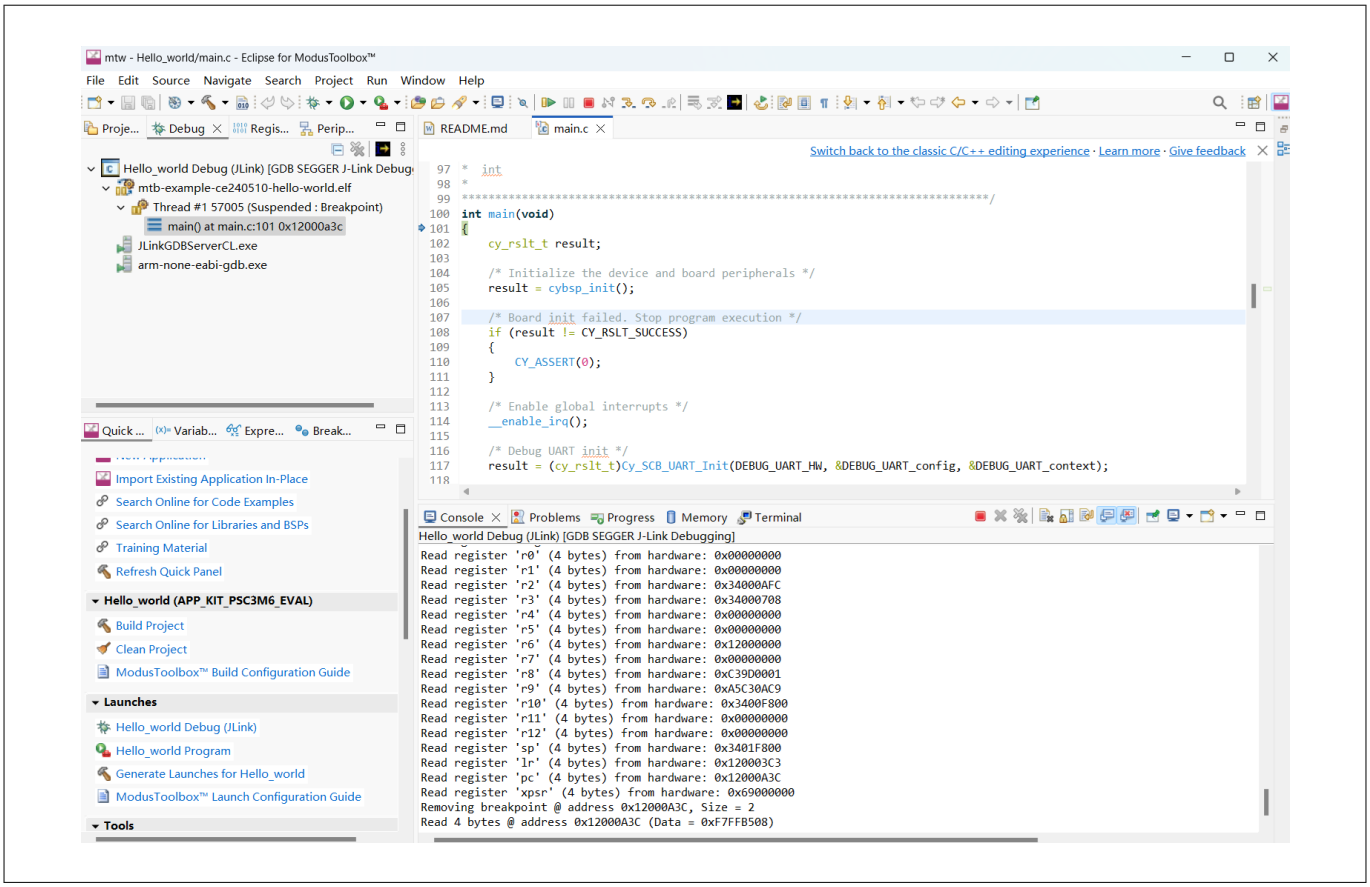


Figure 22 Debug main()

5.4.2 Visual Studio Code (VS Code) for ModusToolbox™

Refer to the Visual Studio Code for ModusToolbox™ user guide for creating a new application on VS Code.

5.4.3 IAR Embedded Workbench for ModusToolbox™

Refer to the IAR Embedded Workbench for ModusToolbox™ user guide for creating a new application on IAR.

5.4.4 Keil µVision for ModusToolbox™

Refer to the Keil µVision for ModusToolbox™ user guide for creating a new application on Keil uVision.

6 Summary

This application note explored the PSC3M/P6 device architecture and the associated development tools. PSC3M/P6 is a truly programmable embedded system-on-chip with configurable analog and digital peripheral functions, memory, and a powerful processor on a chip. The integrated features and low-power modes make PSC3M/P6 an ideal choice for industrial drives, smart appliances, power stage converters, and other related applications.

References

For a complete and up-to-date list of PSC3M/P6 code examples, visit Infineon GitHub page. For additional PSC3M/P6-related documents, visit PSC3M/P6 product webpage.

Table 3 General and system-level application notes

Document	Document name
AN242396	Hardware design guidelines for PSOC™ Control C3M/P6
Kit user guides	
002-42834	PSOC™ Control C3M6 (KIT_PSC3M6_EVAL) Evaluation Kit user guide
002-43141	KIT_PSC3M6_CC1 PSOC™ Control C3M6 Digital Power Control Card Kit guide
Security	
AN240106	Getting started with PSOC™ Control C3 security
Datasheet	
002-42056	PSOC™ Control C3M/P6 Datasheet
Reference Manuals	
002-42262	PSOC™ Control C3M/P6 MCU architecture reference manual
002-42706	PSOC™ Control C3M/P6 registers reference manual

Table 4 ModusToolbox™

ModusToolbox™ tools package installation guide
ModusToolbox™ tools package release notes
ModusToolbox™ tools package quick start guide
ModusToolbox™ tools package user guide
Eclipse IDE for ModusToolbox™ user guide
Visual Studio Code for ModusToolbox™ user guide
Keil µVision for ModusToolbox™ user guide
IAR Embedded Workbench for ModusToolbox™ user guide

Glossary

This section lists the most commonly used terms that you might encounter while working with PSOC™ family of devices.

- Board support package (BSP): A BSP is the layer of firmware containing board-specific drivers and other functions. The board support package is a set of libraries that provide firmware APIs to initialize the board and provide access to board level peripherals.
- **KitProg**: The KitProg is an onboard programmer/debugger with USB-I2C and USB-to-UART bridge functionality. The KitProg is integrated onto most PSOC™ development kits.
- MiniProg3/MiniProg4: Programming hardware for development that is used to program PSOC™ devices on your custom board or PSOC™ development kits that do not support a built-in programmer.
- **Personality**: A personality expresses the configurability of a resource for a functionality. For example, the SCB resource can be configured to be an UART, SPI, or I2C personalities.
- Middleware: Middleware is a set of firmware modules that provide specific capabilities to an application. Some middleware may provide network protocols (e.g., CAN FD), and some may provide high-level software interfaces to device features (e.g., TCPWM, HPPASS).
- ModusToolbox™: An Eclipse-based embedded design platform for embedded systems designers that provides a single, coherent, and familiar design experience, combining the industry's most deployed Wi-Fi and Bluetooth® technologies, and the lowest power, most flexible MCUs with best-in-class sensing.
- Peripheral driver library (PDL): The PDL simplifies software development for the PSC3M/P6 architecture. The PDL reduces the need to understand register usage and bit structures, so easing software development for the extensive set of peripherals available.

Revision history

Document revision	Date	Description of changes
**	2026-05-05	Initial release
*A	2026-09-01	Nomenclature update Web release

Trademarks

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Infineon is under license.

PSOC™, formerly known as PSoC™, is a trademark of Infineon Technologies. Any references to PSoC™ in this document or others shall be deemed to refer to PSOC™.

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2026-09-01

Published by

Infineon Technologies AG

81726 Munich, Germany

© 2026 Infineon Technologies AG

All Rights Reserved.

Do you have a question about any aspect of this document?

Email: erratum@infineon.com

Document reference
IFX-ept1769595945492

Important notice

Products which may also include samples and may be comprised of hardware or software or both ("Product(s)") are sold or provided and delivered by Infineon Technologies AG and its affiliates ("Infineon") subject to the terms and conditions of the frame supply contract or other written agreement(s) executed by a customer and Infineon or, in the absence of the foregoing, the applicable Sales Conditions of Infineon. General terms and conditions of a customer or deviations from applicable Sales Conditions of Infineon shall only be binding for Infineon if and to the extent Infineon has given its express written consent.

For the avoidance of doubt, Infineon disclaims all warranties of non-infringement of third-party rights and implied warranties such as warranties of fitness for a specific use/purpose or merchantability. Infineon shall not be responsible for any information with respect to samples, the application or customer's specific use of any Product or for any examples or typical values given in this document.

If this document is marked as 'Preliminary', 'Target', 'Draft' or 'Proposal', Infineon reserves the right to change all information given in this document at any time without notice. Subject to the development and release of a Product for series supply by Infineon, the technical specifications of the Product are set forth in the relevant datasheet provided by Infineon without such marking.

The data contained in this document is exclusively intended for technically qualified and skilled customer representatives. It is the responsibility of the customer to evaluate the suitability of the Product for the intended application and the customer's specific use and to verify all relevant technical data contained in this document in the intended application and the customer's specific use. The customer is responsible for properly designing, programming, and testing the functionality and safety of the intended application, as well as complying with any legal requirements related to its use.

Unless otherwise explicitly approved by Infineon, Products may not be used in any application where a failure of the Products or any consequences of the use thereof can reasonably be expected to result in personal injury.

However, the foregoing shall not prevent the customer from using any Product in such fields of use that Infineon has explicitly designed and sold it for, provided that the overall responsibility for the application lies with the customer. Infineon expressly reserves the right to use its content for commercial text and data mining (TDM) according to applicable laws, e.g. Section 44b of the German Copyright Act (UrhG). If the Product includes security features:

Because no computing device can be absolutely secure, and despite security measures implemented in the Product, Infineon does not guarantee that the Product will be free from intrusion, data theft or loss, or other breaches ("Security Breaches"), and Infineon shall have no liability arising out of any Security Breaches.

If this document includes or references software:

The software is owned by Infineon under the intellectual property laws and treaties of the United States, Germany, and other countries worldwide. All rights reserved. Therefore, you may use the software only as provided in the software license agreement accompanying the software.

If no software license agreement applies, Infineon hereby grants you a personal, non-exclusive, non-transferable license (without the right to sublicense) under its intellectual property rights in the software (a) for software provided in source code form, to modify and reproduce the software solely for use with Infineon hardware products, only internally within your organization, and (b) to distribute the software in binary code form externally to end users, solely for use on Infineon hardware products. Any other use, reproduction, modification, translation, or compilation of the software is prohibited.

For further information on the Product, technology, delivery terms and conditions, and prices, please contact your nearest Infineon office or visit www.infineon.com.