



Package Outline

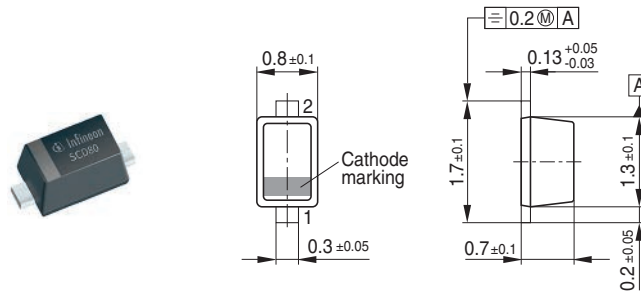


Foot Print

Soldering Type: Reflow Soldering

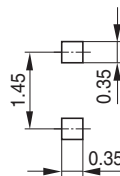

Marking Layout (Example)

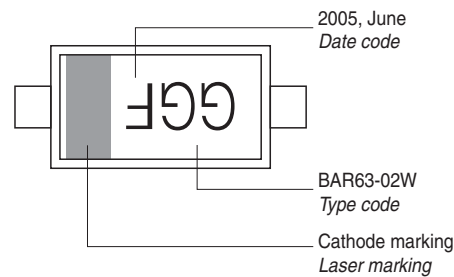

Tape and Reel

Reel \varnothing 180 mm: 3.000 Pieces/Reel
 Reels/Box: 1 x 3.000 = 3.000

Reel \varnothing 180 mm: 8.000 Pieces/Reel (2 mm Pitch)
 Reels/Box: 1 x 8.000 = 8.000

Reel \varnothing 330 mm: 10.000 Pieces/Reel
 Reels/Box: 1 x 10.000 = 10.000

Reel \varnothing 330 mm: 20.000 Pieces/Reel (2 mm Pitch)
 Reels/Box: 1 x 20.000 = 20.000

