

User guide

LITIX Pixel Multi-channel LED driver Z8F80459854

About this document

Scope and purpose

The scope of this user guide is to provide instructions on the use of the TLD7002-16SYS_EVAL board. The TLD7002-16SYS_EVAL is an evaluation platform for the TLD7002-16ES LED driver, which features:

- 16 independent channels set from 5 mA to 76.5 mA
- Power stages can be paralleled for higher currents
- 16 independent 14 bits PWM engines
- UART over CAN interface (HSLI High speed lighting interface)
- OTP (one time programmable) configuration memory

Intended audience

Hardware and Firmware engineers

Evaluation board

This board is to be used during the design-in process for evaluating and measuring characteristic curves, and for checking datasheet specifications.

Note: PCB and auxiliary circuits are NOT optimized for final customer design.

User guide

Important notice



Important notice

"Evaluation Boards and Reference Boards" shall mean products embedded on a printed circuit board (PCB) for demonstration and/or evaluation purposes, which include, without limitation, demonstration, reference and evaluation boards, kits and design (collectively referred to as "Reference Board").

Environmental conditions have been considered in the design of the Evaluation Boards and Reference Boards provided by Infineon Technologies. The design of the Evaluation Boards and Reference Boards has been tested by Infineon Technologies only as described in this document. The design is not qualified in terms of safety requirements, manufacturing and operation over the entire operating temperature range or lifetime.

The Evaluation Boards and Reference Boards provided by Infineon Technologies are subject to functional testing only under typical load conditions. Evaluation Boards and Reference Boards are not subject to the same procedures as regular products regarding returned material analysis (RMA), process change notification (PCN) and product discontinuation (PD).

Evaluation Boards and Reference Boards are not commercialized products, and are solely intended for evaluation and testing purposes. In particular, they shall not be used for reliability testing or production. The Evaluation Boards and Reference Boards may therefore not comply with CE or similar standards (including but not limited to the EMC Directive 2004/EC/108 and the EMC Act) and may not fulfill other requirements of the country in which they are operated by the customer. The customer shall ensure that all Evaluation Boards and Reference Boards will be handled in a way which is compliant with the relevant requirements and standards of the country in which they are operated.

The Evaluation Boards and Reference Boards as well as the information provided in this document are addressed only to qualified and skilled technical staff, for laboratory usage, and shall be used and managed according to the terms and conditions set forth in this document and in other related documentation supplied with the respective Evaluation Board or Reference Board.

It is the responsibility of the customer's technical departments to evaluate the suitability of the Evaluation Boards and Reference Boards for the intended application, and to evaluate the completeness and correctness of the information provided in this document with respect to such application.

The customer is obliged to ensure that the use of the Evaluation Boards and Reference Boards does not cause any harm to persons or third party property.

The Evaluation Boards and Reference Boards and any information in this document is provided "as is" and Infineon Technologies disclaims any warranties, express or implied, including but not limited to warranties of non-infringement of third party rights and implied warranties of fitness for any purpose, or for merchantability.

Infineon Technologies shall not be responsible for any damages resulting from the use of the Evaluation Boards and Reference Boards and/or from any information provided in this document. The customer is obliged to defend, indemnify and hold Infineon Technologies harmless from and against any claims or damages arising out of or resulting from any use thereof.

Infineon Technologies reserves the right to modify this document and/or any information provided herein at any time without further notice.

User guide

Safety precautions



Safety precautions

Note: Please note the following warnings regarding the hazards associated with development systems.

Table 1 **Safety precautions**



Caution:

The device surface of the evaluation or reference board may become hot during testing. Hence, necessary precautions are required while handling the board. Failure to comply may cause injury.

User guide

Table of contents



Table of contents

	About this document	1
	Important notice	2
	Safety precautions	3
	Table of contents	4
1	The board at a glance	
1.1	Getting Started: LITIX™ Pixel Rear Configuration Wizard	6
1.2	Block diagram	7
1.3	Board parameters	7
2	Quick start	8
2.1	Operational modes summary	8
2.2	Fail safe operation	8
2.3	GPINx direct drive control	9
2.4	HSLI bus control	10
2.5	Control with Arduino UNO R3 and demo software sketch	
2.6	Control with Arduino UNO R4 Minima and demo software sketch	12
2.7	Control with uIO-Stick v2 and LITIX™ Configuration Wizard	
2.8	OTP configuration	13
3	System design	
3.1	Schematics	15
3.2	Layout	17
3.3	Bill of material	18
	References	20
	Revision history	21
	Disclaimer	22

TLD7002-16SYS_EVAL board User guide

infineon

1 The board at a glance

1 The board at a glance

TLD7002-16SYS_EVAL consists of one PCB, with 3 snappable sections:

- 1 x CAN transceiver section
- 2 x LED driver, TLD7002-16ES section
- 2 x LED load section

The 5 sections of the PCB can be snapped in order to mimic different system implementation. It is possible to connect the snapped sections by means of wires or 2.54 mm pin headers.

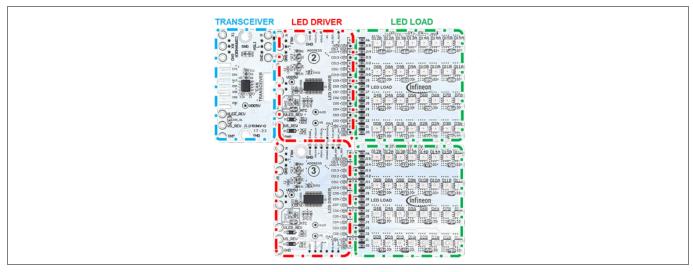


Figure 1 TLD7002-16SYS_EVAL

The two TLD7002-16ES devices in the TLD7002-16SYS_EVAL have a pre-programmed OTP, with addresses 2 and 3 as shown in the PCB silk screen circled numbers. Output current is set to 20 mA. The output current may be increased by emulating a new OTP configuration (see OTP programming application note [3]). The OTP configuration array which was used to program the TLD7002-16SYS_EVAL can be downloaded from the TLD7002-16SYS_EVAL website [4].



1 The board at a glance

1.1 Getting Started: LITIX™ Pixel Rear Configuration Wizard

- Download and install Infineon Developer Center (IDC) Launcher
- Install and run the LITIX™ Pixel Rear Configuration Wizard application in the IDC
- Run the TLD7002-16ES "HSLI control" to command the evaluation board
- Run the TLD7002-16ES "OTP config" to emulate a different OTP memory of the TLD7002-16ES device

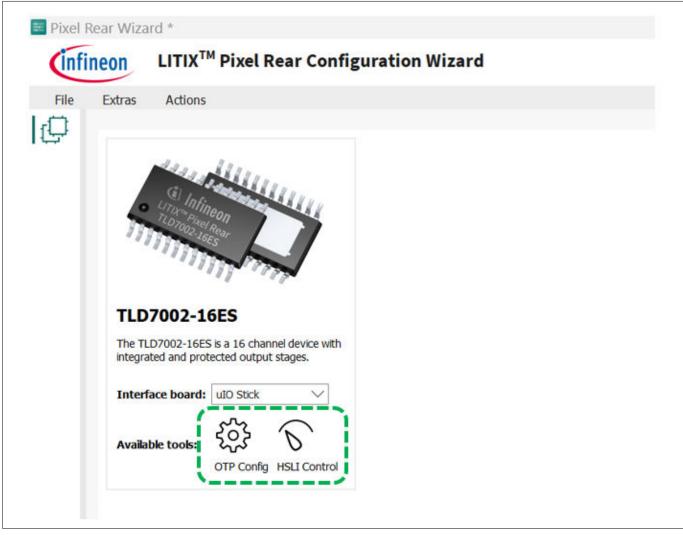


Figure 2 LITIX™ Pixel Rear Configuration Wizard Device selection page

User guide

1 The board at a glance



Block diagram 1.2

Below, find the block diagram of the TLD7002-16SYS_EVAL.

Microcontroller and power supply are not included Note:

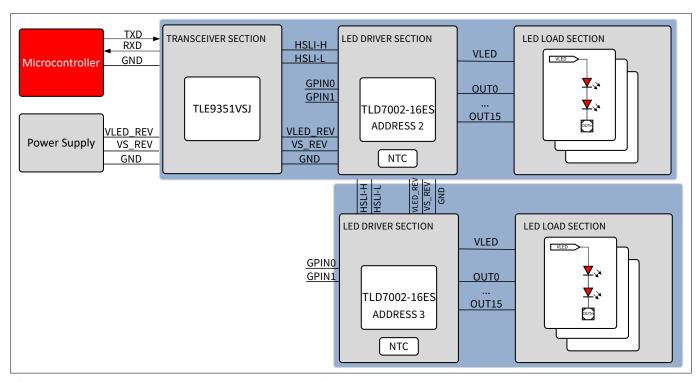


Figure 3 TLD7002-16SYS_EVAL block diagram

1.3 **Board parameters**

Table 2 **Board parameters**

Parameter	Symbol	Values			Unit	Note or test condition
		Min.	Тур.	Max.		
Input voltage TLD7002-16ES	V _{S_REV}	6	7	28	V	Reverse protection diode is present and will decrease the effective $V_{\rm S}$ voltage approximately 200 mV below $V_{\rm S_REV}$
Input voltage LED	V _{LED_REV}	6	7	20 35	V	$V_{\rm LED}$ ADC reading voltage has 20 V full scale, higher voltage will lead to erroneous LED forward voltage reading. The TLD7002-16ES is a linear regulator. Thermal derating may occur for high $V_{\rm LED}$ and high duty cycle applied
GPINx points b		Able to use up to 20 V at the GPINx test points because of the limiting resistor present in the PCB				
Output current	I _{OUTn}	5.6	20	76.5	mA	Output current OTP setting is 20 mA for the TLD7002-16SYS_EVAL

2 Quick start



Quick start 2

2.1 **Operational modes summary**

The TLD7002-16SYS EVAL can operate in three different manners.

- Fail safe operation
- GPINx direct drive control
- HSLI bus control

2.2 Fail safe operation

The TLD7002-16ES devices on the TLD7002-16SYS_EVAL are programmed watchdog timeout set to 2 s. If within 2 seconds from the board power up, no HSLI communication is received by the TLD7002-16ES, then the fail safe configuration will turn on as shown in figure below.

To check the device in Fail safe operation:

- Close JVS_VL in order to use a single power supply (or use 2 power supplies for VS and VLED_REV) 1.
- 2. Connect the GND at the - terminal of a 6 V to 20 V 500 mA power supply
- 3. Connect VS_REV to the + terminal of the power supply
- 4. The OTP programmed fail safe configuration will turn on after 2 s as shown in figure below

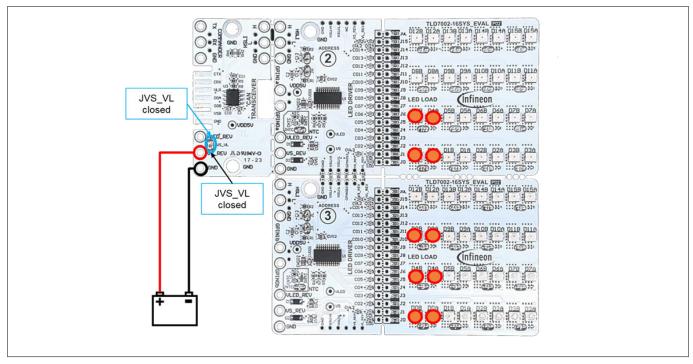


Figure 4 TLD7002-16SYS_EVAL fail safe operation with 1 supply only

TLD7002-16SYS EVAL board **User guide**

nfineon

2 Quick start

2.3 **GPINx direct drive control**

- Close JVS VL to use a single power supply (or use 2 power supplies for VS and VLED REV) 1.
- Connect the GND at the terminal of a 6 V to 20 V 500 m A power supply 2.
- 3. Connect VS REV to the + terminal of the power supply
- 4. Connect GPIN0 or GPIN1 test points to VDD5V test point directly to VBAT or to the VDD test point
- 5. The respective GPIN0 or GPIN1 OTP configuration, pre-written in the OTP, will light up

Note that in addition, the fail safe configuration remains active, unless correct HSLI messages are received from the TLD7002-16 kicking the watchdog.

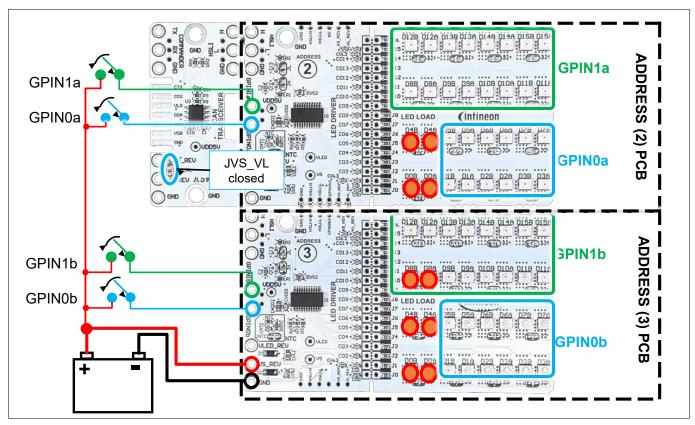


Figure 5 TLD7002-16SYS_EVAL GPINO direct control with 1 supply only

GPIN are not intended for PWM transfer to the LED, but only as activators of the output, and the output will produce a pre-defined duty cycle, which is stored on the OTP configuration.

Which LED are turned on when a GPIN is "logic high" are stored in the GPIN0 MAP and GPIN1 MAP OTP registers, Which duty cycle is produced at the outputs (mapped to that GPIN) when the GPINx "HIGH" is applied, is the one stored in DC0_OUTi and DC1_OUTi registers.

GPINx have 2 options for control:

- PWM decoding enabled: can use an Input PWM Signal to either Enable or Disable LED output
 - Interprets an input PWM Duty Cycle < 25% as OFF, Disabling GPINx mapped outputs
 - Interprets an input PWM Duty Cycle > 75% as ON, Enabling GPINx mapped outputs
- PWM decoding disabled: can use static Input HIGH or LOW Signal to Enable or Disable LED outputs
 - HIGH → Disabling GPINx mapped outputs
 - LOW → Enabling GPINx mapped outputs

If PWM decoding is disabled on the OTP configuration; which is the case for the TLD7002-16SYS_EVAL, and the user applies a duty cycle at the GPINO, this may result in a flicker. The flicker is as a result of the device sampling the GPIN0 in random points of the PWM input signal, and therefore it is possible that the output turns ON (with duty specified on DC0_OUTi) or outputs turn OFF.

User guide

2 Quick start



2.4 **HSLI** bus control

The TLD 7002-16ES can be connected to an external microcontroller UART. The TLD7002-16ES device drivers are available on the TLD7002-16ES webpage [2].

- Close JVS_VL to use a single power supply 1.
- Connect the GND at the terminal of a 6 V to 20 V 1 A power supply 2.
- 3. Connect VS_REV to the + terminal of the power supply
- Connect GND, RX, TX COMMANDER test points to a commander µC GND, RX(UART), TX(UART) 4.
- Write and Execute on the μC a software which controls two TLD7002-16 at addresses 2 and 3 5.
- If the sequence of commands is correct, the TLD7002-16SYS_EVAL will exit the fail safe and follow 6. commands received from the HSLI bus

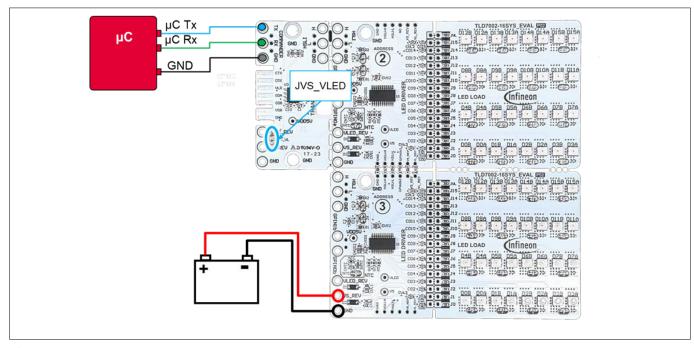


Figure 6 TLD7002-16SYS_EVAL µC control

oser guide

infineon

2 Quick start

2.5 Control with Arduino UNO R3 and demo software sketch

The LITIX™ TLD7002-16ES_software_examples is an example of usage of the TLD7002-16ES device drivers and TLD7002-16 functional layer. Several examples are present to demonstrate all the features of the TLD7002-16ES devices, from a simple ADC reading to a complete light system implementations with diagnostic features (TLD7002_16SW_example60_LightSysFull).

- **1.** Download the "LITIX™ TLD7002-16ES_software_examples" [4] and select the preferred sketch
- 2. Download and open the Arduino IDE [1]
- 3. Connect the Arduino UNO R3 board to the PC with a USB cable
- **4.** Upload the TLD7002-16SYS_EVAL sketch in the Arduino UNO (D0 pin must be disconnected)
- **5.** Close JVS_VL in order to use a single power supply
- **6.** Connect the TLD7002-16SYS_EVAL to the Arduino UNO with jumper wires as shown in the figure below
 - **a.** GPIN0a and GPIN0b connections are optional, use them if OTP emulation is needed
- 7. Connect the GND at the (-) terminal of a 6 V to 20 V 1 A power supply
- **8.** Connect VS_REV to the + terminal of the power supply
- **9.** The example will now run (e.g. TLD7002_16SW_example60 will show moving lights)
- **10.** Optional: open Tools > Serial Monitor and set the speed to 230400 bps to see diagnostic prints (e.g. ADC readings)

Note:

It is not possible to upload a sketch to the Arduino UNO R3 if the RX commander Jumper wire is connected to the Arduino. Therefore, when a new sketch is uploaded, the RX commander wire must be momentarily disconnected from the Arduino D0 pin.

Note:

Arduino UNO R3 has limited memory; when memory exceeds approximately 85% during compilations, unexpected behavior can occur. It is recommended to use Arduino UNO R4 to run the LITIX™ TLD7002-16ES_software_examples.

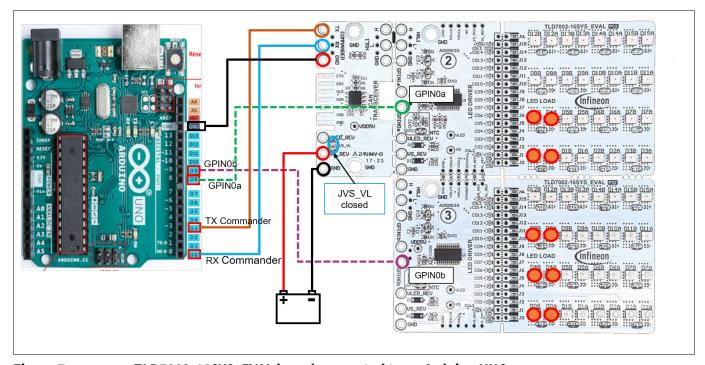


Figure 7 TLD7002-16SYS_EVAL board connected to an Arduino UNO

2 Quick start



2.6 Control with Arduino UNO R4 Minima and demo software sketch

The LITIX™ TLD7002-16ES_software_examples is an example of usage of the TLD7002-16ES device drivers and TLD7002-16 functional layer. Several examples are present to demonstrate all the features of the TLD7002-16ES devices, from a simple ADC reading to a complete light system implementations with diagnostic features (TLD7002_16SW_example60_LightSysFull).

- **1.** Download the "LITIX™ TLD7002-16ES_software_examples" [4] and select the preferred sketch
- **2.** Download and open the Arduino IDE [1]
- 3. Connect the Arduino UNO R4 board to the PC with a USB cable
- **4.** Upload the TLD7002-16SYS_EVAL sketch in the Arduino UNO (D0 pin must be disconnected)
- **5.** Close JVS_VL in order to use a single power supply
- **6.** Connect the TLD7002-16SYS_EVAL to the Arduino UNO with jumper wires as shown in the figure below
 - **a.** GPIN0a and GPIN0b connections are optional, use them if OTP emulation is needed
- 7. Connect the GND at the (-) terminal of a 6 V to 20 V 1 A power supply
- **8.** Connect VS_REV to the + terminal of the power supply
- **9.** The example will now run (e.g. TLD7002_16SW_example60 will show moving lights)
- **10.** Optional: open Tools > Serial Monitor and set the speed to 230400 bps to see diagnostic prints (e.g. ADC readings)

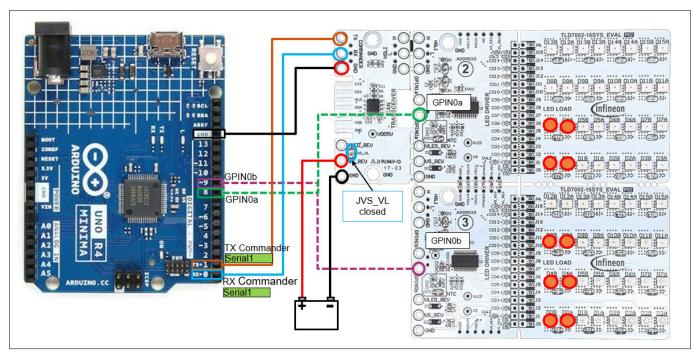


Figure 8 TLD7002-16SYS_EVAL connected to an Arduino UNO R4 Minima

2 Quick start



Control with uIO-Stick v2 and LITIX™ Configuration Wizard 2.7

Connect some jumper wires to the uIO-Stick v2 and the TLD7002-16SSYS EVAL HSLI header as shown in the picture below in order to control the TLD7002-16 with the uIO-Stick v2 and the LITIX™ Pixel Rear Configuration Wizard PC graphical user interface (GUI). See detail about the LITIX™ wizard in chapter Getting Started: LITIX™ Pixel Rear Configuration Wizard.

The Logic analyzer with the HSLI protocol analyzer is optional for this configuration, but it is very handy to analyze the HSLI frames and understand the HSLI protocol.

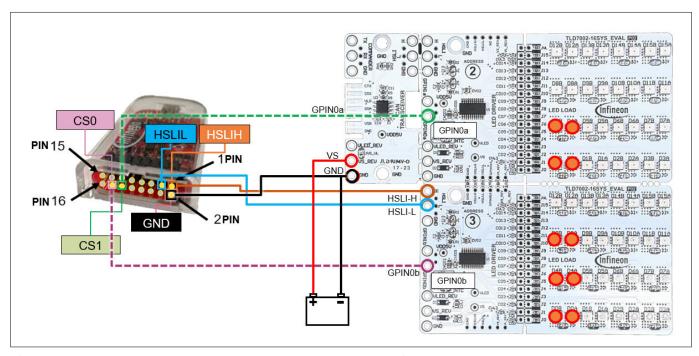


Figure 9 TLD7002-16SYS_EVAL connected to ulO-Stick v2

Connect the uIO-Stick v2 to the PC with a micro USB cable and open the LITIX™ Pixel Rear Configuration Wizard.

2.8 **OTP** configuration

The TLD7002-16SYS EVAL comes with pre-written OTP memory on the two TLD7002-16ES devices. In case a different OTP configuration is required, (e.g. GPINx set as analog inputs, increased LED current), it is possible to emulate a new OTP configuration in the TLD7002-16ES directly from the Arduino code by using the OTPemuComplete() function.

The OTP configuration files, pre-written in the TLD7002-16SYS EVAL LED drivers, are provided on the TLD7002-16_ES website [4]. The OTP wizard can be used to read the OTP configuration files. The OTP wizard tool (see Figure 10) can used to read and interpret the .ocfg configuration files. The tool can be installed from the Infineon developer center [5].

The TLD7002-16SYS_EVAL sketch program can be used to emulate the OTP, because the OTP emulation function is implemented in the code - OTPemuComplete function present in file TLD7002FuncLayer.c. See TLD7002-16 OTP programming application note [3] for further details on OTP emulation and programming.

User guide





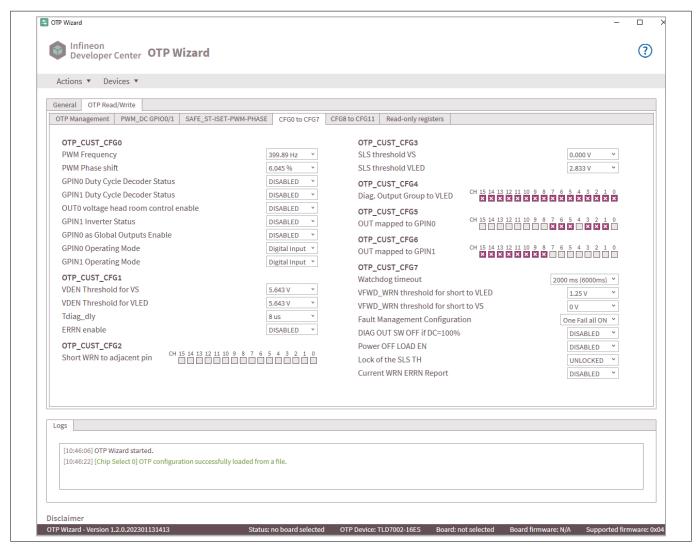


Figure 10 OTP Wizard

User guide



3 System design

System design 3

Schematics 3.1

3 System design



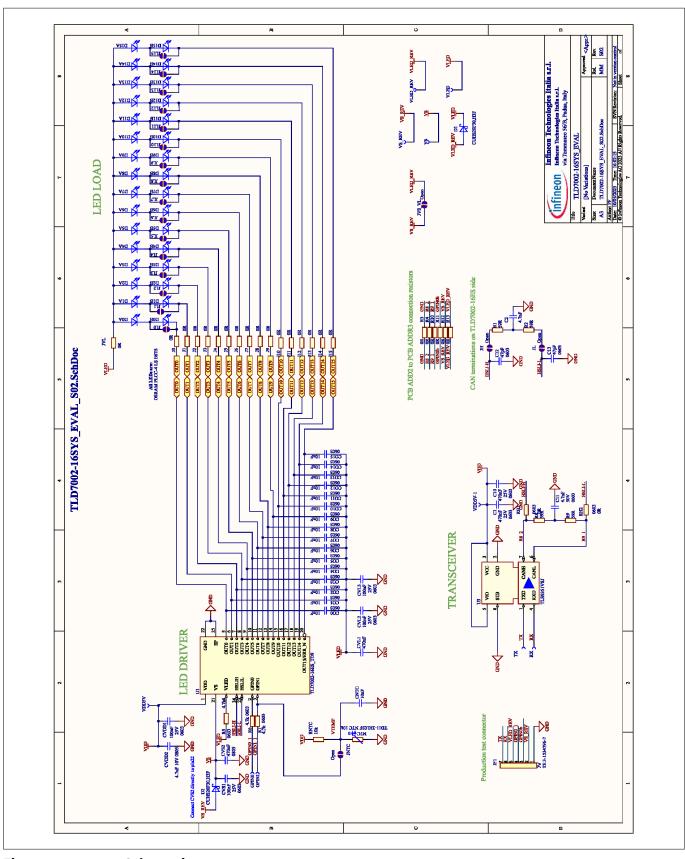


Figure 11 **Schematic**



3 System design

3.2 Layout

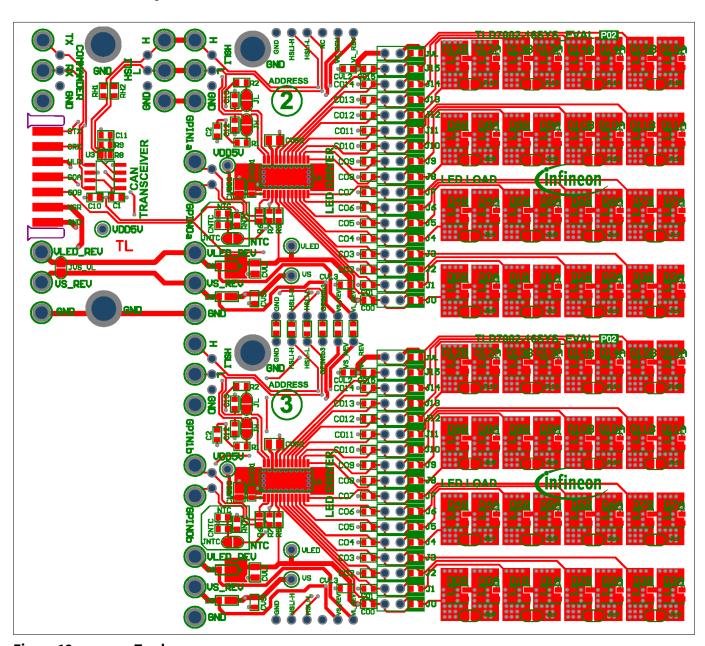


Figure 12 Top layer

User guide

3 System design



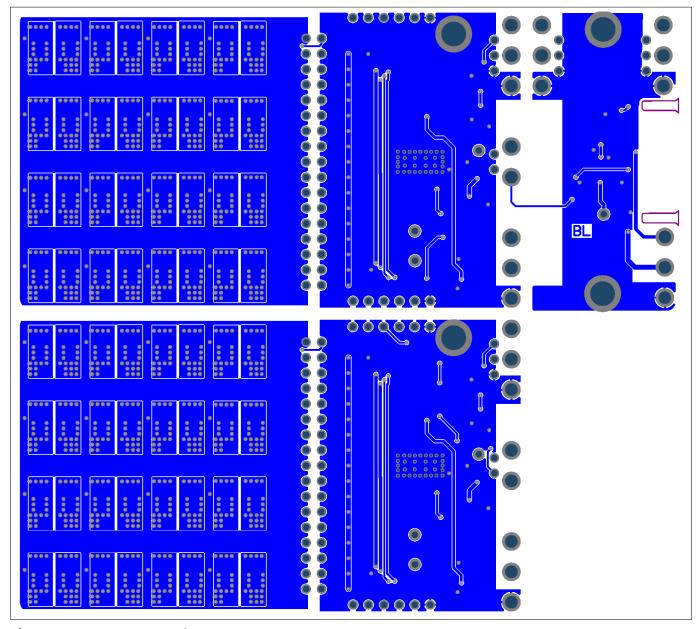


Figure 13 **Bottom layer**

3.3 **Bill of material**

Table 3 **Bill of material**

Designator	Value	Quantity	Footprint	Voltage [V]	Note
C1, C10	470nF	2	C0603	25	X7R 5%
C12, C13	47pF	4	C0603	50	X7R 5%
C2, C11	4.7nF	3	C0603	50	X7R 5%
CNTC, CO0, CO1, CO2, CO3, CO4, CO5, CO6, CO7, CO8, CO9, CO10, CO11, CO12, CO13, CO14, CO15	10nF	34	C0603	25	X7R 5%

(table continues...)

User guide

3 System design



(continued) Bill of material Table 3

Designator	Value	Quantity	Footprint	Voltage [V]	Note
CVDD1, CVL2, CVL3, CVS1	100nF	8	c0603	25	X7R 5%
CVDD2	4.7uF	2	c0805	10	X7R 5%
CVL1, CVS2	470nF	4	C0805	50	X7R 5%
D0A, D0B, D1A, D1B, D2A, D2B, D3A, D3B, D4A, D4B, D5A, D5B, D6A, D6B, D7A, D7B, D8A, D8B, D9A, D9B, D10A, D10B, D11A, D11B, D12A, D12B, D13A, D13B, D14A, D14B, D15A, D15B	Red LED	64	LED SMD Lite On PLCC-4 LS E67B	_	_
D1, D2	CUHS20F30,H3F	4	DIO-SMD-US2H	_	_
GPIN0, GPIN1, VLED_REV, VS_REV	5001	6	PAD D3 H2	_	_
J0, J1, J2, J3, J4, J5, J6, J7, J8, J9, J10, J11, J12, J13, J14, J15, JVL, R3, R4, R10, R11, R12, R13, RH1, RH2	OR	42	R0603	-	_
JF1	TE 3-1534796-7	Not Populated		_	_
JVS_VL	Close	1	Solder Jumper	_	_
JH, JL, JL0, JL1, JL2, JL3, JL4, JL5, JL6, JL7, JL8, JL9, JL10, JL11, JL12, JL13, JL14, JL15, JNTC	Open	38	Solder Jumper	-	-
NTC	Mitsubishi TD11-3H103F NTC 10k	2	r0603	-	Use this NTC or similar 10k
R1, R2, R8, R9	59R	6	R0603	_	_
R5, R6, R7	4.7k	6	R0603	_	_
RNTC	10k	2	R0603	_	_
U1	TLD7002-16ES_TDS	2	PG-TSDSO-24	_	_
U3	TLE9351VSJ	1	PG-DSO-8	_	-

User guide

References



References

- [1] Arduino IDE downloads:; https://www.arduino.cc/en/software
- [2] Infineon *TLD7002-16ES* https://www.infineon.com/cms/en/product/power/lighting-ics/litix-automotive-led-driver-ic/litix-pixel-rear/tld7002-16es/
- [3] Infineon *TLD7002-16ES OTP programming procedure* https://www.infineon.com/dgdl/Infineon-Infineon-TLD7002-16ES_OTP_programming_procedure-AN-v01_20-EN-ApplicationNotes-v01_20-EN.pdf?fileId=8ac78c8c80f4d32901816672cf833ad1
- [4] Infineon *TLD7002-16SYS_EVAL* https://www.infineon.com/cms/en/product/power/lighting-ics/litix-automotive-led-driver-ic/litix-pixel-rear/tld7002-16es/?tab=~%27boards_designs#!designsupport
- [5] Infineon Developer Center Launcher https://www.infineon.com/cms/en/design-support/tools/utilities/infineon-developer-center-idc-launcher/

User guide

Revision history



Revision history

•						
Document Date of release		Description of changes				
Rev. 1.40	2025-10-06	Getting Started: LITIX™ Pixel Rear Configuration Wizard has been added Control with Arduino UNO R3 and demo software sketch has been updated				
		 Control with Arduino UNO R4 Minima and demo software sketch has been added 				
Rev. 1.30	2024-10-04	Document type updated from User manual to User guide				
Rev. 1.20	2024-08-30	Download instruction, including the exact file name and location on the TLD7002-16ES website has been updated in Control with Arduino UNO R3 and demo software sketch				
Rev. 1.10	2024-06-15	Figure update in Control with Arduino UNO R3 and demo software sketch				
Rev. 1.00	2023-05-29	Initial release				

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2025-10-06 Published by Infineon Technologies AG 81726 Munich, Germany

© 2025 Infineon Technologies AG All Rights Reserved.

Do you have a question about any aspect of this document?

Email: erratum@infineon.com

Document reference IFX-lfe1726153890636

Important notice

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffenheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.