


Digital Multiplexer and De-Multiplexer

1.0

Features

- Digital Multiplexer
- Digital De-Multiplexer
- Up to 16 channels

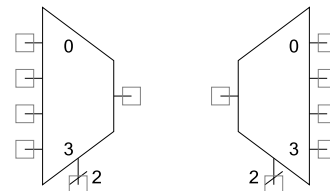

General Description

The Multiplexer component is used to select 1 of n inputs while the De-Multiplexer component is used to route 1 signal to n outputs.

The Multiplexer component implements a 2 to 16 input mux providing a single output, based on hardware control signals. The De-Multiplexer component implements a 2 to 16 output demux from a single input, based on hardware control signals. Only one input or output connection may be made at a time.

When to Use a Multiplexer

Use the Multiplexer and De-Multiplexer components any time a digital signal must be dynamically routed under firmware or hardware control. The most common control method is to connect the mux select signals to a control register using a bus. The control register is then used to select the input or output for the mux/demux. Another option is to drive the select signals from hardware control logic to provide dynamic hardware routing.

Input/Output Connections

This section describes the various input and output connections for the Multiplexer and De-Multiplexer. An asterisk (*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

Multiplexer

0-n – Inputs

Inputs to the Multiplexer, only one of which gets routed to the output based on the select input. The number of inputs depends on the size of the multiplexer.

Output 0

Output from the Multiplexer that is driven from the selected input.

select – Input

Selects input as source for the Multiplexer or output as destination for the De-Multiplexer. The width of the select input depends on the number of inputs and outputs.

De-Multiplexer**0 – Input**

Input to the De-Multiplexer that gets routed to one of n outputs.

Outputs 0-n

Outputs from the De-Multiplexer, only one of which is driven based on the select input. The number of outputs depends on the size of the de-multiplexer. The number of outputs must be a power of 2. Not all outputs must be connected.


select – Input

Selects input as source for the Multiplexer or output as destination for the De-Multiplexer. The width of the select input depends on the number of inputs and outputs.

Component Parameters

Drag a Multiplexer or De-Multiplexer onto your design and double-click it to open the **Configure** dialog.


Figure 1. Configure Multiplexer Dialog

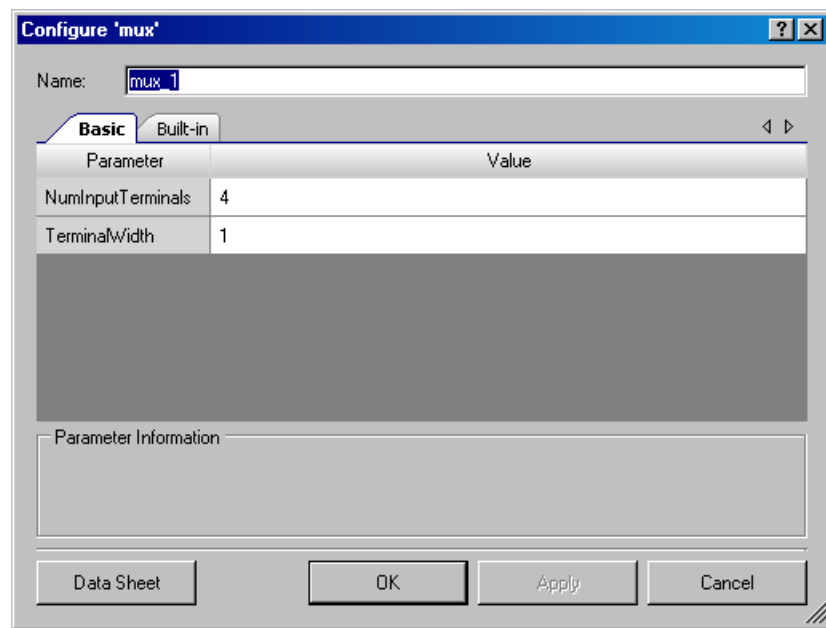

The 'Configure 'mux'' dialog box is shown. It has a title bar with a question mark and a close button. The 'Name' field contains 'mux_1'. There are two tabs: 'Basic' (selected) and 'Built-in'. Below the tabs is a table with two columns: 'Parameter' and 'Value'. The table contains two rows: 'NumInputTerminals' with value '4' and 'TerminalWidth' with value '1'. Below the table is a large empty text area labeled 'Parameter Information'. At the bottom are four buttons: 'Data Sheet', 'OK', 'Apply', and 'Cancel'.

Parameter	Value
NumInputTerminals	4
TerminalWidth	1

Figure 2. Configure De-Multiplexer Dialog

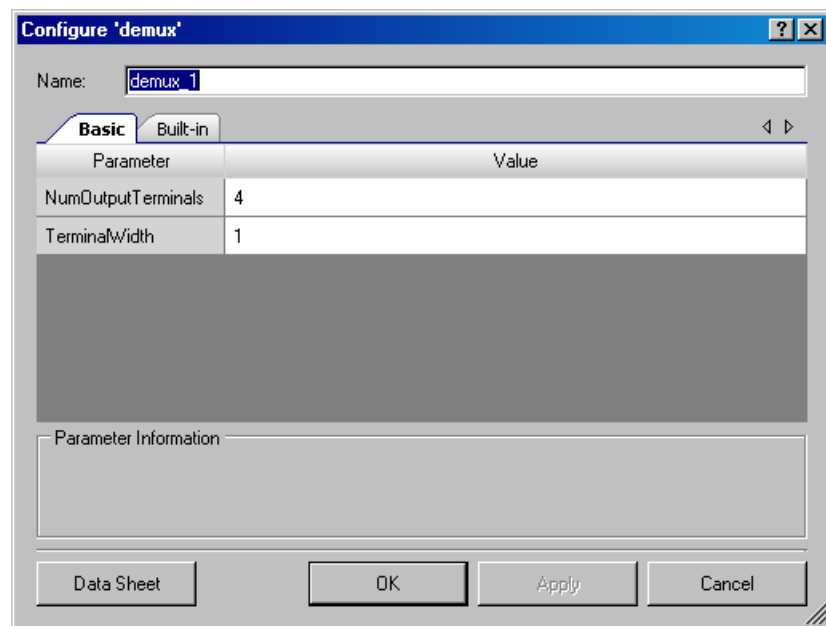

The 'Configure 'demux'' dialog box is shown. It has a title bar with a question mark and a close button. The 'Name' field contains 'demux_1'. There are two tabs: 'Basic' (selected) and 'Built-in'. Below the tabs is a table with two columns: 'Parameter' and 'Value'. The table contains two rows: 'NumOutputTerminals' with value '4' and 'TerminalWidth' with value '1'. Below the table is a large empty text area labeled 'Parameter Information'. At the bottom are four buttons: 'Data Sheet', 'OK', 'Apply', and 'Cancel'.

Parameter	Value
NumOutputTerminals	4
TerminalWidth	1

The Multiplexer and De-Multiplexer provide the following parameters.



NumInputTerminals

This parameter determines the number of Multiplexer inputs. The default is **4**. Acceptable values are 2, 4, 8, and 16 and the corresponding select input widths are 1, 2, 3, and 4. Unused input terminals may be left floating and, if selected, will be interpreted with a value of 0.

NumOutputTerminals

This parameter determines the number of De-Multiplexer outputs. The default is **4**. Acceptable values are 2, 4, 8, and 16 and the corresponding select input widths are 1, 2, 3, and 4. Unused output terminals may be left floating.

TerminalWidth

You can create an array of parallel Multiplexers or De-Multiplexers, which may be useful when the inputs and outputs are buses. This parameter defines the bus width of the inputs and outputs. The default is **1**. The range of valid values is 1 to 32, inclusive. The width of the select input is not affected by this parameter.

Resources

The Multiplexer and De-Multiplexer are implemented with logic equations in macrocells. The product of the component size and width determines the size of the logic equations, and therefore, the number of macrocells.

Sample Firmware Source Code

PSoC Creator provides numerous example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the “Find Example Project” topic in the PSoC Creator Help for more information.



Functional Description

Multiplexer

The Multiplexer selects one of several inputs based on the select input. A letter 'X' in the truth table indicates that the input does not affect the output.

Table 1. Four-Input Multiplexer Truth Table

Select[1]	Select[0]	Input 3	Input 2	Input 1	Input 0	Output
0	0	X	X	X	0	0
0	0	X	X	X	1	1
0	1	X	X	0	X	0
0	1	X	X	1	X	1
1	0	X	0	X	X	0
1	0	X	1	X	X	1
1	1	0	X	X	X	0
1	1	1	X	X	X	1

De-Multiplexer

The De-Multiplexer selects one of several outputs based on the select input. The value of the selected output is the value of the input. The value of unselected outputs is false.

Table 2. Four-Output De-multiplexer Truth Table

Select[1]	Select[0]	Input	Output 3	Output 2	Output 1	Output 0
0	0	0	0	0	0	0
0	0	1	0	0	0	1
0	1	0	0	0	0	0
0	1	1	0	0	1	0
1	0	0	0	0	0	0
1	0	1	0	1	0	0
1	1	0	0	0	0	0
1	1	1	1	0	0	0



DC and AC Electrical Characteristics

The following values indicate expected performance and are based on initial characterization data. Unless otherwise specified in the tables below, all $T_A = 25\text{ }^{\circ}\text{C}$, $V_{DD} = 5.0\text{ V}$.

5.0-V/3.3-V DC and AC Electrical Characteristics

Parameter	Typical	Min	Max	Units	Conditions and Notes
Input					
Maximum Clock Rate	---		67	MHz	

Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.0.e	Minor datasheet update.	
1.0.d	Minor datasheet update.	
1.0.c	Minor datasheet edits and updates	
1.0.b	Minor datasheet edits and updates	
1.0.a	Updated datasheet to show examples of firmware controlled components.	These were added to show how you can use and implement these components with control registers.

© Cypress Semiconductor Corporation, 2009-2015. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® Creator™, Programmable System-on-Chip™, and PSoC Express™ are trademarks and PSoC® is a registered trademark of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

