


PSoC 4 Low Power Comparator (LPComp)

2.0

Features

- Low input offset
- User controlled offset calibration
- Multiple speed modes
- Low-power mode
- Wake from low power modes
- Multiple interrupt and output modes

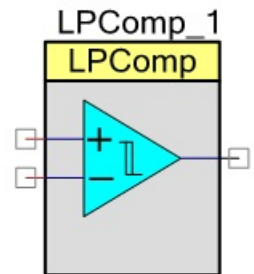

General Description

The Low Power Comparator (LPComp) component provides access to the low power comparators implemented using the fixed function LP comparator block that is present in PSoC 4.

When to Use a LPComp

The main purpose of these comparators is to offer fast detection of a voltage change in normal operating modes and ultra-low power operation in hibernate mode. The two connection options are described as follows:


- Compare two voltages on external pins.
- Compare a voltage from an external pin against an internally generated signal.

The comparator output value can be inspected by the CPU. The comparator interrupt output signal is ORed together with interrupt output signal from the other low power comparator on the device as combined interrupt source. Interrupt is not cleared automatically. It is user responsibility to do that. This combined signal is available as the output of the global signal reference component and can be used as an interrupt/wakeup source from deep-sleep or hibernate. Refer to the [Operation in Low Power Mode](#) section for more details.

For PSoC 4100 BLE, PSoC 4200 BLE, PSoC 4100M, and PSoC 4200M devices, the comparator output is available directly, or after synchronous edge detection as level or pulse. It can be used to trigger an interrupt, routed to digital logic or sent to a pin. Refer to the [Functional Description](#) section for details.

Input/Output Connections

This section describes the various input and output connections for the LPComp. The symbol for this component is annotated to denote the selection of hysteresis.

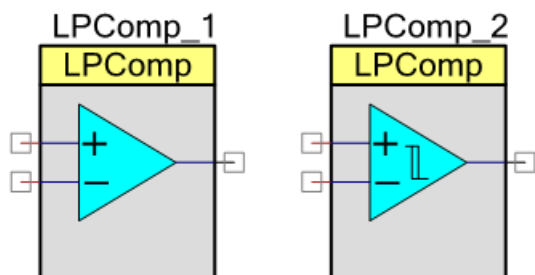

Positive Input – Analog Input

This input is usually connected to the voltage that is being compared. This input can be routed from a GPIO or from an internal source. When connected to an internal source the GPIO that is dedicated to this input will be consumed and not available for other uses.

Negative Input – Analog Input

This input is usually connected to the reference voltage. This input can be routed from a GPIO or from an internal source. When connected to an internal source the GPIO that is dedicated to this input will be consumed and not available for other uses.

Comparator Out – Output

For PSoC 4100/4200 devices it is the edge detected comparison output. For these devices the direct result of the comparator is not available as a hardware signal. This output is normally connected to an interrupt.

For PSoC 4100 BLE, PSoC 4200 BLE, PSoC 4100M, and PSoC 4200M devices, it is the direct result of the comparator. This output goes high when the positive input voltage is greater than the negative input voltage. The output can be routed to other component digital inputs such as interrupts, timers, etc.

Note This output cannot be used to awake a part from the Low Power Modes. Global Signal Reference interrupt signal must be used instead.

Component Parameters

Drag a LPComp onto your design and double click it to open the Configure dialog. This dialog has the following tabs with different parameters.

General Tab

Configure 'LPComp_P4'

Name: LPComp_1

General Advanced Built-in

Output configuration

- ☒ Direct
- ☐ Synchronized
- ☐ Pulse

Hysteresis

- ☒ Enable
- ☐ Disable

Pulse/Interrupt configuration ¹

- ☐ Disabled
- ☒ Rising edge
- ☐ Falling edge
- ☐ Both edges

Speed/Power

- ☐ Slow/Ultra low
- ☒ Medium/Low
- ☐ Fast/Normal

☐ Interrupt Enabled ¹

1. To use the interrupt place a global signal reference and select LPComplt.

Vdda
V-
V+
0V
Vddd
HW out
Vssd
Vddd
Int out
Vssd

Datasheet OK Apply Cancel

The LPComp provides the following parameters.

Output Configuration

This parameter defines mode of the LPComp output: Direct, Synchronized, or Pulse. For PSoC 4100/4200 devices pulse is generated when the selected edge occurs on the internal comparison signal. Refer to the [Functional Description](#) section for details.

Hysteresis

This parameter allows you to add approximately 10 mV of hysteresis to the LPComp. This helps to ensure that slowly moving voltages or slightly noisy voltages will not cause the output of the LPComp to oscillate when the two input voltages are nearly equal.

Pulse/Interrupt Configuration

This parameter defines the event that will cause a pulse to be generated on the interrupt terminal or direct comparator output. The parameter allows you to select interrupt/output mode: Disabled, Rising edge, Falling edge, or Both edges.

Speed/Power

This parameter provides a way to optimize speed verses power consumption. The Speed/Power parameter allows you to select the speed/power level: Slow/Ultra low, Medium/Low, Fast/Normal.


Interrupt Enabled

This parameter allows you to configure the Interrupt Mask for PSoC 4100 BLE, PSoC 4200 BLE, PSoC 4100M, and PSoC 4200M devices.

Note The pulse on the comparator interrupt output will be generated only if the Interrupt output enable is enabled. Also the LPComp_SetInterruptMask() API can be used for this purpose.



Advanced Tab

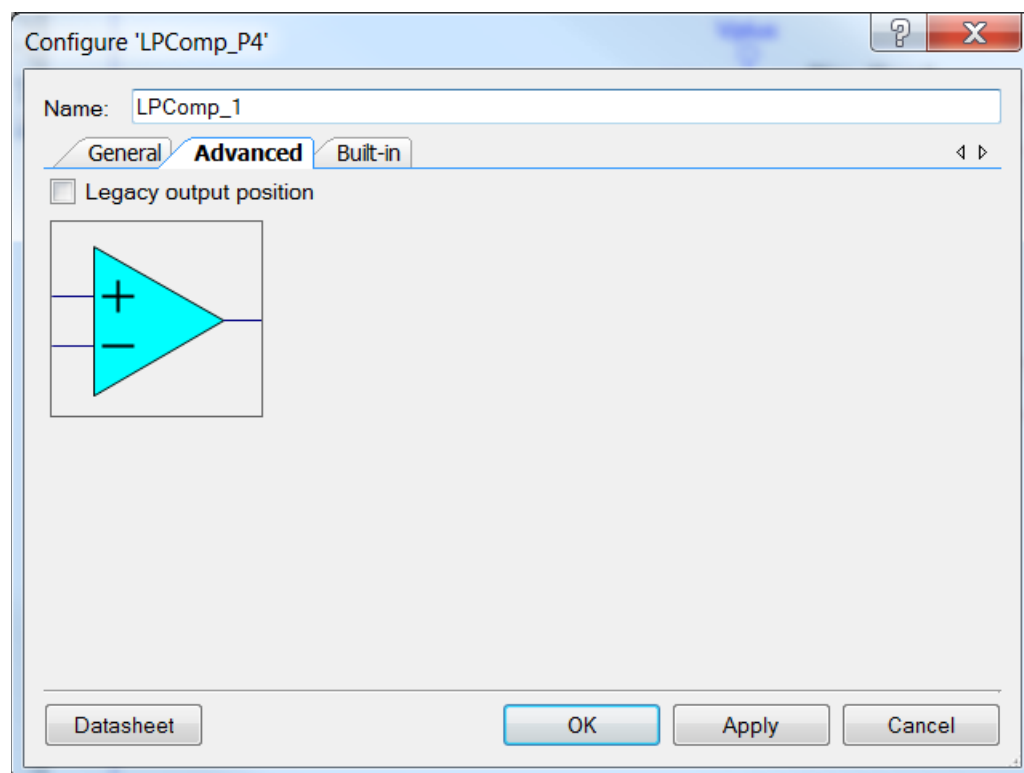


Legacy output position

This parameter allows you to configure the comparator output position for legacy support.

By default, the Legacy output position option is selected when a design is being migrated from an existing design for PSoC 4100/PSoC 4200 devices. If the LPComp component is placed in a design for the first time, the Legacy output position option will not be selected by default.

The symbol view will change for this option as follows:

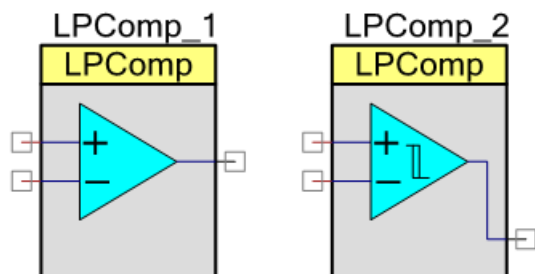

Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name "LPComp_1" to the first instance of a component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is "LPComp"

Functions

Function	Description
LPComp_Start()	Performs all of the required initialization for the component and enables power to the block.
LPComp_Stop()	Turns off the LP Comparator block.
LPComp_Init()	Initializes or restores the component according to the customizer settings.
LPComp_Enable()	Activates the hardware and begins component operation.
LPComp_GetCompare()	This function returns a nonzero value when the voltage connected to the positive input is greater than the negative input voltage.
LPComp_SetSpeed()	Sets the power and speed to one of three settings.
LPComp_SetHysteresis()	Enables or disables the hysteresis setting.
LPComp_ZeroCal()	Performs custom calibration of the input offset to minimize error for a specific set of conditions.
LPComp_LoadTrim()	Writes a value into the comparator offset trim register.
LPComp_SetOutputMode()	Set comparator output mode (Direct, Synchronized or Pulse)
LPComp_SetInterruptMode()	Sets the interrupt edge detect mode.
LPComp_GetInterruptSource()	Gets the interrupt requests.
LPComp_ClearInterrupt()	Clears the interrupt request.
LPComp_SetInterrupt()	Sets a software interrupt request.
LPComp_SetInterruptMask()	Set interrupt mask. (Not applicable for PSoC 4100 / PSoC 4200.)
LPComp_GetInterruptMask()	Returns interrupt mask. (Not applicable for PSoC 4100 / PSoC 4200.)
LPComp_GetInterruptSourceMasked()	Returns interrupt request register masked by interrupt mask. (Not applicable for PSoC 4100 / PSoC 4200.)

void LPComp_Start(void)

Description: Performs all of the required initialization for the component and enables power to the block. The first time the routine is executed, the component is initialized to the configuration from the customizer. When called to restart the comparator following a LPComp_Stop() call, the current component parameter settings are retained.

Parameters: None

Return Value: None

Side Effects: None

void LPComp_Stop(void)

Description: Turns off the LP Comparator.

Parameters: None

Return Value: None

Side Effects: The function doesn't change component power settings.

void LPComp_Init(void)

Description: Initializes or restores the component according to the customizer settings. It is not necessary to call LPComp_Init() because the LPComp_Start() API calls this function and is the preferred method to begin component operation.

Parameters: None

Return Value: None

Side Effects: None

void LPComp_Enable(void)

Description: Activates the hardware and begins component operation. It is not necessary to call LPComp_Enable() because the LPComp_Start() API calls this function, which is the preferred method to begin component operation.

Parameters: None

Return Value: None

Side Effects: None



uint32 LPComp_GetCompare(void)

Description: This function returns a nonzero value when the voltage connected to the positive input is greater than the negative input voltage.
This function reads the direct (unfloppe) comparator output, which can also be metastable (since it may result in incorrect data).

Parameters: None

Return Value: Comparator output state. This value is not impacted by the interrupt edge detect setting.

Side Effects: None

void LPComp_SetSpeed(uint32 speed)

Description: Sets the power and speed to one of three settings.

Parameters: speed: Enumerated speed mode value

Name	Description
LPComp_LOW_SPEED	Slow speed / Ultra low power
LPComp_MED_SPEED	Medium speed / Low power
LPComp_HIGH_SPEED	High speed / Normal power

Return Value: None

Side Effects: None

void LPComp_SetHysteresis(uint32 hysteresis)

Description: Enables or disables the hysteresis setting.

Parameters: hysteresis: Hysteresis enable. See table below.

Name	Description
LPComp_HYST_ENABLE	Enable hysteresis
LPComp_HYST_DISABLE	Disable hysteresis

Return Value: None

Side Effects: None

uint32 LPComp_ZeroCal(void)

- Description:** Performs custom calibration of the input offset to minimize error for a specific set of conditions: comparator reference voltage, supply voltage, and operating temperature. A reference voltage in the range at which the comparator will be used must be applied to the negative input. The positive input will be disconnected from the external source and shorted internally to the negative input to perform the offset calibration.
- Parameters:** None
- Return Value:** The value from the comparator trim register after the offset calibration is complete. This value has the same format as the input parameter for the LPComp_LoadTrim() API routine.
- Side Effects:** During this function the positive input terminal is disconnected. This may impact other components that are also using this signal.

void LPComp_LoadTrim(uint32 trimVal)

- Description:** This function writes a value into the comparator offset trim register.
- Parameters:** trimVal: Value to be stored in the comparator offset trim register. This value has the same format as the parameter returned by the LPComp_ZeroCal() API routine.
- Return Value:** None
- Side Effects:** None

void LPComp_SetOutputMode (uint32 mode)

- Description:** Set comparator output mode.
- Parameters:** mode: Comparator output mode value. See table below.

Name	Description
LPComp_OUT_DIRECT	Direct output
LPComp_OUT_SYNC	Synchronized output
LPComp_OUT_PULSE	Pulse output

- Return Value:** None
- Side Effects:** None



void LPComp_SetInterruptMode(uint32 mode)

Description: Sets the interrupt edge detect mode. This also controls the value provided on the output.

Parameters: mode: Enumerated edge detect mode value. See table below.

Name	Description
LPComp_INTR_DISABLE	Disable
LPComp_INTR_RISING	Rising edge detect
LPComp_INTR_FALLING	Falling edge detect
LPComp_INTR_BOTH	Detect both edges

Return Value: None

Side Effects: None

uint32 LPComp_GetInterruptSource(void)

Description: Gets the interrupt requests. This function is used with the combined interrupt signal from the global signal reference. This function from either component instance can be used to determine the interrupt source for both the interrupts combined.

Parameters: None

Return Value: Interrupt source. Each component instance has a mask value: LPComp_INTR.

Side Effects: None

void LPComp_ClearInterrupt(uint32 interruptMask)

Description: Clears the interrupt request. This function is used with the combined interrupt signal from the global signal reference. This function from either component instance can be used to clear either or both interrupts.

Parameters: interruptMask: Mask of interrupts to clear. Each component instance has a mask value: LPComp_INTR.

Return Value: None

Side Effects: None

void LPComp_SetInterrupt(uint32 interruptMask)

Description:	Sets a software interrupt request. This function is used with the combined interrupt signal from the global signal reference. This function from either component instance can be used to trigger either or both software interrupts.
Parameters:	interruptMask: Mask of interrupts to set. Each component instance has a mask value: LPComp_INTR.
Return Value:	None
Side Effects:	None

void LPComp_SetInterruptMask (uint32 interruptMask)

Description:	Configures which bits of interrupt request register will trigger an interrupt event. This API is not applicable for PSoC 4100 / PSoC 4200 devices.
Parameters:	interruptMask: bit-mask of interrupt sources to be enabled. Each component instance has a mask value: LPComp_INTR_MASK.
Return Value:	None
Side Effects:	None

uint32 LPComp_GetInterruptMask (void)

Description:	Returns interrupt mask. This API is not applicable for PSoC 4100 / PSoC 4200 devices.
Parameters:	None
Return Value:	Mask of enabled interrupt source. Each component instance has a mask value: LPComp_INTR_MASK.
Side Effects:	None

uint32 LPComp_GetInterruptSourceMasked (void)

Description:	Returns interrupt request register masked by interrupt mask. Returns the result of bitwise AND operation between corresponding interrupt request and mask bits. This API is not applicable for PSoC 4100 / PSoC 4200 devices.
Parameters:	None
Return Value:	Mask of enabled interrupt source. Each component instance has a mask value: LPComp_INTR_MASKED.
Side Effects:	None



Global Variables

Function	Description
LPComp_initVar	<p>Indicates whether the Low Power Comparator has been initialized. The variable is initialized to 0 and set to 1 the first time LPComp_Start() is called. This allows the component to restart without reinitialization after the first call to the LPComp_Start() routine.</p> <p>If reinitialization of the component is required, call LPComp_Init() before calling LPComp_Start(). Alternatively, the Comparator can be reinitialized by calling the LPComp_Init() and LPComp_Enable() functions</p>

Sample Firmware Source Code

PSoC Creator provides numerous example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the "Find Example Project" topic in the PSoC Creator Help for more information.

MISRA Compliance

This section describes the MISRA-C:2004 compliance and deviations for the component. There are two types of deviations defined:

- project deviations – deviations that are applicable for all PSoC Creator components
- specific deviations – deviations that are applicable only for this component

This section provides information on component-specific deviations. Project deviations are described in the MISRA Compliance section of the *System Reference Guide* along with information on the MISRA compliance verification environment.

The LPComp component has the following specific deviations:

MISRA-C: 2004 Rule	Rule Class (Required/Advisory)	Rule Description	Description of Deviation(s)
19.7	A	A function is used in preference to a function-like macro.	Deviated since function-like macros are used to allow more efficient code.



API Memory Usage

The component memory usage varies significantly depending on the compiler, device, number of APIs used and component configuration. The following table provides the memory usage for all APIs available in the given component configuration.

The measurements have been done with an associated compiler configured in Release mode with optimization set for Size. For a specific design, the map file generated by the compiler can be analyzed to determine the memory usage.

PSoC 4 (GCC)

Configuration	PSoC 4100/PSoC 4200		PSoC 4100 BLE/PSoC 4200 BLE, PSoC 4100M/PSoC 4200M	
	Flash Bytes	SRAM Bytes	Flash Bytes	SRAM Bytes
Default	552	8	700	8


Functional Description

The Low Power Comparator is intended to be operational in all power modes, including Hibernate/Deep Sleep. The main purpose of this component is to offer fast detection capability in normal operating modes and ultra-low power operation in hibernate mode.

LPComp can be offset calibrated. However, even without trim, the offset is around 10 mV, and thus it is not recommended to trim it.

Block Diagram and Configuration

A high-level block diagram is shown below.

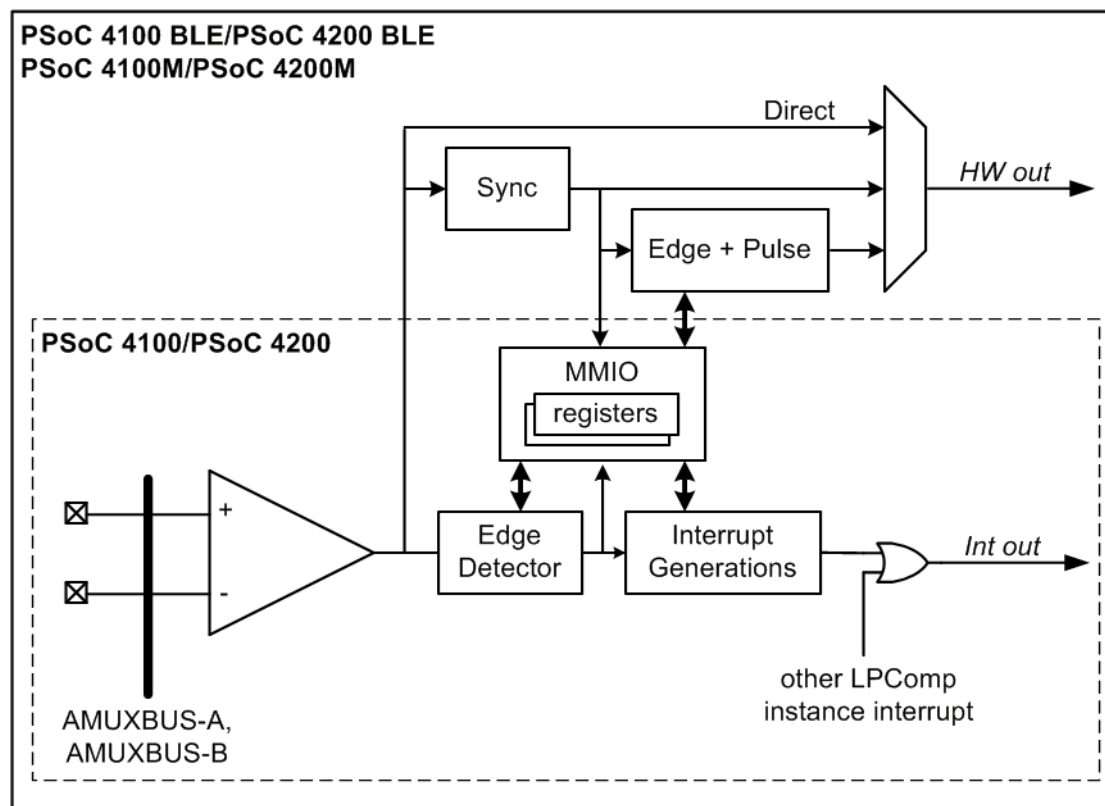

In PSoC 4100 BLE, PSoC 4200 BLE, PSoC 4100M, and PSoC 4200M devices, each comparator has one HW output. It comes from three sources:

- Direct comparator output
- Synchronized to SYSCLK using two flip-flops
- Edge detected pulse which have period $2 \times \text{SYSCLK}$.

Individual comparator interrupt outputs are ORed together as single asynchronous interrupt source before sent out and used to wakeup system in low power mode. For PSoC 4100 BLE,

PSoC 4200 BLE, PSoC 4100M, and PSoC 4200M devices, the individual comparator interrupt is masked by INTR_MASK. The masked result is captured in INTR_MASKED register. Writing 1 to INTR register bit will clear the interrupt. Refer to the appropriate device *Technical Reference Manual (TRM)* for a detailed description of the registers.


Interrupt Service Routine

The LPComp supports interrupts on the various events, depends on *Pulse/Interrupt configuration* settings: Rising edge, Falling edge or Both edges. Interrupt signal goes high when any of the enabled interrupt configurations are true.


Note Interrupt is not cleared automatically. It is user responsibility to do that. Interrupt is cleared by writing a '1' in corresponding interrupt register bit position. The preferred way to clear interrupt sources is usage *LPComp_ClearInterrupt(LPComp_INTR)* API.

There are two ways for access to the LPComp interrupt depending on the *Legacy output position* option.

Legacy output position option is set.

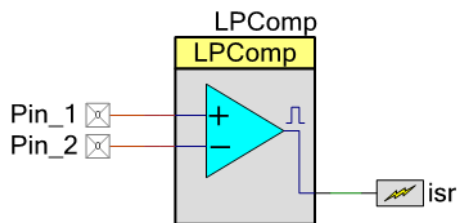

Legacy output position option is NOT set.

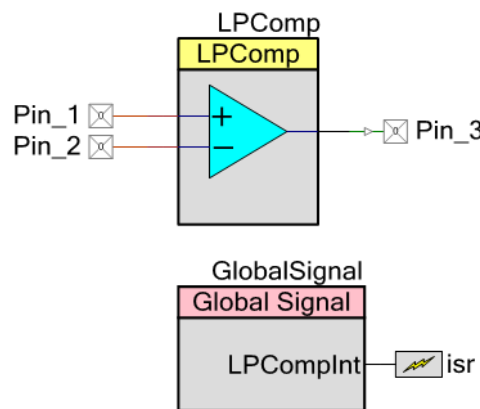

The following code is suggested:

```
CY_ISR(LPComp_Interrupt)
{
    /* Interrupt does not clear automatically.
    * It is user responsibility to do that.
    */
    LPComp_ClearInterrupt(LPComp_INTR);

    /*
    * Add user interrupt code to manage interrupt.
    */
}

void main()
{
    LPComp_Start();
    isr_StartEx(LPComp_Interrupt);
}
```



```

CyGlobalIntEnable; /* Enable global interrupts. */


for(;;)
{
    /* Place your application code here. */
}

```

Operation in Low Power Mode


Low Power Comparator operates in Deep Sleep/Hibernate Mode **only if Speed/Power option is set to Slow/Ultra low**. This component can be used along with the Global Signal component as a wakeup source from Deep Sleep/Hibernate mode as described below.

Create schematic next schematic.

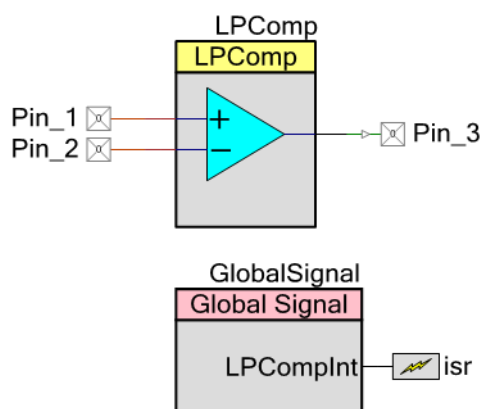

The option “Combined low power comparator interrupt (LPCompInt)” should be selected as a source for an interrupt in the Global Signal Reference component. This component triggers the output each time any of the enabled low power comparators generates an interrupt.

The LPComp component input pins must be assigned to dedicated inputs only (P0[0], P0[1] for LPCOMP0, and P0[2], P0[3] for LPCOMP1 in case of the PSoC 4100/PSoC 4200). Refer to the device datasheet for the part being used for the specific physical pin connections.

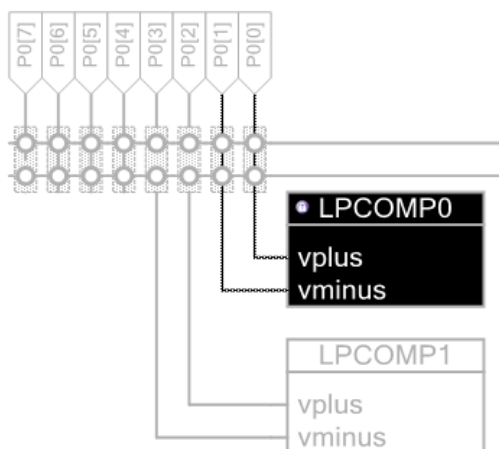

The wakeup event is when the voltage connected to the positive input (Pin_1) is greater than the negative input voltage (Pin_2).

The following code is suggested:

```
CY_ISR(LPComp_Interrupt)
{
    /* Interrupt does not clear automatically.
    * It is user responsibility to do that.
    */
    LPComp_ClearInterrupt(LPComp_INTR);

    /*
    * Add user interrupt code to manage interrupt.
    */
}

void main()
{
    LPComp_Start();
    isr_StartEx(LPComp_Interrupt);
    CyGlobalIntEnable; /* Enable global interrupts. */
    LPComp_SetInterruptMode(LPComp_INTR_RISING);
    LPComp_SetInterruptMask(LPComp_INTR_MASK);

    for(;;)
    {
        /* Place your application code here. */

        CySysPmDeepSleep(); /* Enter Deep Sleep mode*/

        /* Place your application code here. */
    }
}
```

Placement

Each comparator is directly connected to specific GPIOs for its inputs. The output connection is routed to the digital fabric. Refer to the device datasheet for the part being used for the specific physical pin connections.

Registers

See the chip *Technical Reference Manual (TRM)* for more information about registers.



Component Debug Window

PSoC Creator allows you to view debug information about components in your design. Each component window lists the memory and registers for the instance. For detailed hardware registers descriptions, refer to the appropriate device technical reference manual. For detailed UDB registers descriptions used in the component, refer to the Registers section of this datasheet.

To open the Component Debug window:

1. Make sure the debugger is running or in break mode.
2. Choose Windows > Components... from the Debug menu.
3. In the Component Window Selector dialog, select the component instances to view and click **OK**.

The selected Component Debug window(s) will open within the debugger framework. Refer to the "Component Debug Window" topic in the PSoC Creator Help for more information.

Resources

This component uses one of the LP Comparators from the pair of comparators in the LP Comparator hardware block.

DC and AC Electrical Characteristics

Specifications are valid for $-40\text{ }^{\circ}\text{C} \leq T_A \leq 85\text{ }^{\circ}\text{C}$ and $T_J \leq 100\text{ }^{\circ}\text{C}$, except where noted.
Specifications are valid for 1.71 V to 5.5 V, except where noted.

DC Specifications

Parameter	Description	Conditions	Min	Typ	Max	Units
V _{OFFSET2}	Input offset voltage, custom trim		–	–	±4	mV
V _{OFFSET2}	Input offset voltage, custom trim	For PSoC 4 BLE family	–	–	±6	mV
V _{OFFSET2}	Input offset voltage. Common Mode Voltage Range from 0 to VDD-1	For PSoC 4100M/ PSoC 4200M	–	–	±4	mV
V _{HYST}	Hysteresis when enabled		–	10	35	mV
V _{HYST}	Hysteresis when enabled. Common Mode Voltage Range from 0 to VDD -1.	For PSoC 4100M/ PSoC 4200M	–	10	35	mV
V _{ICM1}	Input common mode voltage in normal mode	Modes 1 and 2	0	–	V _{DD} – 0.1	V
V _{ICM2}	Input common mode voltage in low power mode		0	–	V _{DD}	V



Parameter	Description	Conditions	Min	Typ	Max	Units
V_{ICM2}	Input common mode voltage in ultra low power mode		0	–	$V_{DD} - 1.15$	V
CMRR	Common mode rejection ratio	$V_{DD} \geq 2.7V$	50	–	–	dB
CMRR	Common mode rejection ratio	$V_{DD} < 2.7V$	42	–	–	dB
I_{CMP1}	Block current, normal mode		–	–	280	μA
I_{CMP1}	Block current, normal mode	For PSoC 4 BLE family, PSoC 4100M/ PSoC 4200M	–	–	400	μA
I_{CMP2}	Block current, low power mode		–	–	50	μA
I_{CMP2}	Block current, low power mode	For PSoC 4 BLE family, PSoC 4100M/ PSoC 4200M	–	–	100	μA
I_{CMP3}	Block current, ultra low power mode		–	–	6	μA
I_{CMP3}	Block current, ultra low power mode	PSoC 4100M/ PSoC 4200M	–	6	28	μA
Z_{CMP}	DC input impedance of comparator		35	–	–	M Ω

AC Specifications

Parameter	Description	Conditions	Min	Typ	Max	Units
T_{RESP1}	Response time, normal mode	50 mV overdrive	–	–	38	ns
T_{RESP1}	Response time, normal mode	50 mV overdrive, PSoC 4100M/ PSoC 4200M	–	–	110	ns
T_{RESP2}	Response time, low power mode	50 mV overdrive	–	–	70	ns
T_{RESP2}	Response time, low power mode	50 mV overdrive, PSoC 4100M/ PSoC 4200M	–	–	200	ns
T_{RESP3}	Response time, ultra low power mode	200 mV overdrive	–	–	2.3	μs
T_{RESP3}	Response time, ultra low power mode	200 mV overdrive, PSoC 4100M/ PSoC 4200M	–	–	15	μs



Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
2.0.b	Datasheet edits.	Updated information to include PSoC 4100M and PSoC 4200M devices. Updated block diagram in the Functional Description section. Updated description of the Output Configuration. Updated DC and AC Electrical Characteristics section with PSoC 4100M/ PSoC 4200M data.
2.0.a	Datasheet edits.	Updated characterization data for BLE devices. Clarified that the new APIs are not applicable to PSoC 4100 / PSoC 4200 devices: LPComp_SetInterruptMask(), LPComp_GetInterruptMask(), LPComp_GetInterruptSourceMasked()
2.0	Added new APIs: LPComp_SetInterruptMask(), LPComp_GetInterruptMask(), LPComp_GetInterruptSourceMasked()	Updates to support PSoC 4200 BLE devices.
	Added Output Configuration settings on General Tab. For manual output control the LPComp_SetOutputMode() API was added.	
	Updated Functional Description section.	
	Added Advanced Tab with Legacy output position settings.	This provides backwards compatibility with PSoC 4100 / PSoC 4200 designs.
	Added note on customizer that in Hibernate mode when Speed/Power selection is set to "Slow/Ultra low" the "Rising edge" and "Falling edge" selections are not available.	In Hibernate mode the comparator output will actually get an interrupt for both edges even rising or falling edge options are set. The issue only applies to PSoC 4100 / PSoC 4200 devices. There is no problem if the comparator is not used in Hibernate mode or if the Pulse/Interrupt configuration is already set Both edges.
	Speed/Power settings on the customizer and description of the defines for SetSpeed() API were renamed to "Slow/Ultra low", "Medium/Low" and "Fast/Normal" to match device datasheet.	
	Filter option was removed from the component General Tab. SetFilter() API preserved for backward compatibility, but is not recommended for use.	
1.0.b	Updated description of the Interrupt output	

Version	Description of Changes	Reason for Changes / Impact
1.0.a	Updated datasheet.	Removed the V_{OFFSET1} spec.
1.0	New Component	

© Cypress Semiconductor Corporation, 2014-2015. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control, or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

