
Installation Procedure for TC1767 Dip:

Prerequisite:

- DAvE should be installed.
- DAvE TC1767 Dip should be available in local drive
  {Dip File could be downloaded from Infineon Technologies Website or copied from TC1767 Starter Kit}

- Double Click “TC1767_v0_4” dip file

- DAvE Setup Wizard opens as shown below. Select the “TC1767” Product & click “Forward”

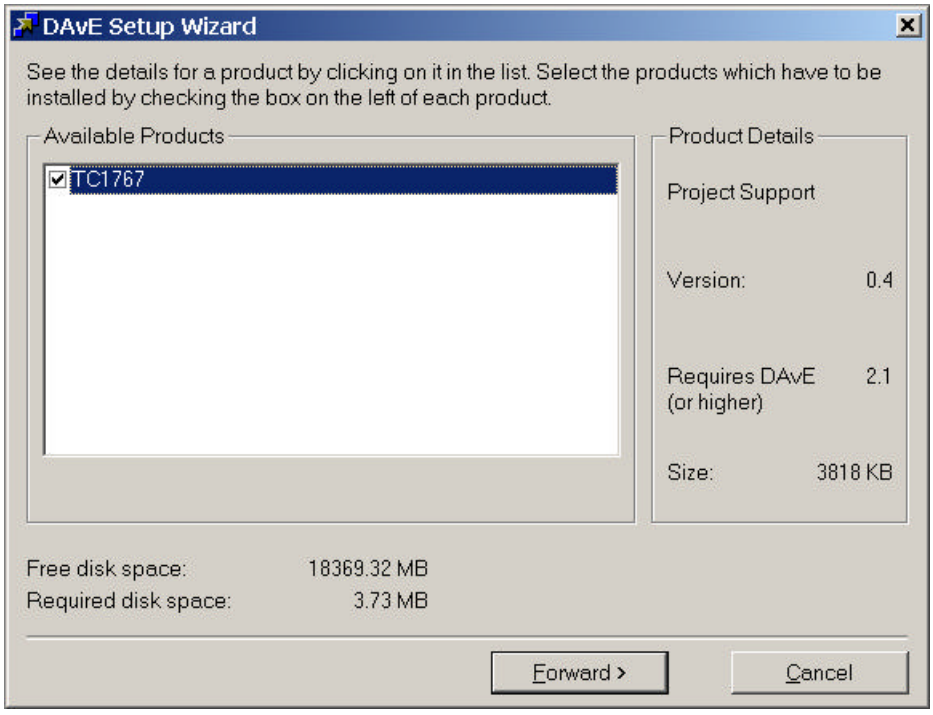

- Click “Install” to Finish Installation.

