
Installation Procedure for XC864 Dip:

Prerequisite:

- DAvE should be installed.
- DAvE XC864 Dip should be available in local drive
  {Dip File could be downloaded from Infineon Technologies Website or copied from XC864 Starter Kit}

- Double Click “XC864_v1_2” dip file

- DAvE Setup Wizard opens as shown below. Select the “XC864” Product & click “Forward”

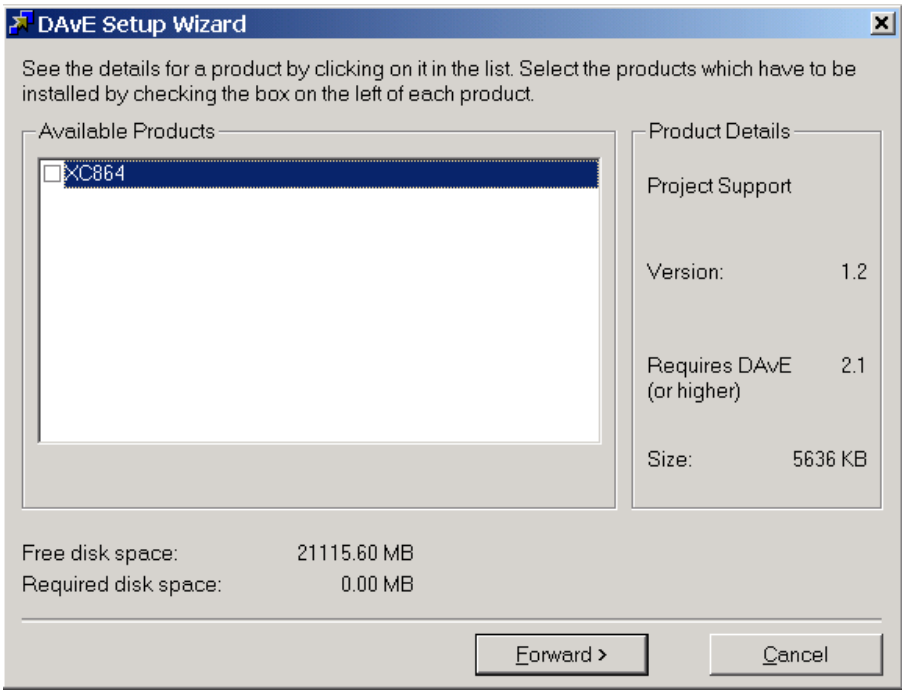

- Click “Install” to Finish Installation.

