
Installation Procedure for XC874CLM Dip:

Prerequisite:

- DAvE should be installed.
- DAvE XC874CLM Dip v1.0 should be available in local drive
  {Dip File could be downloaded from Infineon Technologies Website or copied from XC874 Starter Kit}

- Double Click “XC874CLM_v1_0” dip file
- DAvE Setup Wizard opens as shown below. Select the “XC874CLM” Product & click “Forward”

Please select the required DIP file as shown in the Dialog box below. Version no. would be as per DIP Version. Click “Forward” to proceed.

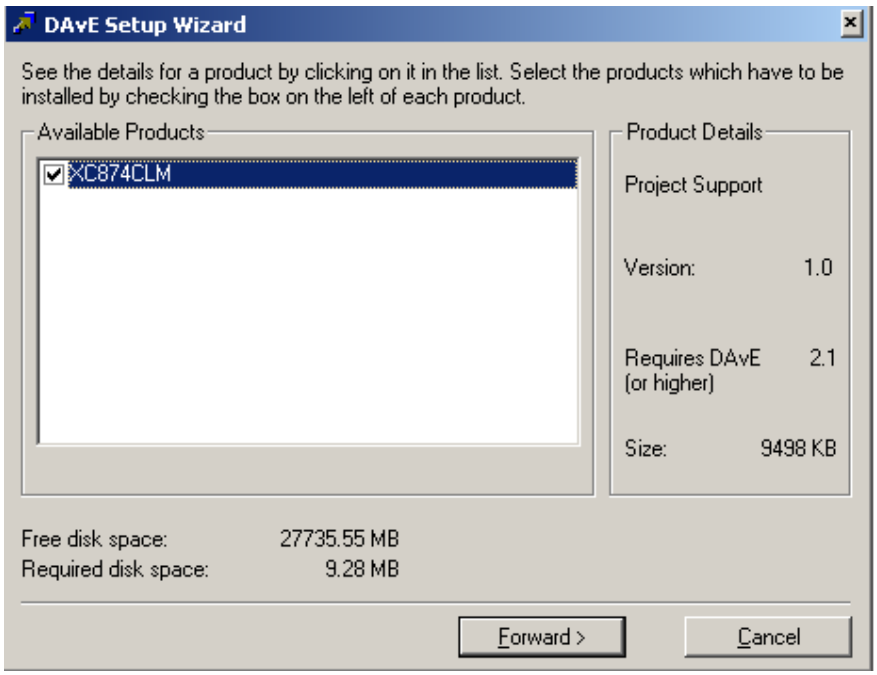

Click “Install” to Finish Installation.

