EXAMPLE NAME: LED_LAMP_1RGB_EXAMPLE_XMC12

OVERVIEW: This example demonstrates how use the LED_LAMP APP to control a 3-channel RGB lamp.

DESCRIPTION:

- LED_LAMP APP drives an RGB lamp using 3 PDM_BCCU APP and a DIM_BCCU APP.
- SYSTIMER APP provides a periodic 1s interrupt for changing lamp color and dim level.
- DIGITAL_IO APPs initialize output pins to unused LED channels.

REQUIREMENTS:

Boards Required: XMC1200 CPU Board (Order Nr: KIT_XMC12_BOOT_001), Color LED Card (Part of the LED Lighting Application Kit, Order Nr: KIT_XMC1X_AK_LED_001)

DAVE Version: 4.1.2

HOW TO CREATE THE PROJECT:

1. Open the DAVE CE and use  "Add IDE New Project Wizard" shortcut in the toolbar to add a new DAVE Project.

Enter Project Name Select "Project Type ➔ DAVE CE Project"	Select Processors Info ➔XMC1200 Series ➔ XMC1200-T038x0200
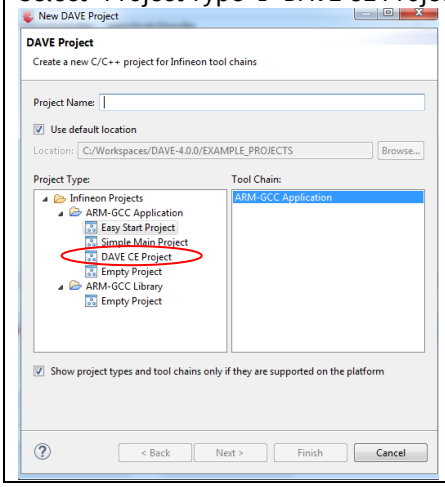	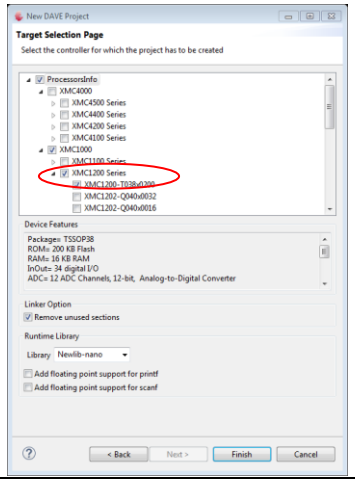

2. Use the  "Add New App" shortcut in the toolbar to add 1 instance of LED_LAMP, 1 instance of SYSTIMER and 6 instances of DIGITAL_IO APPs. Configure the App instances with the following configurations.

Views: App Dependency Tree and App Dependency

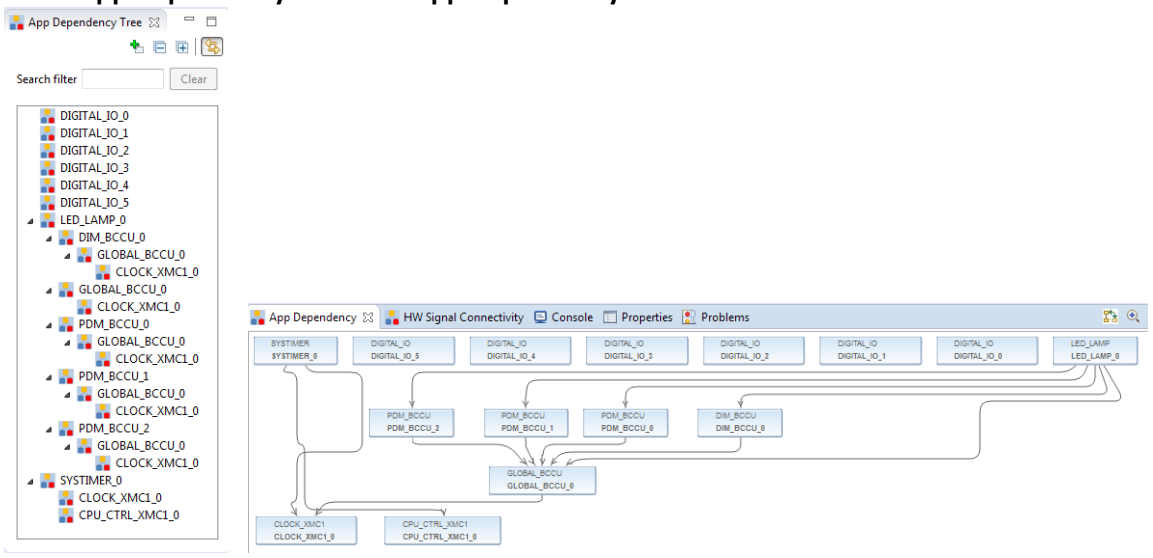

LED_LAMP_0:

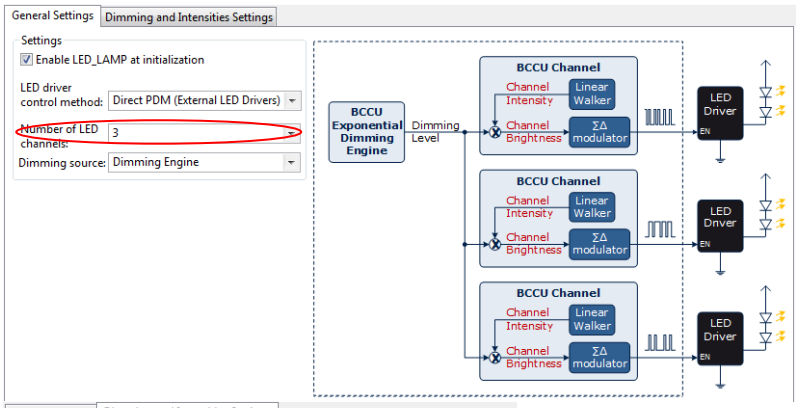

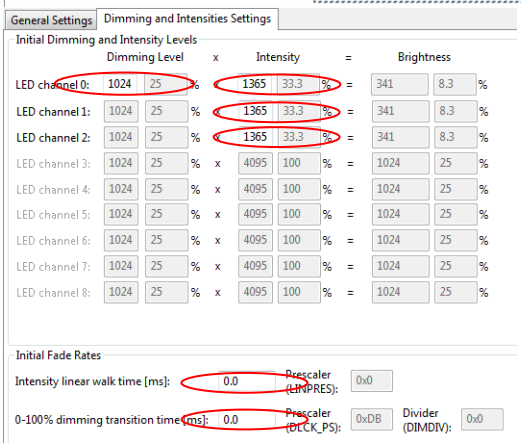

PDM_BCCU_0/PDM_BCCU_1/PDM_BCCU_2:

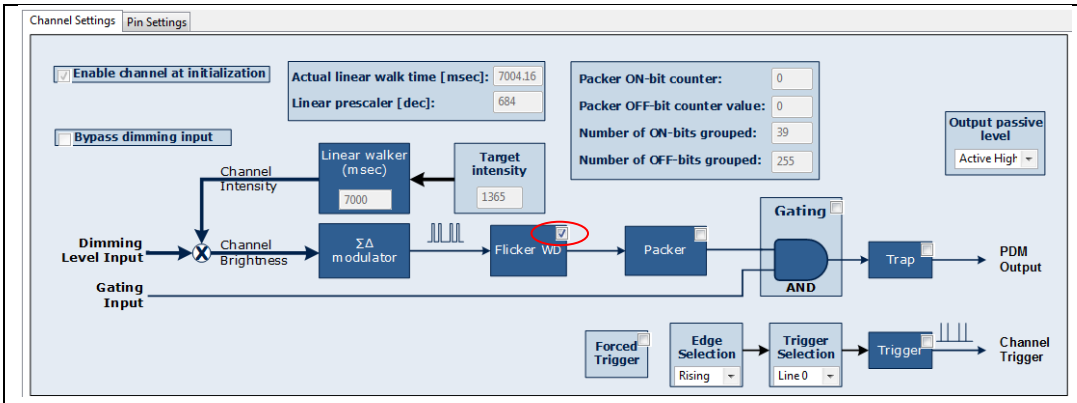

DIM_BCCU_0:

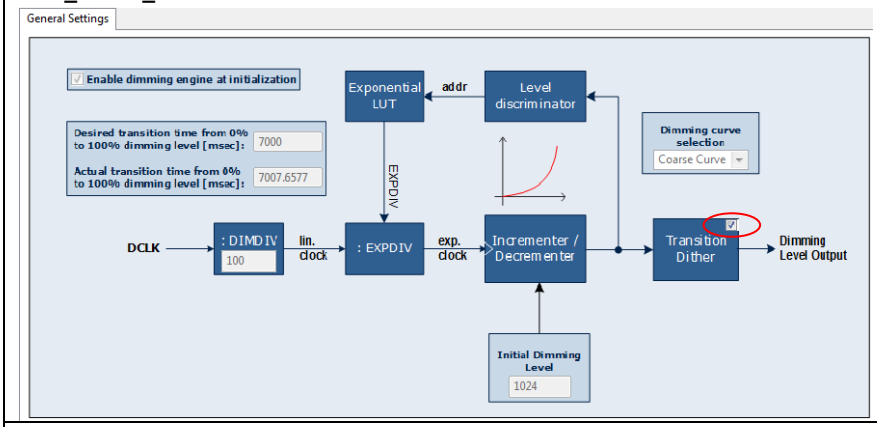

SYSTIMER_0:



DIGITAL_IO_0/DIGITAL_IO_1/DIGITAL_IO_2/DIGITAL_IO_3/DIGITAL_IO_4/DIGITAL_IO_5:

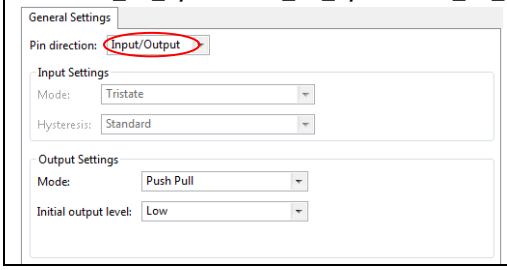

3. Rename the instance label for LED_LAMP_0.

1. Right-click LED_LAMP_0.

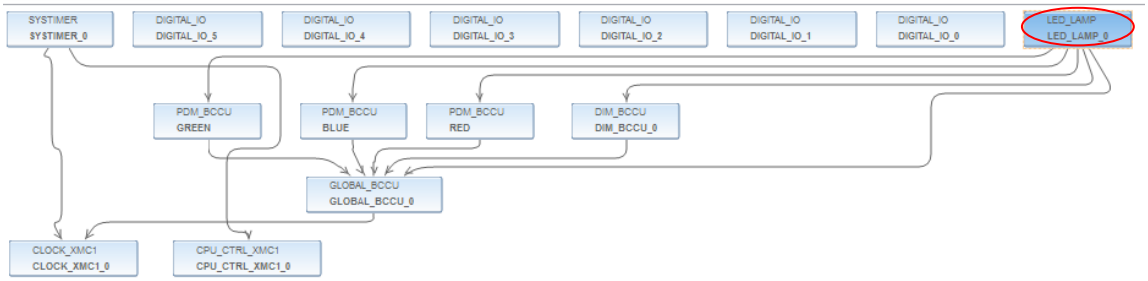

2. Select “Rename Instance Label”.



3. Type in new instance label.

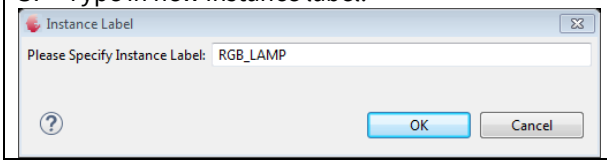

4. Rename the instance labels for PDM_BCCU APPs.

1. Hover your mouse cursor over the connecting arrow to a PDM_BCCU APP. A label will appear momentarily e.g. LED0.
2. Right-click the PDM_BCCU APP.

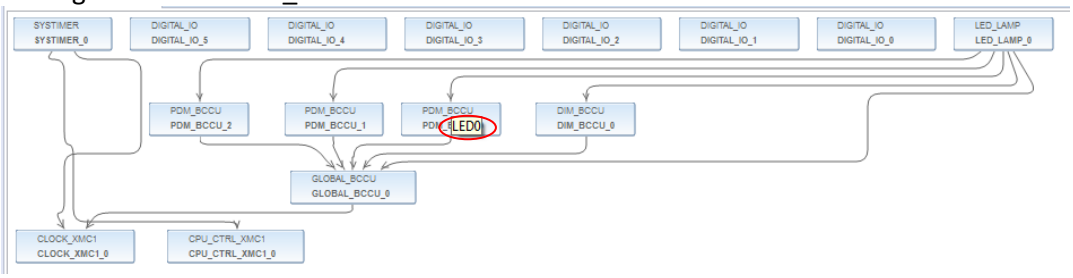

3. Select “Rename Instance Label”.



4. Type in new instance label. Repeat steps 1 to 4 for other PDM_BCCU APP instances. Replace “LED0” with “R_LED1”, “LED1” with “G_LED1” and “LED2” with “B_LED1”.

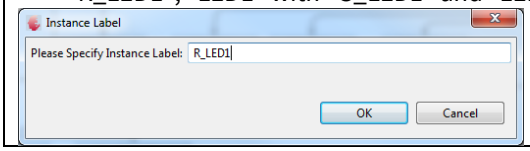

5. Use the  "Manual Pin Allocator" found in the toolbar, configure the output pins for the channels of the RGB LED and the unused LEDs.

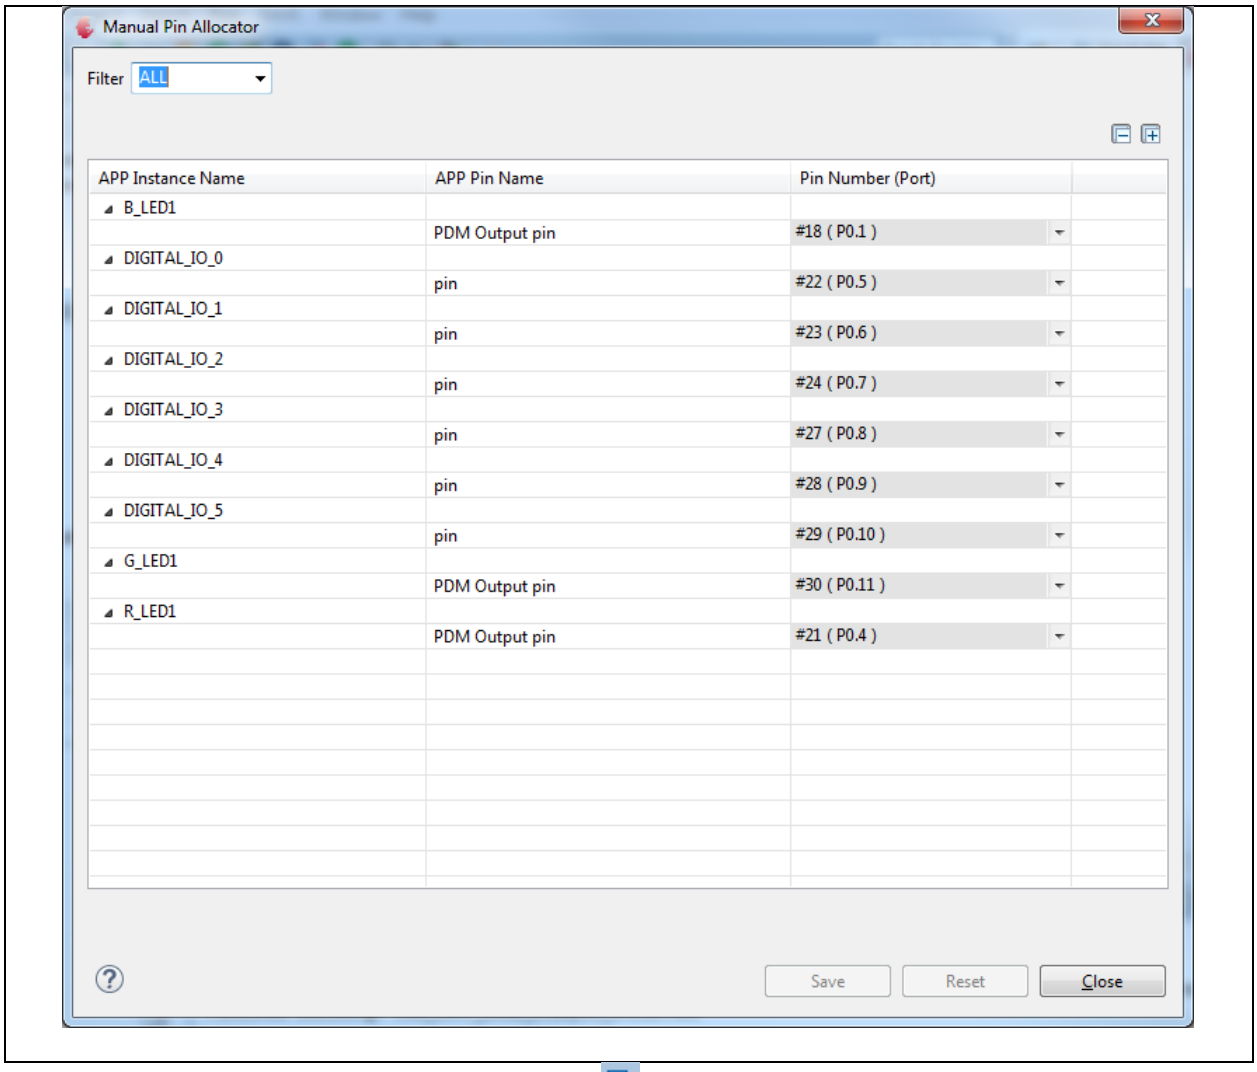

6. Generate the code for configurations made using shortcut in the toolbar.
7. Change main.c accordingly.
8. Build and download to the microcontroller using shortcut in the toolbar.

HOW TO TEST:

Download and run the demo in the uC.

OBSERVATIONS:

- Lamp color slowly changes to red
- Lamp color slowly changes to green
- Lamp color slowly changes to blue
- Lamp color slowly changes to white
- Lamp slowly dims down to 0%
- Lamp slowly dims up to 25%
- Sequence repeats itself.

HINTS WHEN MIGRATING EXAMPLE TO OTHER DEVICES IN THE SAME XMC FAMILY:

-