
NOTE: The light conducting line is depicted once, but actually used three times.

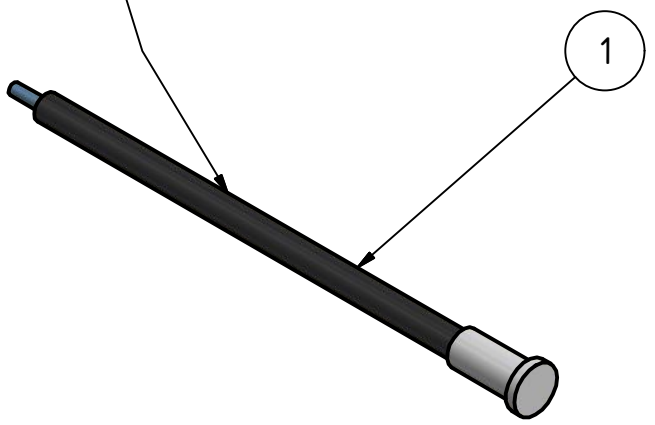

ASSEMBLY INSTRUCTIONS:
First plug the base socket onto its place the main PCB board.
Then slide all three light conducting lines through the holes in the metal chassis, so that the exposed clear end is pointing towards the inside.
The clear cylinder will snap into its place.
Carefully bend and plug the light conducting lines
into the holes of the base socket.

BILL OF COMPONENTS				
OBJECT	QUANTITY	DESCRIPTION	SUPPLIER	REFERENCE NO.
1	1	LED line	RS Components	879-6538

					Datum	Name
				Gezeichnet	02.03.2021	Wernegger
				Kontrolliert		
				Norm		
Status	Änderungen	Datum	Name			

LED Assembly

1

A4