The following document contains information on Cypress products. The document has the series name, product name, and ordering part numbering with the prefix “MB”. However, Cypress will offer these products to new and existing customers with the series name, product name, and ordering part number with the prefix “CY”.

How to Check the Ordering Part Number

1. Go to www.cypress.com/pcn.
2. Enter the keyword (for example, ordering part number) in the **SEARCH PCNS** field and click **Apply**.
3. Click the corresponding title from the search results.
4. Download the Affected Parts List file, which has details of all changes

For More Information

Please contact your local sales office for additional information about Cypress products and solutions.

About Cypress

Cypress is the leader in advanced embedded system solutions for the world's most innovative automotive, industrial, smart home appliances, consumer electronics and medical products. Cypress' microcontrollers, analog ICs, wireless and USB-based connectivity solutions and reliable, high-performance memories help engineers design differentiated products and get them to market first. Cypress is committed to providing customers with the best support and development resources on the planet enabling them to disrupt markets by creating new product categories in record time. To learn more, go to www.cypress.com.

AN205179

F²MC-8FX Family MB95410H/470H Series 8-Bit Microcontroller One Phase Power Meter (CS5464) Solution Real Time Clock and Data Storage Operation

Associated Part Family: MB95410H/470H Series

This application note describes how to use One Phase Power Meter (CS5464) solution's real time clock and data storage function.

1 Introduction

This application note describes how to use One Phase Power Meter (CS5464) solution's real time clock and data storage function.

Section 2 explains the Background.

Section 3 explains the HW Diagram.

Section 4 explains the HW Reference SCH.

Section 5 explains the FW diagram.

Section 6 explains the FW Function List.

2 Background

Background of Real time Clock and Data Storage Function

2.1 Overview


In the power meter solution, real time clock unit is RX8025T, and data storage unit is AT24C64. The communication method between MCU and these two units is I^2C communication.

3 HW Diagram

Hardware diagram of real time clock unit and data storage unit

3.1 HW Diagram of Real Time Clock Unit and Data Storage Unit

Figure 1. Hardware diagram

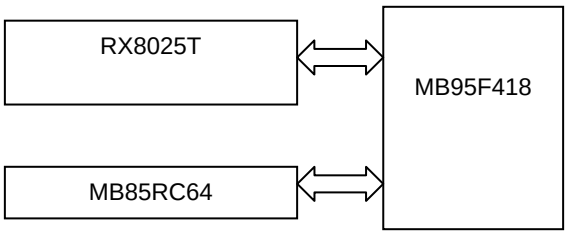

4 HW Reference SCH

Hardware reference SCH of real time clock unit and data storage unit

Figure 2. Real time Clock Unit


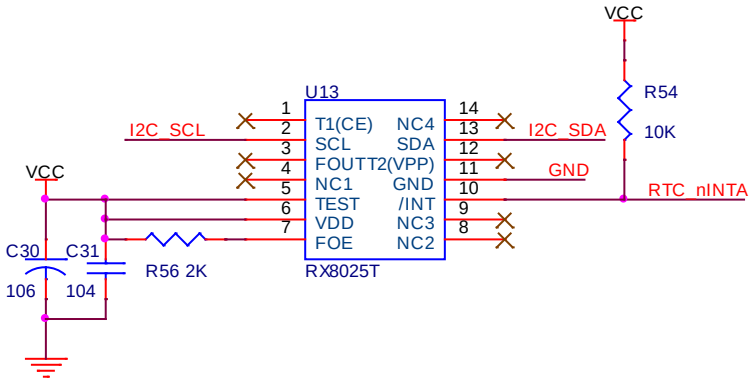


Figure 3. Data Storage Unit

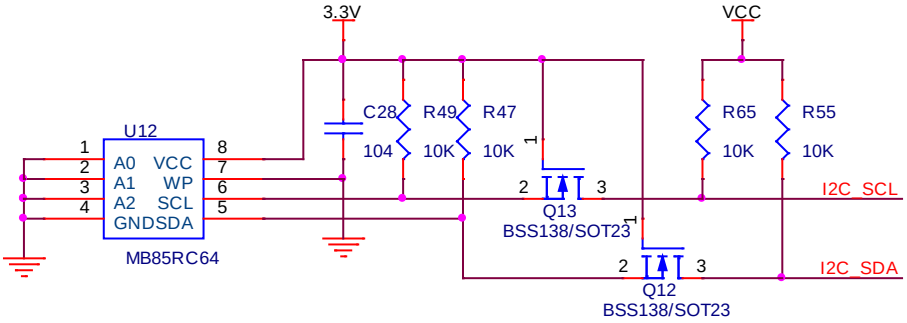

5 FW diagram

Firmware system diagram

5.1 Real time Clock Unit Communication Protocol

For RTC function's communication protocol, refer to the IIC bus protocol which is shown in Figure 4.

Description is as below:

1. Master sends a start condition and a byte data including 7 bits slave address and 1 bit R/W.RTC's salve address is 0110010.
2. Master waits ACK from slave.
3. Master sends a byte RTC register address (0~F), which is shown in Figure 5.
4. Master waits ACK from slave.
5. Master sends n bytes data to slave. And at the end of each byte master needs to wait slave's ACK.
6. Master sends a stop condition to slave.

Figure 4. RTC Communication Protocol

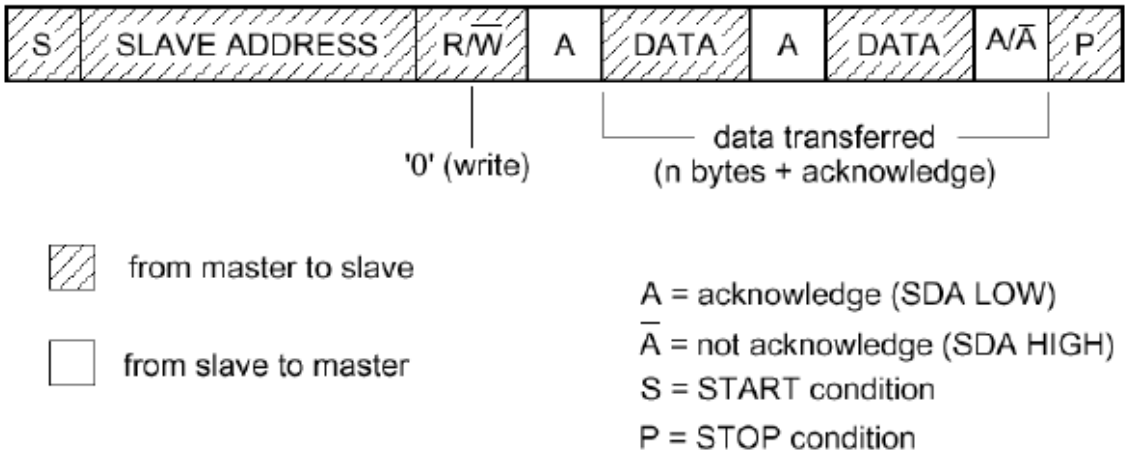


Figure 5. RTC's register Description

Address	Function
0	SEC
1	MIN
2	HOUR
3	WEEK
4	DAY
5	MONTH
6	YEAR
7	RAM
8	MIN Alarm
9	HOUR Alarm
A	WEEK Alarm DAY Alarm
B	Timer Counter 0
C	Timer Counter 1
D	Extension Register
E	Flag Register
F	Control Register

5.2 Data Storage Unit Communication Protocol


For EEPROM function's communication protocol, refer to the IIC bus protocol which is shown in Figure 4.

Description is as below:

1. Master sends a start condition and a byte data including 7 bits slave address and 1 bit R/W.EEPROM's salve address is 1010000.
2. Master waits ACK from slave.
3. Master sends 2 bytes EEPROM data address (0x0000~0xFFFF).First sends the address high byte. Then sends the address low byte. And in the end of each byte master needs to wait slave's ACK.
4. Master sends n bytes data to slave. And in the end of each byte master need to wait slave's ACK.
5. Master sends a stop condition to salve.

5.3 Firmware System Diagram

Figure 6: Firmware System Diagram

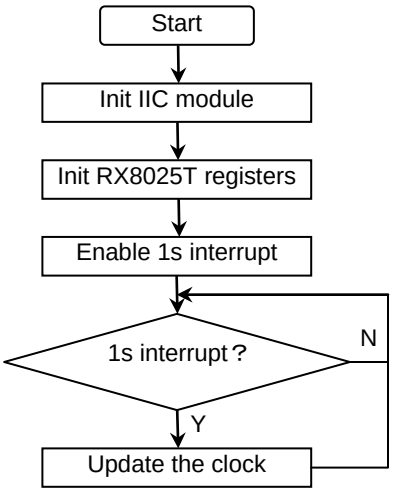

6 FW Function List

6.1 API

Table 1. FW API List

Function Prototype	Description
void RTC_Config(void)	Config working mode for RTC RX8025T
void RTC_IntDisable(void)	Disable interrupt output for RTC
void RTC_Read(void)	Read RTC RX8025T calendar data
void RTC_Write(void)	Set RTC RX8025T calendar data
void EEPROM_Write(INT8U *eeBuff)	Write a series of data byte to EEPROM
void EEPROM_Read(INT8U *eeBuff)	Read a series of data byte from EEPROM
INT8U EEPROM_Write_Verify(INT8U *eeBuff)	Write a series of data byte to EEPROM and verify the result
INT8U EEPROM_Read_Verify(INT8U *eeBuff)	Read a series of data byte from EEPROM and validate checksum

6.2 HAL

Table 2. FW HAL List

Function Prototype	Description
void IIC_Init(void)	Init IIC bus
INT8U IIC_Acknowledge(void)	waitting ACK from slave
INT8U IIC_Start(INT8U slave_address)	Master generates a START condition on IIC bus and transmit slave_address
INT8U IIC_Restart(INT8U slave_address)	Master generates a RESTART condition on IIC bus
INT8U IIC_Stop(void)	Master generates a STOP condition on IIC bus
INT8U IIC_SendByte(INT8U outDat)	Master send out a byte of data and return with ACK/NACK
INT8U IIC_Write(INT8U *buff, INT8U total)	Master write a string of bytes through IIC us
INT8U IIC_ReadByte(void)	Master read a byte of data and set ACK/NACK
INT8U IIC_Read(INT8U *buff, INT16U total)	Master read a string of data bytes through IIC us

7 Additional Information

For more information on Cypress products, please visit the following website:

http://www.cypress.com/cypress-microcontrollers

Document History

Document Title: AN205179 – F²MC-8FX Family MB95410H/470H Series 8-Bit Microcontroller One Phase Power Meter (CS5464) Solution Real Time Clock and Data Storage Operation

Document Number: 002-05179

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	HUAL	06/18/2011	Initial release
*A	5277409	HUAL	05/20/2016	Migrated Spansion Application Note MCU-AN-500119-E-10 to Cypress format.

Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at Cypress Locations.

Products

ARM® Cortex® Microcontrollers	cypress.com/arm
Automotive	cypress.com/automotive
Clocks & Buffers	cypress.com/clocks
Interface	cypress.com/interface
Lighting & Power Control	cypress.com/powerpsoc
Memory	cypress.com/memory
PSoC	cypress.com/psoc
Touch Sensing	cypress.com/touch
USB Controllers	cypress.com/usb
Wireless/RF	cypress.com/wireless

PSoC® Solutions

PSoC 1 | PSoC 3 | PSoC 4 | PSoC 5LP

Cypress Developer Community

Forums | Projects | Videos | Blogs | Training | Components

Technical Support

cypress.com/support

PSoC is a registered trademark and PSoC Creator is a trademark of Cypress Semiconductor Corporation. All other trademarks or registered trademarks referenced herein are the property of their respective owners.

Cypress Semiconductor
198 Champion Court
San Jose, CA 95134-1709

Phone : 408-943-2600
Fax : 408-943-4730
Website : www.cypress.com

© Cypress Semiconductor Corporation, 2011-2016. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.
TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.
Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.