AN205350

FM3 MB9BFXXXX/MB9AFXXXX Series MTPA

Associated Part Family: MB9BFXXXX/MB9AFXXXX Series

This application note describes the maximum torque per ampere (MTPA) implementation in MB9Bxxxx/MB9Axxxx Series.

Contents

1 Introduction....1
2 MTPA Principle....2
2.1 Motor Control Theory....2
2.2 Motor Torque Formulary....4
2.3 IPM MTPA Control Theory....6
2.4 Simulator the MTPA Theory....8
3 MTPA Implementation....12
3.1 Obtain the Current of Id....12
3.2 MTPA Software Implementation....13
4 MTPA Function Performance....18
4.1 Basic Verification....18
5 Conclusion....19
Document History....20

1 Introduction

This application note describes the maximum torque per ampere (MTPA) implementation in - MB9Bxxxx/MB9Axxxx Series. Salient-pole synchronous motors are widely used in variable speed drive applications due to their high efficiency. It is important not only to accurately detect rotor positions but also to control current at optimum phases for high efficiency and wide range operations such as maximum torque control and flux weakening control. Although rotor positions can be detected precisely with position sensors, mechanical position sensors have several problems such as cost and low reliability. Therefore, many sensorless control methods have been proposed. This document have also proposed sensor less control techniques with observers based on PLL observe model. In position sensorless controls, it is known that position estimation errors are sensitive to q-axis inductance set in the observers. Such parameter errors affect both position estimation and current vector phase accuracy. Position estimation errors caused by inductance errors have been analyzed. One of the typical trajectories in a current phase control is the maximum torque per ampere (MTPA) control, which is also called maximum torque control. It is important for high efficiency drives, because the reluctance torque can be used effectively the most and the copper losses are minimized. The conventional methods are that d-axis current commands for the current control loop are set to negative values at maximum torque per ampere trajectory. It can be obtained by solving an external problem that the motor torque is maximized with respect to the current phase angle at constant current amplitude. By utilizing these relations, unified methods for position estimation and current phase control with inductance setting have been reported. The inductance setting which is set so as to associate the current vector with a quasi-optimal trajectory is presented in. For example, the trajectory is located between unity power factor trajectory and minimum copper loss trajectory. According to theory as our known, the maximum torque control is realized with inductance setting in a modified control model. The robustness against magnetic saturation has been experimentally pointed out. However, this approach is based on a particular observe model constructed on maximum torque control frame. Therefore considerable knowledge on observe model must be reconsidered. Based on these concepts, this paper presents maximum torque control with inductance setting of normal PLL observers. In case of normal PLL observer, the relations between position estimation errors and parameter errors have been derived analytically in steady state. In addition, a phase angle of the maximum torque control frame which is equal to a current phase angle under the maximum torque control has also been derived. In the proposed method, the inductance is set so as to make the estimated position error equal to the phase angle of the maximum torque control frame. Also the proposed method is simply constructed and robust against magnetic saturation. Based on this approach, the validity of the proposed method can be explained in the conventional frame work.

Figure 1. Salient-pole Synchronous Motors of Torque

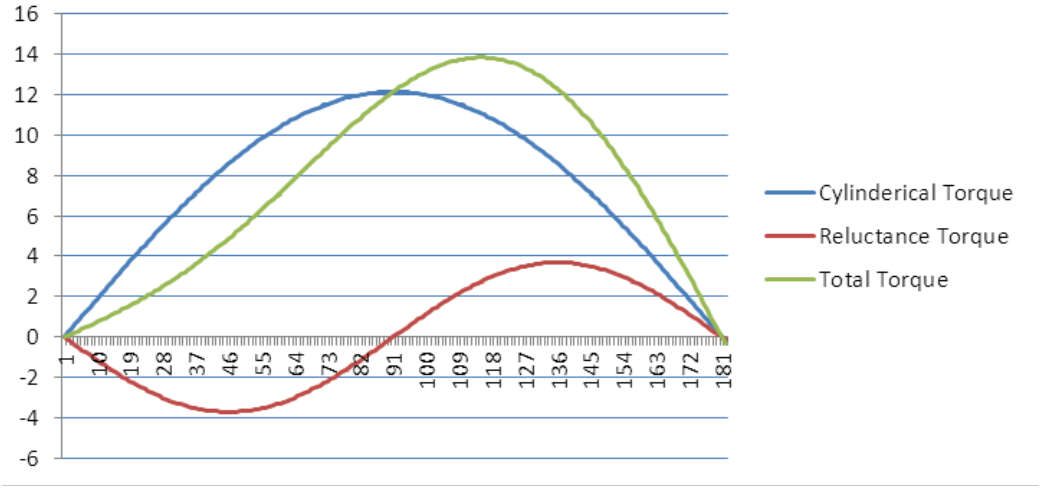

2 MTPA Principle

2.1 Motor Control Theory

Motor control structure as below figure show:

Figure 2. Motor Control Structure

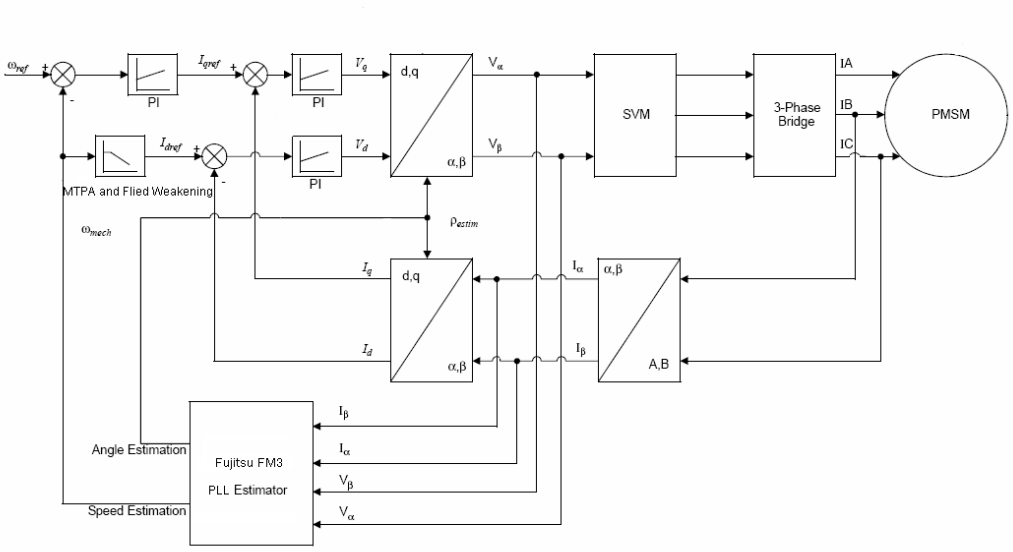

The structure including the content:

1. Permanent Magnet Synchronous Motor.
2. 3-Phase Bridge – rectifier, inverter and acquisition and protection circuitry.
3. Clarke forward transform block.
4. Park forward and inverse transform block.
5. Angle and speed estimator block.
6. Proportional integral controller block.
7. MTPA and Field weakening block.
8. Space vector modulation block.

In the structure of upper if Ld equal to Lq and no flied weakening that Idref is equal to zero, The particularity of the FOC in the case of PMSM is that the stator's d-axis current reference Idref (corresponding to the armature reaction flux on d-axis) is set to zero. The rotor's magnets produce the rotor flux linkage, ΨPM, unlike ACIM, which needs a constant reference value Idref for the magnetizing current, thereby producing the rotor flux linkage. The air gap flux is equal to the sum of the rotor's flux linkage, which is generated by the permanent magnets plus the armature reaction flux linkage generated by the stator current. For the constant torque mode in FOC, the d-axis air gap flux is solely equal to ΨPM, and the d-axis armature reaction flux is zero. On the contrary, in constant power operation, the flux generating component of the stator current, Id, is used for air gap field weakening to achieve higher speed. In sensorless control, where no position or speed sensors are needed, the challenge is to implement a robust speed estimator that is able to reject perturbations such as temperature, electromagnetic noise and so on. Sensorless control is usually required when applications are very cost sensitive, where moving parts are not allowed such as position sensors or when the motor is operated in an electrically hostile environment. However, requests for precision control, especially at low speeds, should not be considered a critical matter for the given application. The position and speed estimation is based on the mathematical model of the motor. Therefore, the closer the model is to the real hardware, the better the estimator will perform. The PMSM mathematical modeling depends on its topology, differentiating mainly two types: surface-mounted and interior permanent magnet. Each type has its own advantages and disadvantages with respect to the application needs. The proposed control scheme has been developed around an interior permanent magnet synchronous motor, because we need to realize the maximum torque per ampere function. Because the surface-mounted permanent magnet which has the advantage of low torque ripple and lower price in comparison with other types of PMSMs. The air gap flux for the motor type considered is smooth so that the stator's inductance value, Ld equal to Lq and the Back Electromagnetic Force (BEMF) is sinusoidal. The fact that the air gap is large (it includes the surface mounted magnets, being placed between the stator teeth and the rotor core), implies a smaller inductance for this kind of PMSM with respect to the other types of motors with the same dimension and nominal power values. These motor characteristics enable some simplification of the mathematical model used in the speed and position estimator, while at the same time enabling the efficient use of FOC. The FOC maximum torque per ampere is obtained by uninterruptedly keeping the motor's rotor flux linkage situated at 90 degrees behind the armature generated flux linkage. But the interior permanent magnet motor need to special function control of MTPA, because the maximum torque per ampere of the motor's rotor flux linkage situated don't at 90 degrees position. So this document to explain how to realize this function and how to obtain the Idref negative value.

2.2 Motor Torque Formulary

The motor torque formulary as equation as below:

$$Te = \frac{3}{2}Pn(\Psi m * Iq + (Ld - Lq) * Iq * Id) \quad (1)$$

Where,

P_n is the number of poles

Ψ_m is the permanent magnet linked flux

Ld and Lq are the direct and quadrature axis inductances

As this total torque T_e includes tow part of torque: one is cylindrical torque (Ψ_m*Iq) and the other is the angle advance curve torque ((Ld-Lq)*Iq*Id).

2.2.1 SPM Motor Module

The SPM synchronous motor parameters Ld equal to Lq, the angle advance curve torque is zero, there is zero saliency and Idref is set to zero for maximum efficiency at 90 degrees position. The IPM motor torque curve as bellow:

Figure 3. SPM Motor Torque Structure

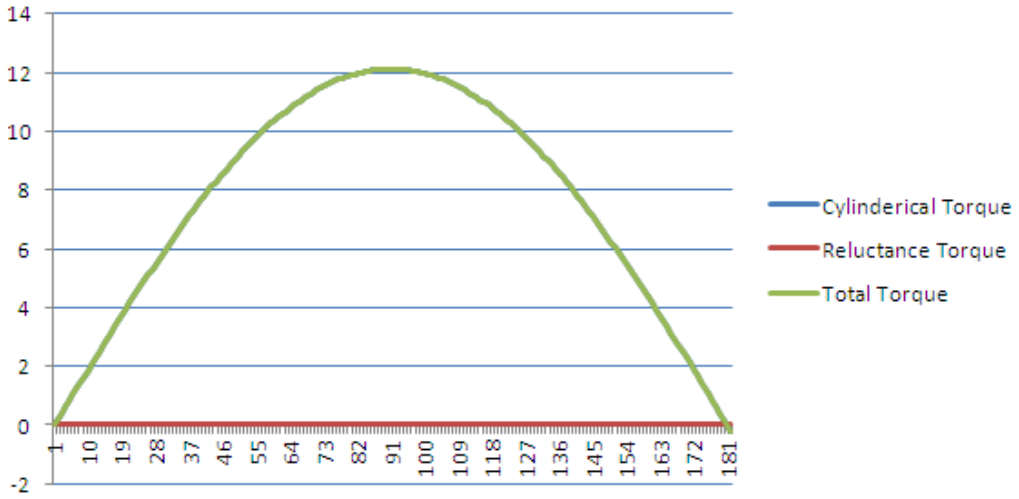

From above figure, we can obtain the episteme that total torque as the same as the cylindrical torque. The reluctance torque is equal to zero.

2.2.2 IPM Motor Module

The IPM synchronous motor parameters Ld not equal to Lq, the angle advance curve torque is nonzero value, there is saliency and Idref is set to nonzero value for maximum efficiency at maximum 90 degrees position The IPM motor torque curve as below:

Figure 4. IPM Motor Torque Structure

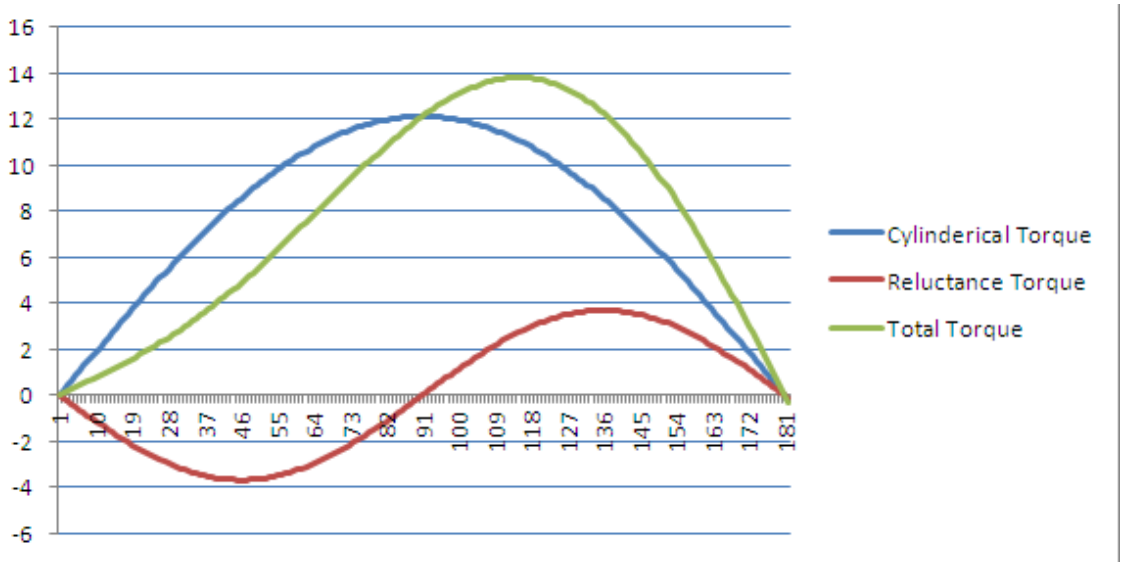

From above figure, we can obtain the episteme that total torque as the same as the cylindrical torque add to reluctance torque. The maximum torque position is maximum 90 degrees position.

Figure 5. IPM Motor Torque Theta

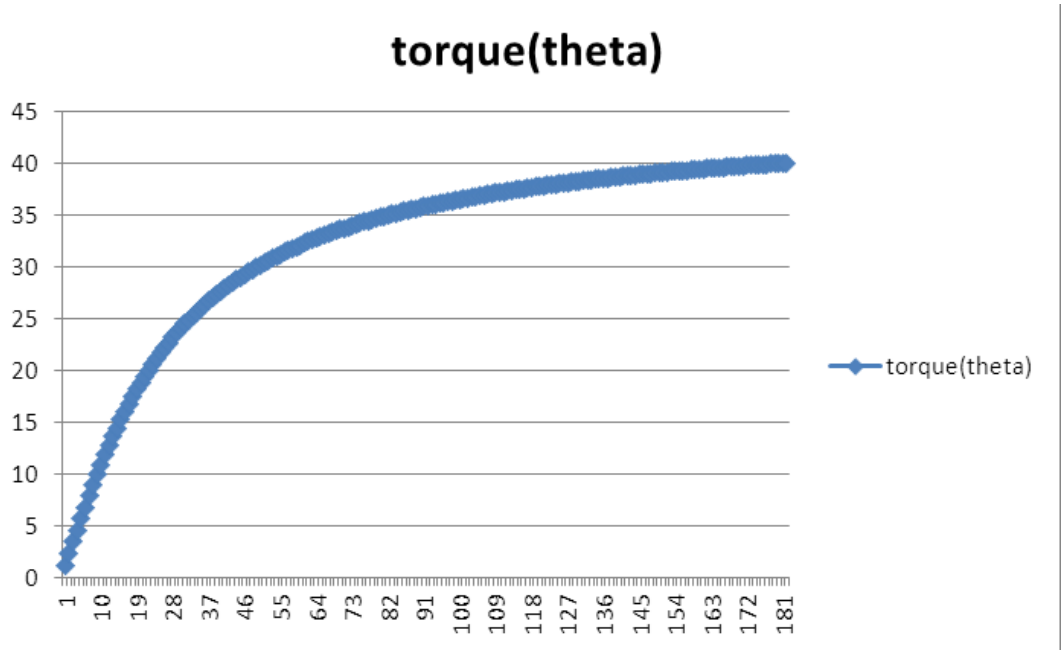

The Idref value curve as below figure, they have different position at different current and different motor parameters. At below document we will to analyses the relator parameters and what it is influent this value.

Figure 6. IPM Motor at Different Current Id Reference

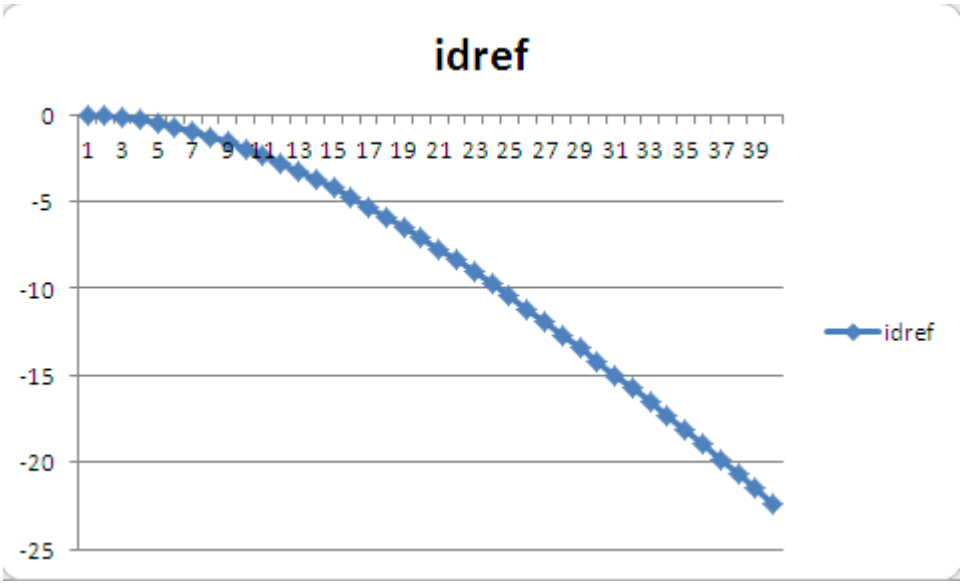

2.3 IPM MTPA Control Theory

2.3.1 Discursion the Torque Theory

From above the explain and the follow torque formulary,

$$Te = 3/2Pn(\Psi m * Iq + (Ld - Lq) * Iq * Id) \quad (2)$$

When driving a surface magnet motor, there is zero saliency (Ld = Lq) and Id is set to zero for maximum efficiency. In the case of IPM motor which has saliency (Ld < Lq) a negative Id will produce positive reluctance torque. The most efficient operating point is when the total torque is maximized for a given current magnitude. This is found by transforming Equation 1 into a form with current magnitude (Im) and phase advance (β) terms by substituting Id with Im.cos(β) and Iq with Im.sin(β). So the torque formulary will instead of bellow:

$$Te = 3/2Pn(\Psi m * Im * \sin(\beta) + (Ld - Lq) * (Im)2 * \sin(\beta) * \cos(\beta)) \quad (3)$$

So we can use the sin function Equation to express the torque formulary.

$$Te = 3/2Pn(\Psi m * Im * \sin(\beta) + (Ld - Lq) * (Im)2 * \sin(2\beta)/2) \quad (4)$$

From above equation we can realize the maximum torque when β and other parameters were confirmed.

2.3.2 Distribute the Current Realize the MTPA

If we can obtain the max value of T_e the β degree, we can make sure the Id and Iq reference value from the total current I_m. So now we consequence the equation for below:

Differential the equation,

$$Te = 3/2Pn(\Psi m * Im * \sin(\beta) + (Ld - Lq) * (Im)2 * \sin(2\beta)/2) \quad (5)$$

The equation change to,

$$Te' = 3/2Pn(\Psi m * Im * \cos(\beta) + (Ld - Lq) * (Im)2 * \cos(2\beta)) \quad (6)$$

When Te' = 0, the Te has maximum value at [0,180] degree region. So above equation will change to,

$$3/2Pn(\Psi m * Im * \cos(\beta) + (Ld - Lq) * (Im)2 * \cos(2\beta)) = 0 \quad (7)$$

Or,

$$\Psi m * \cos(\beta) + (Ld - Lq) * Im * \cos(2\beta) = 0 \quad (8)$$

Perform mathematical trigonometric function calculations,

$$\cos(\beta) = \frac{-\Psi m + \sqrt{\Psi m^2 + 8*(Ld-Lq)^2*(Im)^2}}{4*(Ld-Lq)*Im} \quad (9)$$

using ,

$$Id = Im * \cos(\beta) \quad (10)$$

Obtain ,

$$Id = \frac{-\Psi m + \sqrt{\Psi m^2 + 8*(Ld-Lq)^2*(Im)^2}}{4*(Ld-Lq)} \quad (11)$$

Using Iq express Id,

$$Id = \frac{-\Psi m + \sqrt{\Psi m^2 + 4*(Ld-Lq)^2*(Iq)^2}}{2*(Ld-Lq)} \quad (12)$$

Because Ψm, Ld, Lq are the motor parameters, Iq is the control signal so we can obtain the Id value from above equation.

2.4 Simulator the MTPA Theory

When IPM motor parameters:

Ld = 10.4 mh
Lq = 18.6 mh
Ψm = 0.404 Wb
Iq = 8 A

The simulator figure as below,

Figure 7. Salient-pole Synchronous Motors Of Torque

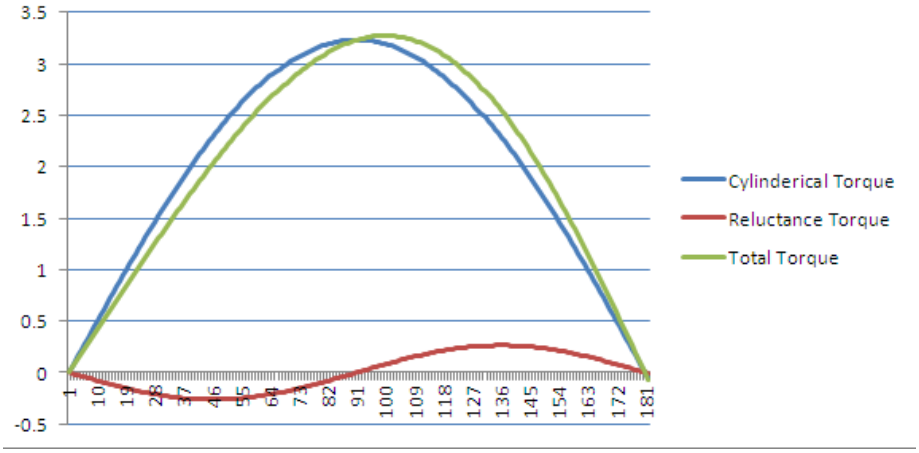

Figure 8. Salient-pole Synchronous Motors of Id Reference

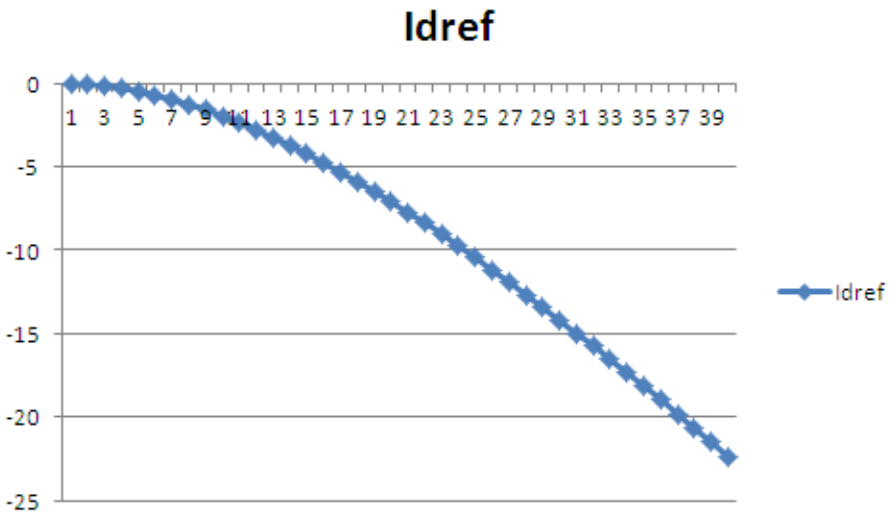

Figure 9. Salient-pole synchronous motors of torque theta

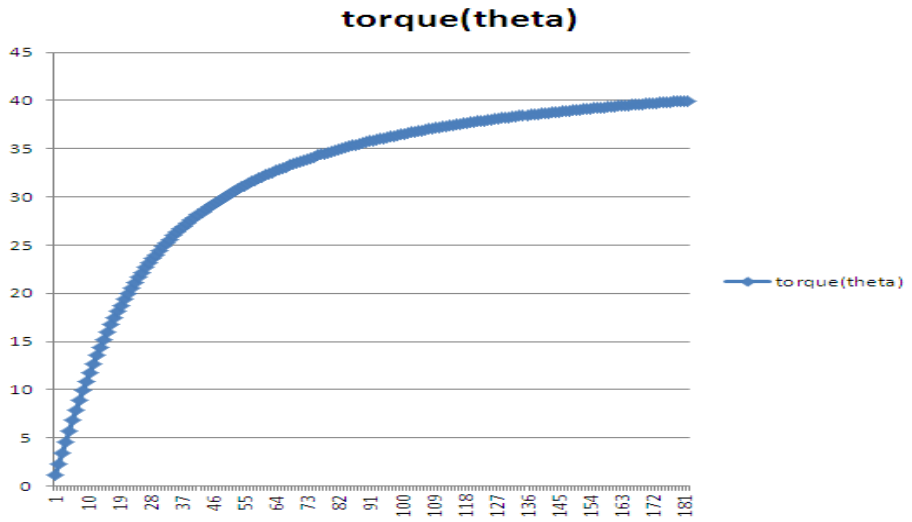

When other IPM motor parameters:

Ld = 5.4mh
Lq = 15.6mh
Ψm = 0.204Wb
Iq = 20A

The simulator figure as below,

Figure 10. Salient-pole Synchronous Motors of Torque

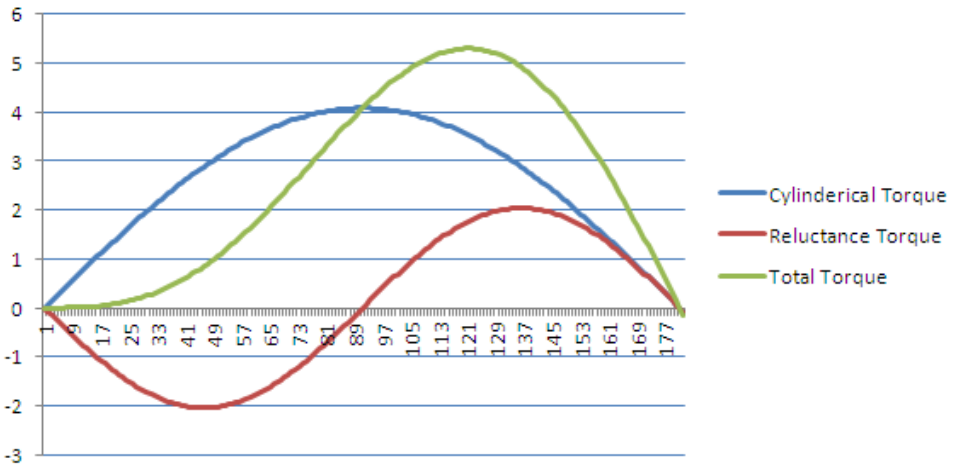

Figure 11. Salient-pole Synchronous Motors of Id Reference

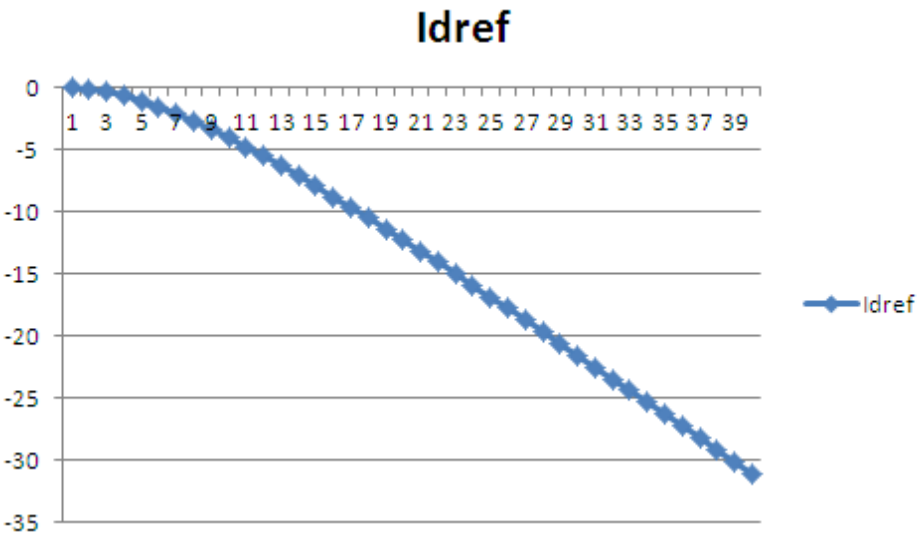

Figure 12. Salient-pole Synchronous Motors of Torque Theta

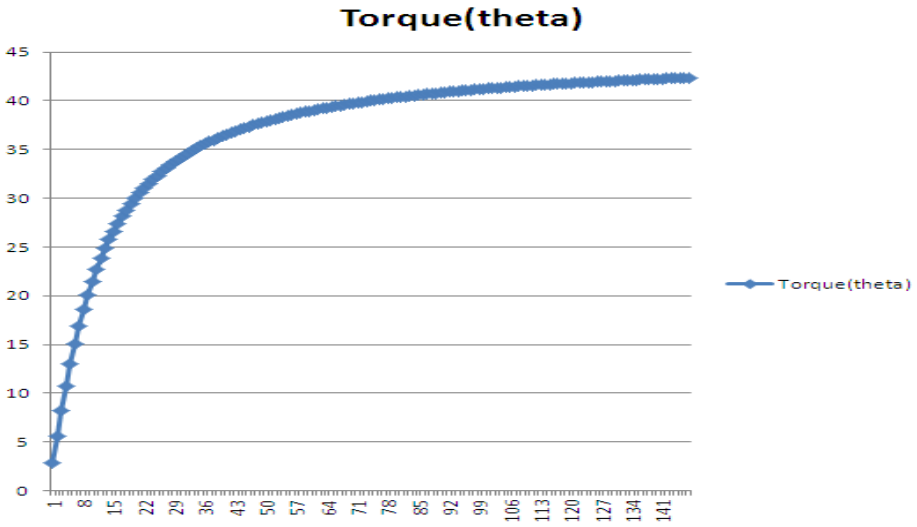

When other surface-mounted motor parameters:

Ld = 8.4mh
Lq = 8.4mh
Ψm = 0.204Wb
Iq = 20A

The simulator figure as below,

Figure 13. Surface-mounted Motor of Torque

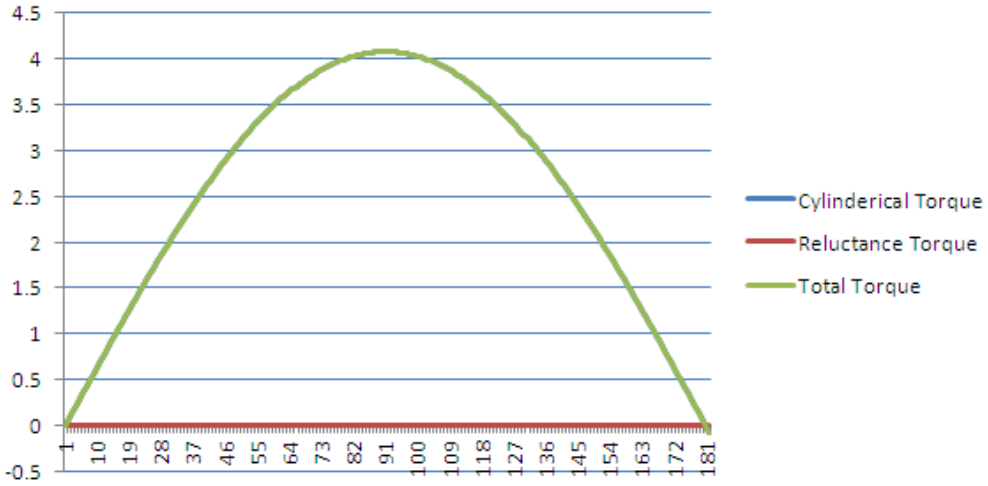

Figure 14. Surface-mounted Motor of Id Reference

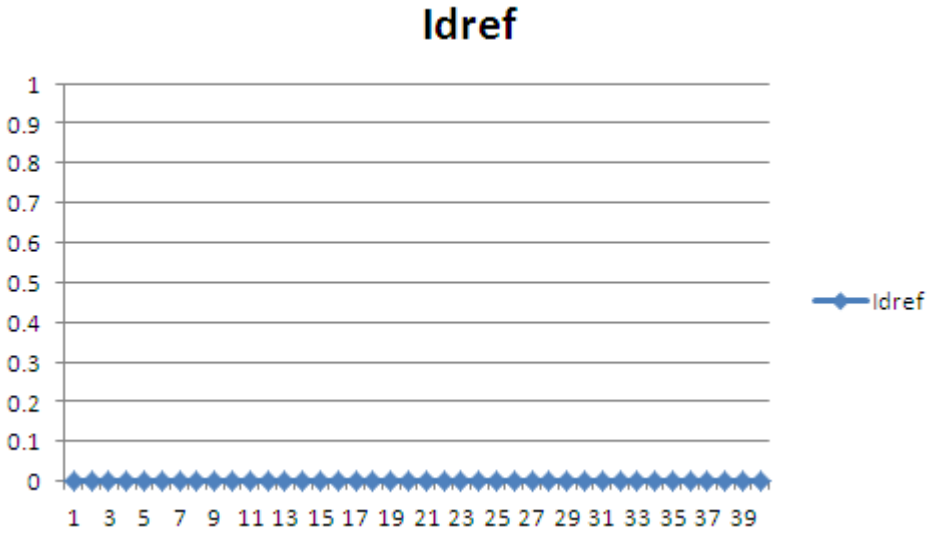

Figure 15. Surface-mounted Motor of Torque Theta

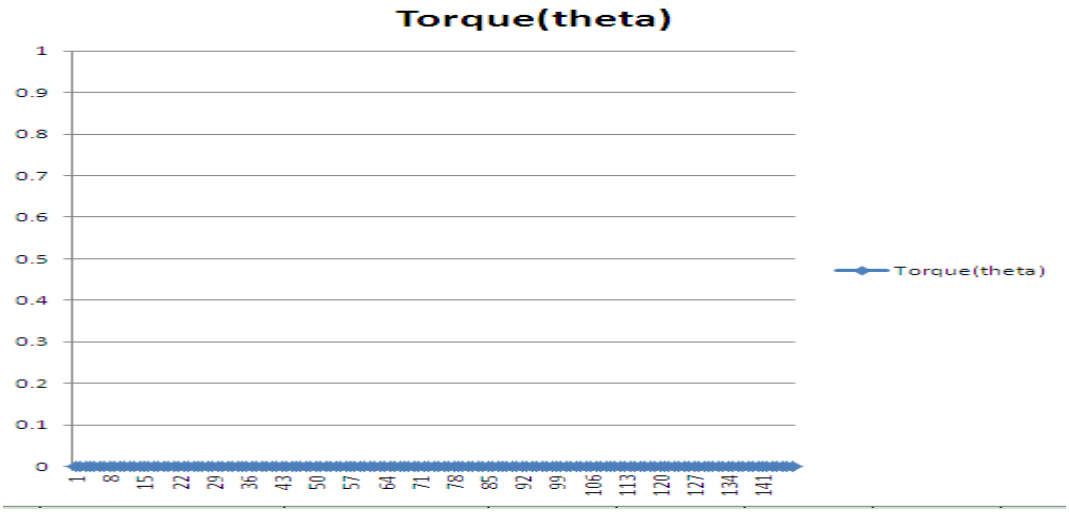

From above simulator figure, our theory of the maximum torque per ampere is impactful.

3 MTPA Implementation

3.1 Obtain the Current of Id

3.1.1 Obtain the steady Iq current

In AD and PI control system has some disturb, in order to obtain the data cleanly, we will add the low pass filter. The Iq input and Iqf will output. So the high frequency yawp will be filtered. And the flow chart as below:

Figure 16. Iq low pass filter

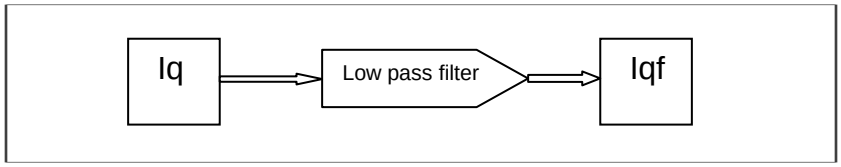

Using the below equation to catch the Idref value. Idref value added the low pass filter if some system control need. The equation as below:

Figure 17. MTPA equation

$$Idref = \frac{-\Psi m + \sqrt{\Psi m^2 + 4*(Ld-Lq)^2*(Iqf)^2}}{2*(Ld-Lq)} \quad (13)$$

By the current Idref from the equation was calculated. We can add the d-axis to control motor to realize the maximum torque per ampere function.

3.2 MTPA Software Implementation

3.2.1 Software Flowchart

By up explain to write the flow chart as below.

Figure 18. Dead Time Compensation Software Flowchart

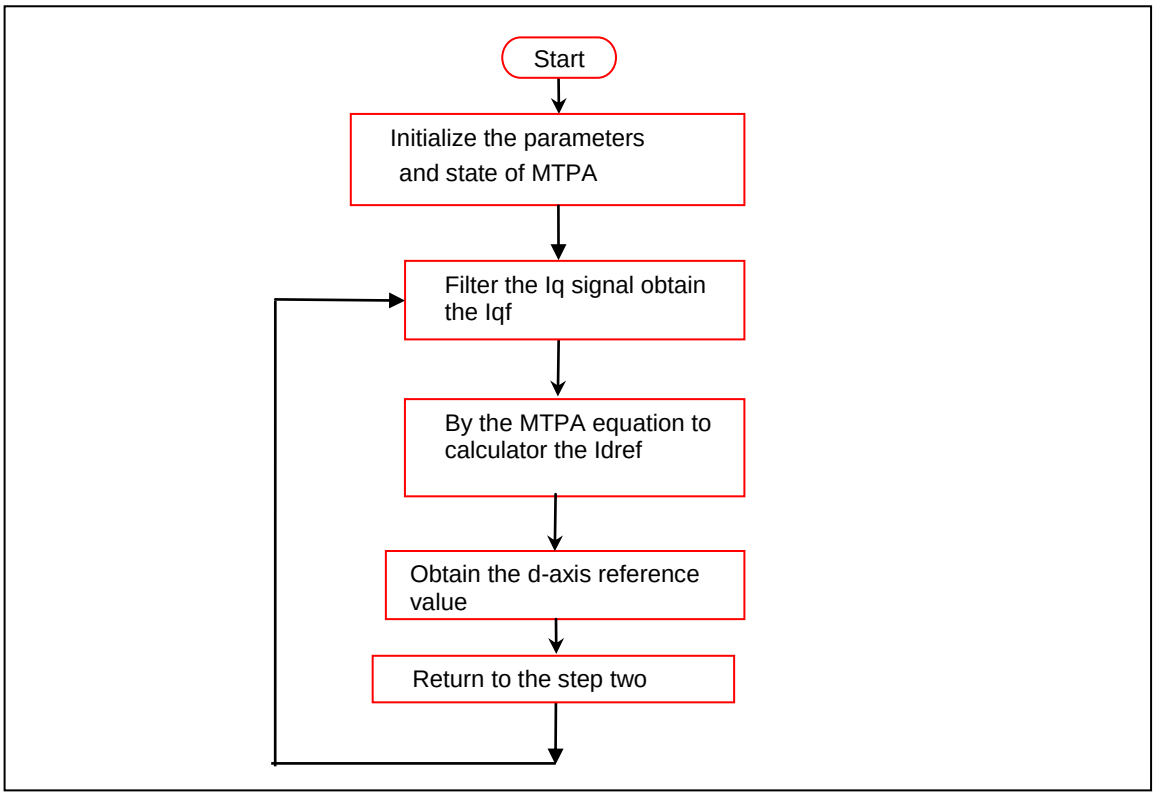

Algorithm flow explanation:

1. Initialize the parameters and state of MTPA.
2. Filter the Iq signal to obtain Iqf.
3. Using filter signal obtain the d-axis current reference;
4. Return to the step two.

3.2.2 Software Code Implement

```
/*****************************************************
Function name:    MTPA
Description: realize the maximum torque per ampere
Input: none
Output: none
*****************************************************/
void MTPA(void)
{
//to realize the MTPA function
    NAME MTPA

    #define SHT_PROGBITS 0x1

    EXTERN Ld
    EXTERN Lq
    EXTERN PLL_LPF
    EXTERN __aeabi_d2uiz
    EXTERN __aeabi_f2uiz
    EXTERN __aeabi_fdiv
    EXTERN __aeabi_fmul
    EXTERN __aeabi_fsub
    EXTERN __aeabi_ui2d
    EXTERN isq_tempf
    EXTERN pmsm_isdref
    EXTERN sqrt

    PUBLIC MTPA_Function
    PUBLIC MTPA_initialize
    PUBLIC MTPA_isdref
    PUBLIC MTPA_isdreff
    PUBLIC MTPA_lpf
    PUBLIC Q0_Inv_DetaL
    PUBLIC Q12_Flux
    PUBLIC Q16_DetaL
    PUBLIC Q24_Square_DetaL
    PUBLIC Q24_Square_Flux
    PUBLIC motor_Flux
```

```
        SECTION `.data`:DATA:REORDER:NOROOT(2)
MTPA_initialize:
        DATA
        DC8 0
        DC8 0, 0, 0
motor_Flux:
        DC32 3EA6E979H
Q16_DetaL:
        DC8 0, 0, 0, 0
Q24_Square_DetaL:
        DC8 0, 0, 0, 0
Q0_Inv_DetaL:
        DC8 0, 0, 0, 0
Q12_Flux:
        DC8 0, 0, 0, 0
Q24_Square_Flux:
        DC8 0, 0, 0, 0
MTPA_isdref:
        DC8 0, 0, 0, 0
MTPA_isdreff:
        DC8 0, 0, 0, 0
MTPA_lpf:
        DC16 50

        SECTION `.text`:CODE:NOROOT(2)
        THUMB
MTPA_Function:
        PUSH    {R4-R6,LR}
        LDR.N   R4,??MTPA_Function_0
        LDRB    R0,[R4, #+0]
        CBNZ.N  R0,??MTPA_Function_1
        MOVS    R0,#+1
        STRB    R0,[R4, #+0]
        LDR.N   R0,??MTPA_Function_0+0x4
        LDR     R0,[R0, #+0]
        LDR.N   R1,??MTPA_Function_0+0x8
        LDR     R1,[R1, #+0]
        BL      __aeabi_fsub
```

```
        MOV     R5,R0
        LDR.N   R6,??MTPA_Function_0+0xC  ;; 0x447a0000
        MOV     R1,R6
        BL      __aeabi_fdiv
        LDR.N   R1,??MTPA_Function_0+0x10  ;; 0x477fff00
        BL      __aeabi_fmul
        BL      __aeabi_f2uiz
        STR     R0,[R4, #+8]
        LSRS    R0,R0,#+4
        MULS    R0,R0,R0
        STR     R0,[R4, #+12]
        MOV     R0,R6
        MOV     R1,R5
        BL      __aeabi_fdiv
        BL      __aeabi_f2uiz
        STR     R0,[R4, #+16]
        LDR     R1,[R4, #+4]
        LDR.N   R0,??MTPA_Function_0+0x14  ;; 0x457ff000
        BL      __aeabi_fmul
        BL      __aeabi_f2uiz
        STR     R0,[R4, #+20]
        MULS    R0,R0,R0
        STR     R0,[R4, #+24]
        POP     {R4-R6,PC}
??MTPA_Function_1:
        LDR.N   R5,??MTPA_Function_0+0x18
        LDR     R0,[R4, #+8]
        CMP     R0,#+0
        BEQ.N   ??MTPA_Function_2
        LDR.N   R0,??MTPA_Function_0+0x1C
        LDR     R1,[R0, #+0]
        LDR     R0,[R0, #+0]
        LDR     R6,[R4, #+20]
        LDR     R2,[R4, #+24]
        LDR     R3,[R4, #+12]
        ASRS    R1,R1,#+4
        MULS    R1,R1,R3
        ASRS    R0,R0,#+4
```

```
        MULS     R0,R0,R1
        ADD      R0,R2,R0, LSR #+6
        BL       __aeabi_ui2d
        BL       sqrt
        BL       __aeabi_d2uiz
        SUBS     R0,R6,R0
        LDR      R1,[R4, #+16]
        MULS     R0,R0,R1
        ASRS     R0,R0,#+5
        STR      R0,[R4, #+28]
        ADD      R2,R4,#+36
        ADD      R1,R4,#+32
        BL       PLL_LPF
        LDR      R0,[R4, #+32]
        B.N      ??MTPA_Function_3
??MTPA_Function_2:
        STR      R0,[R4, #+28]
??MTPA_Function_3:
        STRH     R0,[R5, #+0]
        POP      {R4-R6,PC}       ;; return
        Nop
        DATA
??MTPA_Function_0:
        DC32     MTPA_initialize
        DC32     Lq
        DC32     Ld
        DC32     0x447a0000
        DC32     0x477fff00
        DC32     0x457ff000
        DC32     pmsm_isdref
        DC32     isq_tempf

        SECTION `.iar_vfe_header`:DATA:REORDER:NOALLOC:NOROOT(2)
        SECTION_TYPE SHT_PROGBITS, 0
        DATA
        DC32 0
```

```
        SECTION __DLIB_PERTHREAD:DATA:REORDER:NOROOT(0)
        SECTION_TYPE SHT_PROGBITS, 0

        SECTION __DLIB_PERTHREAD_init:DATA:REORDER:NOROOT(0)
        SECTION_TYPE SHT_PROGBITS, 0

        END
}
```

4 MTPA Function Performance

4.1 Basic Verification

4.1.1 Test waveform of run motor

By the theory of the up expound, realize the algorithm and obtain the perfect performance, as show as below figure added MTPA function and no-added MTPA function waveform:

Figure 19. Added the MTPA Function

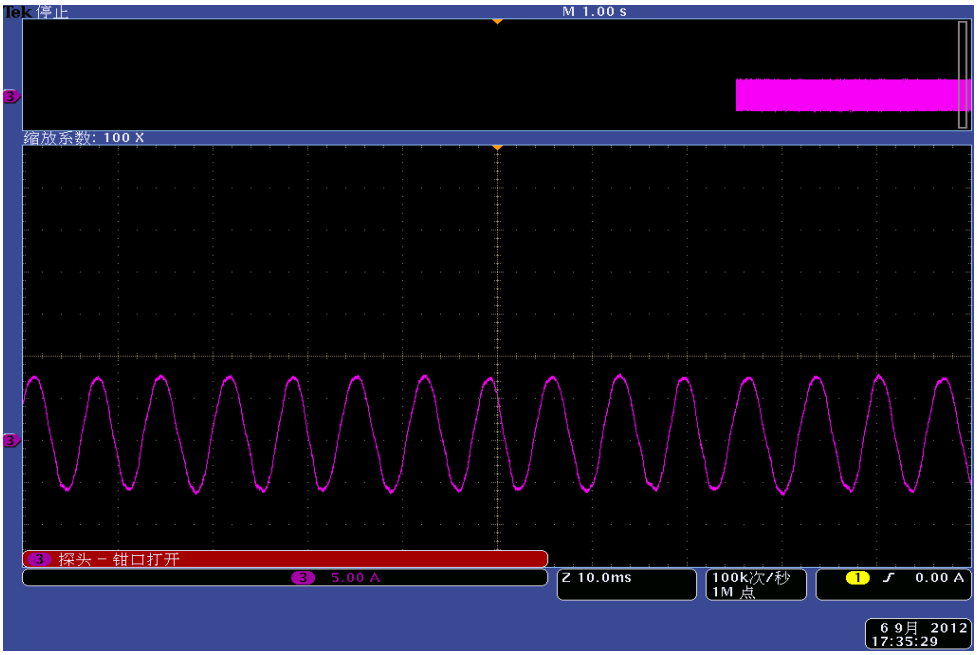

Figure 20. No-added the MTPA Function

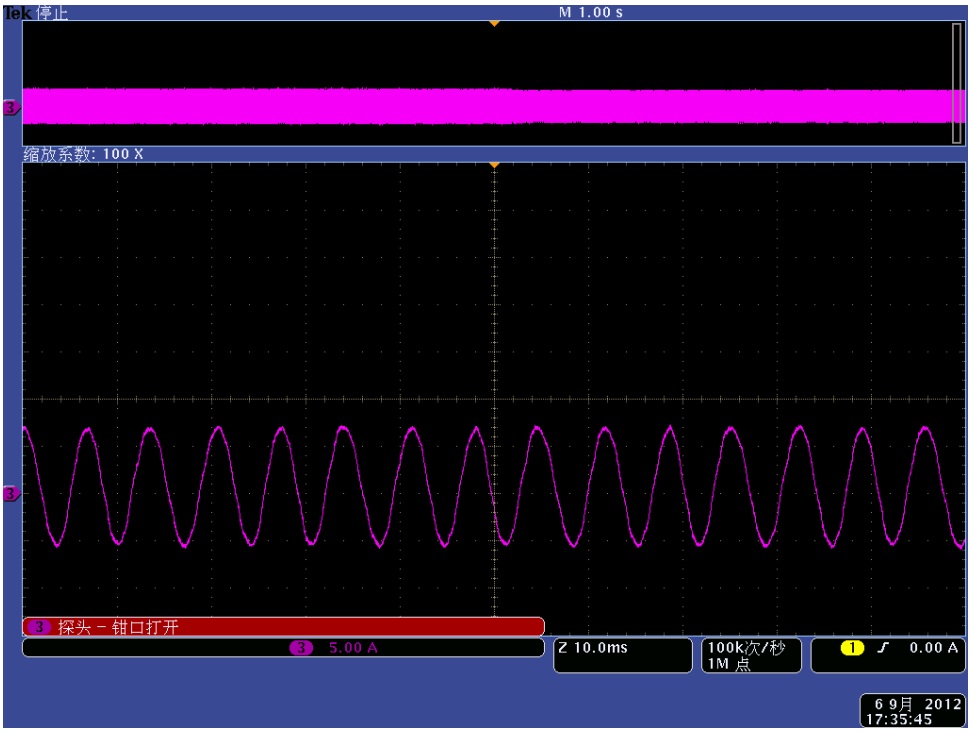

From above, maximum torque per ampere function performance is very well. From the test motors purpose, also decrease the power waste and pyrotoxin. So the MTPA theory can carry into execution.

5 Conclusion

This paper presented maximum torque control only with PLL observers and general current control systems. In the proposed method, the d-axis current in the PLL observer for the sensorless control are set to the different values from the motor one so as to make the estimated reference frame equal to maximum torque control frame. The proposed system give explicitly have maximum torque controller, and the calculation is not complicated. Moreover, the proposed control is easy applying other motor and control system. The effectiveness of the proposed method has been confirmed by experimental results.

Document History

Document Title: AN205350 – FM3 MB9BFXXXX/MB9AFXXXX Series MTPA

Document Number: 002-05350

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	FCZH	09/05/2012	Initial release
*A	5262192	FCZH	05/10/2016	Migrated Spansion Application Note MCU-AN-510111-E-11 to Cypress format.
*B	5843225	AESATMP9	08/03/2017	Updated logo and copyright.

Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at Cypress Locations.

Products

ARM® Cortex® Microcontrollers	cypress.com/arm
Automotive	cypress.com/automotive
Clocks & Buffers	cypress.com/clocks
Interface	cypress.com/interface
Internet of Things	cypress.com/iot
Memory	cypress.com/memory
Microcontrollers	cypress.com/mcu
PSoC	cypress.com/psoc
Power Management ICs	cypress.com/pmic
Touch Sensing	cypress.com/touch
USB Controllers	cypress.com/usb
Wireless Connectivity	cypress.com/wireless

PSoC® Solutions

PSoC 1 | PSoC 3 | PSoC 4 | PSoC 5LP | PSoC 6

Cypress Developer Community

Forums | WICED IOT Forums | Projects | Videos | Blogs | Training | Components

Technical Support

cypress.com/support

All other trademarks or registered trademarks referenced herein are the property of their respective owners.

Cypress Semiconductor
198 Champion Court
San Jose, CA 95134-1709

© Cypress Semiconductor Corporation, 2011-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.