
1




Insert CY3240 USB-I2C Bridge Kit CD. Install kit contents, PSoC Designer, PSoC Programmer, and Bridge Control Panel.

2

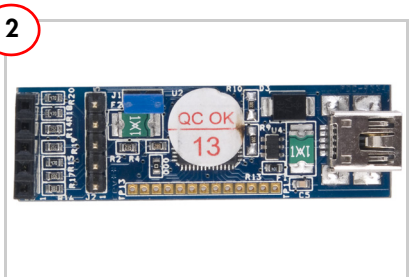


Remove the CY3240 USB-I2C Bridge from the package.

3

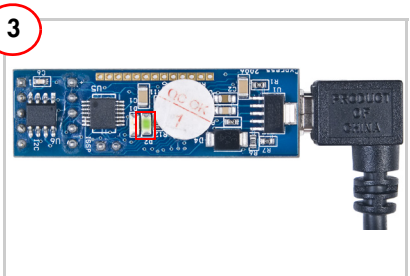


Connect the USB A to Mini B cable and the bridge to the PC. LED D2 (green) lights up.

4

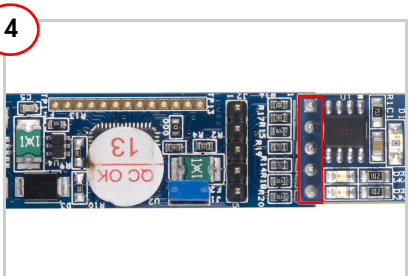


Plug in the I2C slave demo board to header J3 of the bridge board.

5

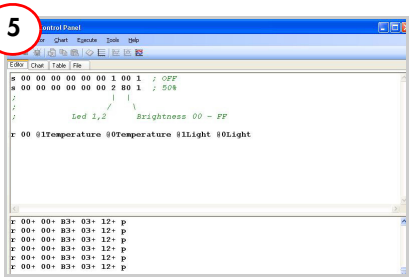


Open the Bridge Control Panel.
Click the Toggle Power button to power the board.

6

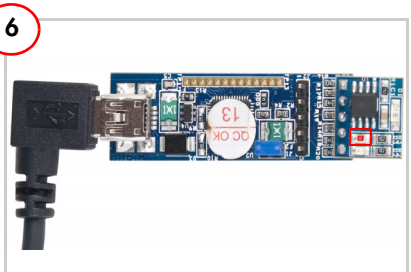

LED D1 of CY3240 USB-I2C Bridge and LEDs D3 and D2 of demo board light up.

CY3240 USB-I2C Bridge Kit Details

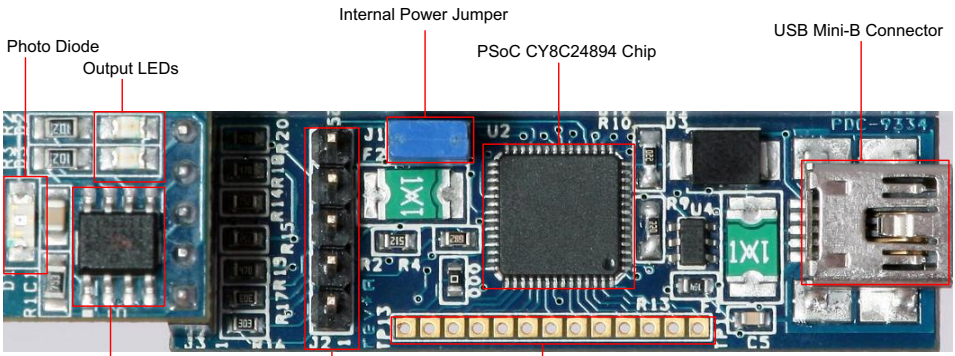

For the latest information about this kit visit
www.cypress.com/go/CY3240-I2USB

© 2011 Cypress Semiconductor Corporation. All rights reserved. All trademarks or registered trademarks referenced herein are the properties of their respective owners.

DOC#: 001-66748 REV *A