Demo#1: PSoC Rocks!

1

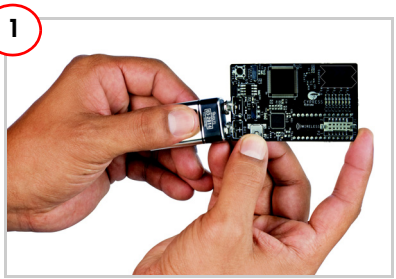

Connect the 9V battery to the board.

2



Wave the kit and view the message as shown.

3



Insert the kit CD and run the CD's autorun utility.

4



Open the guide and install software

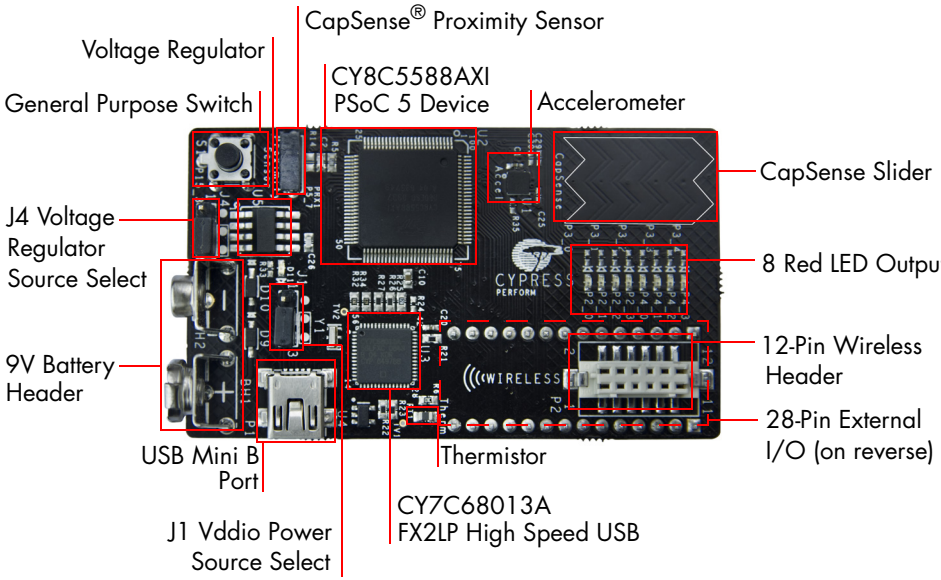

For the latest information about this kit visit
www.cypress.com/go/CY8CKIT-014

© 2010 Cypress Semiconductor Corporation. All rights reserved. All trademarks or registered trademarks referenced herein are the properties of their respective owners.

DOC#: 001-57754 REV **