# 8-Bit Voltage Digital to Analog Converter (VDAC8)

1.70

## Features




- Voltage output ranges: 1.020-V and 4.080-V full scale
- Software- or clock-driven output strobe
- Data source can be CPU, DMA, or UDB

## General Description

The VDAC8 component is an 8-bit voltage output Digital to Analog Converter (DAC). The output range can be from 0 to 1.020 V (4 mV/bit) or from 0 to 4.08 V (16 mV/bit). The VDAC8 can be controlled by hardware, software, or a combination of both hardware and software.

## Input/Output Connections

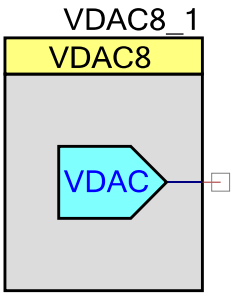This section describes the various input and output connections for the VDAC8. An asterisk (*) in the list of I/Os indicates that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

### Vout – Analog

The Vout terminal is the connection to the DAC's voltage output. It may be routed to any analog-compatible pin on the PSoC.

**Note** The VDAC, when driven to a pin, cannot drive a value that exceeds the VDDIO for that pin. To get the result you want, set the correct VDDIO supply.

### data[7:0] – Input *

This 8-bit-wide data signal connects the VDAC8 directly to the DAC Bus. The DAC Bus may be driven by UDB-based components or control registers, or it may be routed directly from GPIO pins. This input is enabled by setting the **Data_Source** parameter to **DAC Bus**. If the **CPU or DMA** option is selected instead, the bus connection will disappear from the component symbol.

Use the data[7:0] input when hardware is capable of setting the proper value without CPU intervention. When using this option, the strobe option should be set as **External** as well.

For many applications this input is not required, but instead the CPU or DMA will write a value directly to the data register. In firmware, use the VDAC8_SetValue() function or directly write a value to the VDAC8 data register.

## strobe – Input *

The strobe input is an optional signal input and is selected with the **StrobeMode** parameter.

- If **StrobeMode** is set to **External**, the strobe pin is visible and must be connected to a valid digital source. In this mode the data is transferred from the VDAC8 register to the DAC on the next positive edge of the strobe signal.
- If **StrobeMode** is set to **Register Write**, the pin disappears from the symbol and any write to the data registers is immediately transferred to the DAC.

For audio or periodic sampling applications, the same clock used to clock the data into the DAC can also be used to generate an interrupt. In this case, each rising edge of the clock would transfer data to the DAC and cause an interrupt to get the next value loaded into the DAC register.

# Component Parameters

Drag a VDAC8 component onto your design and double click it to open the **Configure** dialog.




The VDAC8 component provides the following parameters.

## Range

This parameter allows you to set one of two voltage ranges as the default value. The range may be changed at any time during runtime with the VDAC8_SetRange() function.

| Range | Lowest Value | Highest Value | Step Size |
|---|---|---|---|
| Range_1_Volt | 0.0 mV | 1.020 V | 4 mV |
| Range_4_Volt | 0.0 mV | 4.080 V | 16 mV |
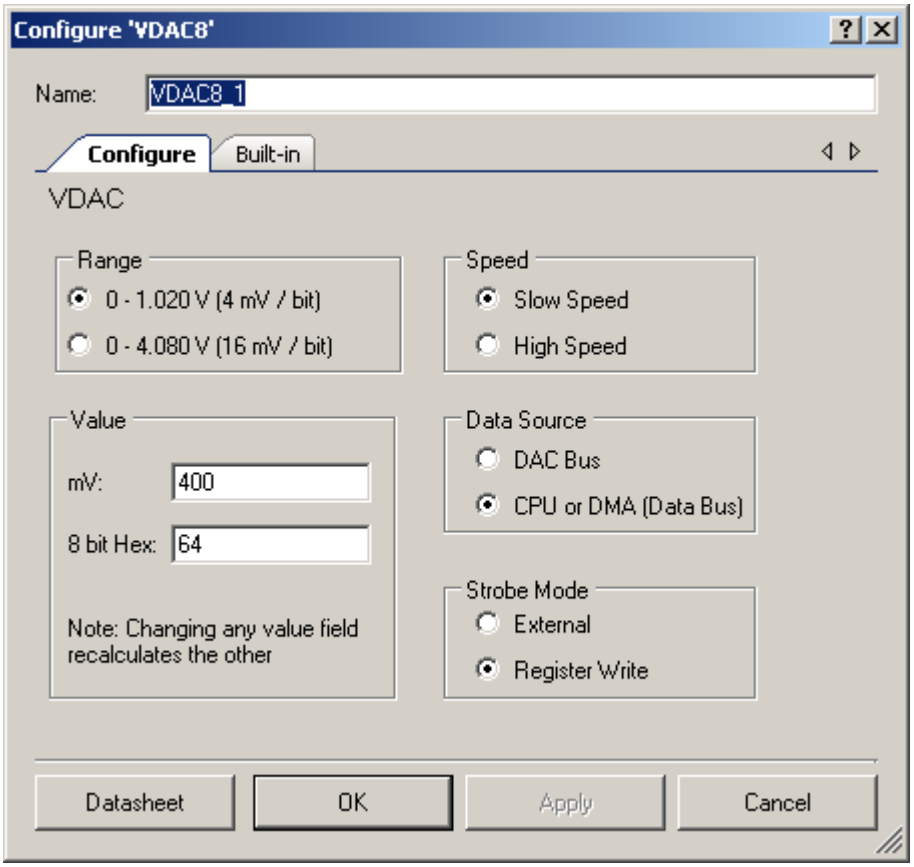
### Output equations:

- 1-V range: $V_{OUT}$ = (value/256) × 1.024 V
- 4-V range: $V_{OUT}$ = (value/256) × 4.096 V

**Note** The term “value” is a number between 0 and 255.

## Value

This is the initial value the VDAC8 presents after the VDAC8_Start() command is executed. The VDAC8_SetValue() function or a direct write to the DAC register will override the default value at anytime. Legal values are between 0 and FF, inclusive. The **mV** field represents VDAC output voltage in millivolts and the **8 bit Hex** field represents VDAC input data value in Hex.

## Speed

This parameter provides two settings: **Slow** and **Fast**. In **Slow** mode, the settling time is slower but consumes less operating current. In **Fast** mode, the voltage settles much faster, but at a cost of more operating current.

## Data Source

This parameter selects the source of the data to be written into the DAC register. If you want the CPU (firmware) or the DMA to write data to the VDAC8, select **CPU or DMA (Data Bus)**. If you want data to be written directly from the UDBs or a UDB-based component, select **DAC Bus**.

When **DAC Bus** is selected, the input is indicated on the VDAC symbol. There is only one DAC Bus, so multiple VDACs cannot have independent hardware (UDB) data sources.

When **Data Source** is set as **DAC Bus**, the customizer automatically sets the **Strobe Mode** to **External** and disables the option so that you cannot change it.

**Note** For PSoC 5 silicon, a write of a new value to the DAC may result in an indeterminate value on the DAC output. To output the desired value, write or strobe the DAC twice with the same value. Because the first write may result in an indeterminate output, the time between the two writes should be minimized. This applies to writes by CPU, DMA, and strobe. The API IDAC8_SetValue() writes the value provided twice to mitigate this issue for CPU writes.

## Strobe Mode

This parameter selects whether the data is immediately written to the DAC when the data is written into the VDAC8 data register. This mode is enabled when the **Register Write** option is selected. When the **External** option is selected, a clock or signal from the UDBs controls when the data is written from the DAC register to the actual DAC.

# Resources

The VDAC8 component uses one viDAC8 analog block.

| Analog Blocks | Digital Blocks | | | | | API Memory (Bytes) | | Pins (per External I/O) |
|---|---|---|---|---|---|---|---|---|
| | Datapaths | Macro cells | Status Registers | Control Registers | Counter7 | Flash | RAM | |
| 1 viDAC8 HW | N/A | N/A | N/A | N/A | N/A | 354 | 3 | 1 |

# Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name “VDAC8_1” to the first instance of a component in a given design. You can rename the instance to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is “VDAC8.”

| Function | Description |
|---|---|
| VDAC8_Start() | Initializes the VDAC8 with default customizer values. |
| VDAC8_Stop() | Disables the VDAC8 and sets it to the lowest power state. |
| VDAC8_SetSpeed() | Sets DAC speed. |
| VDAC8_SetValue() | Sets value between 0 and 255 with the given range. |
| VDAC8_SetRange() | Sets range to 1 or 4 volts. |
| VDAC8_Sleep() | Stops and saves the user configuration. |
| VDAC8_WakeUp() | Restores and enables the user configuration. |
| VDAC8_Init() | Initializes or restores default VDAC8 configuration |
| VDAC8_Enable() | Enables the VDAC8. |
| VDAC8_SaveConfig() | Saves nonretention DAC data register value. |
| VDAC8_RestoreConfig() | Restores nonretention DAC data register value |

## Global Variables

| Variable | Description |
|---|---|
| VDAC8_initVar | Indicates whether the VDAC8 has been initialized. The variable is initialized to 0 and set to 1 the first time VDAC8_Start() is called. This allows the component to restart without reinitialization after the first call to the VDAC8_Start() routine.<br>If reinitialization of the component is required, then the VDAC8_Init() function can be called before the VDAC8_Start() or VDAC8_Enable() function. |

## void VDAC8_Start(void)

**Description:** This is the preferred method to begin component operation. VDAC8_Start() sets the initVar variable, calls the VDAC8_Init() function, calls the VDAC8_Enable() function, and powers up the VDAC8 to the given power level. A power level of 0 is the same as executing the VDAC_Stop() function.

**Parameters:** None

**Return Value:** None

**Side Effects:** If the initVar variable is already set, this function only calls the VDAC8_Enable() function.

## void VDAC8_Stop(void)

**Description:** Powers down VDAC8 to lowest power state and disables output.

**Note** This API is not recommended for use on PSoC 3 ES2 and PSoC 5 silicon. These devices have a defect that causes connections to several analog resources to be unreliable when not powered. The unreliability manifests itself in silent failures (for example, unpredictably bad results from analog components) when the component using that resource is stopped. VDAC8 components should always be powered up (by calling the VDAC8_Start() API). Do not call the VDAC8_Stop() API.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void VDAC8_SetSpeed(uint8 speed)

**Description:** Set DAC speed.

**Parameters:** uint8 speed: Sets DAC speed. See the following table for valid parameters.

| Option | Description |
|---|---|
| VDAC8_LOWSPEED | Low speed (low power) |
| VDAC8_HIGHSPEED | High speed (high power) |

**Return Value:** None

**Side Effects:** None

## void VDAC8_SetRange(uint8 range)

**Description:** Sets range to 1 or 4 volts.

**Parameters:** uint8 range: Sets full-scale range for VDAC8. See the following table for ranges.

| Option | Description |
|---|---|
| VDAC8_RANGE_1V | Sets full-scale range of 1.020 V |
| VDAC8_RANGE_4V | Set full-scale range of 4.080 V |

**Return Value:** None

**Side Effects:** None

## void VDAC8_SetValue(uint8 value)

**Description:** Sets value to output on VDAC8. Valid values are between 0 and 255.

**Parameters:** uint8 value: Value between 0 and 255. A value of 0 is the lowest (zero) and a value of 255 is the full-scale value. The full-scale value is dependent on the range, which is selected with the VDAC8_SetRange() API.

**Return Value:** None

**Side Effects:** On PSoC 3 ES2, PSoC 3 Production, and PSoC 5 silicon, the VDAC8_SetValue() function should be called after enabling power to the VDAC.

## void VDAC8_Sleep(void)

**Description:** This is the preferred API to prepare the component for sleep. The VDAC8_Sleep() API saves the current component state. Then it calls the VDAC8_Stop() function and calls VDAC8_SaveConfig() to save the hardware configuration.

Call the VDAC8_Sleep() function before calling the CyPmSleep() or the CyPmHibernate() function. Refer to the PSoC Creator *System Reference Guide* for more information about power management functions.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void VDAC8_Wakeup(void)

**Description:** This is the preferred API to restore the component to the state when VDAC8_Sleep() was called. The VDAC8_Wakeup() function calls the VDAC8_RestoreConfig() function to restore the configuration. If the component was enabled before the VDAC8_Sleep() function was called, the VDAC8_Wakeup() function will also re-enable the component.

**Parameters:** None

**Return Value:** None

**Side Effects:** Calling the VDAC8_Wakeup() function without first calling the VDAC8_Sleep() or VDAC8_SaveConfig() function may produce unexpected behavior.

## void VDAC8_Init(void)

**Description:** Initializes or restores the component according to the customizer Configure dialog settings. It is not necessary to call VDAC8_Init() because the VDAC8_Start() API calls this function and is the preferred method to begin component operation.

**Parameters:** None

**Return Value:** None

**Side Effects:** All registers will be set to their initial values. This will reinitialize the component. Calling the VDAC8_Init() function requires a call to VDAC8_SetValue() if you intend to set a new value other than what is currently in the register.

## void VDAC8_Enable(void)

**Description:** Activates the hardware and begins component operation. It is not necessary to call VDAC8_Enable() because the VDAC8_Start() API calls this function, which is the preferred method to begin component operation.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void VDAC8_SaveConfig(void)

**Description:** This function saves the component configuration and nonretention registers. This function will also save the current component parameter values, as defined in the Configure dialog or as modified by appropriate APIs. This function is called by the VDAC8_Sleep() function.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

## void VDAC8_RestoreConfig(void)

**Description:** This function restores the component configuration and nonretention registers. This function will also restore the component parameter values to what they were before calling the VDAC8_Sleep() function.

**Parameters:** None

**Return Value:** None

**Side Effects:** Calling this function before calling VDAC_Sleep() may result in unexpected behavior.

## DMA Wizard

VDAC8 components do not require implementation of a DMA Request signal. The typical usage is signal generation. The data rate to VDAC8 components should be controlled externally. You can use the DMA Wizard to configure DMA operation as follows:

| Name of DMA Source/Destination in DMA Wizard | Direction | DMA Req Signal | DMA Req Type | Description |
|---|---|---|---|---|
| VDAC8_Data_PTR | Destination | N/A | N/A | Stores the DAC value between 0 and 255 |

# Sample Firmware Source Code

PSoC Creator provides many example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the “Find Example Project” topic in the PSoC Creator Help for more information.

# Functional Description

When used as a VDAC8, the viDAC8 analog block is configured as voltage DAC and can be used as voltage source.

When used as a VDAC, the output is an 8-bit digital-to-analog conversion voltage to support applications that need reference voltages. In this case, the reference source is a voltage reference from the Analog reference block called VREF(DAC). You can configure the DAC to work in voltage mode by setting the DACx_CR0 [4] register. In this mode, there are two output ranges selected by the DACx_CR0[3:2] register:

- 0 V to 1.024 V
- 0 V to 4.096 V

Both output ranges have 255 equal steps. The VDAC is implemented by driving the output of the current DAC through resistors and obtaining a voltage output. Because no buffer is used, any DC current drawn from the DAC affects the output level. Therefore, in this mode any load connected to the output should be capacitive.

The VDAC can convert up to 1 Msps. Also, the DAC is slower in 4-V mode than 1-V mode, because the resistive load to $V_{SSA}$ is four times larger. In 4-V mode, the VDAC can convert up to 250 ksps.

# Block Diagram and Configuration

Figure 1 shows the block diagram for the VDAC8 component.

**Figure 1. VDAC8 Block Diagram**




# Registers

The functions provided with the component support most of the common runtime functions that most applications require. The following register references provide brief descriptions for the advanced user. The VDAC8_Data register may be used to write data directly to the DAC without using an API. This can be useful for either the CPU or DMA.

## VDAC8_CR0

| Bits | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| Value | RSVD | | | mode | Range[1:0] | | hs | RSVD |

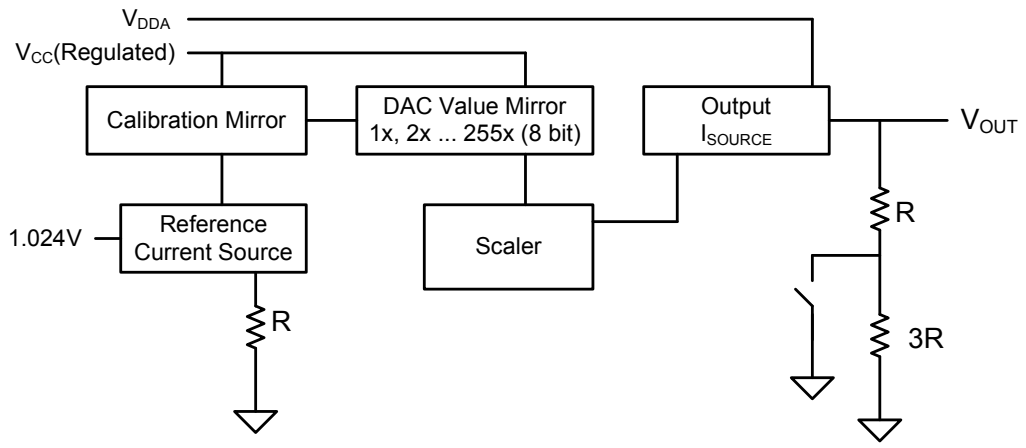- mode: Sets DAC to either voltage or current mode
- Range[1:0]: DAC range settings
- hs: Sets data speed

## VDAC8_CR1

| Bits | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| Value | RSVD | | mx_data | reset_udb_en | mx_idir | idirbit | Mx_ioff | ioffbit |

- mx_data: Selects data source

- reset_udb_en: DAC reset enable
- mx_idir: Mux selection for DAC current direction control
- idirbit: Register source for DAC current direction
- mx_off: Mux selection for DAC current off control
- ioffbit: Register source for DAC current off

### VDAC8_DATA

| Bits | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|---|---|---|---|---|---|---|---|---|
| Value | Data[7:0] | | | | | | | |

- Data[7:0]: DAC data register

# DC and AC Electrical Characteristics for PSoC 3

The following values are based on characterization data. Specifications are valid for –40°C ≤ $T_A$ ≤ 85 °C and $T_J$ ≤ 100 °C except where noted. Unless otherwise specified in the tables below, all Typical values are for $T_A$ = 25 °C, $V_{DDA}$ = 5.0 V, output referenced to analog ground ($V_{SSA}$), fast mode.

### VDAC8 DC Electrical Characteristics

| Parameter | Description | Conditions | Min | Typ | Max | Units |
|---|---|---|---|---|---|---|
| | Resolution | | – | 8 | – | bits |
| INL1 | Integral nonlinearity | 1-V scale | – | ±2.1 | ±2.5 | LSB |
| DNL1 | Differential nonlinearity | 1-V scale | – | ±0.3 | ±1 | LSB |
| $R_{OUT}$ | Output resistance | 1-V scale | – | 4 | – | kΩ |
| | | 4-V scale | – | 16 | – | kΩ |
| $V_{OUT}$ | Output voltage range, code = 255 | 1-V scale | – | 1 | – | V |
| | | 4-V scale, $V_{DDA}$ = 5 V | – | 4[1] | – | V |
| | Monotonicity | | – | – | Yes | – |
| $V_{OS}$ | Zero-scale error | | – | 0 | ±0.9 | LSB |
| FSGainErr | Full-scale gain error | 1-V scale | – | ±1.6 | ±2.5 | % |
| | | 4-V scale | – | ±1.5 | ±2.5 | % |

[1] For $V_{DDA}$ voltage below 5 V, the output only complies to specifications for output voltages below ($V_{DDA}$ – 1 V).

| Parameter | Description | Conditions | Min | Typ | Max | Units |
|---|---|---|---|---|---|---|
| TCGainErr | Temperature coefficient, gain error | 1-V scale | – | – | 0.02 | %FSR/°C |
| | | 4-V scale | – | – | 0.02 | %FSR/°C |
| $I_{DD}$ | Operating current | Slow mode | – | – | 100 | µA |
| | | Fast mode | – | – | 500 | µA |

## Figures

INL versus DAC Code, 1.0-V Range




INL versus DAC Code, 4.0-V Range




Typical DNL versus DAC Code, 1.0-V Range

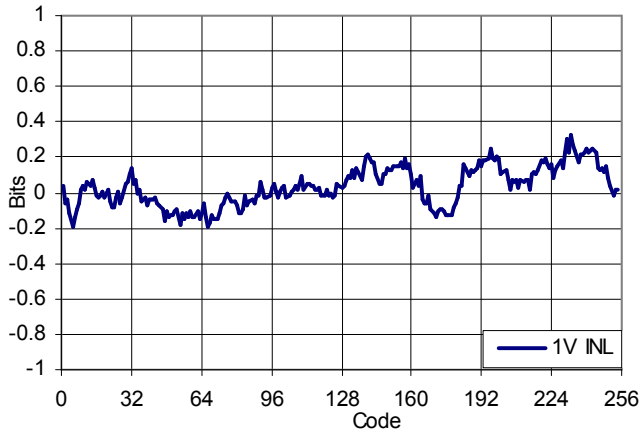


DNL versus DAC Code, 4.0-V Range



VDAC INL versus Temperature, 1-V Mode

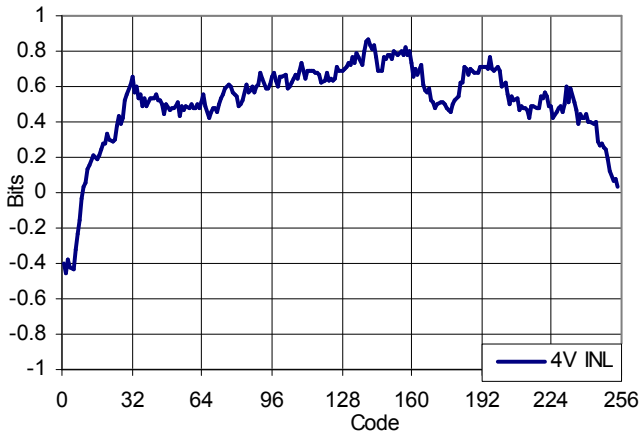


VDAC DNL versus Temperature, 1-V Mode

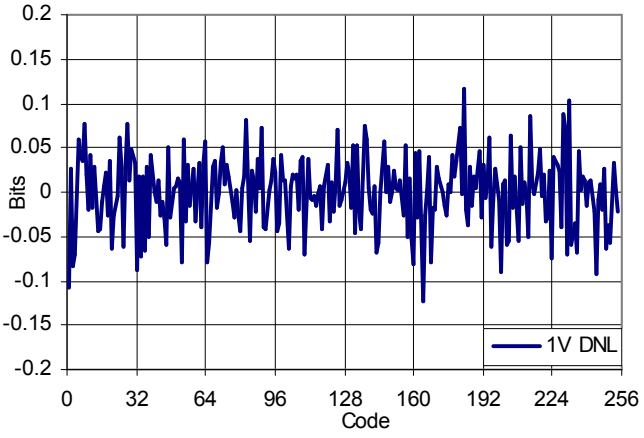


VDAC Full Scale Error versus Temperature, 1-V Mode

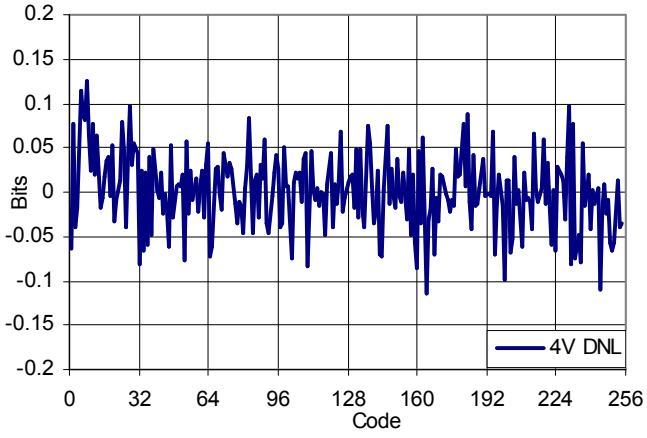


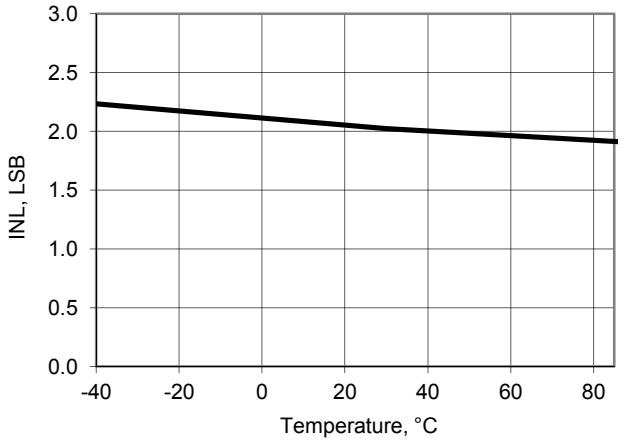VDAC Full Scale Error versus Temperature, 4-V Mode

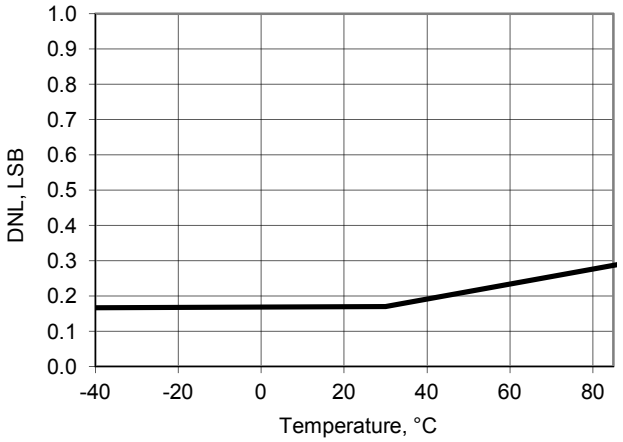


VDAC Operating Current versus Temperature, 1-V Mode, Slow Mode

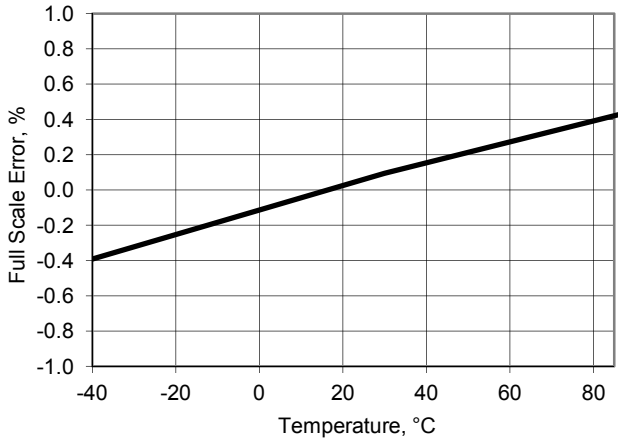


VDAC Operating Current versus Temperature, 1-V Mode, Fast Mode



## VDAC8 AC Electrical Characteristics
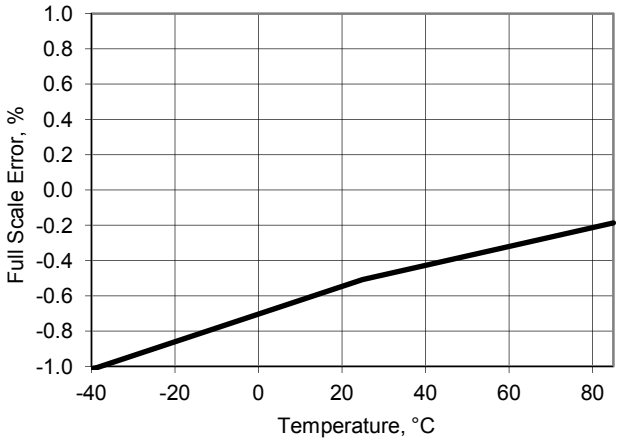
| Parameter | Description | Conditions | Min | Typ | Max | Units |
|---|---|---|---|---|---|---|
| $F_{DAC}$ | Update rate | 1-V scale | – | – | 1000 | ksps |
| | | 4-V scale | – | – | 250 | ksps |
| TsettleP | Settling time to 0.1%, step 25% to 75% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.45 | 1 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.8 | 3.2 | µs |
| TsettleN | Settling time to 0.1%, step 75% to 25% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.45 | 1 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.7 | 3 | µs |
| SRP | Slew rate, step 10% to 90% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.3 | 0.5 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.5 | 1.3 | µs |
| SRN | Slew rate, step 90% to 10% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.3 | 0.5 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.3 | 1.3 | µs |
| Vn4V | Noise density[2] | 4-V scale, code 255 | – | 3 | – | µV/rtHz |
| Vn1V | Noise density[2] | 1-V scale, code 255 | – | 750 | – | nV/rtHz |

### Figures

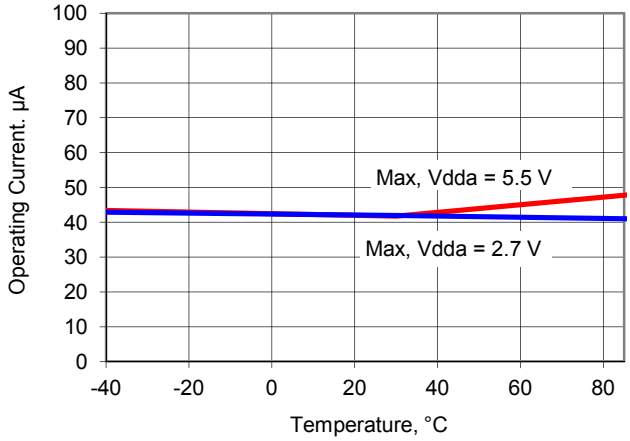Noise Levels, Scale 4 V

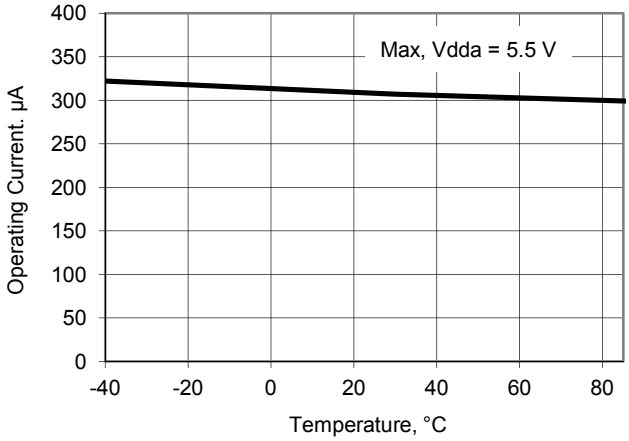


Noise Levels, Scale 1 V




[2] Output noise is directly proportional to code value.

# DC and AC Electrical Characteristics for PSoC 5

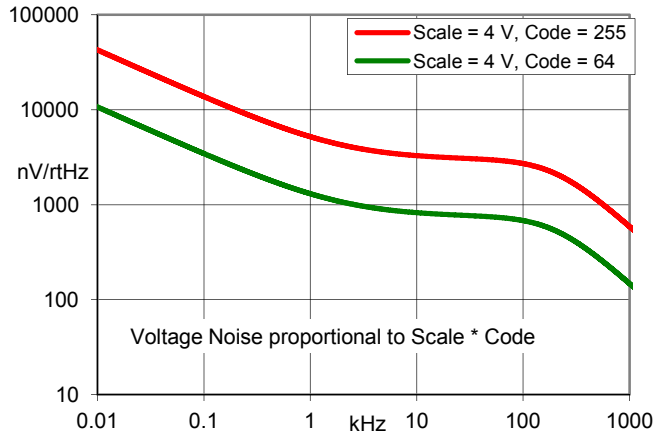The following values are based on characterization data. Specifications are valid for –40°C ≤ $T_A$ ≤ 85 °C and $T_J$ ≤ 100 °C, except where noted. Unless otherwise specified in the following tables, all Typical values are for $T_A$ = 25 °C, $V_{DDA}$ = 5.0 V, output referenced to analog ground ($V_{SSA}$), fast mode.

## VDAC8 DC Electrical Characteristics
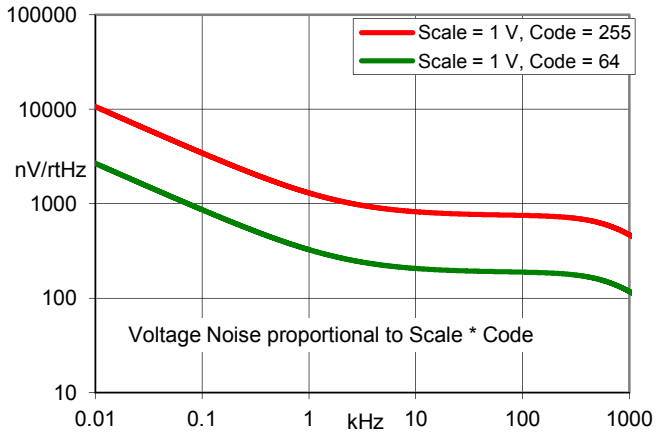
| Parameter | Description | Conditions | Min | Typ | Max | Units |
|---|---|---|---|---|---|---|
| | Resolution | | – | 8 | – | bits |
| INL1 | Integral nonlinearity | 1-V scale | – | ±2.1 | ±2.5 | LSB |
| DNL1 | Differential nonlinearity | 1-V scale | – | ±0.3 | ±1 | LSB |
| $R_{OUT}$ | Output resistance | 1-V scale | – | 4 | – | kΩ |
| | | 4-V scale | – | 16 | – | kΩ |
| $V_{OUT}$ | Output voltage range, code = 255 | 1-V scale | – | 1.02 | – | V |
| | | 4-V scale, $V_{DDA}$ = 5 V | – | 4.08[3] | – | V |
| | Monotonicity | | – | – | Yes | – |
| $V_{OS}$ | Zero-scale error | | – | 0 | ±0.9 | LSB |
| Eg | Gain error | 1-V scale | – | – | ±5 | % |
| | | 4-V scale | – | – | ±5 | % |
| TC_Eg | Temperature coefficient, gain error | 1-V scale | – | – | 0.03 | %FSR/°C |
| | | 4-V scale | – | – | 0.03 | %FSR/°C |
| $I_{DD}$ | Operating current | 4-V Slow mode | – | – | 100 | µA |
| | | 4-V Fast mode | – | – | 500 | µA |
| | | 1-V Slow mode | | | 300 | µA |
| | | 1-V Fast mode | | | 600 | µA |

[3] For $V_{DDA}$ voltage below 5 V, the output only complies to specifications for output voltages below ($V_{DDA}$ – 1 V).

## Figures

VDAC INL versus Input Code, 1-V Mode




VDAC DNL versus Input Code, 1-V Mode




VDAC INL versus Temperature, 1-V Mode




VDAC DNL versus Temperature, 1-V Mode

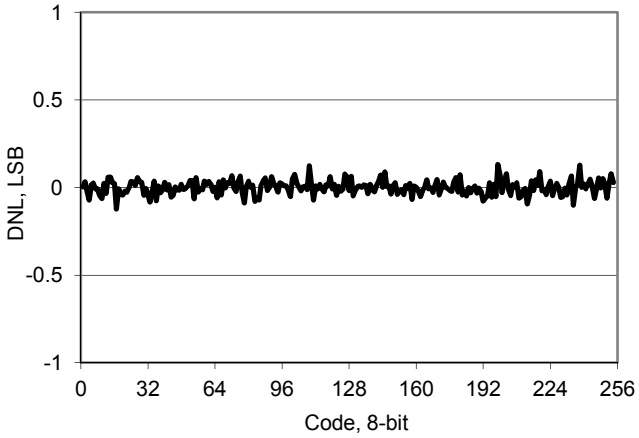


VDAC Full Scale Error versus Temperature, 1-V Mode

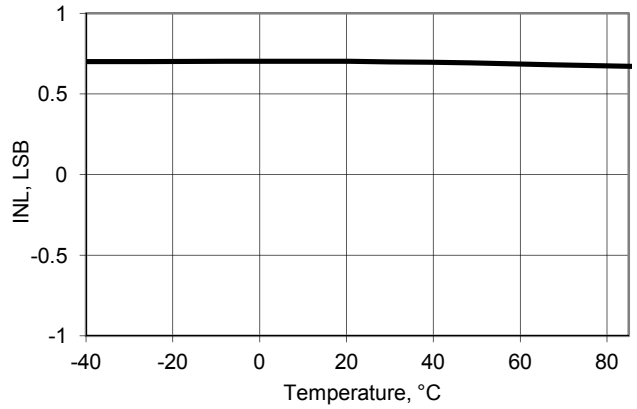


VDAC Full Scale Error versus Temperature, 4-V Mode



VDAC Operating Current versus Temperature, 1-V Mode, Slow Mode

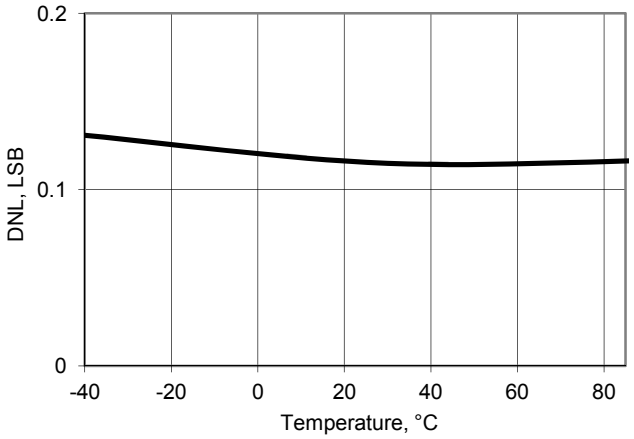


VDAC Operating Current versus Temperature, 1-V Mode, Fast Mode

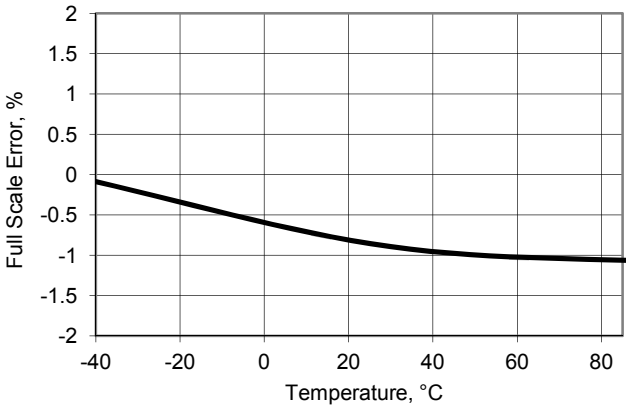


## VDAC8 AC Electrical Characteristics
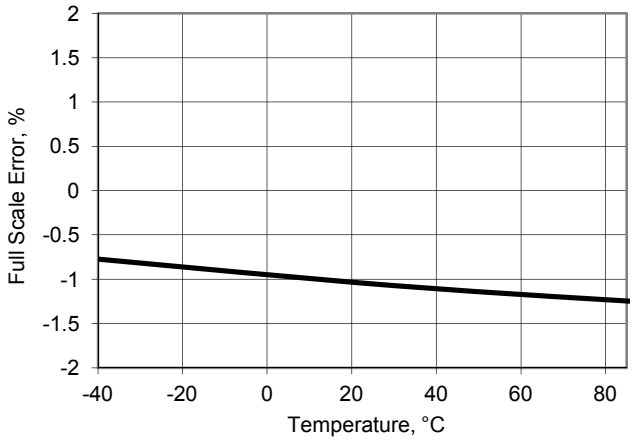
| Parameter | Description | Conditions | Min | Typ | Max | Units |
|---|---|---|---|---|---|---|
| $F_{DAC}$ | Update rate | 1-V scale | – | – | 1000 | ksps |
| | | 4-V scale | – | – | 250 | ksps |
| TsettleP | Settling time to 0.1%, step 25% to 75% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.45 | 1 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.8 | 4 | µs |
| TsettleN | Settling time to 0.1%, step 75% to 25% | 1-V scale, $C_{LOAD}$ = 15 pF | – | 0.45 | 1 | µs |
| | | 4-V scale, $C_{LOAD}$ = 15 pF | – | 0.7 | 4 | µs |
| | Voltage Noise | Range = 1 V, fast mode, $V_{DDA}$ = 5 V, 10 kHz | – | 750 | – | nVsqrtHz |
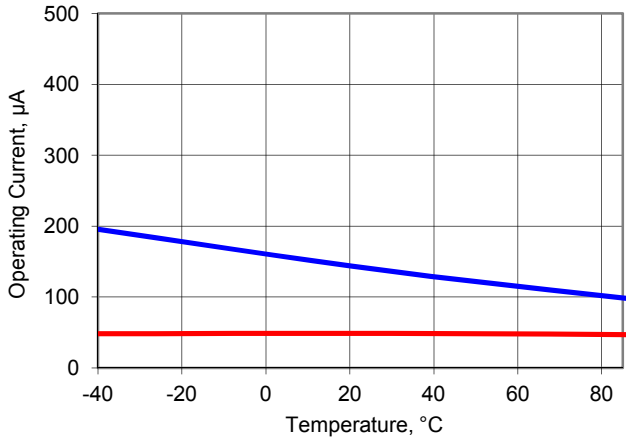
## Figures

VDAC Step Response, Codes 0x40 to 0xC0, 1-V Mode, Fast Mode, $V_{DDA}$ = 5 V

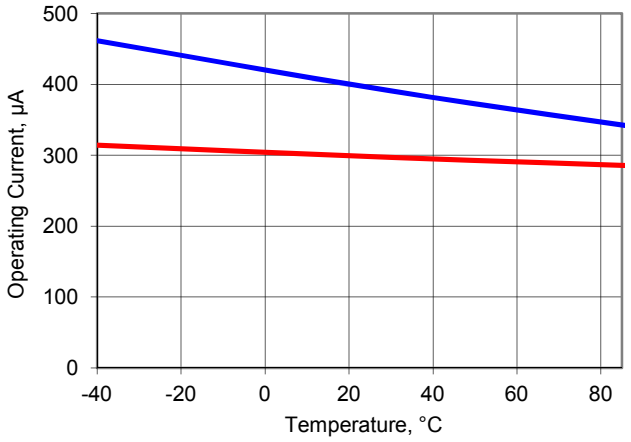


VDAC Glitch Response, Codes 0x7F to 0x80, 1-V Mode, Fast Mode, $V_{DDA}$ = 5 V




VDAC PSRR versus Frequency

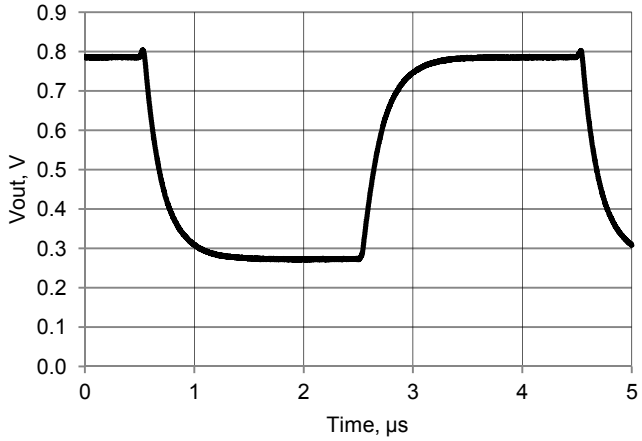


# Terminology

### Integral Nonlinearity (INL)

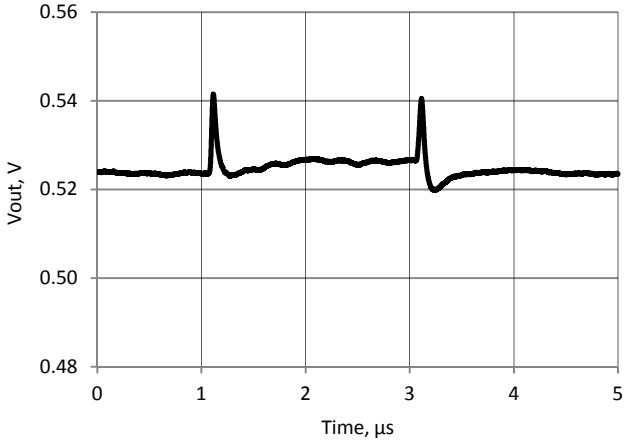INL, integral nonlinearity, is a measure of the maximum deviation, in LSBs, from a best fit straight line over the operating range of the DAC.

### Differential Nonlinearity (DNL)

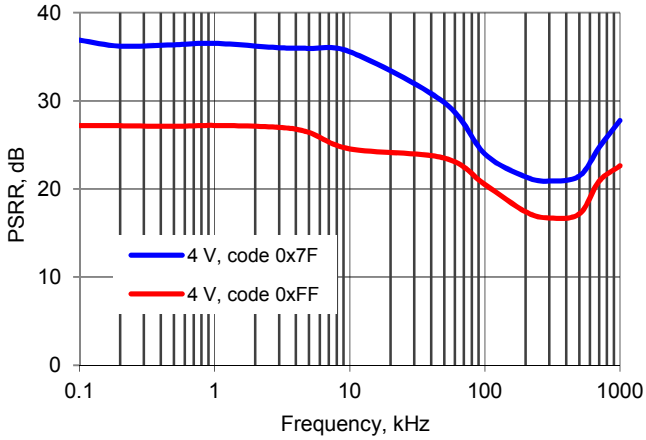DNL, differential nonlinearity, is the difference between the measured change and the ideal 1-LSB change between any two adjacent codes. This VDAC is guaranteed monotonic by design. The output is “thermometer-encoded;” each successive step is made by turning on a separate output source which is summed with previously enabled output sources.

### Montonicity

A DAC is defined as monotonic if the output increases or stays the same with each increasing digital code input value. The VDAC8 component is monotonic over the full operating range of voltage and temperature.

### Zero-Scale Error

Zero-scale error is the difference between the measured value at code 0x00 and the value of the best-fit straight line at code 0x00.

### Full-Scale Gain Error

Full-scale gain error is the difference between the measured value and the nominal value at maximum code. The maximum value is either 1.020 V or 4.080 V at code = 255 (0x00).

### Full-Scale Gain Temperature Coefficient (TC)

Full-scale gain temperature coefficient is the change in full-scale value (maximum code 0xFF) with change in temperature. Gain changes at lower values are proportional to code value.

### Power Supply Rejection Ratio (PSRR)

Power supply rejection ratio measures the isolation of the VDAC's output from the power supply.

### Settling Time

Settling time is the amount of time required for the output to settle to a specific level for a specific digital input change.

### Slew Rate

The slew rate is the maximum rate of change of the output of the VDAC. Slew rate is measured from 10 percent to 90 percent of full-scale value

### Glitch Amplitude

Glitch amplitude is the peak amplitude of the pulse injected into the output when the input code changes a single count at mid-scale (0x7F to 0x80). The pulse is greater than the difference between the static values before and after data change.

### Voltage Noise

Voltage noise is the sum of the noise of the VDAC's output resistance and the current output noise times the output resistance of the VDAC. This noise varies as a function of code value.

# Component Changes

This section lists the major changes in the component from the previous version.

| Version | Description of Changes | Reason for Changes / Impact |
|---|---|---|
| 1.70.a | Added DC and AC Electrical characteristics data for PSoC 5 | |
| | Minor datasheet edits and updates | |
| 1.70 | VDAC8_Stop() API modified for PSoC 5 | Change required to prevent the component from impacting unrelated analog signals when stopped, when using PSoC 5. |
| | Updated VDAC customizer. | ▪ To make VDAC layout same as IDAC layout.<br>▪ To force the Strobe mode to External when Data Source is selected as DAC Bus. |
| 1.60 | Added a GUI Configuration Editor | Previous configuration window did not provide enough information for ease of use. |
| | Added characterization data to datasheet | |
| | Minor datasheet edits and updates | |
| 1.50 | Added Sleep/Wakeup and Init/Enable APIs. | To support low-power modes, and to provide common interfaces to separate control of initialization and enabling of most components. |
| | Added DMA capabilities file to the component. | This file allows the VDAC8 to be supported by the DMA Wizard tool in PSoC Creator. |

© Cypress Semiconductor Corporation, 2011. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.