CY8CKIT-007 PSoC® 3 PRECISION ANALOG VOLTMETER DEMO KIT QUICK START GUIDE

1

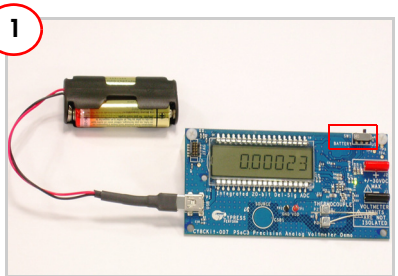

1. Power the Kit through USB Connector from 2-AA battery pack.
2. Switch SW1 to the USB position (right).

2

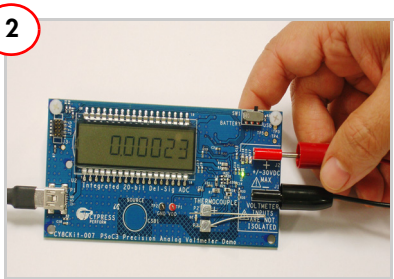

Connect the test leads.

CAUTION The input range is limited to -30V DC to +30V DC DO NOT use AC voltage.

3

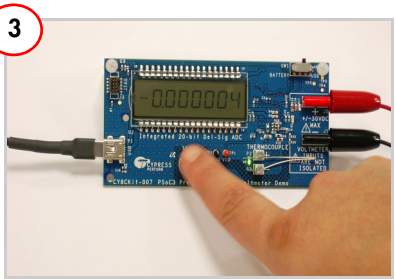

Press the source button to toggle between voltage inputs (Thermocouple and test leads).

4

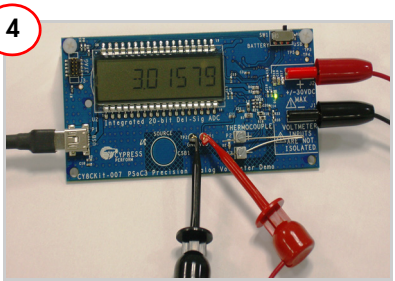

Use TP1 and TP2 test points to measure kit power source.

5

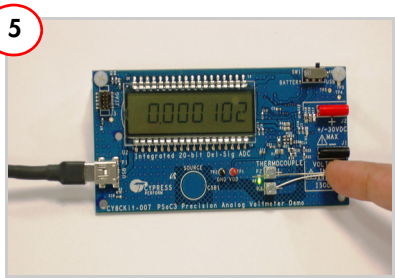

Touch thermocouple and monitor voltage displayed on LCD.

6



Refer to the Kit Guide for project files.

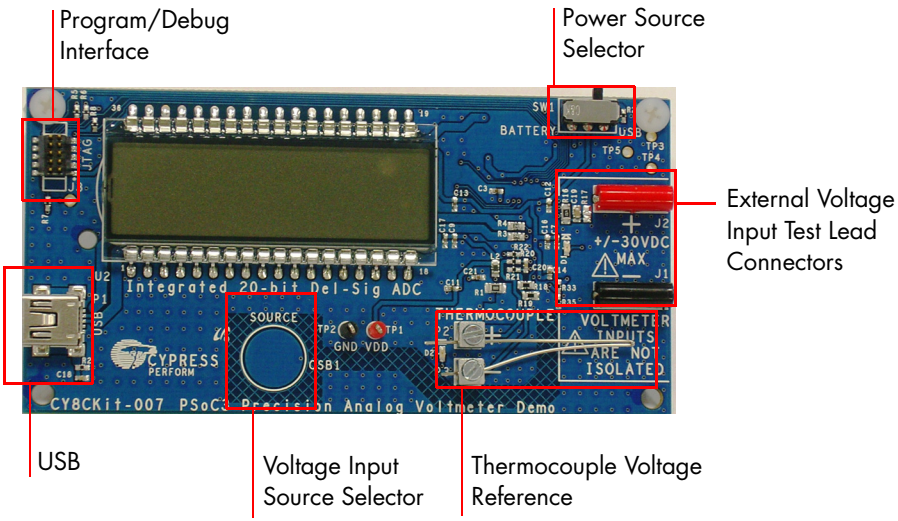

For the latest information about this kit visit
www.cypress.com/go/CY8CKIT-007

© 2009 Cypress Semiconductor Corporation. All rights reserved. All trademarks or registered trademarks referenced herein are the properties of their respective owners.