

ModusToolbox™ Device Configurator user guide

ModusToolbox™ tools package version 3.1.0

Device Configurator version 4.10

About this document

Scope and purpose

This guide provides information and instructions for using the Device Configurator to update various parameters for your ModusToolbox™ application.

Intended audience

This document helps application developers understand how to use the Device Configurator as part of creating a ModusToolbox™ application.

Document conventions

Convention	Explanation
Bold	Emphasizes heading levels, column headings, menus and sub-menus
<i>Italics</i>	Denotes file names and paths.
Courier New	Denotes APIs, functions, interrupt handlers, events, data types, error handlers, file/folder names, directories, command line inputs, code snippets
File > New	Indicates that a cascading sub-menu opens when you select a menu item

Abbreviations and definitions

- **Resource** – Includes peripherals, pins, clocks, etc. used in an application.
- **Configurator** – A GUI-based tool used to configure a resource.
- **Application** – One or more projects related to each other.
- **Personality** – A file that defines a resource behavior.
- **Device Support Library** – A device support library provides critical firmware and device data files to configurators. Device support libraries are identified with a file named *props.json*. It is used to find things like other tools, devices, and personalities.

Reference documents

Refer to the following documents for more information as needed:

- [ModusToolbox™ tools package user guide](#)
- [ModusToolbox™ tools package release notes](#)
- API reference guides

Table of contents

Table of contents


- 1 Overview 3**
- 2 Launch the Device Configurator 4**
 - 2.1 make command4
 - 2.2 VS Code and Eclipse4
 - 2.3 Executable (GUI).....4
 - 2.4 Open configuration file5
 - 2.5 Create new configuration5
 - 2.6 Executable (CLI).....6
- 3 Quick start..... 7**
- 4 Code generation..... 9**
- 5 GUI description10**
 - 5.1 Menus..... 10
 - 5.2 Device tabs 11
 - 5.3 Resource tabs 11
 - 5.4 Panes 11
 - 5.5 Icons..... 11
- 6 Resources tabs.....12**
 - 6.1 Peripherals 13
 - 6.2 Pins 14
 - 6.3 Analog-Routing tab 15
 - 6.4 System tab..... 18
 - 6.5 Peripheral-Clocks tab..... 19
 - 6.6 DMA tab..... 19
- 7 Panes.....20**
 - 7.1 Parameters pane20
 - 7.2 Notice List.....22
 - 7.3 Code Preview pane.....23
- 8 Version changes24**

Overview

1 Overview

The Device Configurator is part of a collection of tools included with the ModusToolbox™ software. Use the Device Configurator to enable and configure device peripherals, such as clocks and pins, as well as standard MCU peripherals that do not require their own tool.

Some complex peripherals, such as CAPSENSE™, SegLCD, etc., have specialized configuration tools, and the Device Configurator provides links to launch those separate tools (see [Launch other configurators](#)). After configuring and saving a particular device’s settings, the Device Configurator generates firmware for use in your application (see [Code generation](#)).

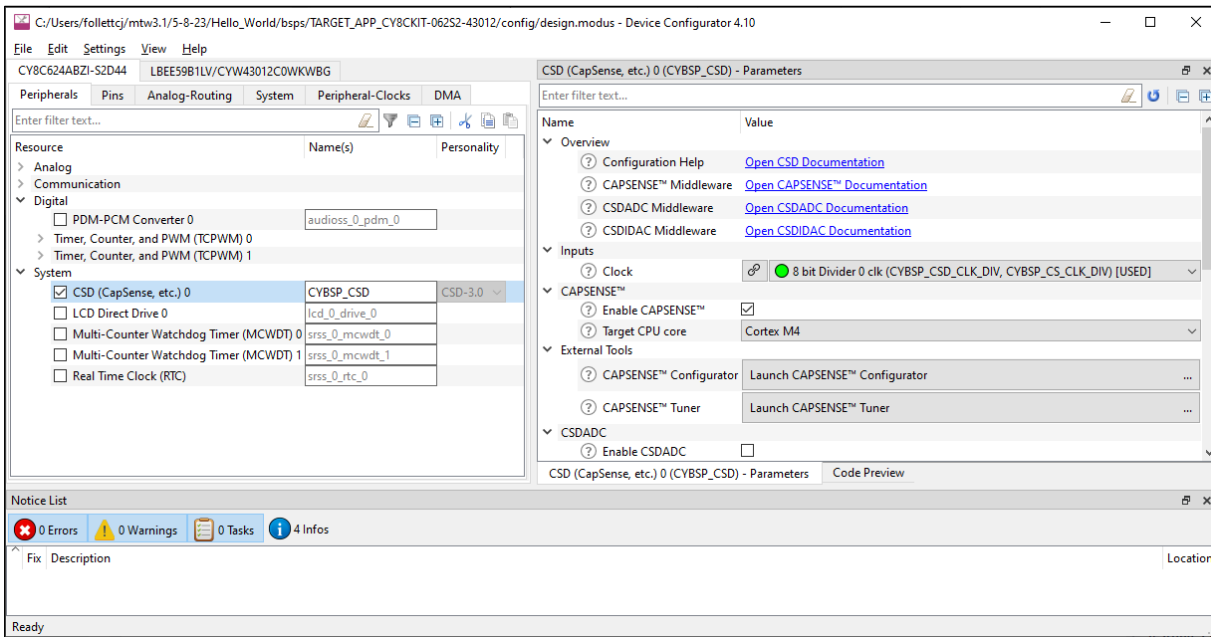

Launch the Device Configurator

2 Launch the Device Configurator

You can launch the Device Configurator in various ways as described in this section; however, the tool's configuration (*design.modus*) file requires an association to an application in order to obtain device configuration information.

The *design.modus* file contains all the required hardware configuration information about the device for the application. When you save updates, the Device Configurator generates/updates source code in the *GeneratedSource* directory next to the *design.modus* file. Applications use the *design.modus* file and generated source code in future application builds.

2.1 make command

As described in the [ModusToolbox™ tools package user guide](#) build system chapter, you can run numerous `make` commands in the application directory, such as launching the Device Configurator. After you have created a ModusToolbox™ application, navigate to the application directory and type the following command in the appropriate bash terminal window:

```
make device-configurator
```

This opens the Device Configurator using the application's *design.modus* file.

2.2 VS Code and Eclipse

VS Code and Eclipse have tools to launch the BSP Assistant from within an open application. Refer to the applicable user guide for more details:

- [VS Code for ModusToolbox™ user guide](#)
- [Eclipse IDE for ModusToolbox™ user guide](#)

2.3 Executable (GUI)

If you don't have an application or if you just want to see what the configurator looks like, you can launch the Device Configurator GUI by running its executable as appropriate for your operating system (for example, double-click it or select it using the Windows **Start** menu). By default, it is installed here:


```
<install_dir>/ModusToolbox/tools_<version>/device-configurator-<version>
```

When launched this way, the Device Configurator opens without any configuration information. You can either open a specific **.modus* file or create a new one.

Launch the Device Configurator

2.4 Open configuration file

Click **File > Open** and navigate to the location of the **.modus* file to open. The tool may open the following dialog, indicating that it cannot find the device support library (*props.json*) file:

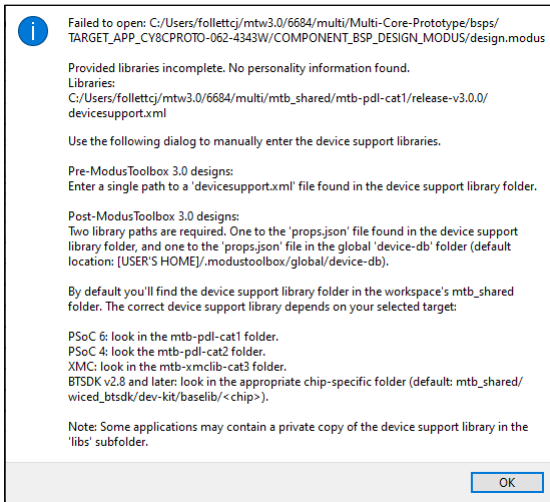


The dialog provides pointers for where you can find the appropriate file for your device. Click **OK** to close the dialog, and then navigate to the appropriate directory containing the *props.json* file.

2.5 Create new configuration

Click **File > New** to open the Create Design dialog, which provides fields to create new **.modus* files.

To create a new **.modus* file:

1. Click the **Browse [. . .]** button next to **File name**, navigate to the location to save the new file, and enter a file name.
2. Click the **Browse [. . .]** button next to **Libraries**, navigate to the location of the device-db *props.json* file, and select it. Also, find and select the appropriate PDL *props.json* file.
3. Select a **Device** from the pull-down menu.
4. If applicable, select one or more **Additional devices** from the list.
5. Click **OK** to close the dialog and load the new **.modus* file into the Device Configurator.

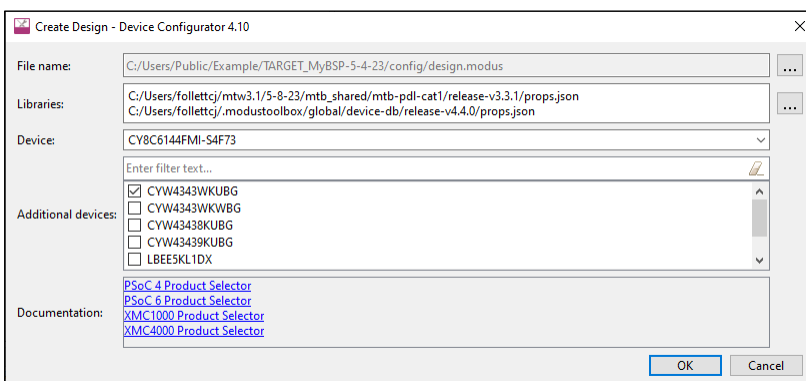

Launch the Device Configurator

2.6 Executable (CLI)


The Device Configurator executable can be run from the command line, and it also has a "cli" version of the executable as well. Running configurator executables from the command line can be useful as part of batch files or shell scripts to re-generate the source code based on the latest configuration settings. The exit code for the executable is zero if the operation is successful, or non-zero if the operation encounters an error. For more information about the command-line options, run the executable using the `-h` option.

Quick start


3 Quick start

This section provides a simple workflow for how to use the Device Configurator.

1. [Launch the Device Configurator.](#)
2. Enable a desired peripheral on the [Peripherals tab](#) by clicking the enable check box. Notice the [Parameters pane](#) becomes populated with fields.

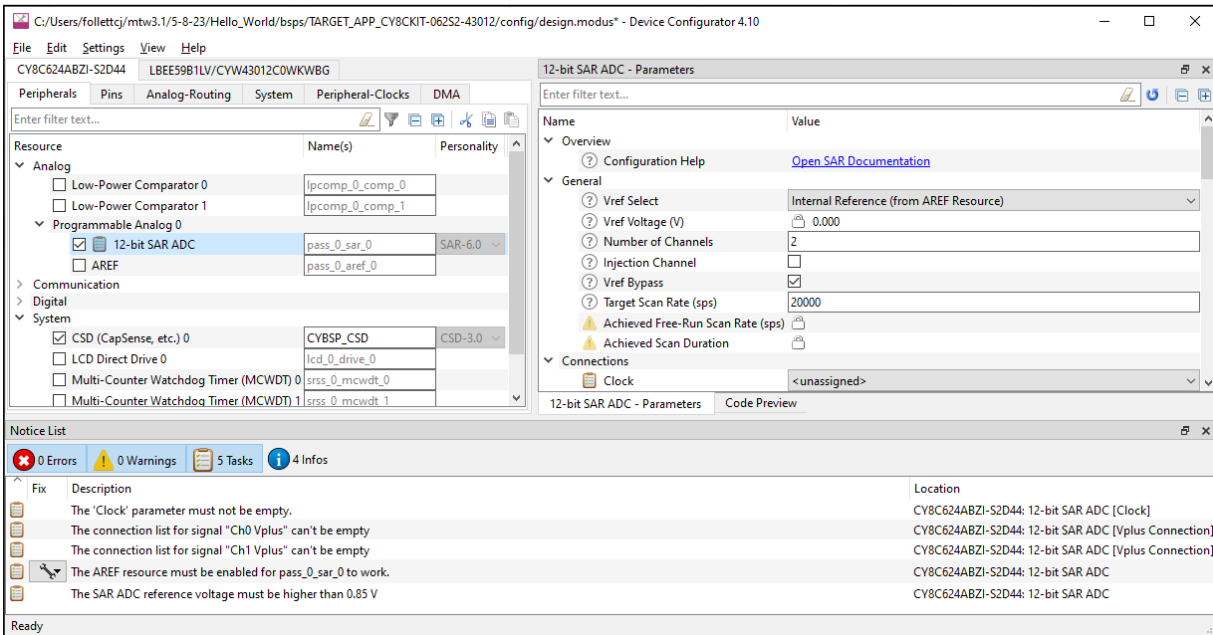


3. Notice also that a new task may appear in the [Notice List pane](#).
See [Icons](#) for descriptions of the various icons displayed in the Device Configurator.
4. Double-click on a task to jump to the parameter that needs to be addressed.

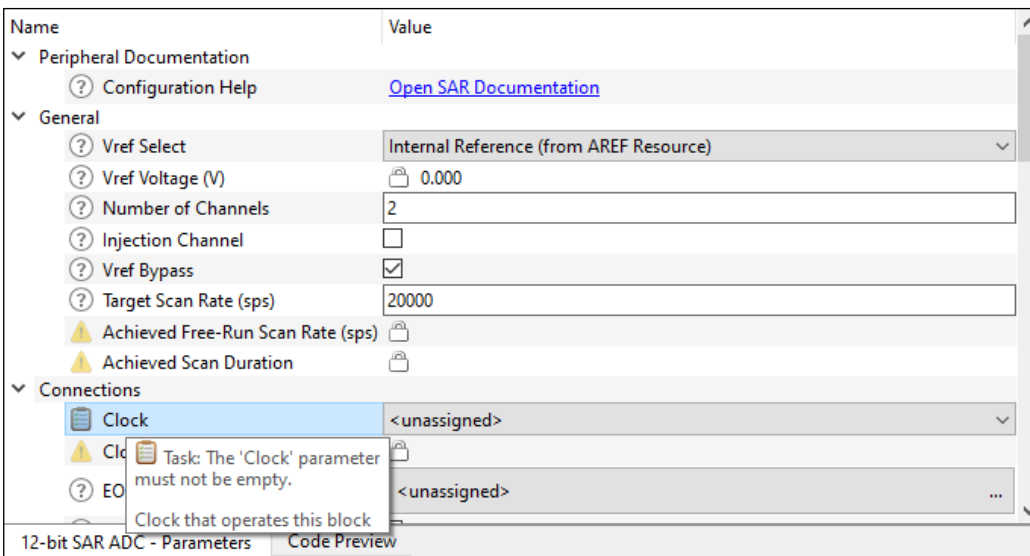

5. Select an appropriate [parameter value](#) and the task - should be removed from the Notice List.

Quick start

- When all tasks have been completed, select the [Code Preview pane](#) to see a preview of the code that will be generated upon saving.

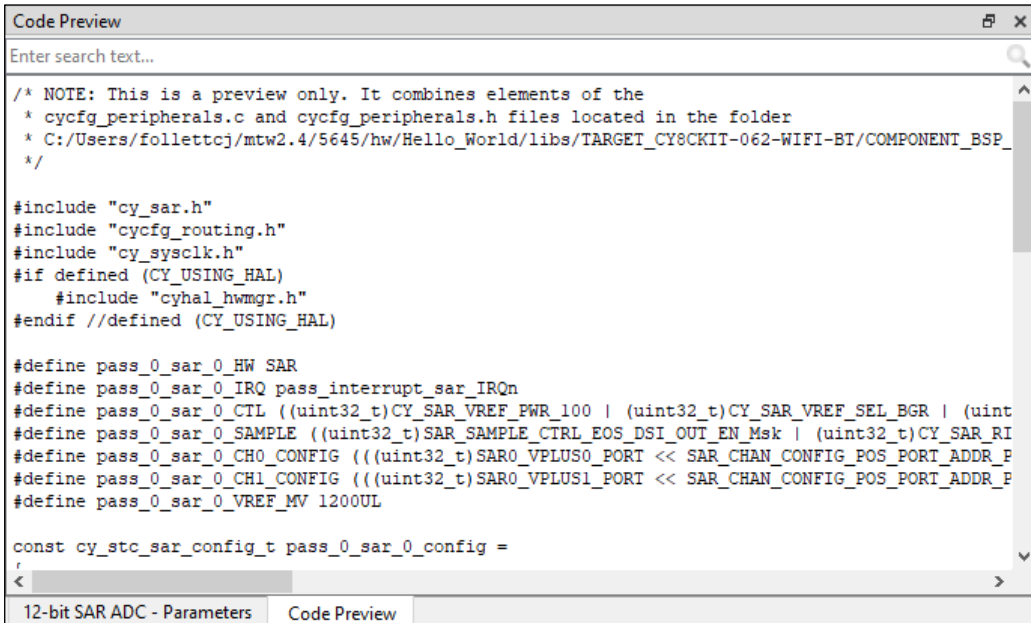

```

Code Preview
Enter search text...

/* NOTE: This is a preview only. It combines elements of the
 * cycfg_peripherals.c and cycfg_peripherals.h files located in the folder
 * C:/Users/follettj/mtw2.4/5645/hw/Hello_World/libs/TARGET_CY8CKIT-062-WIFI-BT/COMPONENT_BSP_
 */

#include "cy_sar.h"
#include "cycfg_routing.h"
#include "cy_sysclk.h"
#if defined (CY_USING_HAL)
    #include "cyhal_hwmgr.h"
#endif //defined (CY_USING_HAL)

#define pass_0_sar_0_HW SAR
#define pass_0_sar_0_IRQ pass_interrupt_sar_IRQn
#define pass_0_sar_0_CTL ((uint32_t)CY_SAR_VREF_FWR_100 | (uint32_t)CY_SAR_VREF_SEL_BGR | (uint
#define pass_0_sar_0_SAMPLE ((uint32_t)SAR_SAMPLE_CTRL_EOS_DSI_OUT_EN_Msk | (uint32_t)CY_SAR_RI
#define pass_0_sar_0_CH0_CONFIG (((uint32_t)SAR0_VPLUS0_PORT << SAR_CHAN_CONFIG_POS_PORT_ADDR_P
#define pass_0_sar_0_CH1_CONFIG (((uint32_t)SAR0_VPLUS1_PORT << SAR_CHAN_CONFIG_POS_PORT_ADDR_P
#define pass_0_sar_0_VREF_MV 1200UL

const cy_stc_sar_config_t pass_0_sar_0_config =
<
    <
    >
    >
12-bit SAR ADC - Parameters | Code Preview
    
```

- Use the [various tabs](#) to enable and configure other resources as needed in the same manner as peripherals.
- Save the *.modus file to generate source code.

The Device Configurator generates code into a "GeneratedSource" directory in your Eclipse IDE application, or in the same location you saved the *.modus file for non-Eclipse IDE applications. That directory contains the necessary source (.c) and header (.h) files that use the relevant driver APIs to configure the hardware. Application code then uses this code to configure the system.

- Use the appropriate API in your application code.

Code generation

4 Code generation

The Device Configurator generates structures, defines, and initialization code for the blocks on the chip. All generated code is located in the *GeneratedSource* folder next to the **.modus* file. Refer to the Peripheral Driver Library (PDL) API Reference for more information about this code. Each enabled resource has a link to the specific driver documentation in the [Parameters pane](#).

Note: The Device Configurator generates code based on the hardware resources that are enabled. If a resource is not enabled, no configuration will be generated for it. This means the resource will retain its default reset state. In most cases, this is powered off. However, some features are enabled by default, such as debug connectivity. To disconnect these features, you must call the appropriate API functions to turn the feature off.

The defines and structures are all named based on the resource that created it. In general, these have the form `<resource-name>_config`. These structures can be passed to the PDL functions that are responsible for configuring the hardware block.

The functions are specific to a resource category and have names of the form `init_cycfg_<resource-category>`. The `init` function for a particular resource type is located in *GeneratedSource/cycfg_<resource-category>.h*. There are also the *cycfg.h* and *cycfg.c* files. Include the *cycfg.h* file in your application to access the generated header files. The *cycfg.c* file implements `init_cycfg_all()`, which calls all other generated functions, for example `init_cycfg_pins()`.

The resource types include:

- Clocks: Peripheral clocks.
- Connectivity: Configuration of the programmable analog and digital routing resources.
- Peripherals: Fixed function analog and digital peripherals.
- System: Overall configuration function to setup all power and clock options.

It is up to you to make use of the generated code based on the application's needs. This can be done as part of the application's `main()` loop.

GUI description

5 GUI description

The Device Configurator GUI contains [menus](#), [icons](#), [tabs](#), and several [panes](#) used to configure MCU peripherals.

5.1 Menus

5.1.1 File

- **New** – Creates a new *.modus file. See [Create Design dialog](#) for more information. The current file, if any, will be closed.
- **Open** – Opens an existing *.modus file. The current file, if any, will be closed.
- **Close** – Closes the current file. If there are pending changes, you will be prompted to save the file.
- **Save** – Saves the current file and generates code for the related application. If there are errors in the application, a dialog will indicate such. The file will still be saved.
- **Save As** – Saves the current file with a different name and/or location.
- **Open in System Explorer** – This opens your computer's file explorer tool to the folder that contains the *.modus file.
- **Change Libraries** – Opens a dialog to select a different device support library (*props.json*) file used for resource [Personalities](#).

The path to this file is usually stored relative to the *.modus file. If for any reason the device support library cannot be found (for example, the *.modus file has been moved on disk), you will be prompted to manually enter the path.

Note: This menu option is not available if a command-line override has been used.

- **Recent Files** – Shows up to five recent files that you can open directly.
- **Update All Personalities** – Use this item to update all resource [Personalities](#). This opens a dialog showing all the personalities in the design.
For example, if you load a *.modus file made with an older device support library, there might be many warnings in the [Notice List pane](#) to update personalities or that a personality is no longer supported. Each warning must be addressed, and doing so one at a time can be annoying. The **Update All Personalities** menu item addresses them all at once.
- **Exit** – Closes the tool. You will be prompted to save any pending changes.

5.1.2 Edit

- **Undo** – Undoes the last action or sequence of actions.
- **Redo** – Redoes the last undone action or sequence of undone actions.

5.1.3 Settings

- **Local Content:** Check box to toggle between online and LCS mode, and read the local copy of the manifest file installed from the LCS Manager. Refer to the [LCS Manager CLI user guide](#) for more details.
- **Proxy Settings:** Opens a dialog to specify direct or manual proxy settings.

5.1.4 View

Contains toggles to hide or show different [panes](#). All panes are shown by default. There is also a command to show or hide the Toolbar (hidden by default) and reset the view of the configurator to the default.


GUI description

5.1.5 Help

- **View Help** – Opens this document.
- **About** – Opens the **About** box for version information, with links to open Infineon.com and the current session log file.

5.2 Device tabs

The Device Configurator can be used to configure multiple devices. All devices selected in the [Create Design dialog](#) display in top-level tabs above the [Resource tabs](#).



All the settings for each **Device** tab are configured separately.

Note: If you need to update or change devices, you must use the command line option or make changes manually by editing the makefile. You must also make changes to the BSP makefile or you will encounter build errors. The best way to change devices is to create a custom BSP. Refer to the [ModusToolbox™ user guide](#) for more details.

5.3 Resource tabs








See [Resource tabs](#).

5.4 Panes

See [Panels](#).

5.5 Icons

When configuring various options with this tool, you will see the following icons:

	Indicates there is a tooltip. Hover over the icon to display a brief message about the setting.
	Enables or disables a specific resource.
	There may be occasions where an error, warning, task, or info icon displays for an enabled resource. See Notice List pane for more details.
	When shown in Parameters , this indicates that it is a read-only field.
	When shown for a Resource , this indicates the resource is locked and disabled. There is a tooltip explaining why the resource is locked.
	When shown for a Resource, this indicates the resource is locked and enabled. There is a tooltip explaining why the resource is locked.
	After assigning a signal, clicking this icon jumps to the linked resource(s).

Resources tabs

6 Resources tabs

For most device families, the Device Configurator contains several tabs, each of which provides access to specific resources. However, for some device families, there are no separate tabs; resources are shown in a single pane, sometimes under collapsible trees.

When you enable a resource, or select an enabled resource, the [Parameters pane](#) displays various configuration options. As described under [Icons](#), some enabled resources may contain errors, warnings, tasks, or infos that indicate some action might be required to resolve the issue. See [Notice List pane](#) for more details.

Note: Only the tabs relevant for a selected device are displayed, so some of the tabs may not be included for some devices.

- [Peripherals](#) – Options to enable any of the analog, digital, system, and communication hardware capabilities of the chip that are not related to the platform.
- [Pins](#) – Options for all the pin related resources.
- [Analog-Routing](#) – This tab shows all the analog resources, whether enabled or not, and how they connect. It also allows you to edit routes.
- [System](#) – Options for chip-wide configuration settings such as system clocks, power management, and debug interfaces.
- [Peripheral-Clocks](#) – Options for all the peripheral clocks.
- [DMA](#) – Provides configuration of the DMA channel and transaction descriptors.

Each of the tabs (except the **Analog-Routing** tab) has the following features:

- **Filter** – The **Resource** column shows all available resources in an expandable tree. The filter box above the list of peripherals allows you to limit the peripherals shown in the tree as well as a **Hide** disabled resources filter button. There are also **Expand** and **Collapse** commands.
- **Cut, Copy, Paste** – Use these commands to move and copy settings from one resource of the same type to another.
 - When you use **Cut**, the settings will be copied to the clipboard, and the selected resource will be disabled.
 - When you use **Copy**, the settings will just be copied to the clipboard.
 - When you use **Paste**, the selected resource will be enabled if needed. The selected resource must support the same [Personality](#) name and version as the cut/copied resource.
- **Name(s)** – This displays the current resource name(s). This is an editable field where you can specify optional, alternate names for this resource. This is also used in generated code.

Note: Enter any string in this field. The tool converts the name into a legal C identifier and replaces non-legal characters with underscores. If entering more than one name, use a coma-separated list.


- **Personality** – Each resource has a "Personality" file that contains the information for the given resource.
 - Some peripherals, such as Serial Communication Block (SCB) and Timer, Counter, Pulse Width Modulator (TCPWM), have a pull-down menu to select a specific personality, such as UART, SPI, or I²C.
 - Some peripherals have multiple personality versions from which you can select.
 - Some peripherals have a read-only field that only shows the name of this resource's personality file.

Resources tabs


6.1 Peripherals

The **Peripherals** tab/tree is where you enable various analog, digital, system, and communication peripherals for the device to include in your application. The filter box and the hide disabled button above the list of peripherals allows you to limit the resources shown in the tree. This tab allows you to enter one or more [Names](#) for the resource. It also shows the selected [Personality](#), where applicable.

6.1.1 Device families with tabs

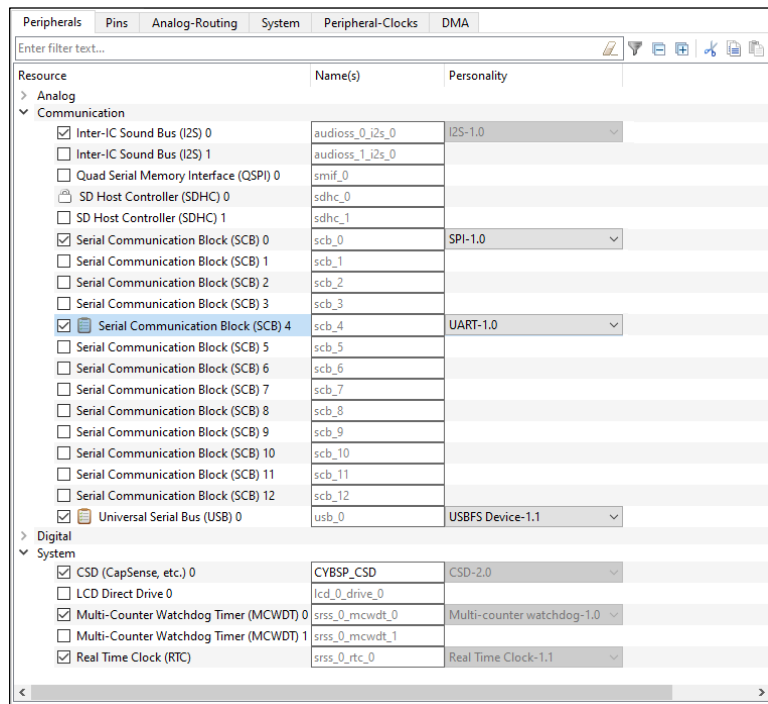

6.1.2 Device families without tabs

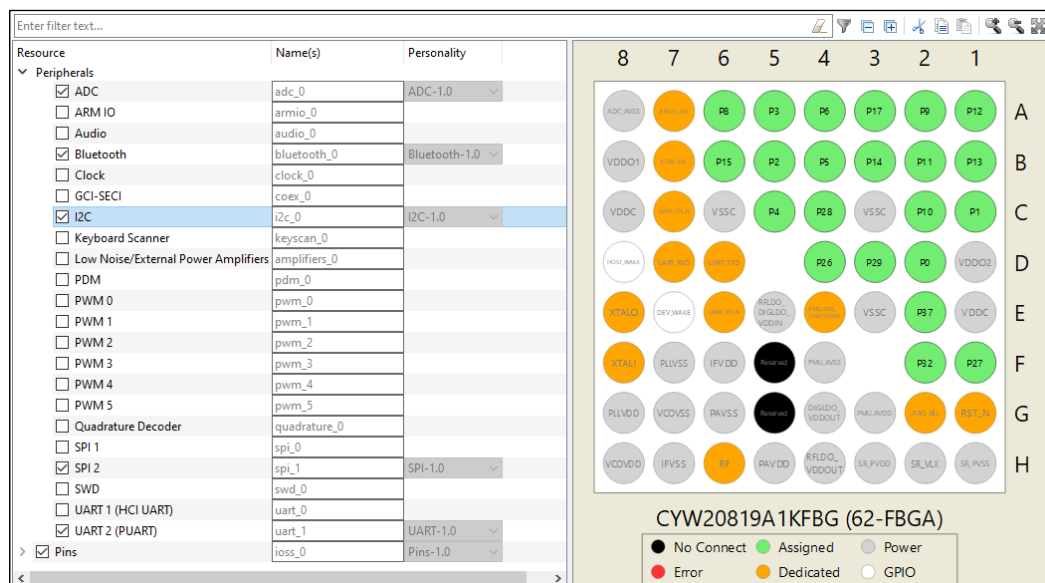

Resources tabs

6.2 Pins


The **Pins** tab/tree is where you enable all the pin related resources. All available pins are shown in an expandable tree, arranged by port number. The filter box and the hide disabled button above the list of pins allows you to limit the pins shown in the tree. This tab allows you to enter one or more [Names](#) for the resource. It also shows the selected [Personality](#), where applicable.

The interactive pin package diagram shows the different states of the pins; there is a legend on the diagram. You can enable/disable a pin by double-clicking it in the diagram. There are also zoom commands to resize the diagram as needed. If you zoom the image larger than the frame area, scroll bars appear to move to different area of the diagram. You can also press the **[Alt]** key to use the pan tool.

Pin states are shown in different colors:

- Black – No connect
- White – Disabled
- Green – Enabled
- Grey – Power/ground pins
- Orange – Fixed function pins
- Red – Error state
- Semi-transparent – The hardware resource’s enabled state has been locked.

6.2.1 Device families with tabs

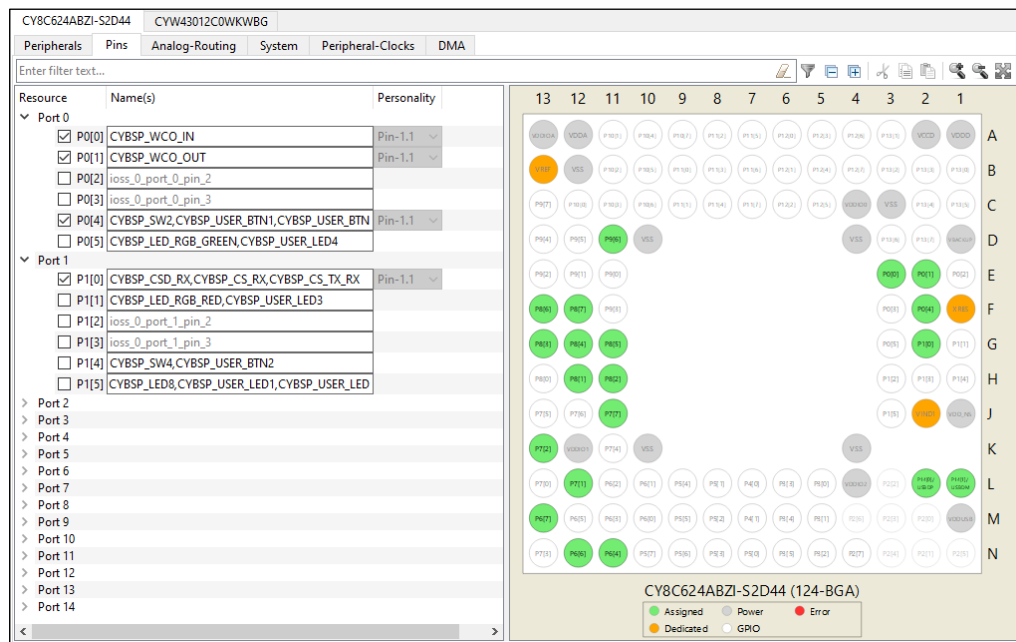


Resources tabs

6.2.2 Device families without tabs

Resource	Name(s)	Personality
Peripherals		
Pins		
<input type="checkbox"/> DEV_WAKE	ioss_0_pin_40	Pin-1.0
<input type="checkbox"/> HOST_WAKE	ioss_0_pin_41	Pin-1.0
<input type="checkbox"/> P0	CYBSP_D2,SW3,USER_BUTTON1	Pin-1.0
<input checked="" type="checkbox"/> P1	CYBSP_RST	Pin-1.0
<input checked="" type="checkbox"/> P2	CYBSP_D4	Pin-1.0
<input checked="" type="checkbox"/> P3	CYBSP_D5	Pin-1.0
<input checked="" type="checkbox"/> P4	CYBSP_D6	Pin-1.0
<input checked="" type="checkbox"/> P5	CYBSP_D7	Pin-1.0
<input checked="" type="checkbox"/> P6	CYBSP_D11,SPI2_MOSI	Pin-1.0
<input checked="" type="checkbox"/> P8	CYBSP_A0,CYBSP_THERM_TEMP_SENSE	Pin-1.0
<input checked="" type="checkbox"/> P9	CYBSP_D13,SPI2_CLK	Pin-1.0
<input checked="" type="checkbox"/> P10	CYBSP_A2	Pin-1.0
<input checked="" type="checkbox"/> P11	CYBSP_RSVD9,SPI2_CS	Pin-1.0
<input checked="" type="checkbox"/> P12	CYBSP_A4	Pin-1.0
<input checked="" type="checkbox"/> P13	CYBSP_A5	Pin-1.0
<input checked="" type="checkbox"/> P14	CYBSP_D8	Pin-1.0
<input checked="" type="checkbox"/> P15	CYBSP_D10	Pin-1.0
<input checked="" type="checkbox"/> P17	CYBSP_D12,SPI2_MISO	Pin-1.0
<input checked="" type="checkbox"/> P26	LED2	Pin-1.0
<input checked="" type="checkbox"/> P27	LED1	Pin-1.0
<input checked="" type="checkbox"/> P28	I2C_SCL	Pin-1.0
<input checked="" type="checkbox"/> P29	I2C_SDA	Pin-1.0
<input checked="" type="checkbox"/> P32	CYBSP_D1,UART_TX	Pin-1.0
<input checked="" type="checkbox"/> P37	CYBSP_D0,UART_RX	Pin-1.0

6.3 Analog-Routing tab

The **Analog-Routing** tab shows the various analog resources in your application. Enabled resources are green.

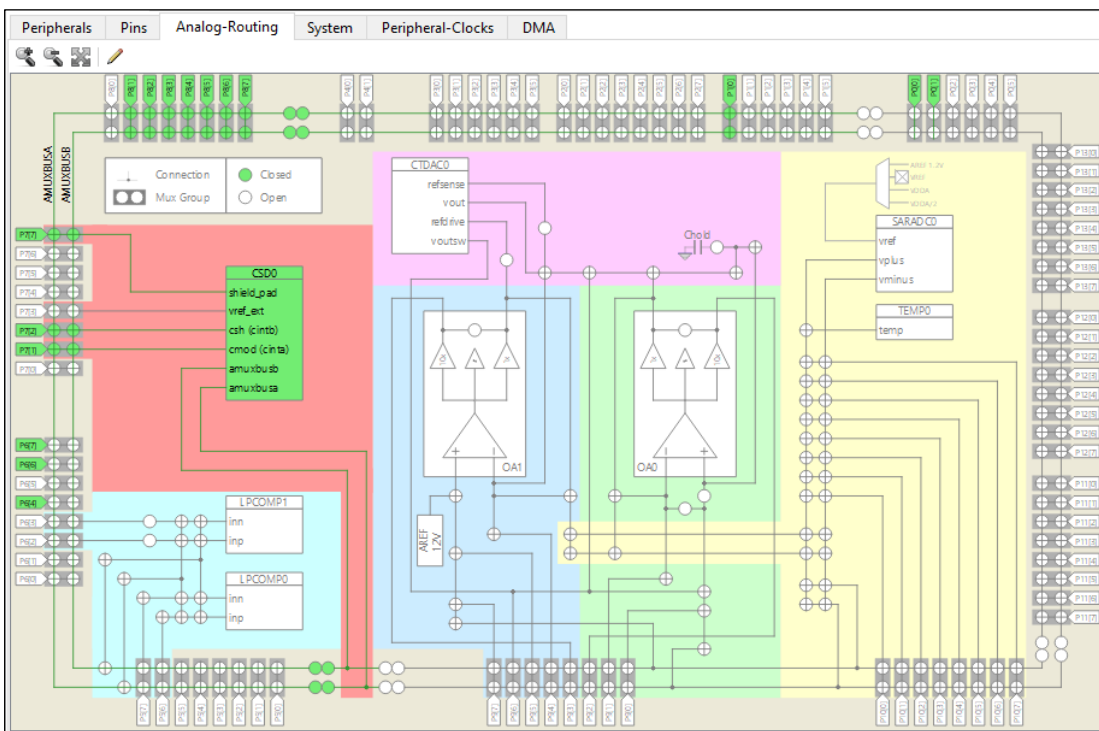


There are zoom commands to resize the diagram as needed. The **Edit** command opens the [Analog Route Editor](#).

Resources tabs

6.3.1 Analog Route Editor

The Analog Route Editor allows you to manually edit the routing of analog resources in your application. It also provides the ability to lock-down all or some of the results.


Note: The Analog Editor can be some times be unresponsive during route recalculation. Please wait for it to finish algorithm execution.

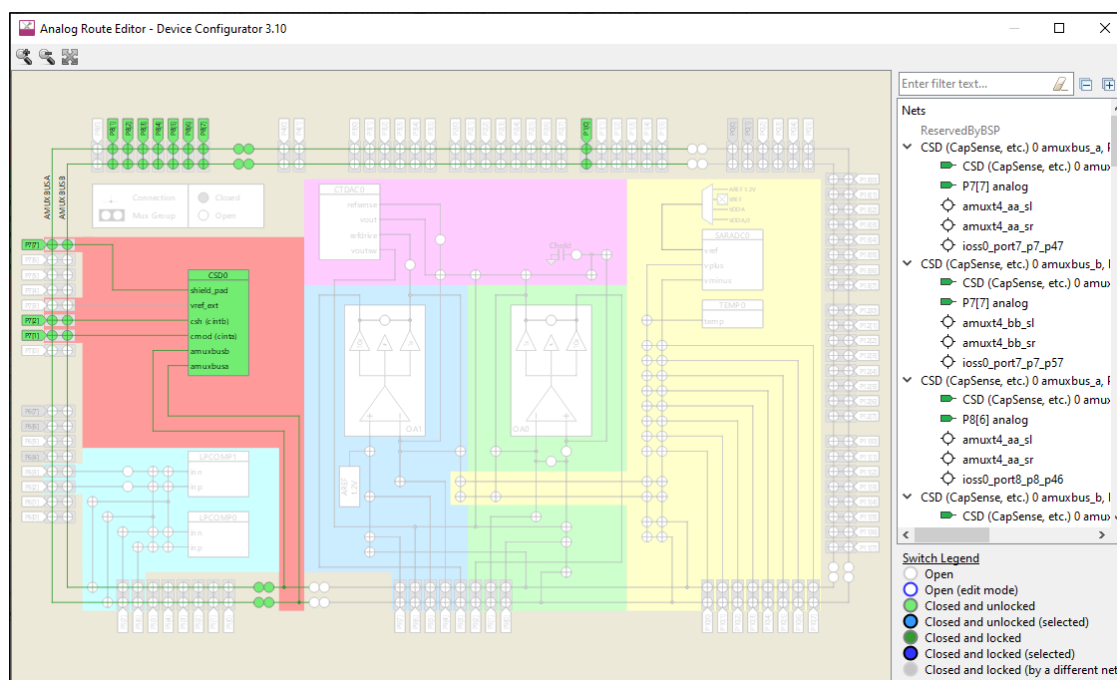

Note: If there are configuration errors, complete routing results will not be available; only locked resources. If you open the Analog Editor in this error state, a warning message will display. You can still lock and unlock switches, but you won't get complete routing results as long as the configuration has errors.


6.3.1.1 Select a resource

To select an analog resource, click on it. Any enabled (green) element in the tree can be selected. The resource and the associated route(s) become blue. Also, the **Edit Route** command appears on the toolbar. See [Edit Route](#).

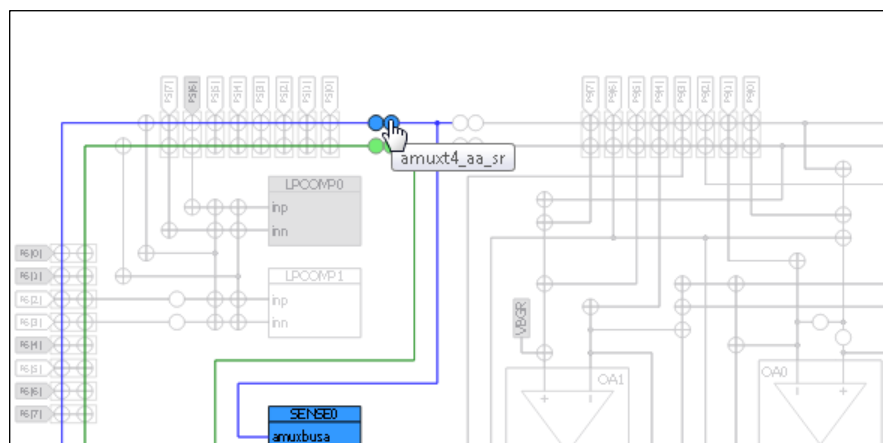


Resources tabs

At the same time, the selected analog resource(s) is highlighted in the Nets tree.

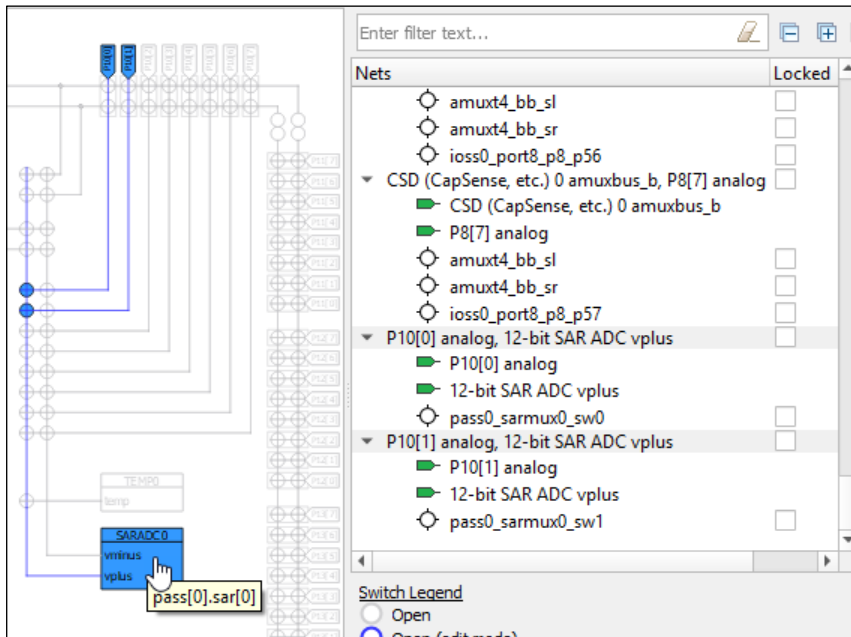

You can also select items in the tree to highlight them in the diagram.

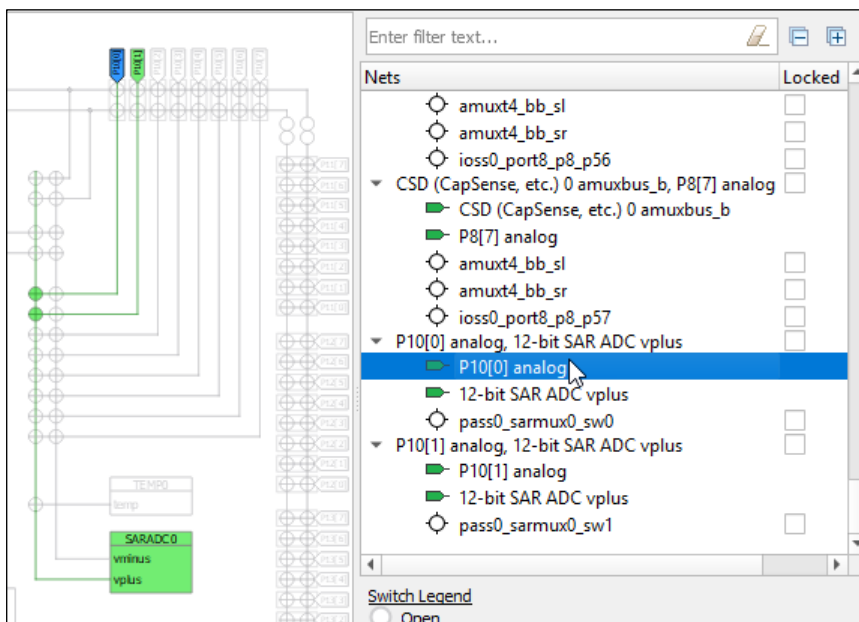

6.3.1.2 Edit Route

With an editable analog resource selected, click the **Edit Route** command to enable edit mode. If multiple routes are selected, a pull-down menu displays to select the route to edit. You cannot edit multiple routes at the same time.

In edit mode, the net tree shows only the applicable route entries, and you cannot select resources using the tree. However, the lock/unlock check boxes remain enabled for use. The inactive switches change color to indicate they can be selected to use for the route being edited.

Route changes are live with updates applied automatically as you make changes. Selecting a switch adds it to the current route in a locked state and the route tree is updated to reflect the modifications.

Resources tabs


If a change results in an error, a message displays. The routes are automatically rolled back to the previous state, so you will lose at most the last invalid change.

The toolbar shows the **Finish edit** command to return the editor to selection mode.

Note: If a route is edited so that it uses switches associated with a location where no personalities are instantiated, you must manually power on the containing block at startup in order for the switches to function. Refer to the PDL API Reference Guide and the Device Technical Reference Manual for more details.

6.4 System tab

The **System** tab provides access to system-level items, such as system clocks, power management, and debug interfaces. All available resources are shown in an expandable tree. The filter box and the hide disabled button above the list of resources allows you to limit the items shown in the tree. This tab allows you to enter one or more [Names](#) for the resource. It also shows the selected [Personality](#), where applicable.

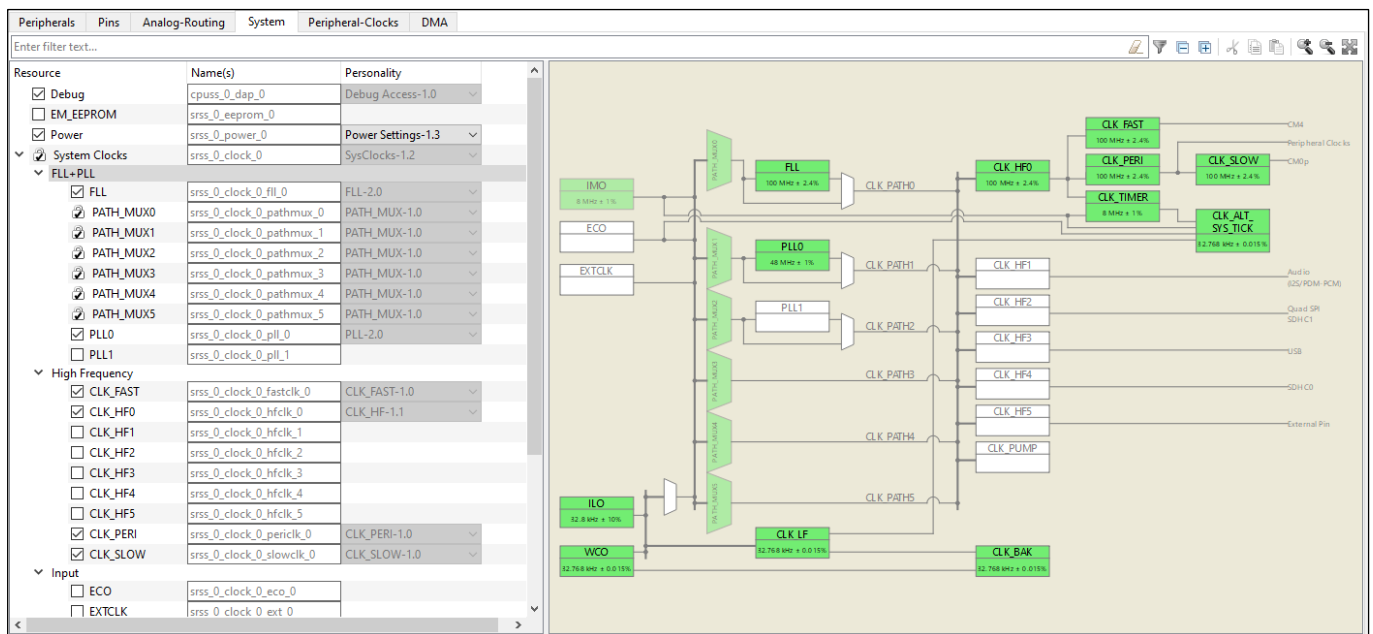


The interactive clock diagram shows all the system clocks and how they connect to each other. You can enable/disable a clock by double-clicking it in the diagram. Enabled clocks are green, disabled clocks are white, and clocks in error state are red. There are also zoom commands to resize the diagram as needed.

Note: The semi-transparent (faded) elements in the diagram indicate that their enabled state is locked.

Resources tabs


6.5 Peripheral-Clocks tab

The **Peripheral-Clocks** tab lists all the clocks in a design used to drive the various peripherals. All available clocks are shown in an expandable tree. The filter box and the hide disabled button above the list of resources allows you to limit the items shown in the tree. This tab allows you to enter one or more [Names](#) for the resource. It also shows the selected [Personality](#), where applicable.

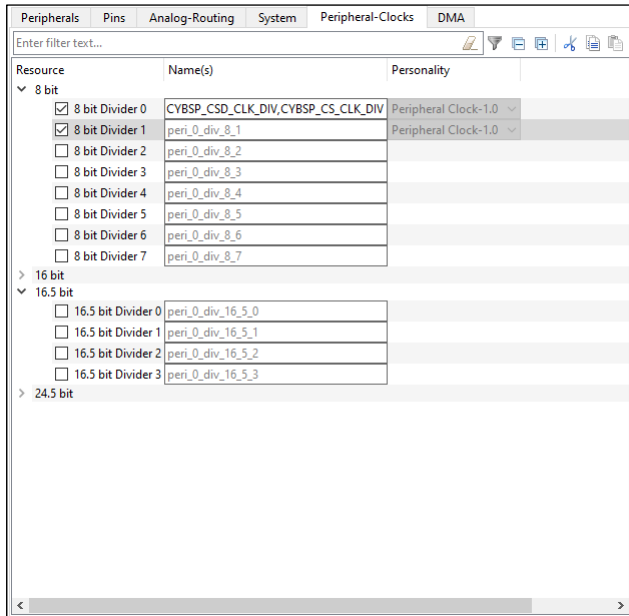

6.6 DMA tab

The **DMA** tab lists all the DMA resources in the design. All available DMA channels are shown in an expandable tree. The filter box and the hide disabled button above the list of resources allows you to limit the items shown in the tree. This tab allows you to enter one or more [Names](#) for the resource. It also shows the selected [Personality](#), where applicable.

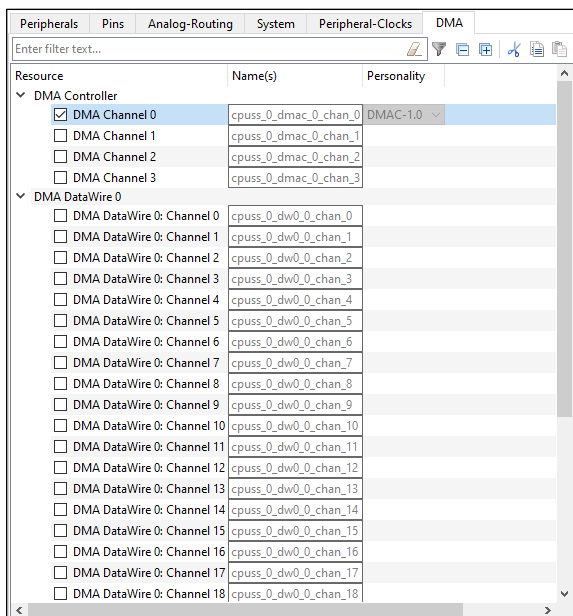

Panes


7 Panes

The Device Configurator tool contains the following primary panes that display information based on what is selected in a particular [resource tab](#):

- [Parameters](#) – This pane shows the various parameters for any specific resource enabled in one of the tabs.
- [Notice List](#) – This pane shows any errors, warnings, tasks, and infos for the application.
- [Code Preview](#) – This pane shows a preview of the code that will be generated for the selected resource when you save the *.modus file.

7.1 Parameters pane


The **Parameters** pane contains all the parameters for a selected, enabled resource. This pane will show different parameters for each resource, grouped by various categories. For example, the parameters for the TCPWM peripheral are completely different than those for a pin resource. The filter box above the list of parameters allows you to limit the items shown in the pane. Some resources also provide a link to [launch a separate configurator](#).

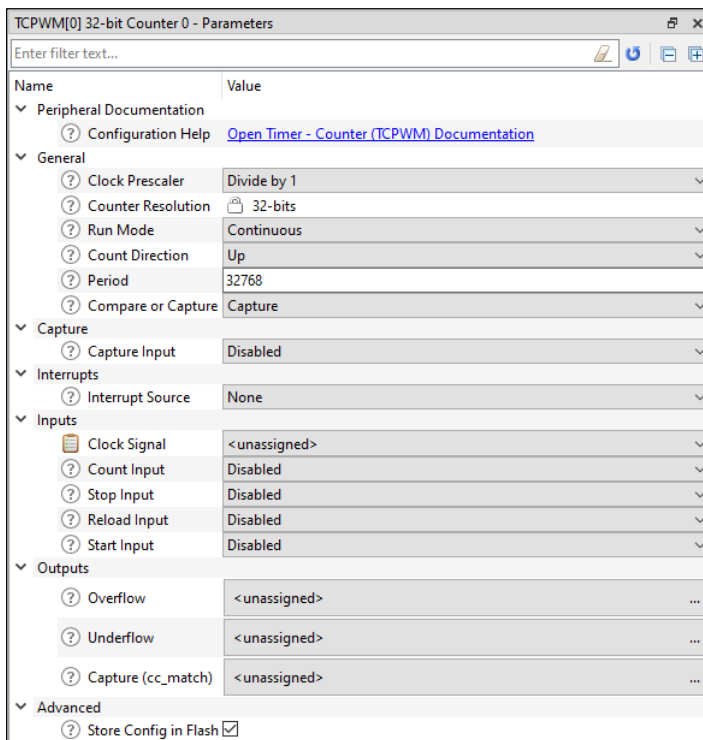

7.1.1 Configuration help

Nearly all resources provide a link to open the Peripheral Driver Library (PDL) documentation to the specific driver. This is the Doxygen-generated HTML file located in the installation directory. To see links to the documentation, simply highlight a resource; you do not need to enable it.

7.1.2 Parameter descriptions


As described under [icons](#), all parameters have a tooltip icon  to indicate there is information about the parameter. Hover the mouse cursor over the icon to display a description of the parameter.

Panes

7.1.3 Parameter values

Different parameter types have different ways to specify a value, as follows:

- **Pull-down Menu** – For parameters with a specific set of values, use the pull-down menu to select the appropriate value.
- **Selection Box** – For parameters with a variable set of values, click the ellipsis [...] button to open a selection box. There, use the check boxes to select one or more appropriate values for the parameter.


Note: After selecting these parameter types, use the **Go To**  button to jump to the selected resource.

- **Check Box** – For parameters with a true or false value, use the check box to enable or disable the parameter.
- **Text Box** – For parameters with editable values, type the value in the text box.

Note: Values preceded by '0' are interpreted as octal; values preceded by '0x', '0X', and '#' are interpreted as hexadecimal.


7.1.4 Signal Select Indicators

For parameters where you select a signal, there is a pull-down menu for single-select signals and a button to open a dialog for multi-select signals.

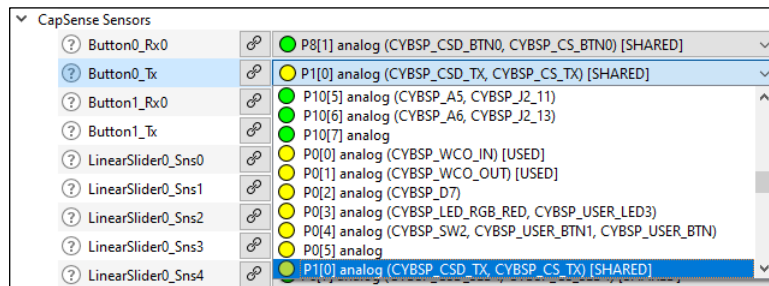

The signals have guidance icons next to them to indicate the status of the signal, as follows:


- Green – preferred
- Yellow – valid
- Red – constrained

After selecting one or more signals, use the **Go To**  button to jump to the selected signal or open a dialog to select from multiple signals.

Panes

7.1.5 Launch other configurators

For peripherals with their own configuration tools (CapSense, SegLCD, etc.), the Device Configurator provides links to launch those separate configurators. After enabling the peripheral on the [Peripherals Tab](#), the **Parameters** pane contains a **<Configurator>** parameter, where <Configurator> is the name of the other configurator.




Click on **[Launch < Configurator > . . .]** to launch the configurator.

*Note: When launching another configurator from the Device Configurator, it passes information, such as the location of the *.modus file and any configuration data, to that other configurator. Those other configurators can be launched independently from the Device Configurator. When launched independently, you will need to either open or create the appropriate configuration file for that tool. If you want to use the configuration tools independently for the same application, make sure to save the source files in the correct "GeneratedSource" folder for the appropriate application.*

7.2 Notice List

The **Notice List** pane combines notices (errors, warnings, tasks, and infos) from many places in your design into a centralized list. If a notice shows a location, you can double-click the entry to navigate to the error or warning.

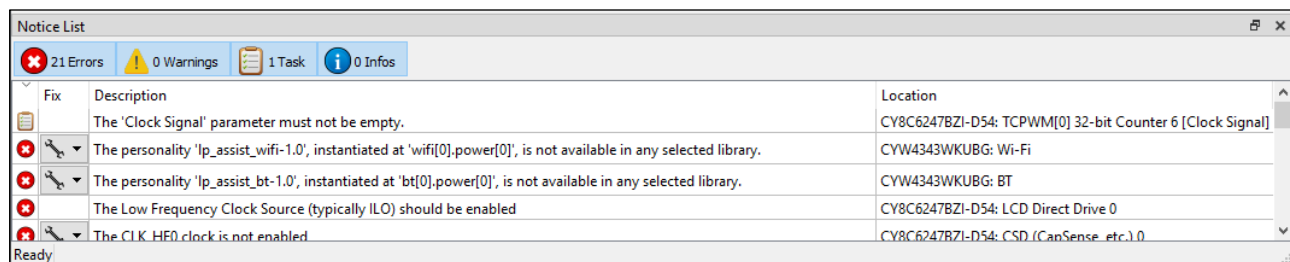

Notices display in rows. Use the filters above the notices to show or hide different types of notices, as follows:

- **Errors** – These indicate there is at least one problem that must be addressed before you can build your application. Typical errors could include compiler build errors and connectivity errors.
- **Warnings** – These report unusual conditions that might indicate a problem, although you can usually build the application regardless.
- **Tasks** – These are actions you need to perform to resolve an issue, such as enabling a resource. If you save without resolving a task, it becomes an error.
- **Infos** – These are informational messages from the system to indicate something occurred.


The Notice List pane contains the following columns (each column header contains an arrow control to change the sorting of the notices in the table):

- **Icon** – Displays the icons for the error, warning, task, or info.
- **Fix** – This may display a wrench icon, which can be used to automatically address the required notice.
- **Description** – Displays a brief description of the notice.
- **Location** – Displays the specific line number or other location of the message, when applicable.

Panes

7.2.1 Fix a task/error

When a wrench icon displays in the **Fix** column, click on it and select the appropriate action from the pull-down menu. When all related issues have been addressed, the notice will be removed from the Notice List pane.

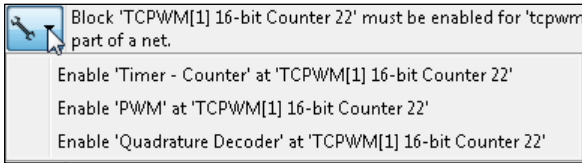


Note: The fixes listed are not necessarily the only way to fix the issue. They are merely common options. Also, if you save the *.modus file with outstanding tasks, they become errors saved in the GeneratedSource/cycfg_notices.h file.

7.2.2 Copy a notice

You can copy a notice to your system’s clipboard using [Ctrl]+[c] or right-click and select **Copy**. Then, paste the notice text into an email, document, and so on.

7.3 Code Preview pane

The **Code Preview** pane is a read-only preview of the code that will be generated for the currently selected resource when you save the *.modus file. As you update configuration options, the Code Preview pane updates the code shown. This code will be written to the appropriate file(s) located in the GeneratedSource folder of your application.

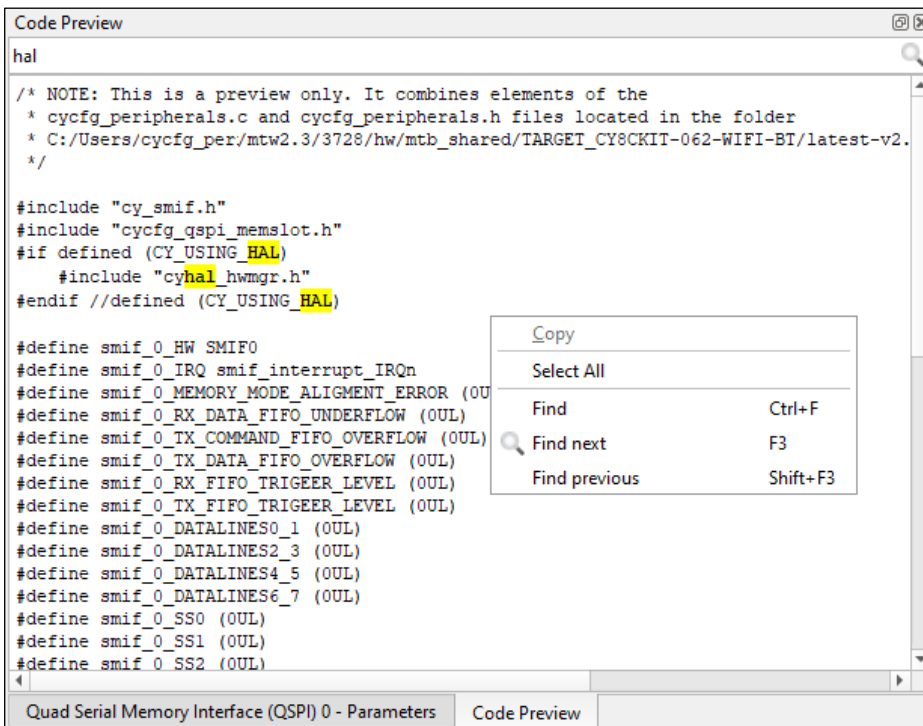

You can select and copy code from this pane using [Ctrl]+[C] key or using the right-click menu option.

You can use the **Search** feature to find instances of specific terms.

Version changes

8 Version changes

This section lists and describes the changes for each version of this tool.

Version	Change Descriptions	Notes
1.0	New tool.	
1.1	Added support for WICED Bluetooth devices.	
2.0	Changed the Platform tab to System tab.	This affects the file name generated during code generation. Older versions of the Device Configurator generated <i>cycfg_platform.(c/h)</i> files; it now generates <i>cycfg_system.(c/h)</i> files. If you are updating a design from a previous version, manually remove the old <i>cycfg_platform.(c/h)</i> files and update any references you created to use the new file names.
	Moved the Analog-Routing Editor to a tab.	
	Updated the File menu for library settings.	
	Added Update All Personalities menu item.	
	Added the ability to enter multiple resource Names using comma-separated list.	
2.1	Added Open System Explorer menu item.	
	Added Change Devices menu item and dialog.	
	Added Undo/Redo operations to the Edit menu.	
	Added major/minor version number to the title bar.	
2.20	Added Copy feature to the Notice List.	
	Added ability to see documentation links without enabling a resource.	
	Added frequencies to clock diagram.	
2.21	Added feature to support incremental patch updates.	
	Added Search feature to Code Preview.	
	Implemented various performance improvements.	
	Fixed an issue with multiple font sizes in the GUI.	
3.0	Fixed the PDL display name when using the MTB flow.	
	Updated to allow analog routing from the SAR to any analog resource or pin.	
	Removed Change Devices dialog.	Use command line tools instead.
	Updated the tool to recognize obsolete devices.	Displays an error in the Notice List instead of blocking the file from being opened.
3.10	Added path to files in the Code Preview Pane.	
	Fixed the name conflict warning notices when the selected device is changed to not check against non-existent chip locations.	
	Added a 'Fix' to name conflict warnings in the notice list.	
	Locked down number entry to the English format (decimal place is always a period).	
	Made various performance improvements.	
	Added a search filter to the dialog that allows for the selection of multiple signals.	
	Added additional MPN consistency checking preprocessor macros to <i>cyf_notices.h</i> .	
Added a log file that can be accessed from the About box. Debug messages are redirected to it.		
Added back the 'Fix' to the MPN consistency notice.		
Fixed error message displayed when the same *.modus file is opened in multiple instances of the Device-Configurator and mpn checking command line arguments are provided.		

Version changes

Version	Change Descriptions	Notes
4.0	Updated back-end to support multi-core applications. Updated Create Design dialog. Changed device library file from xml to <i>props.json</i> .	
4.10	Added Settings menu and items. Improved parameter view sizing.	

Revision history

Revision history

Revision	Date	Description
**	2018-11-21	New document.
*A	2019-03-01	Updated to version 1.1.
*B	2019-10-17	Updated to version 2.0.
*C	2020-03-27	Updated to version 2.1.
*D	2020-09-01	Updated to version 2.20.
*E	2020-12-10	Updated to version 2.21.
*F	2021-03-15	Updated to version 3.0.
*G	2021-09-24	Updated to version 3.10.
*H	2022-09-12	Updated to version 4.0.
*I	2023-05-08	Updated to version 4.10.

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2023-05-08

Published by

Infineon Technologies AG

81726 Munich, Germany

© 2023 Infineon Technologies AG.

All Rights Reserved.

Do you have a question about this document?

www.cypress.com/support

Document reference

002-24377 Rev. *1

IMPORTANT NOTICE

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics ("Beschaffheitsgarantie").

With respect to any examples, hints or any typical values stated herein and/or any information regarding the application of the product, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

In addition, any information given in this document is subject to customer's compliance with its obligations stated in this document and any applicable legal requirements, norms and standards concerning customer's products and any use of the product of Infineon Technologies in customer's applications.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology, delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.