

PSoC™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory

About this document

Scope and purpose

This application note describes steps to enable a CY8CPROTO-062-4343W PSoC™ 6 Wi-Fi Bluetooth® prototyping kit to work with an external flash memory by modifying the board hardware and software. By replacing the attached flash with the external connection and adding commands into PSoC™ 6 MCU serial memory interface (SMIF), this board can be turned into a memory evaluation board for any external flash.

Intended audience

This application note targets PSoC™ 6 MCU board users who intend to further investigate operation with external flash memory devices other than the offered S25FL512S flash on the board. This method will free the limitation of the users to evaluate any flash. The flash device in the SOIC-16 package on the board may be replaced freely; the external flash outside the board with any type of package can be tested.

Table of contents

	About this document	1
	Table of contents	1
1	Introduction	2
2	Procedures	3
2.1	Modifying the hardware	3
2.1.1	Materials required	3
2.1.2	Customize the board	3
2.2	Modifying the software	7
2.2.1	ModusToolbox™ software	7
2.2.2	Serial memory interface (SMIF)	7
2.2.3	Import ModusToolbox™ QSPI flash code example	8
2.2.4	Determine the serial flash operation structure	11
2.2.5	Add additional flash operation commands	15
3	PSoC™ 6 MCU board operation	21
4	Use cases	23
5	Conclusion	25
	References	26
	Revision history	27
	Disclaimer	28

1 Introduction

1 Introduction

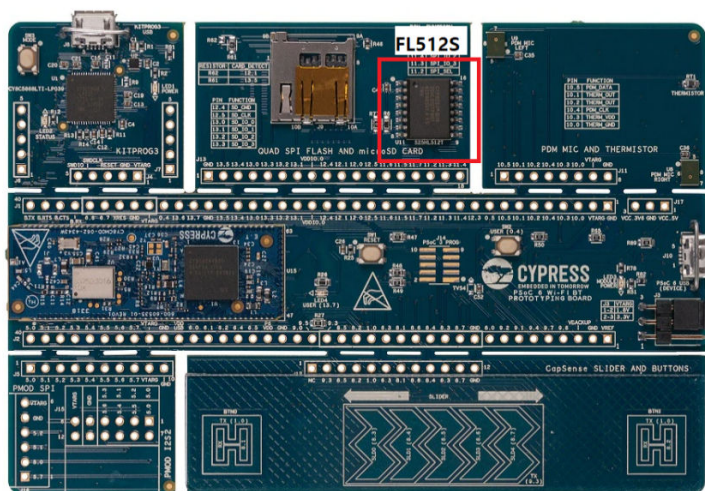


Figure 1 CY8CPROTO-062-4343W PSoC™ 6 Wi-Fi Bluetooth® prototyping board

The PSoC™ 6 Wi-Fi Bluetooth® prototyping kit (CY8CPROTO-062-4343W) is provided with the S25FL512S 512-Mb SPI NOR flash using SMIF. SMIF is an SPI-based communication interface for interfacing external devices to a PSoC™ MCU device. However, as this PSoC™ 6 MCU board comes with external flash attached to the board. Because there are several commands to evaluate all flash operations, there are limitations on evaluating flash memories fully. This application note describes a method to modify this PSoC™ 6 MCU board hardware and software for customizing the board into a general evaluation tool for flash memory devices.

2 Procedures

2 Procedures

Both hardware and software modifications are required for this application.

2.1 Modifying the hardware

2.1.1 Materials required

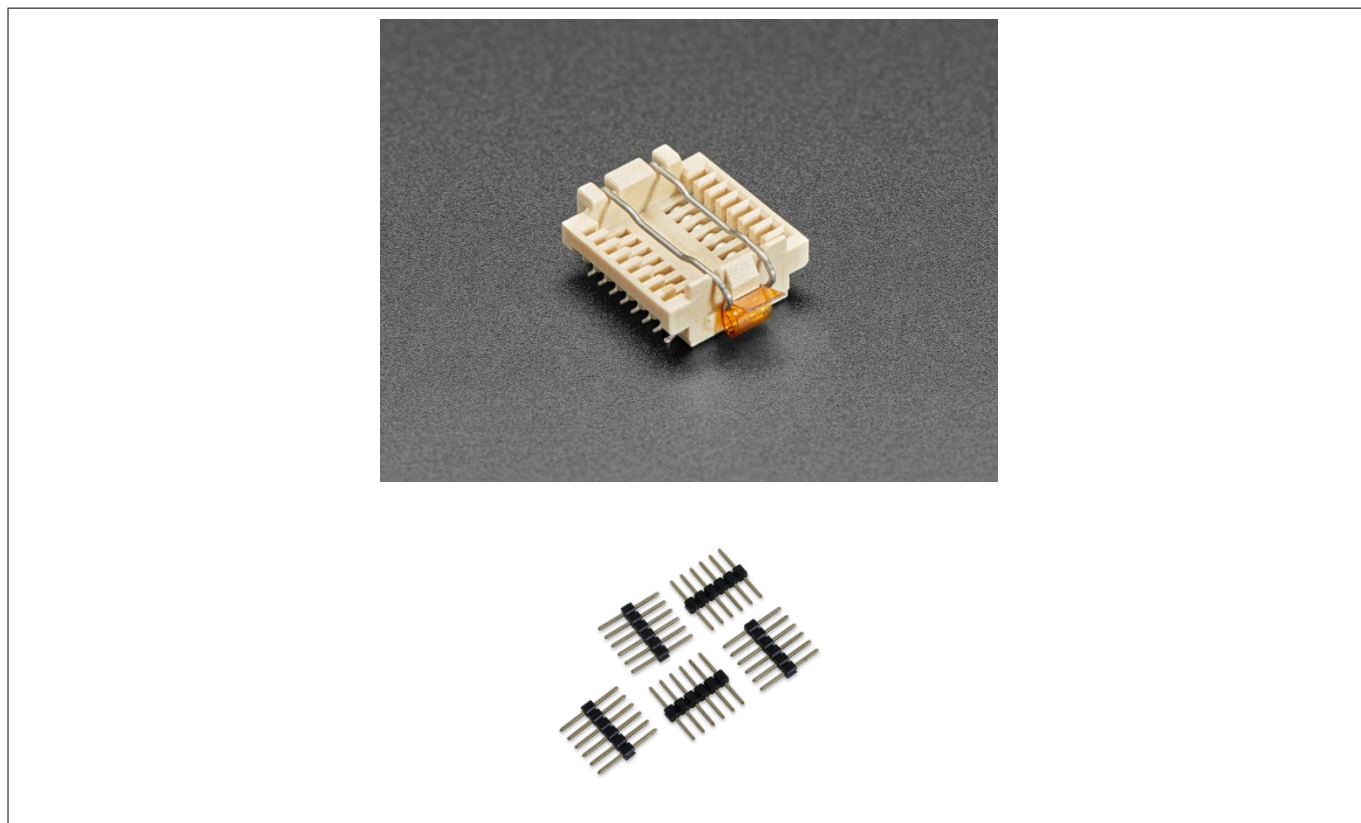


Figure 2 SMT socket – wide SOIC-16, pin header

- CY8CPROTO-062-4343W PSoC™ 6 W-Fi Bluetooth® prototyping kit board
- SMT socket-wide SOIC-16
- 8-pin headers
- Cutter
- Soldering machine

2.1.2 Customize the board

Prepare the board and SMT socket-wide SOIC-16, and 8-pin headers. You may also need a cutter to remove the existing flash device and a soldering machine to solder the socket and pin headers.

1. Remove the attached flash with the cutter. Gently cut off the flash lead frames and then remove the leftovers with solders. Be careful not to strip off the PCB pattern
2. Fit the SMT socket-wide SOIC-16 into the PCB footprint. The existing flash on the board is in SOIC 16 pin package, so it is compatible with the new socket. Solder the socket along the footprint
3. Solder the pin headers to GND, VDDIO, pins 11.6, 11.5, 11.7, 11.2, 11.3, and 11.4 pin holes. See [Table 1](#) and [Figure 3](#)
4. Make sure that all pins are connected

PSoc™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory



2 Procedures

- To test any flash device in SOIC-16 package, replace the flash chip in the socket as shown in [Figure 5](#)
- To test flash devices in other package types or to test the flash device that is attached to another board like shown in [Figure 6](#), use the pin header connector. In this case, keep the socket empty because the socket flash signal and external signal through pin header can be overlapped

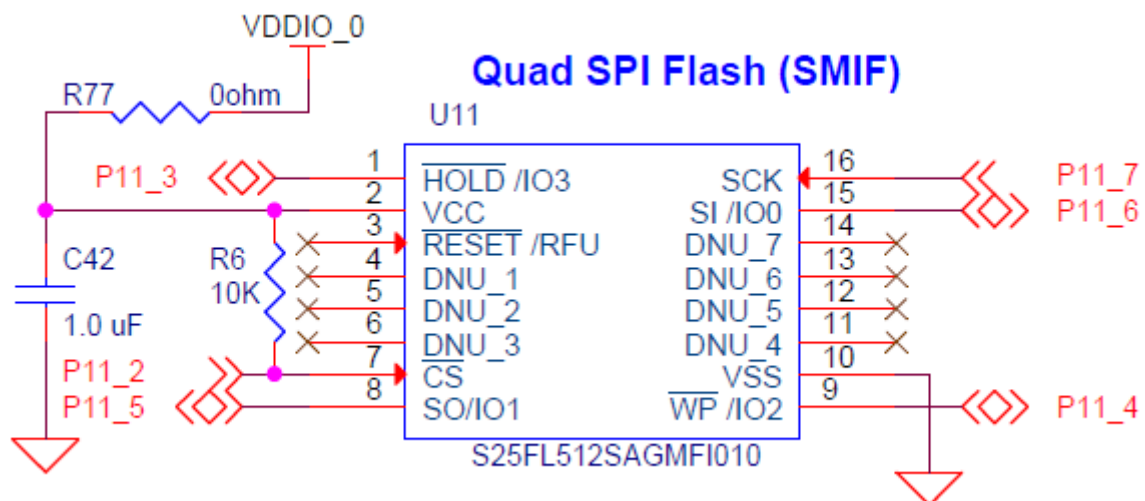
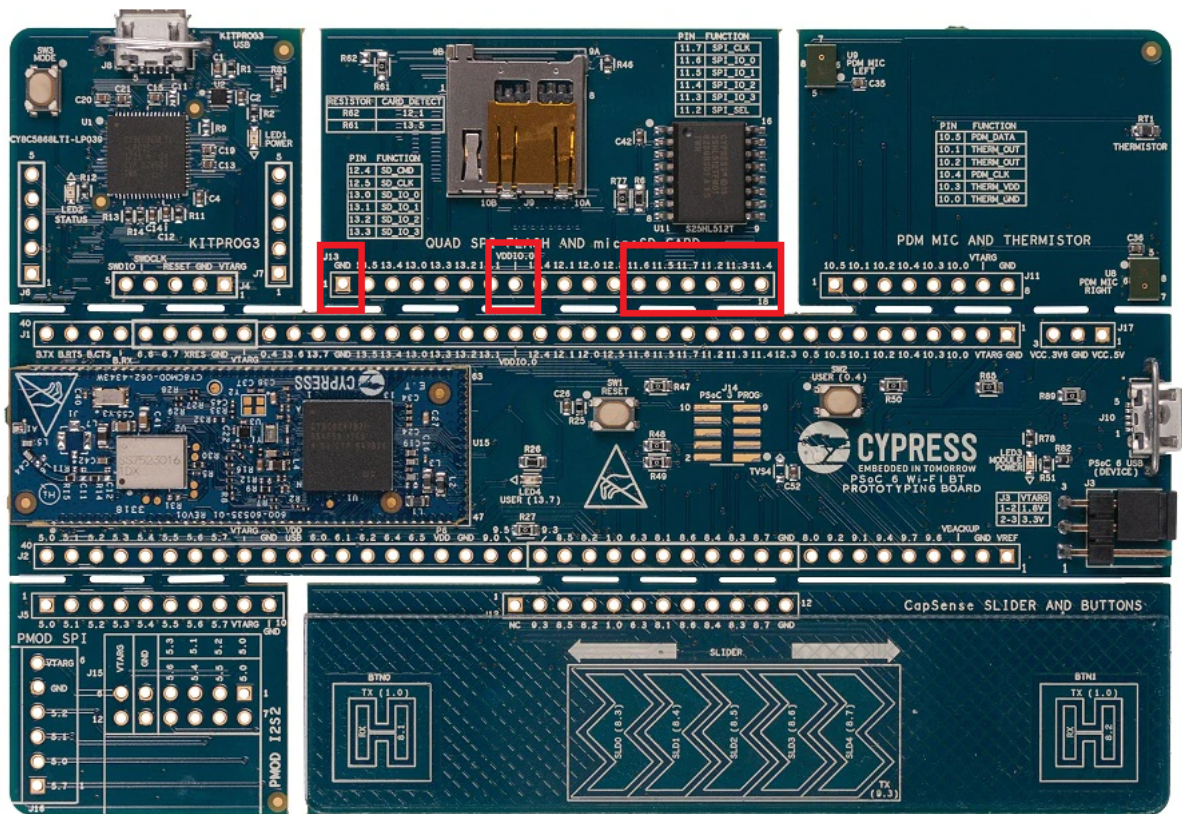


Figure 4 CY8CPROTO-062-4343W external connections

[Figure 5](#) and [Figure 6](#) show the boards with the hardware modifications:

- [Figure 5](#) shows the flash device in the socket being tested
- [Figure 6](#) shows an external flash device on another board being tested. Note that the jumpers are connected to the pin header while the socket is empty

PSoC™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory

2 Procedures

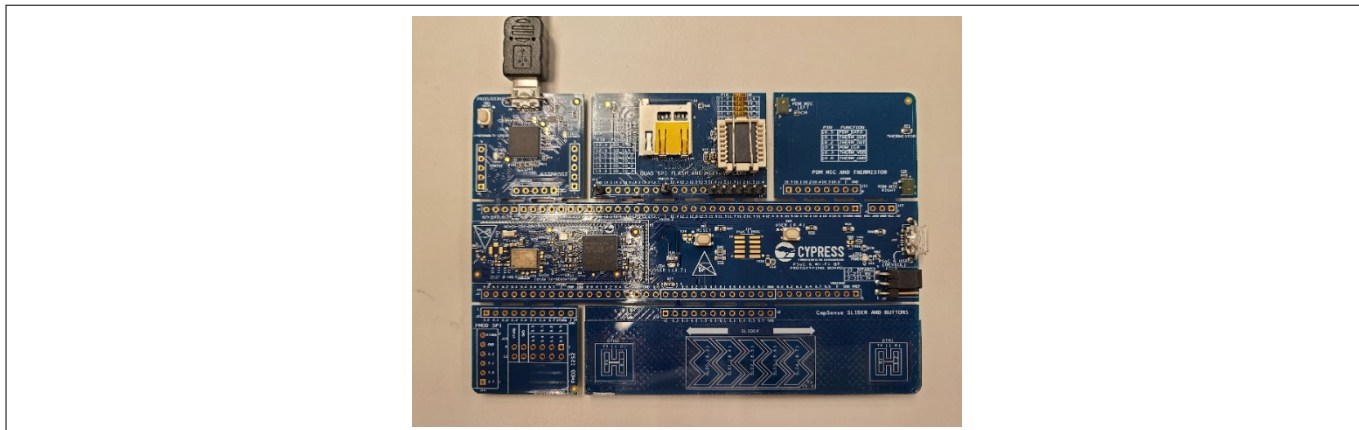


Figure 5 PSoC™ 6 MCU board with the socket attached

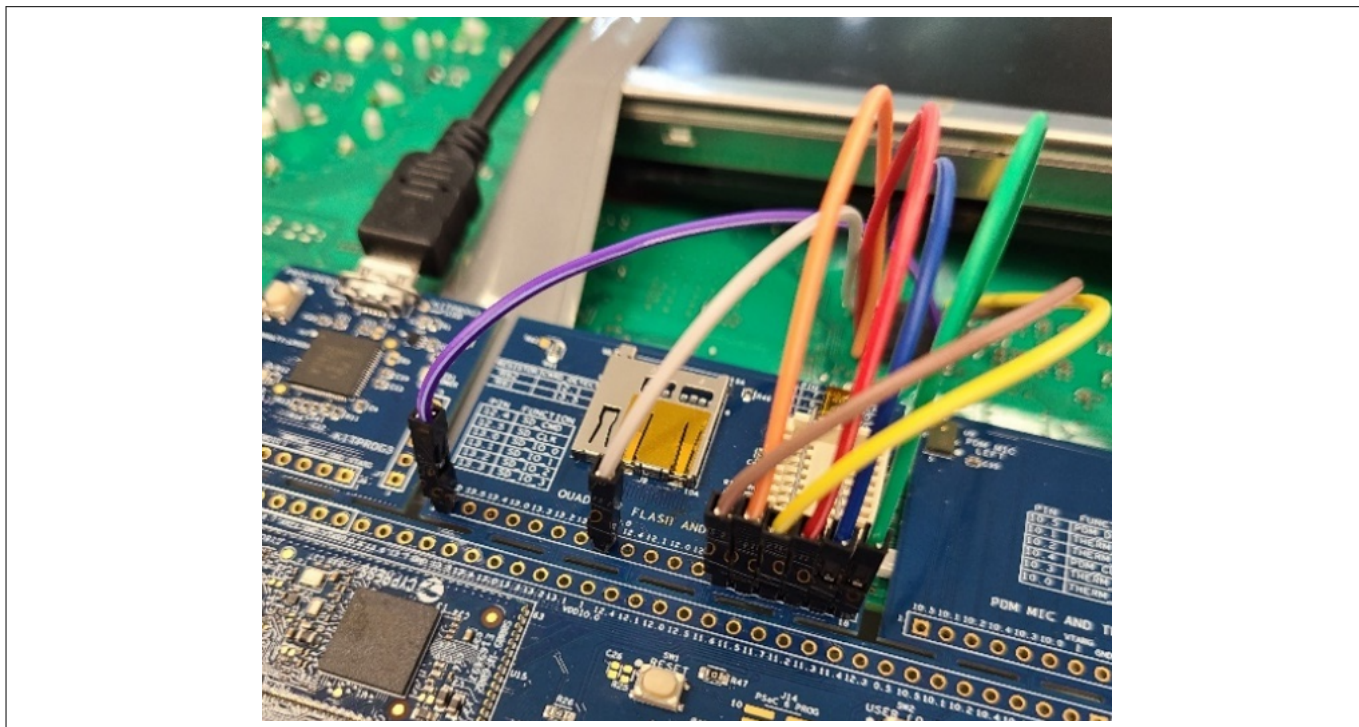


Figure 6 External flash memory connected with a pin header

2.2 Modifying the software

2.2.1 ModusToolbox™ software

PSoC™ 6 MCU boards use Eclipse IDE for ModusToolbox™ and C language for programming.



Download the software from https://www.cypress.com/products/modustoolbox#tabs-0-bottom_side-6.


2.2.2 Serial memory interface (SMIF)

The SMIF Component implements an SPI-based communication hardware block for interfacing external memory devices with the PSoC™ 6 MCU device. The firmware uses the source code (cy_smif_memconfig.c and cy_smif_memconfig.h files) generated from the SMIF configurator. This source code defines the data structures that hold the memory configuration.

2 Procedures


2.2.3 Import ModusToolbox™ QSPI flash code example

1. On Eclipse IDE for ModusToolbox™ software, import example project into your project. Do one of the following:
 - Select **File > New > ModusToolbox™ Application**
 - Click **New Application** on the **Start** tab on the **Quick Panel**

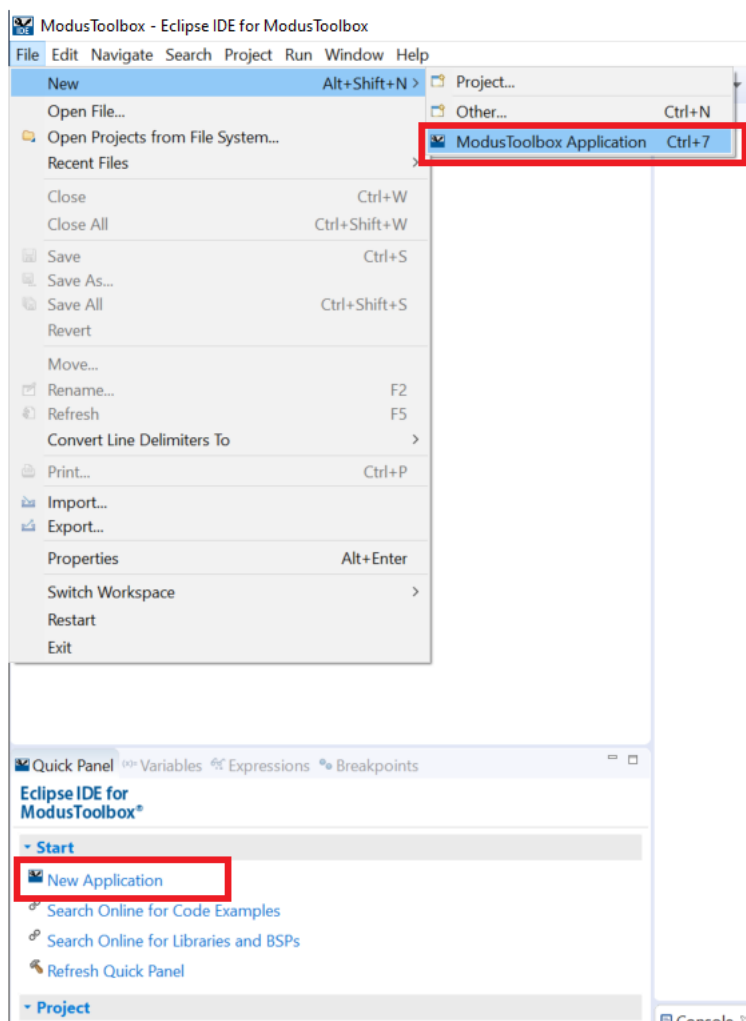

2. Choose the board support package (BSP) for the CY8CPROTO-062-4343W board and then click **Next**

2 Procedures

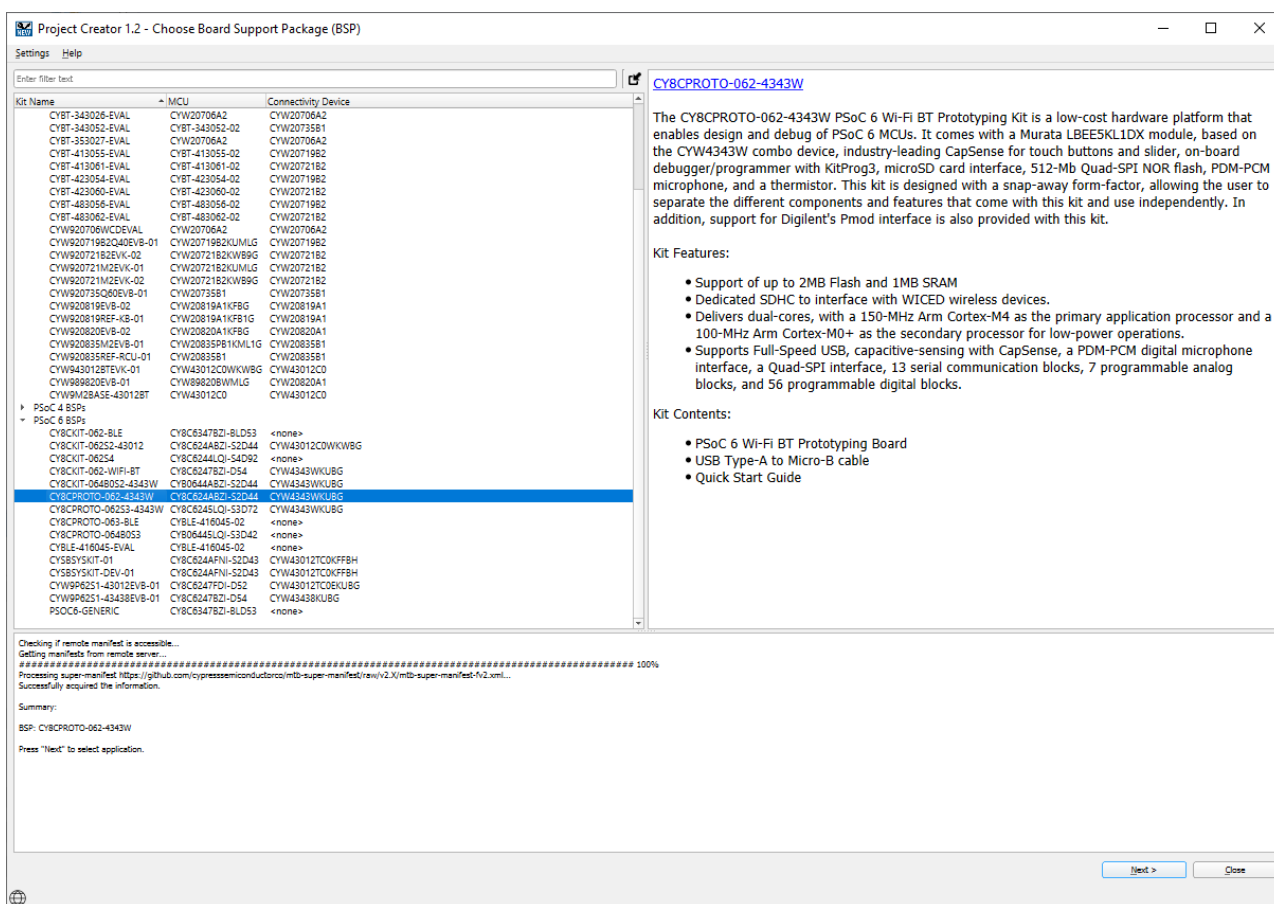


- Application Note


PSoc™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory



2 Procedures

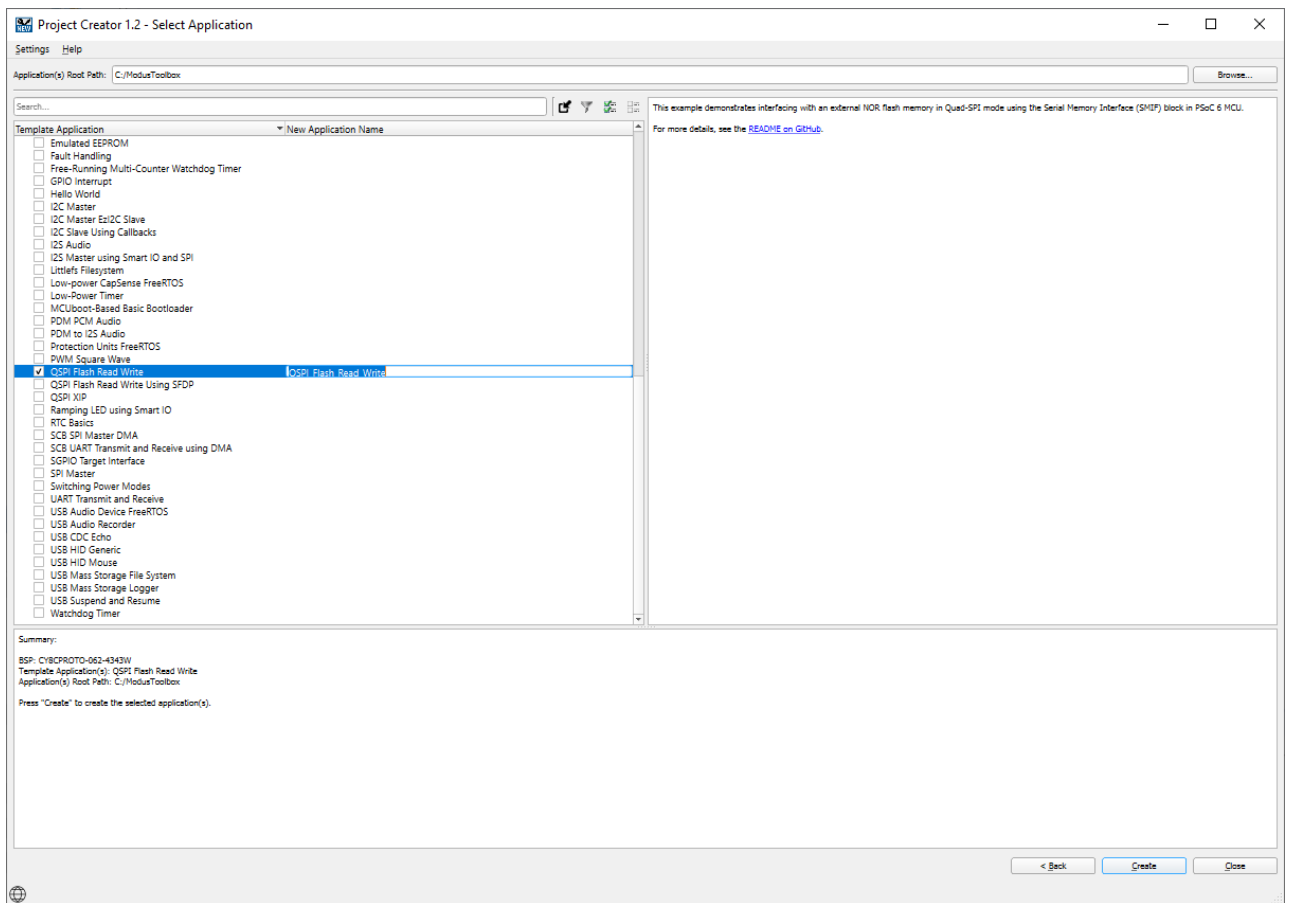

The following screen appears when the selected example is successfully imported:

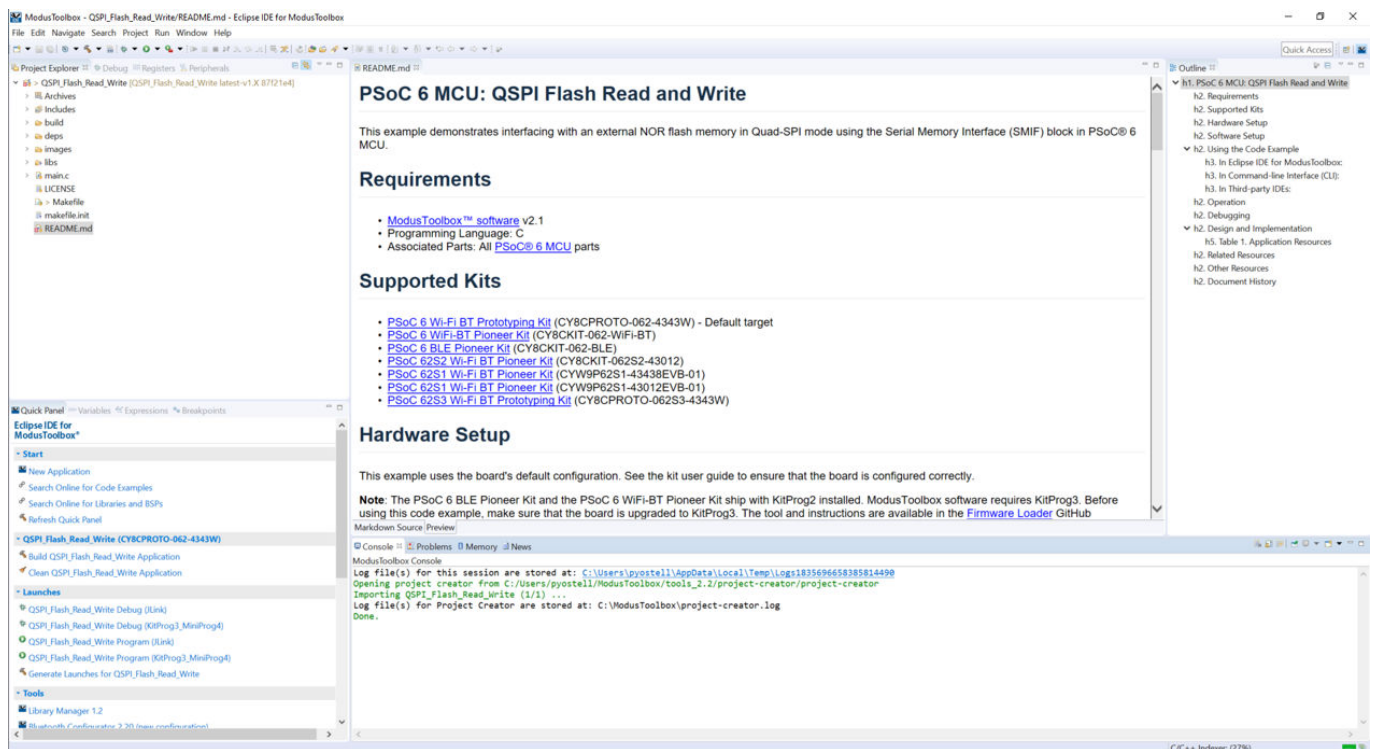

2.2.4 Determine the serial flash operation structure

Note that the application already includes supports for some flash operation commands for QSPI Flash Read and Write operation. The `cy_smif_memslot.h` file includes code to support the WRR(01h), WRDI(04h), RDSR1(05h), WREN(06h), 4QPP(34h), RDCR(35h), BE(60h), 4SE(DCh), and 4QIOR(ECh) commands. However, these commands may not be sufficient to test all flash operations.

2 Procedures

Code Listing 1: Built-in functions in cycfh_qspi_memslot.c

```
typedef struct
{
    /*This specifies the number of address bytes used by the memory slave device, valid values 1-4
    */
    uint32_t numOfAddrBytes;
    /*The memory size: For densities of 2 gigabits or less - the size in bytes; For densities
    4 gigabits and above - bit-31 is set to 1b to define that this memory is 4 gigabits and
    above; and other 30:0 bits define N where the density is computed as 2^N bytes. For example,
    0x80000021 corresponds to 2^30 = 1 gigabyte.*/
    uint32_t memSize;
    /*This specifies the Read command */
    cy_stc_smif_mem_cmd_t* readCmd;
    /*This specifies the Write Enable command */
    cy_stc_smif_mem_cmd_t* writeEnCmd;
    /*This specifies the Write Disable command */
    cy_stc_smif_mem_cmd_t* writeDisCmd;
    /*This specifies the Erase command */
    cy_stc_smif_mem_cmd_t* eraseCmd;
    /*This specifies the sector size of each Erase */
    uint32_t eraseSize;
    /*This specifies the Chip Erase command */
    cy_stc_smif_mem_cmd_t* chipEraseCmd;
    /*This specifies the Program command */
    cy_stc_smif_mem_cmd_t* programCmd;
    /*This specifies the page size for programming */
    uint32_t programSize;
    /*This specifies the command to read the WIP-containing status register */
    cy_stc_smif_mem_cmd_t* readStsRegWipCmd;
    /*This specifies the command to read the QE-containing status register */
    cy_stc_smif_mem_cmd_t* readStsRegQeCmd;
    /*This specifies the command to write into the QE-containing status register */
    cy_stc_smif_mem_cmd_t* writeStsRegQeCmd;
    /*This specifies the read SFDP command */
    cy_stc_smif_mem_cmd_t* readSfdpCmd;
    /*This specifies the Read ID command */
    cy_stc_smif_mem_cmd_t* readIDCmd;
    /* The Busy mask for the status registers */
    uint32_t stsRegBusyMask;
    /*The QE mask for the status registers */
    uint32_t stsRegQuadEnableMask;
    /*Max time for erase type 1 cycle time in ms*/
    uint32_t eraseTime;
    /*Max time for chip erase cycle time in ms */
    uint32_t chipEraseTime;
    /*Max time for page program cycle time in us */
    uint32_t programTime;
    /*This specifies the number of regions for memory with hybrid sectors */
    uint32_t hybridRegionCount;
    /*This specifies data for memory with hybrid sectors */
}
```

PSoC™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory



2 Procedures

```
cy_stc_smif_hybrid_region_info_t** hybridRegionInfo;
} cy_stc_smif_mem_device_cfg_t;
```

This section provides steps to add additional operation commands other than the commands provided by the example code. The flash commands vary from the products and the interface—see the datasheet for each flash for supported command sets.

For example, a brief list of supported commands for the S25FL512S device is shown in [Table 2](#). See the datasheet for detailed descriptions for each command.

The example code provided commands WRR(01h), WRDI(04h), RDSR1(05h), WREN(06h), 4QPP(34h), RDCR(35h), BE(60h), 4SE(DCh), 4QIOR(ECh) are shown in **Bold**.

Table 2 Command lists

Instruction (in HEX)	Command name	Instruction (in HEX)	Command name
01	WRR	6C	4QOR
02	PP	75	ERSP
03	READ	7A	ERRS
04	WRDI	85	PGSP
05	RDSR1	8A	PGRS
06	WREN	90	READ_ID
07	RDSR2	9F	RDID
0B	FAST_READ	A3	MPM
0C	4FAST_READ	A6	PLBWR
0D	DDRFR	A7	PLBRD
0E	4DDRFR	AB	RES
12	4PP	B9	BRAC
13	4READ	BB	DIOR
14	ABRD	BC	4DIOR
15	ABWR	BD	DDRDIOR
16	BRRD	BE	4DDRDIOR
17	BRWR	C7	BE
18	ECCRD	D8	SE
20	P4E	DC	4SE
21	4P4E	E0	DYBRD
2B	ASPRD	E1	DYBWR
2F	ASPP	E2	PPBRD
30	CLSR	E3	PPBP
32	QPP	E4	PPBE
34	4QPP	E5	Reserved-E5
35	RDCR	E6	Reserved-E6

(table continues...)

2 Procedures

Table 2 (continued) Command lists

Instruction (in HEX)	Command name	Instruction (in HEX)	Command name
38	QPP	E7	PASSRD
3B	DOR	E8	PASSP
3C	4DOR	E9	PASSU
41	DLPRD	EB	QIOR
42	OTPP	EC	4QIOR
43	PNVDLR	ED	DDRQIOR
4A	WVDLR	EE	4DDRQIOR
4B	OTPR	F0	RESET
60	BE	FF	MBR
6B	QOR		

Use the top-down approach on the codes to determine the architecture of the serial flash memory operation. For example, consider the `cy_serial_flash_qspi_read` operation starting from `main.c` to investigate the SMIF structure.



Figure 7 SMIF structure

By exploring from `main.c` and all the way down to `cy_smif.c`, you can determine that the actual operation command is delivered to `Cy_SMIF_TransmitCommand` in `cy_smif.c` with command arguments, command width, address width, mode, mode width, the number of dummy cycles, and data width. The arguments are specified in `cycfg_qspi_memslot.c` for each operation command.

2 Procedures

Code Listing 2: S25FL512S_4byteaddr_SlaveSlot_0_readCmd in cycfg_qspi_memslot.c

```
const cy_stc_smif_mem_cmd_t
S25FL512S_4byteaddr_SlaveSlot_0_readCmd =
{
    /* The 8-bit command. 1 x I/O read command. */
    .command = 0xECU,
    /* The width of the command transfer. */
    .cmdWidth = CY_SMIF_WIDTH_SINGLE,
    /* The width of the address transfer. */
    .addrWidth = CY_SMIF_WIDTH_QUAD,
    /* The 8-bit mode byte. This value is 0xFFFFFFFF when there is no mode present. */
    .mode = 0x01U,
    /* The width of the mode command transfer. */
    .modeWidth = CY_SMIF_WIDTH_QUAD,
    /* The number of dummy cycles. A zero value suggests no dummy cycles. */
    .dummyCycles = 4U,
    /* The width of the data transfer. */
    .dataWidth = CY_SMIF_WIDTH_QUAD
};
```

See the datasheet for the argument values in the command sequence.

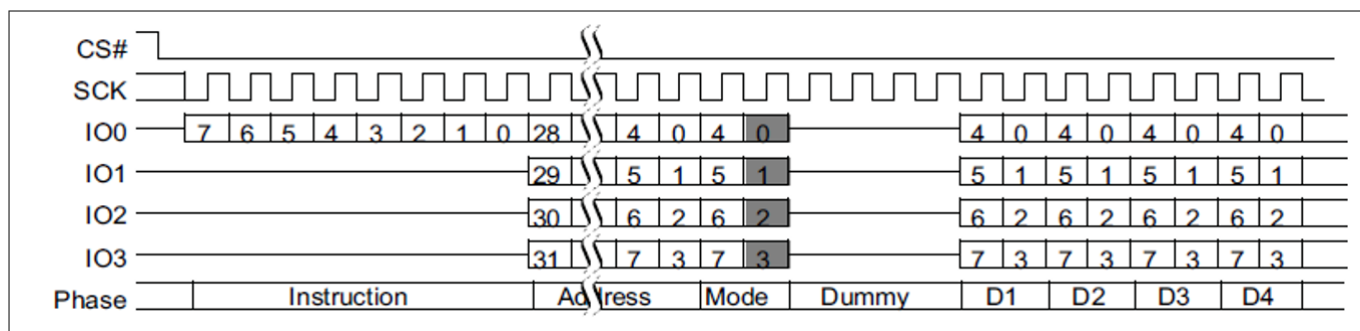


Figure 8 Quad I/O Read command sequence (4-byte address, ECh or EBh)

2.2.5 Add additional flash operation commands

To add an additional command other than the supported commands, reverse the top-down approach. This is demonstrated with the RDID (9Fh) command.

1. Check the command sequence for RDID 9Fh

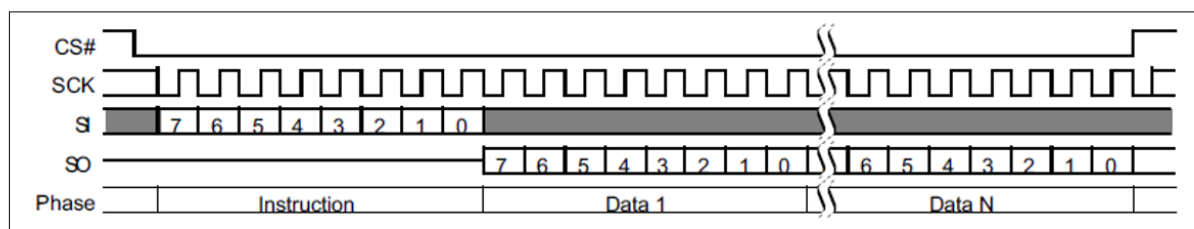


Figure 9 Read Identification (RDID 9Fh) command sequence

2. Specify the arguments for the operation command in cycfg_qspi_memslot.c to define the SMIF-driver memory configuration

2 Procedures

Code Listing 3: S25FL512S_4byteaddr_SlaveSlot_0_readIDCmd in cycfg_qspi_memslot.c

```
const cy_stc_smif_mem_cmd_t
S25FL512S_4byteaddr_SlaveSlot_0_readIDCmd =
{
    /* The 8-bit command. 1 x I/O read command. */
    .command = 0x9FU,
    /* The width of the command transfer. */
    .cmdWidth = CY_SMIF_WIDTH_SINGLE,
    /* The width of the address transfer. */
    .addrWidth = CY_SMIF_WIDTH_NA,
    /* The 8-bit mode byte. This value is 0xFFFFFFFF when there is no mode present. */
    .mode = 0xFFFFFFFFU,
    /* The width of the mode command transfer. */
    .modeWidth = CY_SMIF_WIDTH_NA,
    /* The number of dummy cycles. A zero value suggests no dummy cycles. */
    .dummyCycles = 0U,
    /* The width of the data transfer. */
    .dataWidth = CY_SMIF_WIDTH_SINGLE
};
```

3. Add the read ID command to the command structure in cycfg_qspi_memslot.c

Code Listing 4: deviceCfg_S25FL512S_4byteaddr_SlaveSlot_0 in cycfg_qspi_memslot.c

```
const cy_stc_smif_mem_device_cfg_t
deviceCfg_S25FL512S_4byteaddr_SlaveSlot_0 =
{
    ...
    .readIDCmd =
    (cy_stc_smif_mem_cmd_t*)&S25FL512S_4byteaddr_SlaveSlot_0_readIDCmd,
    ...
}
```

4. Add the function that actually operates the command in cy_smif_memslot.c where the source code for memory-level APIs for the SMIF driver is provided

Code Listing 5: Cy_SMIF_MemCmdReadID in cy_smif_memslot.c

```
cy_en_smif_status_t Cy_SMIF_MemCmdReadID(SMIF_Type *base,
                                          cy_stc_smif_mem_config_t const *memDevice,
                                          uint8_t* readBuff,
                                          uint32_t size,
                                          cy_stc_smif_context_t *context)
{
    cy_en_smif_status_t result = CY_SMIF_BAD_PARAM;
    cy_en_smif_slave_select_t slaveSelected;
    cy_stc_smif_mem_device_cfg_t *device = memDevice->deviceCfg;
    cy_stc_smif_mem_cmd_t *cmdReadID = device->readIDCmd;
    if(NULL == cmdReadID)
    {
        result = CY_SMIF_CMD_NOT_FOUND;
    }
    else
    {
        slaveSelected = (0U == memDevice->dualQuadSlots)?memDevice->slaveSelect:
            (cy_en_smif_slave_select_t)memDevice->dualQuadSlots;
        result = Cy_SMIF_TransmitCommand( base,
            (uint8_t)cmdReadID->command,
            cmdReadID->cmdWidth,
            CY_SMIF_CMD_WITHOUT_PARAM, CY_SMIF_CMD_WITHOUT_PARAM,
            CY_SMIF_WIDTH_NA,
            slaveSelected, CY_SMIF_TX_NOT_LAST_BYTE, context);
        if(CY_SMIF_SUCCESS == result)
        {
            result = Cy_SMIF_ReceiveData(base, readBuff, size,
                cmdReadID->dataWidth, NULL, context);
        }
    }
    return(result);
}
```

5. Add the function that returns the data to the rxBuffer in cy_smif_memslot.c where the source code for memory-level APIs for the SMIF driver is provided

2 Procedures

Code Listing 6: Cy_SMIF_MemCmdReadID in cy_smif_memslot.c

```
cy_en_smif_status_t Cy_SMIF_MemReadID(SMIF_Type *base,
                                       cy_stc_smif_mem_config_t const *memConfig,
                                       uint8_t rxBuffer[],
                                       uint32_t length,
                                       cy_stc_smif_context_t *context)
{
    cy_en_smif_status_t status = CY_SMIF_BAD_PARAM;
    uint32_t chunk = 0UL;
    CY_ASSERT_L1(NULL != memConfig);
    CY_ASSERT_L1(NULL != rxBuffer);
    if(1)
    {
        /* SMIF can read only up to 65536 bytes in one go. Split the larger
           read into multiple chunks */
        while (length > 0UL)
        {
            /* Get the number of bytes which can be read during one operation */
            chunk = (length > SMIF_MAX_RX_COUNT) ?
                    (SMIF_MAX_RX_COUNT) : length;
            /* Send the command to read data from the external memory to the rxBuffer array */
            status = Cy_SMIF_MemCmdReadID(base, memConfig,
                                           (uint8_t *)rxBuffer, chunk, context);
            if(CY_SMIF_SUCCESS == status)
            {
                /* Wait until the SMIF block completes receiving data */
                status = PollTransferStatus(base, CY_SMIF_REC_CMPLT, context);
            }
            if(CY_SMIF_SUCCESS != status)
            {
                break;
            }
            /* Recalculate the next rxBuffer offset */
            length -= chunk;
            rxBuffer = (uint8_t *)rxBuffer + chunk;
        }
    }
    return status;
}
```

6. Add the function that executes the read ID operation to the external flash in cy_serial_flash_qspi.c where it provides APIs for interacting with an external flash

2 Procedures

Code Listing 7: cy_serial_flash_qspi_readID in cy_serial_flash_qspi.c

```
cy_rslt_t cy_serial_flash_qspi_readID(size_t length,
                                     uint8_t* buf)
{
    cy_rslt_t result_mutex_rel = CY_RSLT_SUCCESS;
    cy_rslt_t result = _mutex_acquire();
    if (CY_RSLT_SUCCESS == result)
    {
        /* Cy_SMIF_MemReadID() returns error if (addr + length) > total flash
           size.*/
        result = (cy_rslt_t)Cy_SMIF_MemReadID(qspi_obj.base,
                                              qspi_block_config.memConfig[MEM_SLOT],
                                              buf, length,
                                              &qspi_obj.context);
        result_mutex_rel = _mutex_release();
        result_mutex_rel = _mutex_release();
    }
    /* Give priority to the status of SMIF operation when both SMIF
       operation and mutex release fail.*/
    return ((CY_RSLT_SUCCESS == result) ? result_mutex_rel :
           result);
}
```

7. In main.c, add the function to operate the read device RDID (9Fh) operation

Code Listing 8: cy_serial_flash_qspi_readID in main.c

```
int main(void)
{
    ...
    printf("\r\n1. Reading device ID\r\n");
    result = cy_serial_flash_qspi_readID(DEVICE_ID, rx_buf);
    check_status("Reading Device ID failed", result);
    printf("Byte Address: Data\r\n");
    for(uint8_t i = 0; i < DEVICE_ID; i++)
        printf("0x%02dh : 0x%02Xh \r\n", i, rx_buf[i]);
    ...
}
```

Make sure to include the added functions to the header files also.

This example code is in SPI mode. Some flash devices such as S25FS512S supports QPI mode, so if you want to operate RDID (9Fh) in QPI mode, you can modify the command width and data width into Quad.

2 Procedures

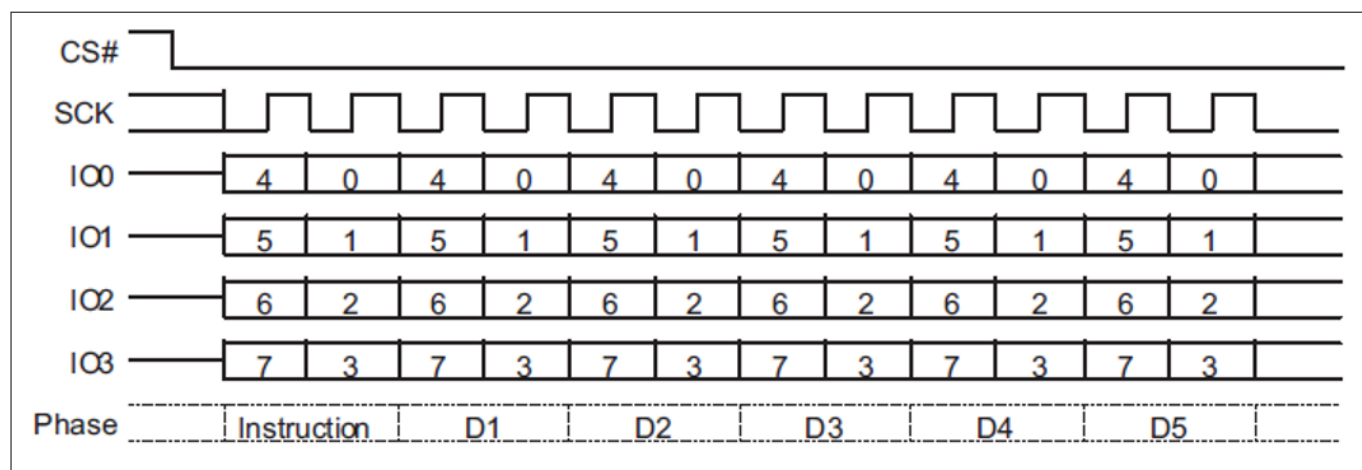


Figure 10 Read Identification (RDID) QPI mode command

Code Listing 9: RDID(9Fh) in QPI mode

```
const cy_stc_smif_mem_cmd_t
S25FL512S_4byteaddr_SlaveSlot_0_readIDQPICmd =
{
    /* The 8-bit command. 1 x I/O read command. */
    .command = 0x9FU,
    /* The width of the command transfer. */
    .cmdWidth = CY_SMIF_WIDTH_QUAD,
    /* The width of the address transfer. */
    .addrWidth = CY_SMIF_WIDTH_NA,
    /* The 8-bit mode byte. This value is 0xFFFFFFFF when there
       is no mode present. */
    .mode = 0xFFFFFFFFU,
    /* The width of the mode command transfer. */
    .modeWidth = CY_SMIF_WIDTH_NA,
    /* The number of dummy cycles. A zero value suggests no dummy cycles. */
    .dummyCycles = 0U,
    /* The width of the data transfer. */
};
```

3 PSoC™ 6 MCU board operation

Figure 11 shows the waveforms with the QPI bit set for the FS512S RDID QPI operation signals measured with an oscilloscope. Normally, input signal instructions are latched on the rising edge of the SCK signal. Then, the data output changes after the falling edge of SCK in SDR commands. Because this is a QPI operation, the output data should come after the first 8-bits of the two serial clock instructions on the falling edge. However, for this PSoC™ 6 MCU board, the signals remain HIGH even after the instruction phase; the data phase comes after A certain hold time. This hold time is driven by the controller.

Even though the flash memory is sending data signals after the instruction phase, the controller's pull-up signal is more dominant, thus ignoring the flash device's first data signal. Therefore, as soon as the controller drops the bus, a dip can be made regardless of the real signal due to the controller's sudden drop from HIGH to LOW. Therefore, in the oscilloscope measurements' point of view, the first data should be read right after the dip but before the second falling edge of the flash device-driven phase. This is because the flash device's output data is already on the signal bus but ignored due to controller's control over the bus.

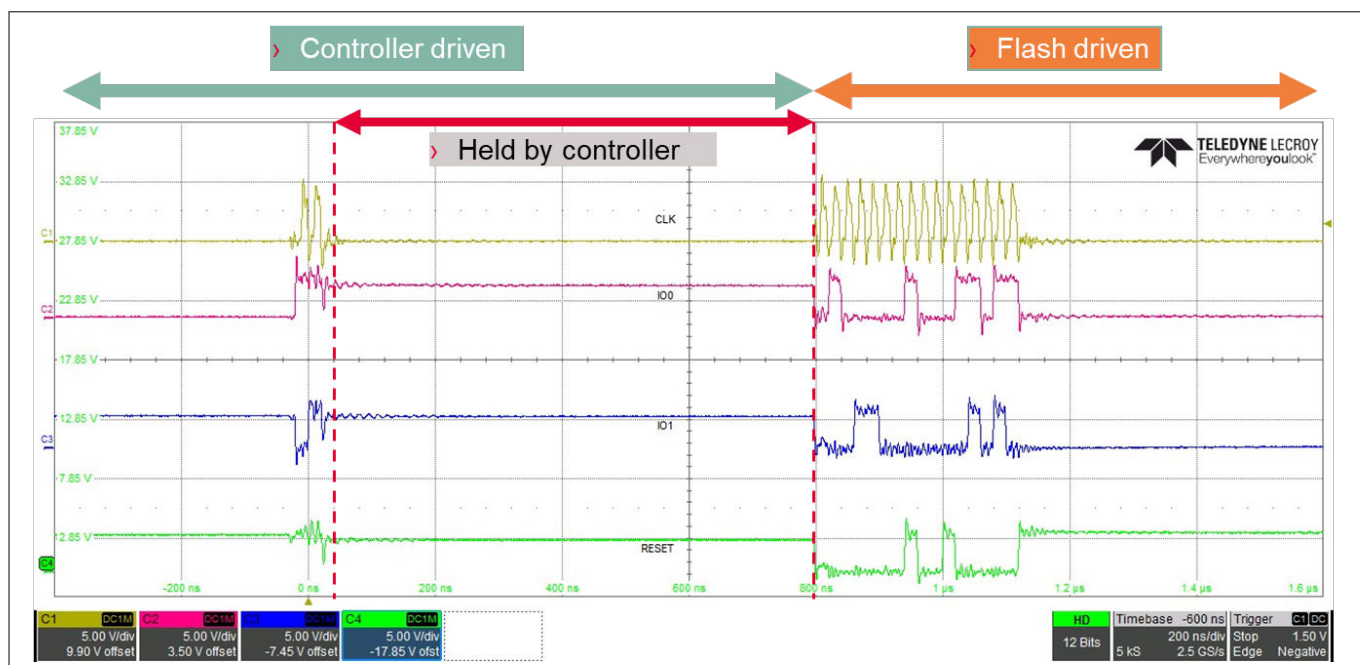


Figure 11 FS512S QPI bit set RDID(9Fh) QPI operation

PSoC™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory

3 PSoC™ 6 MCU board operation

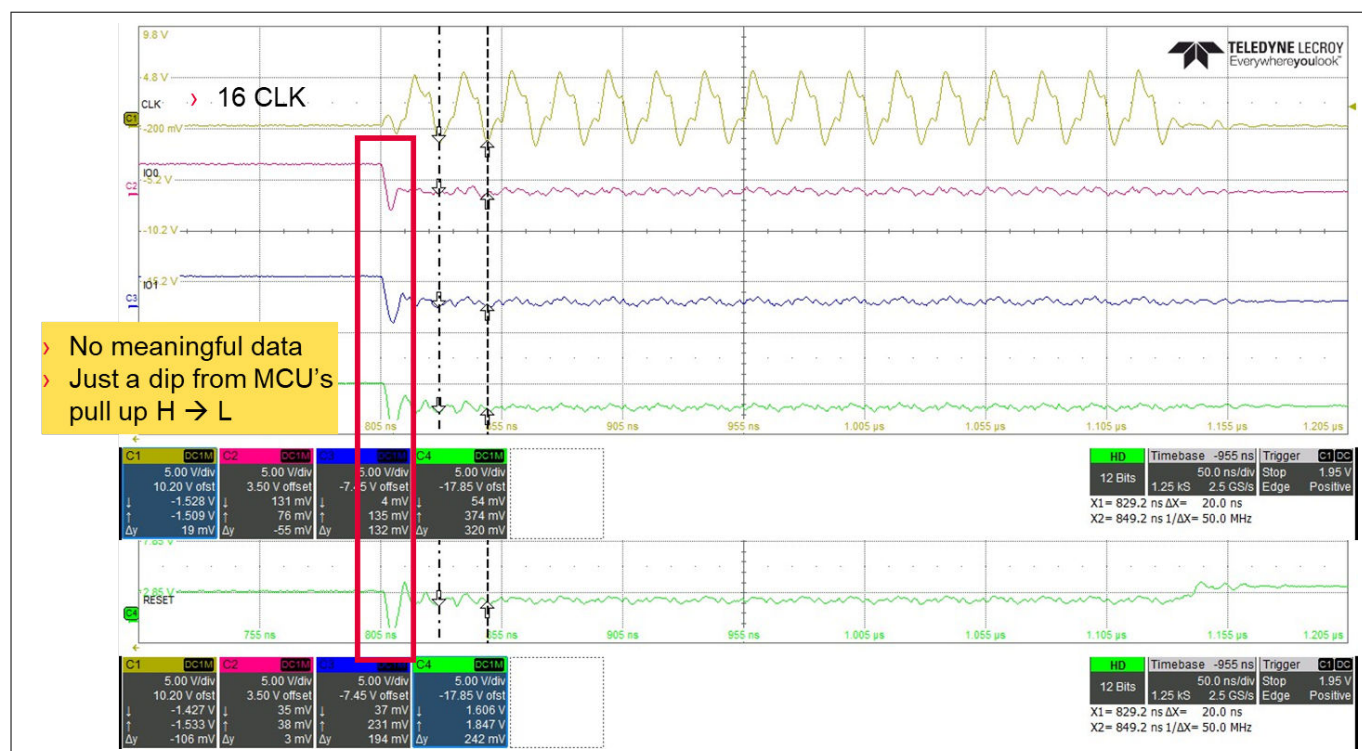


Figure 12 No meaningful dip at the beginning of the data phase

4 Use cases

4 Use cases

Even though these changes make the kit a general flash evaluation tool, its usage can be expanded beyond a demo board. Here's an actual use case to a customer's board. When a failure case is submitted, application-level investigation should be done to narrow down the root cause of the failure before failure analysis (FA) is done at the chip level.

Note that the jumpers are connected to the connector pinout on the PCB; it is then connected to the pin header of the PSoC™ 6 MCU board to avoid damage on the target board.

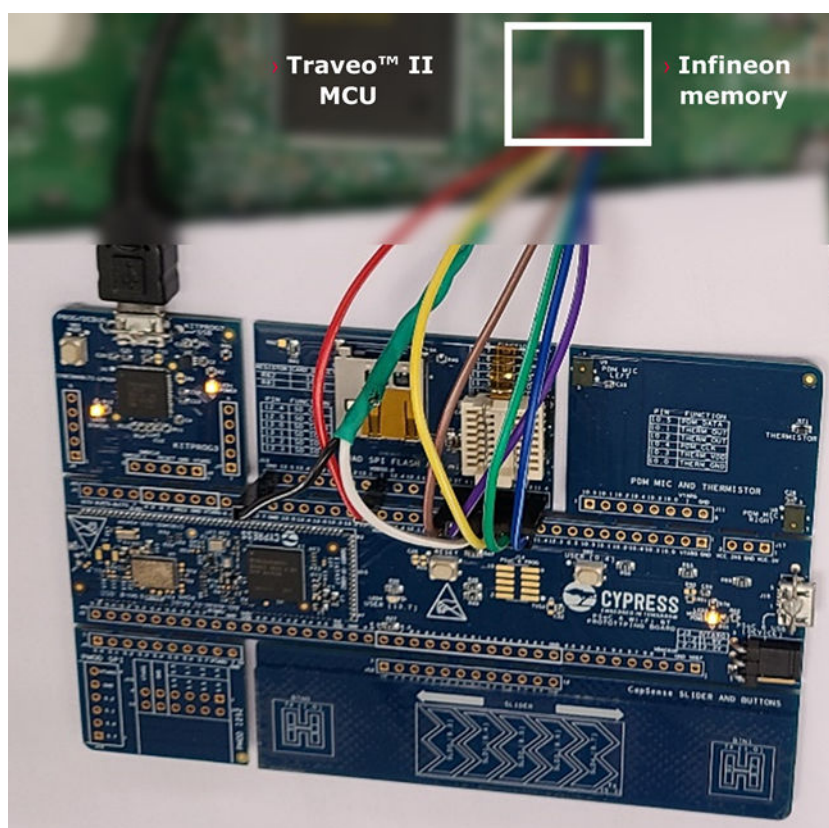
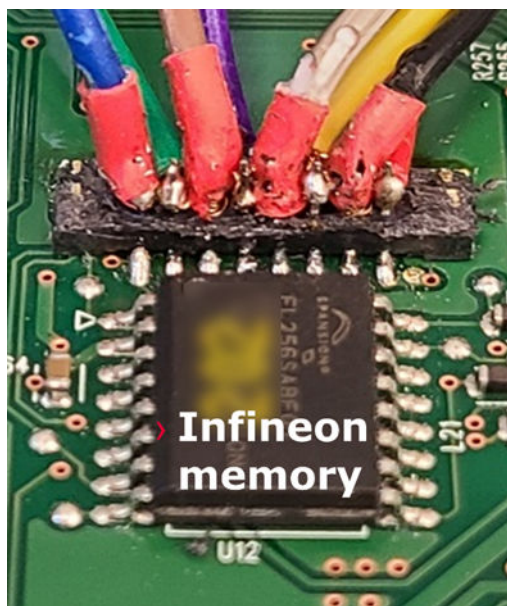


Figure 13 PSoC™ 6 MCU board connected externally to a customer's application board

PSoC™ 6 MCU: Modify CY8CPROTO-062-4343W board to work with an external flash memory

4 Use cases

By reading the device ID using the function added and reading the data on a specific address, identical abnormal operation was reproduced with PSoC™ 6 MCU board.

```
***** PSoC 6 S&T Motiv Debugging 20210506*****
*****
***** Customer's S25FL256S *****

0. Reading ID
Reading ID
2 (6 bytes):
-----
0x01 0x02 0x19 0x40 0x00 0x80
2. Reading External memory data address: 0x0000
Received Data (64 bytes):
-----
0x54 0x41 0x43 0x53 0x31 0x38 0x30 0x31 0x30 0x32 0x30 0x30 0x34 0x30 0x30 0x30
0x30 0x30 0x30 0x30 0x30 0x35 0x32 0x30 0x30 0x39 0x30 0x32 0x30 0x38 0x38 0x33
0x01 0x00 0x02 0x00 0x04 0x00 0x05 0x00 0x06 0x00 0x07 0x00 0x08 0x00 0x09 0x00
0x0A 0x00 0x0B 0x00 0x0E 0x00 0x0F 0x00 0x10 0x00 0x11 0x00 0x12 0x00 0x13 0x00

3. Reading External memory data address: 0x20000
Received Data (64 bytes):
-----
0x54 0x41 0x43 0x53 0x31 0x38 0x30 0x31 0x30 0x32 0x30 0x30 0x34 0x30 0x30 0x30
0x30 0x30 0x30 0x30 0x30 0x35 0x32 0x30 0x30 0x39 0x30 0x32 0x30 0x38 0x38 0x33
0x01 0x00 0x02 0x00 0x04 0x00 0x05 0x00 0x06 0x00 0x07 0x00 0x08 0x00 0x09 0x00
0x0A 0x00 0x0B 0x00 0x0E 0x00 0x0F 0x00 0x10 0x00 0x11 0x00 0x12 0x00 0x13 0x00

4. Reading External memory data address: 0x40000
Received Data (64 bytes):
-----
0x54 0x41 0x43 0x53 0x31 0x38 0x30 0x31 0x30 0x32 0x30 0x30 0x34 0x30 0x30 0x30
0x30 0x30 0x30 0x30 0x30 0x35 0x32 0x30 0x30 0x39 0x30 0x32 0x30 0x38 0x38 0x33
0x01 0x00 0x02 0x00 0x04 0x00 0x05 0x00 0x06 0x00 0x07 0x00 0x08 0x00 0x09 0x00
0x0A 0x00 0x0B 0x00 0x0E 0x00 0x0F 0x00 0x10 0x00 0x11 0x00 0x12 0x00 0x13 0x00

5. Reading External memory data address: 0x60000
Received Data (64 bytes):
-----
0x54 0x41 0x43 0x53 0x31 0x38 0x30 0x31 0x30 0x32 0x30 0x30 0x34 0x30 0x30 0x30
0x30 0x30 0x30 0x30 0x30 0x35 0x32 0x30 0x30 0x39 0x30 0x32 0x30 0x38 0x38 0x33
0x01 0x00 0x02 0x00 0x04 0x00 0x05 0x00 0x06 0x00 0x07 0x00 0x08 0x00 0x09 0x00
0x0A 0x00 0x0B 0x00 0x0E 0x00 0x0F 0x00 0x10 0x00 0x11 0x00 0x12 0x00 0x13 0x00
[]
```

Customer's board

Figure 14 Read ID operation result

5 Conclusion

Even though CY8CPROTO-062-4343W PSoC™ 6 prototyping kit is provided with a Quad SPI flash device and example code, its use as a general-purpose flash evaluation tool is limited. By modifying the hardware and software of the board, it can be turned into a general tool to operate any flash device.

By attaching a socket, the flash device can be replaced with any SOIC package flash. By attaching pin headers, it frees the spatial constraints and connects any flash device with any package and even to the flash device on an external board. By adding operation commands, the test range can be extended to any commands.

By using the information in this application note, you will be able to make your own PSoC™ 6 MCU-based flash evaluation tool.

References

1. PSoC™ 6 Wi-Fi Bluetooth® prototyping kit (CY8CPROTO-062-4343W)
<https://www.cypress.com/documentation/development-kitsboards/psoc-6-wi-fi-bt-prototyping-kit-cy8cproto-062-4343w>
2. CY8CPROTO-062-4343W PSoC™ 6 Wi-Fi Bluetooth® prototyping kit guide
<https://www.cypress.com/file/457891/download>
3. CY8CPROTO-062-4343W schematic
<https://www.cypress.com/file/457811/download>
4. S25FL512S, 512 Mb (64 MB), 3.0 V SPI flash memory datasheet
<https://www.cypress.com/documentation/datasheets/s25fl512s-512-mb-64-mb-30-v-spi-flash-memory>
5. ModusToolbox™ software download link
https://www.cypress.com/products/modustoolbox#tabs-0-bottom_side-6
6. ModusToolbox™ software installation guide
<https://www.cypress.com/file/520241/download>
7. ModusToolbox™ software user guide
<https://www.cypress.com/file/520251/download>

Revision history

Revision history

Document version	Date of release	Description of changes
**	2021-09-17	New application note

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2021-09-17

Published by

Infineon Technologies AG
81726 Munich, Germany

© 2022 Infineon Technologies AG
All Rights Reserved.

Do you have a question about any aspect of this document?

Email: erratum@infineon.com

Document reference
IFX-gip1649233789295

Important notice

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.