



---

The following document contains information on Cypress products. The document has the series name, product name, and ordering part numbering with the prefix “MB”. However, Cypress will offer these products to new and existing customers with the series name, product name, and ordering part number with the prefix “CY”.

#### **How to Check the Ordering Part Number**

1. Go to [www.cypress.com/pcn](http://www.cypress.com/pcn).
2. Enter the keyword (for example, ordering part number) in the **SEARCH PCNS** field and click **Apply**.
3. Click the corresponding title from the search results.
4. Download the Affected Parts List file, which has details of all changes

#### **For More Information**

Please contact your local sales office for additional information about Cypress products and solutions.

#### **About Cypress**

Cypress is the leader in advanced embedded system solutions for the world's most innovative automotive, industrial, smart home appliances, consumer electronics and medical products. Cypress' microcontrollers, analog ICs, wireless and USB-based connectivity solutions and reliable, high-performance memories help engineers design differentiated products and get them to market first. Cypress is committed to providing customers with the best support and development resources on the planet enabling them to disrupt markets by creating new product categories in record time. To learn more, go to [www.cypress.com](http://www.cypress.com).

## F<sup>2</sup>MC-16FX Family, SPI Communication With SD Card

This Application Note describes how to connect MMC/SD cards to a 16FX microcontroller via SPI and gives an idea how to use the driver from application software.

### Contents

1	Introduction.....	1	3.1	MMC/SD Card Driver .....	17
1.1	Overview .....	1	3.2	FatFs (FAT Filesystem) & Disk IO Module (supports FAT, FAT16, FAT32) .....	23
1.2	Quickstart.....	2	3.3	Filesystem Functions .....	24
1.3	Available Commands .....	4	3.4	Application Interface .....	28
2	Hardware .....	7	4	Performance .....	30
2.1	Hardware Connection – MMC/SD Interface .....	7	A	Appendix .....	31
2.2	Sample Connection for SK-16FX-EUROSCOPE (MB96340 Series).....	8	A.1	Related Documents .....	31
2.3	Sample Connection for SK-16FX-144PMC-USB (MB96330 Series) .....	9	A.2	Additional Information .....	31
2.4	MMC/SD Card Hardware Configuration .....	11	5	Document History.....	32
3	Software .....	16			

## 1 Introduction

This Application Note describes how to connect MMC/SD cards to a 16FX microcontroller via SPI and gives an idea how to use the driver from application software. A simple command-line user interface allows exploring folders and files, reading, writing, append and copy files, renaming and deleting files or folders, creating folders and formatting the FAT file system. It is also possible to add own commands in the command line structure, so the user has the possibility to test the full function of the MMC/SD implementation in a full functional embedded filesystem.

Supported file systems are FAT, FAT16 and FAT32.

The software is developed for the Cypress MB96300 family microcontroller. This example is designed primarily for Cypress MB96F348 (SK-16FX-EUROSCOPE Starterkit) and the MB96F338 (SK-144PMC-USB Starterkit) microcontroller.


The FAT file system used within this application note can be downloaded from the developer's website:

[http://elm-chan.org/fsw/ff/00index\\_e.html](http://elm-chan.org/fsw/ff/00index_e.html)

### 1.1 Overview

The project is divided in a hardware section and a software section. The hardware section shows some sample connections of the MMC/SD card for two starter kits, explains the SD-card protocol and describes hardware specific configurations in the software part.

The software section explains the implementation of the different software modules which are necessary to use card storage with a FAT filesystem. Most modules are based on the FAT Filesystem (also FatFs called). Main Software Modules are shown below:

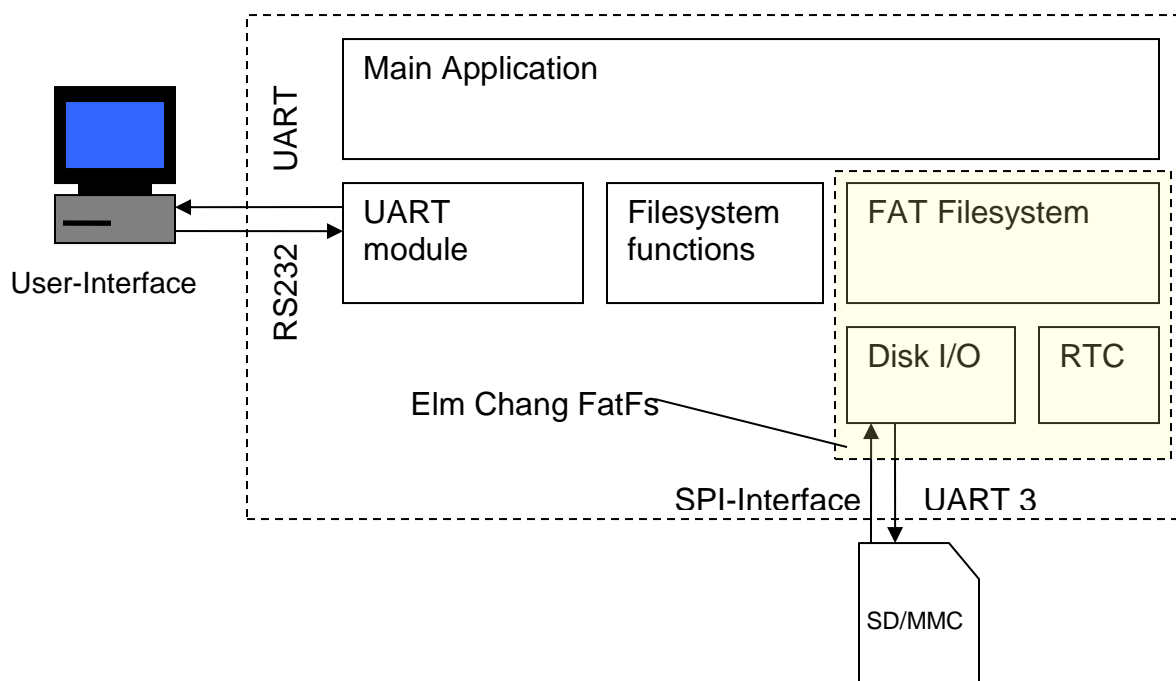


## 1.2 Quickstart

First the MMC/SD Card connection has to be realized. This can be done by the sample connections in chapter “2 Hardware” for starterkit SK-16FX-EUROSCOPE or SK-16FX-144PMC-USB.

### 1.2.1 First Start

The application interface is realized as a command line over UART 0 (115200,8N1). Connect a serial cable (RS232) to the PC and use a terminal application like *Starterkit Wizard* to communicate with the MCU. After resetting the MCU a welcome screen should be displayed.

A drive has to be mounted: Insert a MMC/SD card and type in `mount 0`. If the command line displays `0 : />` the card was successfully mounted.

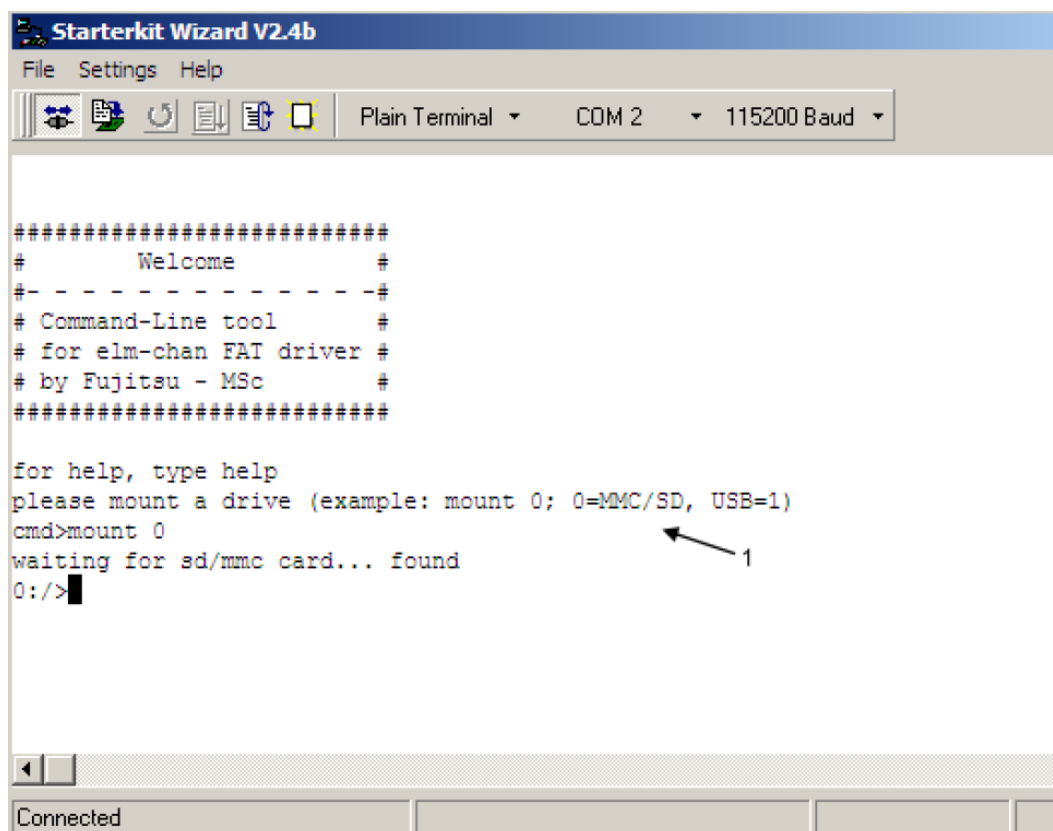

The screenshot shows the Starterkit Wizard V2.4b application window. The title bar is blue with the text "Starterkit Wizard V2.4b". Below the title bar is a menu bar with "File", "Settings", and "Help". Under the menu bar is a toolbar with icons for file operations and a status bar showing "Plain Terminal", "COM 2", and "115200 Baud". The main area is a terminal window with the following text:


```
#####  
#       Welcome       #  
#-----#  
# Command-Line tool   #  
# for elm-chan FAT driver #  
# by Fujitsu - MSc    #  
#####  
  
for help, type help  
please mount a drive (example: mount 0; 0=MMC/SD, USB=1)  
cmd>mount 0  
waiting for sd/mmc card... found  
0:/>
```

An arrow labeled "1" points to the "mount 0" command in the terminal output.

1. In the terminal application it can be seen that there is the possibility to mount USB. This is only available with 16FX USB devices (MB96330 series) and won't be work with the MB96340 series.

### 1.3 Available Commands

To display a list of available commands use the command `help`. Help displays all commands and which parameters are required to use them. Some commands can only be done if a drive was mounted. The commands which are working without mounting any drive are `help`, `mount`, `0`: and `1`:

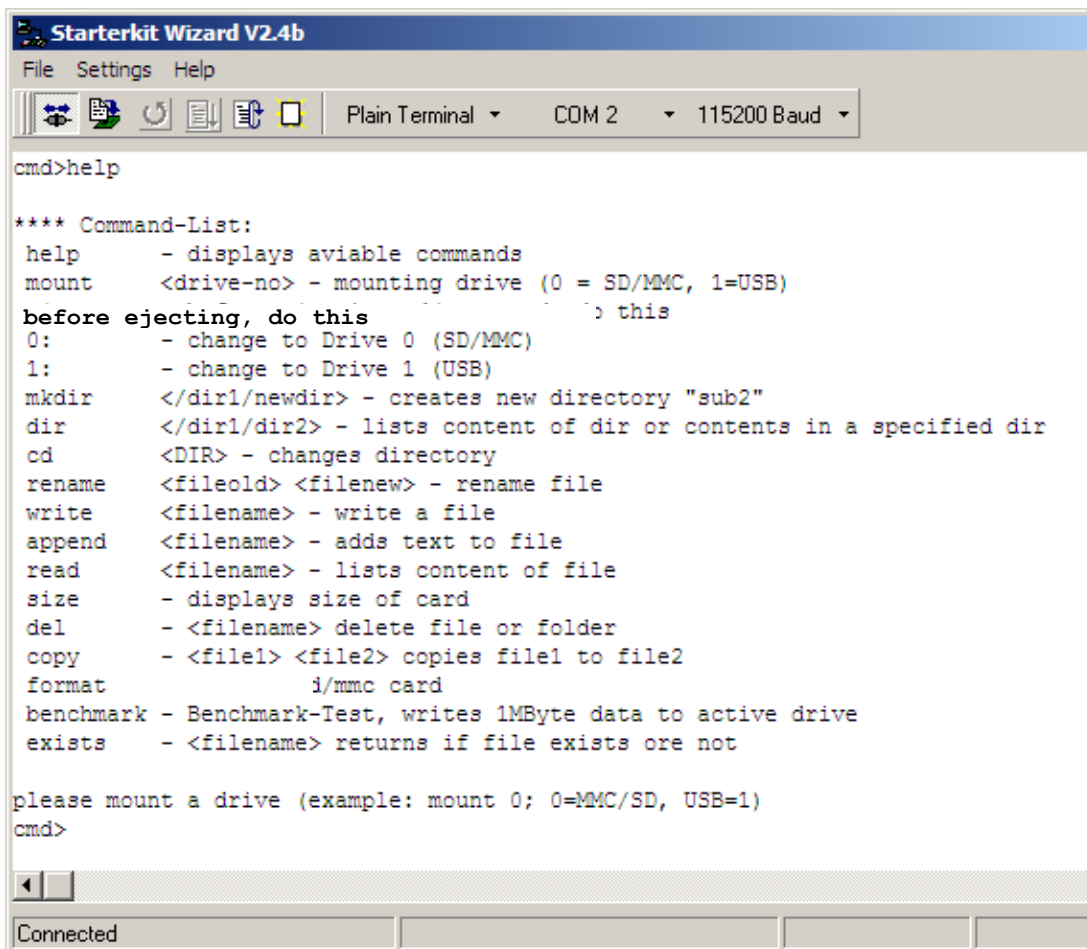

```

Starterkit Wizard V2.4b
File Settings Help
Plain Terminal COM 2 115200 Baud
cmd>help

**** Command-List:
help      - displays available commands
mount     <drive-no> - mounting drive (0 = SD/MMC, 1=USB)
before ejecting, do this
0:        - change to Drive 0 (SD/MMC)
1:        - change to Drive 1 (USB)
mkdir     </dir1/newdir> - creates new directory "sub2"
dir       </dir1/dir2> - lists content of dir or contents in a specified dir
cd        <DIR> - changes directory
rename    <fileold> <filenew> - rename file
write     <filename> - write a file
append    <filename> - adds text to file
read      <filename> - lists content of file
size      - displays size of card
del       <filename> delete file or folder
copy      <file1> <file2> copies file1 to file2
format    i/mmc card
benchmark - Benchmark-Test, writes 1MByte data to active drive
exists    <filename> returns if file exists or not

please mount a drive (example: mount 0; 0=MMC/SD, USB=1)
cmd>

```

### 1.3.1 Syntax

The syntax of the command-line is simple structured. A command is followed with parameters. Command and parameter are divided by one space character.

```

Command-Line:
  No disk is mounted, command-mode only without filesystem features
  cmd>COMMAND PARAMETER1 PARAMETER2 ... PARAMETERn
  Disk was mounted:
  0:>COMMAND PARAMETER1 PARAMETER2 ... PARAMETERn

File structure notion:
  0:/mydir/myfile.txt
  |       |       |
  |       |       +--- Filename, has to be fileformat DOS 8.3
  |       |
  |       +----- Directory in rootdirectory
  |
  +----- Drive Number:  0: SD/MMC
                          1: USB
  
```

### 1.3.2 Example: Write a file without command-line

If there is no need for command-line tools, there is only the need of the io-driver, the io-disk-layer and the filesystem to use SD/MMC support. The following files will be needed:

- |  |   |
|--|---|
| - <i>mmc.c, mmc.h</i>                              | SD/MMC io-driver                                |
| - <i>ff.c, ff.h, diskio.c, diskio.h, integer.h</i> | Elm Chan's filesystem (io-layer and filesystem) |
| - <i>vectors.c, hw_support.c</i>                   | Port definitions, timer interrupt, etc.         |

An example to write a file could be like the following code example:

```
// examples see also Elm Chan's FatFs: http://elm-chan.org/fsw/ff/00index\_e.html
#include "ff.h"
#include "string.h"

int writeFile( void )
{
    UINT wlen,bw;
    FIL myfile;
    FATFS filesystem;
    char mystring[] = "Hello World!";

    WaitMMCSdInit(0);      // wait for SD/MMC ready and initialize it

    f_mount(0,&filesystem); //mount filesystem
    // see also: http://elm-chan.org/fsw/ff/en/mount.html

    f_open(&myfile,"0:/text.txt", FA_CREATE_ALWAYS| FA_WRITE); // open file for
write
    // see also http://elm-chan.org/fsw/ff/en/open.html

    wlen = strlen(mystring);

    f_write(&myfile,"mytext",wlen,&bw);
    if (bw != wlen) return -1; // error bytes written not bytes to write
    // see also http://elm-chan.org/fsw/ff/en/write.html

    f_close(&myfile); // close file
    // see also: http://elm-chan.org/fsw/ff/en/close.html

    f_mount(0,NULL); //unmount filesystem

    return 0;
}
```


## 2 Hardware

Description of MMC/SD Card Hardware Implementation

### 2.1 Hardware Connection – MMC/SD Interface

The communication between the MCU and MMC/SD card is realized with one internal SPI interface (UART3). For card detection and card write protection there are two switches in the card socket. Take care MMC/SD Cards can only be used in 3.3V systems.


Diagram: How to connect the MMC/SD card (MB96340 Series)

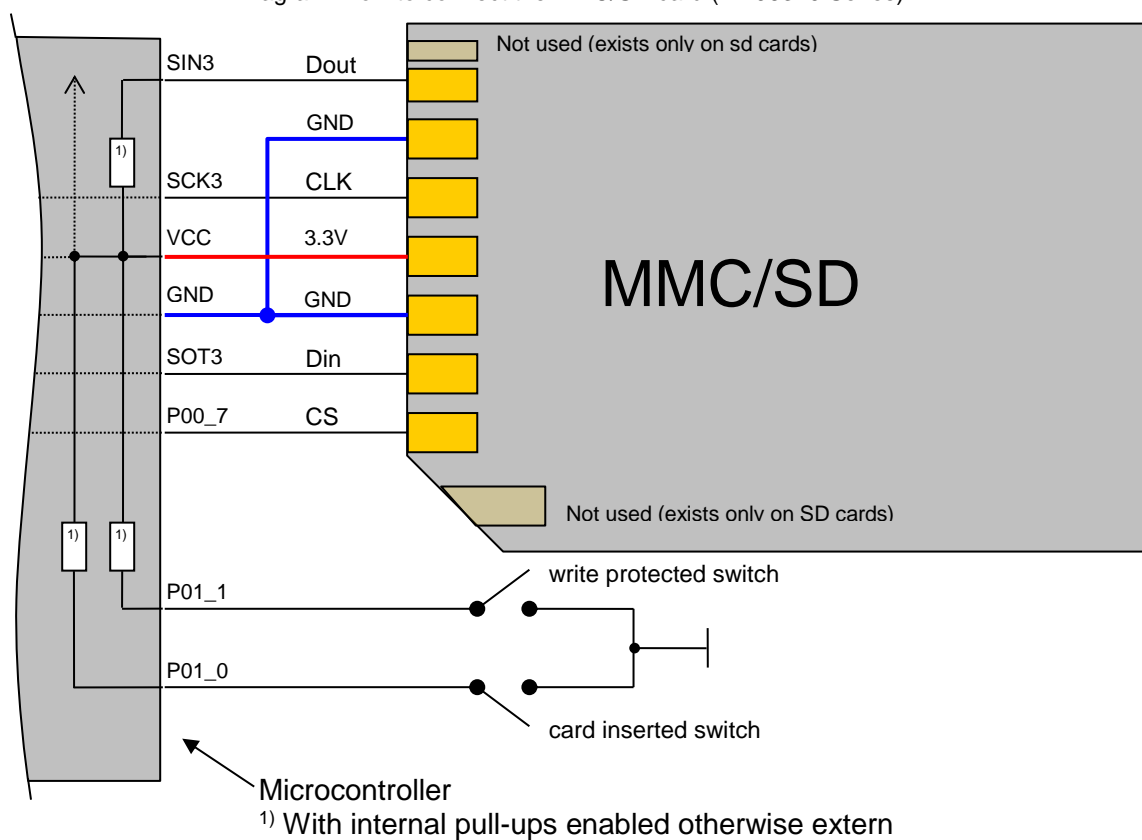


**WARNING:** MCU-VCC and SD/MCC card VCC has to be 3.3V otherwise MMC/SD card and MCU causes damage!

## 2.2 Sample Connection for SK-16FX-EUROSCOPE (MB96340 Series)

To connect a MMC/SD Card to the Starterkit, UART 3 can be used, because next by are also VCC and GND pins. **Do not forget to switch the MCUVCC voltage to 3,3V via jumper JP10.** Connect a MMC/SD Card slot with a flatband cable as it is shown below. On the other side a normal pin header connector can be used. For a stable connection the flatband cable has to be not longer then 20cm.

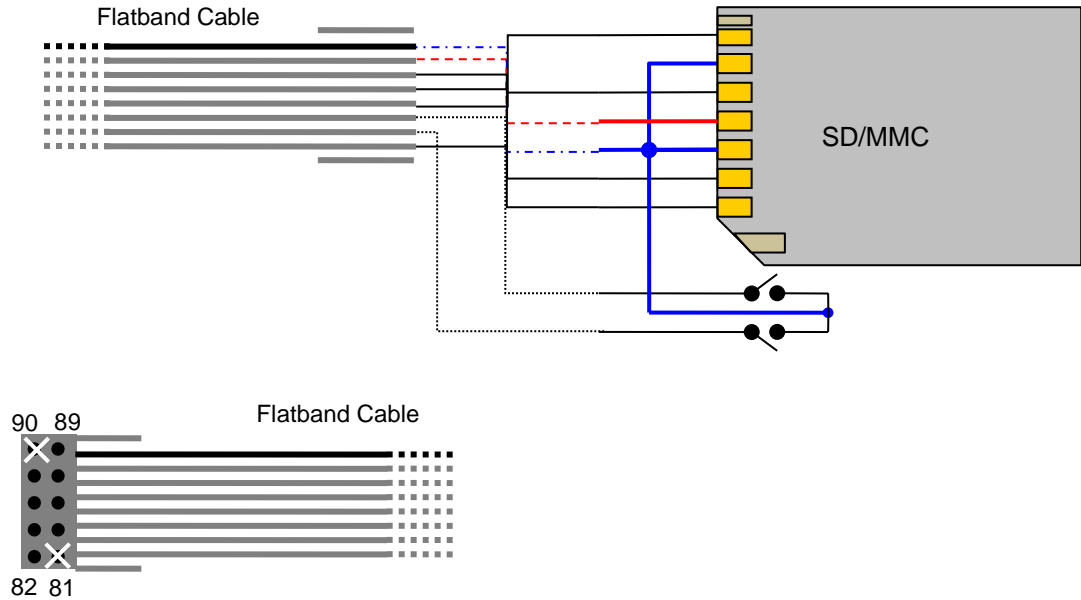

At the Starterkit use connection header X3. Connect the adapter cable from pin 81 to 90, pin 81 and 90 are not used in this example:

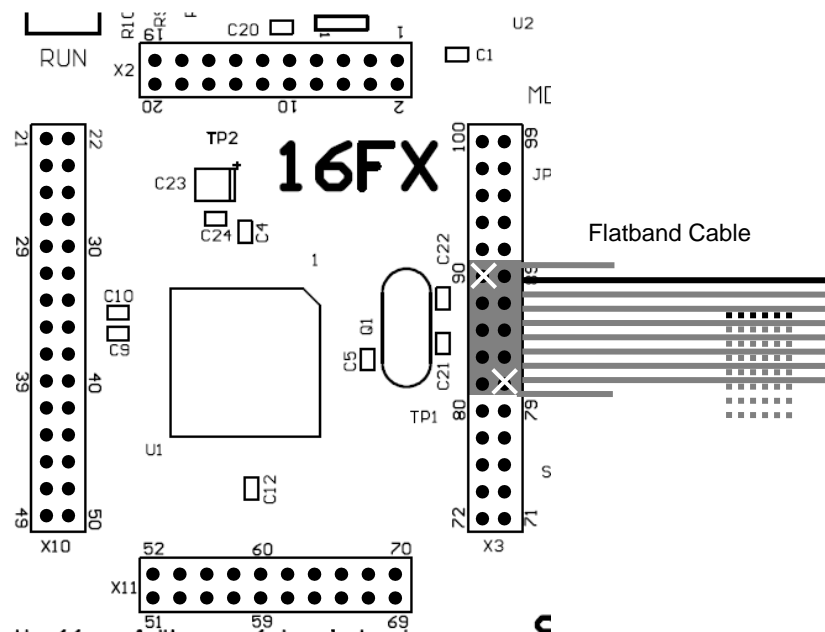

For connections details have a look in the following table. It shows pin-number at the MCU, function of the pin, which port is used and which pin is connected to the MMC/SD Card.

Port 0 is also used for the right seven segment display. Pin *P00\_P7* is the dot in the display and shows cable select activity of the MMC/SD card.


#### Connector X3 (Pin 71 – 100):

Pin	Description	Function
82	P00_7*	Chipselect (dot of left 7 segment display shows activity = CS)*
83	P01_0	Card insert switch
84	P01_1	Write protection switch
85	P01_2/SIN3*	SPI Input (MCU)*
86	P01_3/SOT3*	SPI Output (MCU)*
87	P01_4/SCK3*	SPI Clock (MCU)*
88	VCC*	VCC connected to MMC/SD card*
89	VSS	VSS connected to MMC/SD card


\* 3,3V

## 2.3 Sample Connection for SK-16FX-144PMC-USB (MB96330 Series)

To connect a MMC/SD Card to the Starterkit, UART 3 can be used to be pin port compatible to the SK-16FX-Euroscope Sample. **Do not forget to switch the MCVCC voltage to 3,3V via jumper JP10.** Connect a MMC/SD Card slot with a flatband cable as it is shown below. On the other side a normal pin header connector can be used. For a stable connection the flatband cable has to be not longer then 20cm.

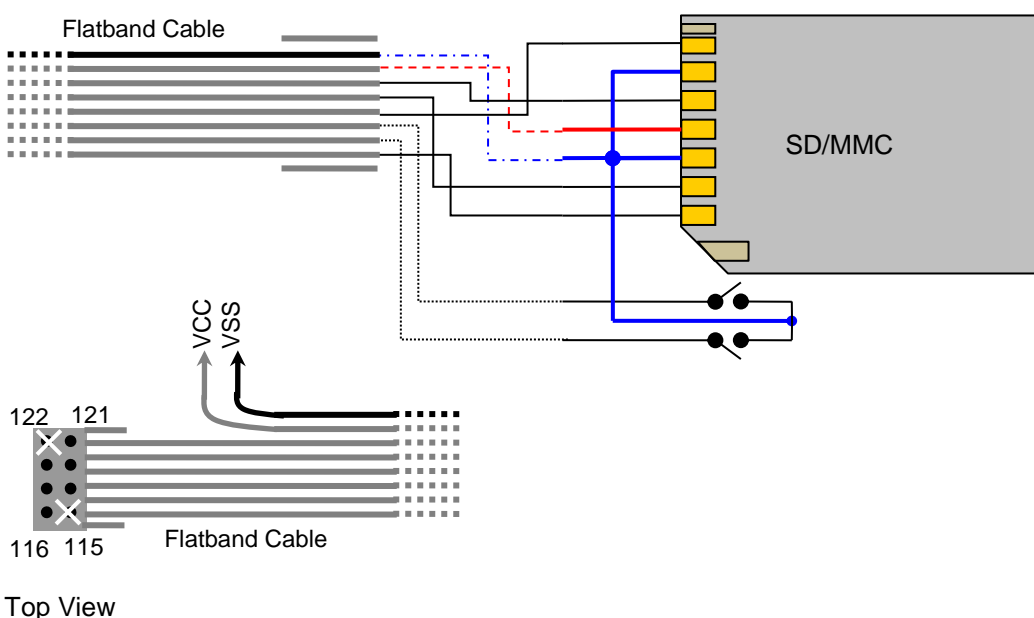

At the Starterkit use connection header X3. Connect the adapter cable from pin 115 to 122, pin 115 and 122 are not used in this example:

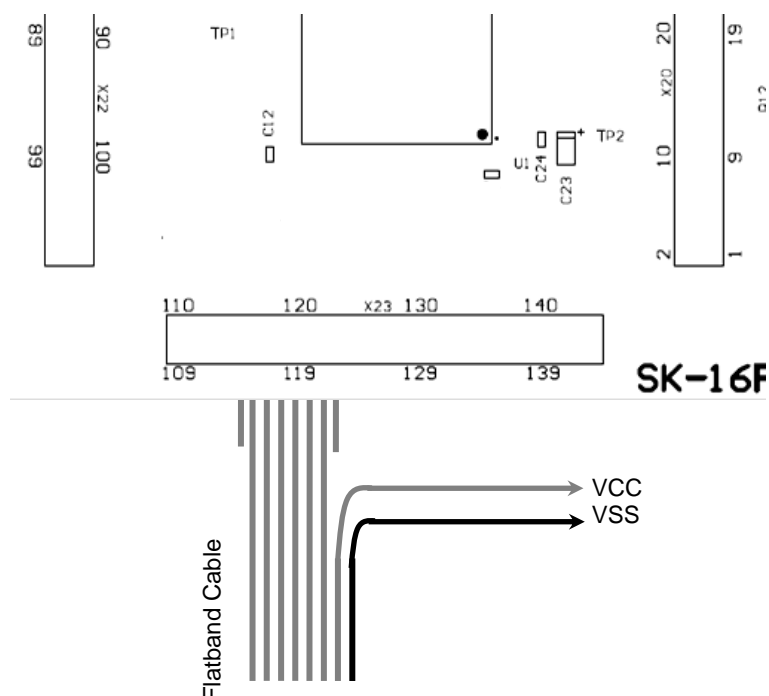

For connections details have a look in the following table. It shows pin-number at the MCU, function of the pin, which port is used and which pin is connected to the MMC/SD Card. Port 0 is also used for the right seven segment display. Pin *P00\_P7* is the dot in the display and shows cable select activity of the MMC/SD card.

#### Connector X3 (Pin 109 – 144):

Pin	Description	Function
116	P00_7*	Chipselect (dot of left 7 segment display shows activity = CS)*
117	P01_0	Card insert switch
118	P01_1	Write protection switch
119	P01_2/SIN3*	SPI Input (MCU)*
120	P01_3/SOT3*	SPI Output (MCU)*
121	P01_4/SCK3*	SPI Clock (MCU)*
VCC*	VCC*	VCC connected to mmc/sd card*
VSS	VSS	VSS connected to mmc/sd card

\* 3,3V


## 2.4 MMC/SD Card Hardware Configuration

All following settings are customized for the MCU on which the application is running: In this example for the MB96300 series. The section describes the SPI interface mode, UART settings, Port settings and timer interrupt settings which are required to interface the MMC/SD Card.

### 2.4.1 SPI Mode

The SPI interface is a synchronous serial communication which has a data input, a data output and a clock signal generated by the MCU. For MMC/SD Cards SPI mode 0 is used. For SPI mode 0, CPOL and CPHA are cleared (CPOL = 0, CPHA = 0). CPOL configures the clock signal: normal or inverted. CPHA configures the clock delay.

#### SPI Communication modes

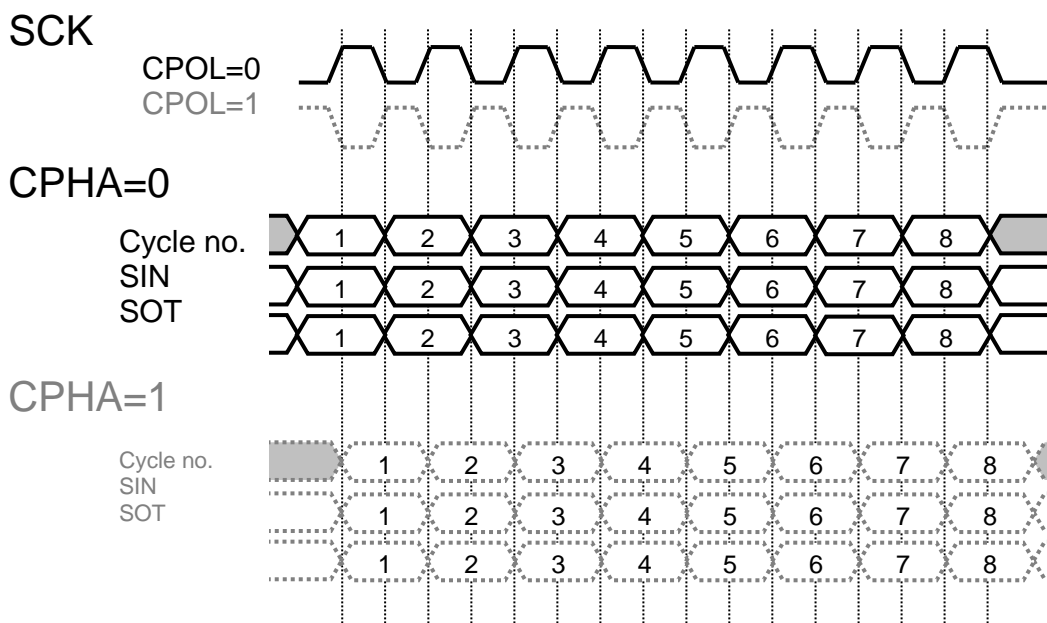

### 2.4.2 UART Configuration

First the input and output direction registers has to been set for UART 3. The input pin of the UART has to be configured with an internal pull-up:

```
DDR01_D2=0;      // Direction Input
PIER01_IE2=1;    // Input Enable
PUCR01_PU2=1;    // Set Pullup
```

Next the baud rate is configured. The communication for SPI communications with a MMC/SD Card are defined with 400KBaud. At a clock speed of 48MHz the baud rate register has to be  $48\text{MHz}/400\text{KBaud} = 120$ .

The SPI mode can be set in the registers ESCR3 and ECCR3. ESCR3 has to be 0x00, because for normal clock mode CPOL = SCES bit has to be cleared. In ECCR3, CPHA = SCDE bit enables or disables the clock delay, the master slave bit has to be configured as master (MS=0). No clock delay is used, so ECCR3 has to be 0x00.

#### ESCR3 Register:

SCES	CCO	SIOP	SOPE	LBL0	LBL1	LBD	LBIE	Value
0	0	0	0	0	0	0	0	0x00

#### ECCR3 Register:

INV	LBR	MS	SCDE	SSM	BIE	RBI	TBI	Value
0	0	0	0	0	0	0	0	0x00

To enable data transfers, the reception and transmission has to be enabled. This can be done in SCR3 register:

**SCR3 Register:**

PEN	P	SBL	CL	AD	CRE	RXE	TXE	Value
0	0	0	0	0	0	1	1	0x03

The UART has to be configured in synchronous mode with clock signal. MD0 = 0 and MD1 = 1 configures the UART as synchronous. SCKE = 1 enables the clock signal and SOE = 1 enables the serial output driver.

**SMR3 Register:**

MD1	MD0	OTO	EXT	RESET	UPCL	SCKE	SOE	Value
1	0	0	0	0	0	1	1	0x83

In SSR3 register MSB/LSB order is defined. MSB has to be first, so BDS is set.

**SSR3 Register:**

PE	ORE	FRE	RDRF	TDRE	BDS	RIE	TIE	Value
0	0	0	0	0	1	0	0	0x04

The configuration of the UART is found in *hwsupport.c* as void `InitSPI3()`.

**UART Configuration in *hwsupport.c***

```
// file: hwsupport.c
...
void InitSPI3( void )
{
    // set portpin SIN3 to input
    DDR01 D2=0;           // Direction Input
    PIER01 IE2=1;         // Input Enable
    PUCR01_PU2=1;         // Set Pullup
    BGR3 = 120;           // Baud Rate 400KBaud
    ESCR3 = 0x00;         // SCES = 0 => CPOL = 0
    ECCR3 = 0x00;         // SCDE = 0 => CPHA = 0
    SCR3 = 0x03;          // reception and transmission enable
    SMR3 = 0x83;          // Mode 2, SCLK enable, SOT enable
    SSR3 = 0x04;          // MSB first, no interrupts
}
...
```

In *mmc.h* following UART 3 registers are defined:

```
#define SSR_RDRF    SSR3_RDRF
#define RDR         RDR3
#define SSR_TDRE    SSR3_TDRE
#define TDR         TDR3
```

### 2.4.3 Port Definitions

First the I/O Ports have to be initialized. SOT3 and SIN3 pin are configured with the UART (chapter 2.4.2). Before the switch ports can be used they have to be configured as input and input has to be enabled. Also the switch ports are connected with internal pull-up's. The cable select signal has to be declared as output.

Initialisations of the I/O ports in *hwsupport.c*:

```
void InitPortsSDMMC( void )
{
    DDR01 D1 = 0;           // write protect switch - port direction input
    PIER01_IE1 = 1;         // write protect switch - input enabled

    DDR01 D0 = 0;           // sdcard switch - port direction input
    PIER01_IE0 = 1;         // sdcard switch - input enabled

    DDR00 D7 = 1;           // CS - Signal for sdcard - port direction output
}
```

Next the ports have to be defined in the *mcc.h* file. ECCR3\_TBI is the Transmission Bus Idle bit, which is cleared if a transmission is ongoing. The definition SELECT() and DESELECT() defines setting or clearing the cable select signal. The pin can only be toggled if no transmission is ongoing. The line while(ECCR3\_TBI == 0); PDR00\_P7 = 0 waits for transmitting complete and clears the CS pin. The same is done for setting the pin.

```
#define SELECT()      while(ECCR3_TBI == 0); PDR00_P7 = 0 /* MMC CS = L */
#define DESELECT()    while(ECCR3_TBI == 0); PDR00_P7 = 1 /* MMC CS = H */
```

The switches for write protection and card insert are located at the same ports. In the example at Port PDR01 pin 1 and 2 of the port.

```
#define MM_SOCKETPORT PDR01          /* Socket contact port */
#define MM_SOCKETWP 0x02             /* Write protect switch */
#define MM_SOCKETINS 0x01            /* Card detect switch */
```

#### All Definitions of the file *mcc.h*

```
// file: mcc.c
...
/* Control signals for MB96F300 series */
#define SELECT()      while(ECCR3_TBI == 0); PDR00_P7 = 0 /* MMC CS = L */
#define DESELECT()    while(ECCR3_TBI == 0); PDR00_P7 = 1 /* MMC CS = H */

#define MM_SOCKETPORT PDR01          /* Socket contact port */
#define MM_SOCKETWP 0x02             /* Write protect switch */
#define MM_SOCKETINS 0x01            /* Card detect switch */

/* Wait functions for MB96F300 series */
#define waitshort() __wait_nop()
#define waitlong()  __wait_nop();__wait_nop();__wait_nop();__wait_nop()

/* SPI for MB96F300 series */
#define SSR_RDRF      SSR3_RDRF
#define RDR           RDR3
#define SSR_TDRE      SSR3_TDRE
#define TDR           TDR3
```

#### 2.4.4 Timer Definitions

The MMC/SD Card I/O driver needs a Reload Timer Interrupt for timeout functionality and checking if a card was inserted.

The timer initialization is handled in *hwsupport.c*. The prescaler is set to  $CLKP1 / 2^6$ , which means  $48MHz/64 = 750KHz$ . The timer operates in reload mode ( $TMCSR0\_UF = 1$ ). To reach a reload timer interrupts, which is called every 10ms (100Hz), reloadvalue =  $(CLKP1 / prescaler) / (wanted\ interval) = 7499$ .

##### Timer Initializations in *hwsupport.c*

```
void InitTimer0( void )
{
    TMCSR0=0x0800; // prescaler
    TMCSR0 UF=1; //timer operates in reload mode
    TMCSR0_RELD=1; // Reload value 750KHz/100Hz - 1=7499
    TMRLR0 = 7499;
    //timer enabled
    TMCSR0_CNTE=1;
    //start timer
    TMCSR0_TRG=1;
    //enable the timer interrupt
    TMCSR0_INTE=1;
}
```

The initialisation of the interrupt has to be done in *vectors.c*. The interrupt number is specific for the MB96F348H microcontroller.

##### Timer Interrupt Initializations in *vectors.c*

```
...
ICR = (51 << 8) | 4; // RLTO
...
__interrupt void ReloadTimer0_IRQHandler( void );
...
#pragma intvect ReloadTimer0_IRQHandler 51
...
```

The interrupt routine is handled in *hwsupport.c*. Necessary for MMC/SD card support is the call of `disk_timerproc()`. This is be done every 10ms.

##### ISP of ReloadTimer0 in *hwsupport.c*


```
__interrupt void ReloadTimer0_IRQHandler( void )
{
    if( TMCSR0 UF) {
        // Reload Timer interrupt request
        TMCSR0 UF=0; // clear interrupt flag
        disk_timerproc(); // in mcc.c, every 10ms
        timer++;
        if (timer == 100) // every second
        {
            uptime++;
            timer=0;
        }
        if (timeout) timeout--; // timeoutcounter
    }
}
```

### 3 Software

Description of Driver and Filesystem Implementation

The software part describes how the MMC/SD Card is implemented from physical layer to presentation layer. The Application should only use the presentation layer, but it is also possible to use the transport layer. To add useful functions, a new presentation layer "Filesystem Functions" was added between the FatFs module and the main application.

## Application Layers

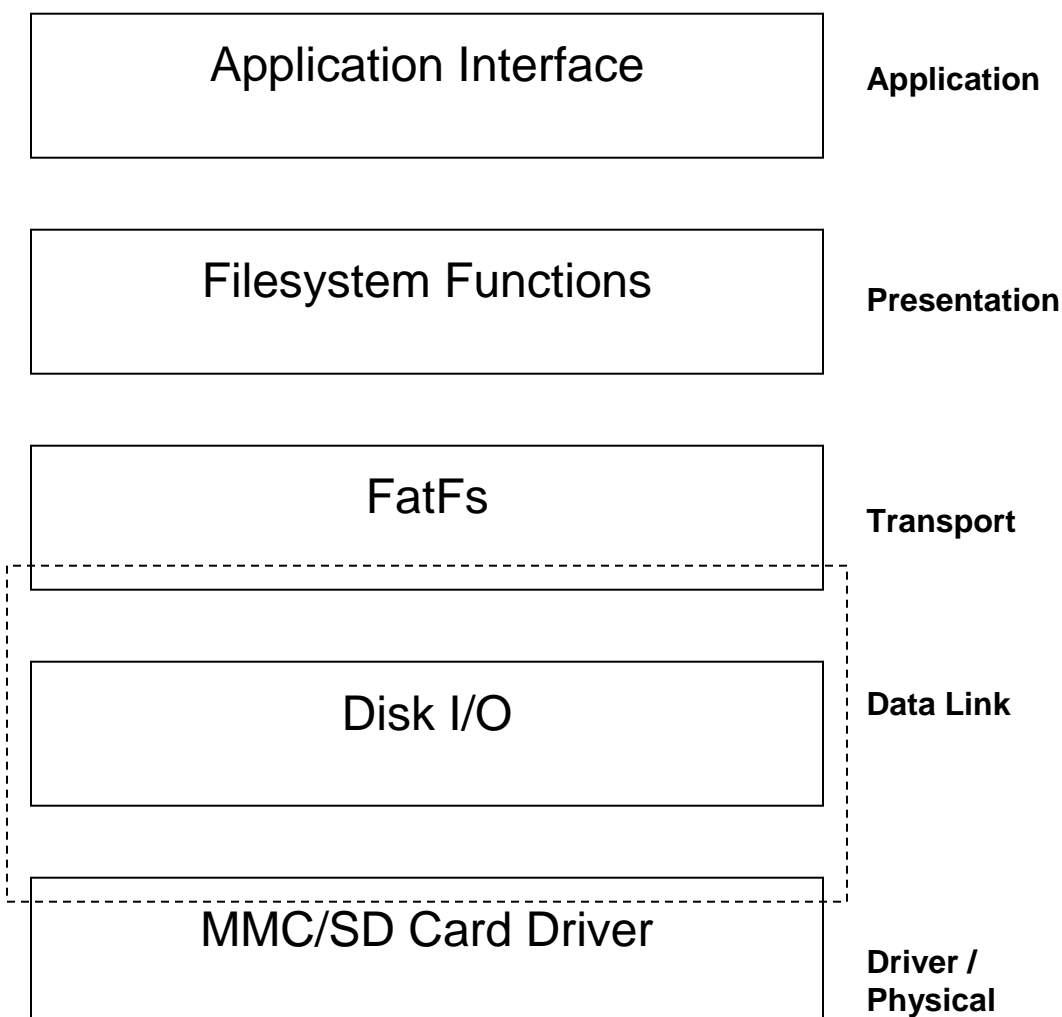

### 3.1 MMC/SD Card Driver

#### 3.1.1 Protocol

The MMC/SD Card Protocol in this project is based on SPI communication. The Protocol has a command data structure. A Command is send and gets a response or data. To speed up multiple data read cycles the MMC/SD Card supports also a 512Byte block read. In the following example a block read procedure is shown.

##### Block Data Read




#### 3.1.2 Commands

A command is 6 bytes long and gets a positive response if it was accepted. The command sequence has a command with a size of 1 byte followed with 4 bytes argument and 1 CRC byte.

Command	Argument				CRC
CMD[7..0]	ARG[31..24]	ARG[23..16]	ARG[15..8]	ARG[7..0]	CRC

If a command is initiated, it waits first for card ready. After the card is in idle mode, the command sequence is send. After a positive response, the card is ready for the next command or while in read mode for sending the requested data or data block.

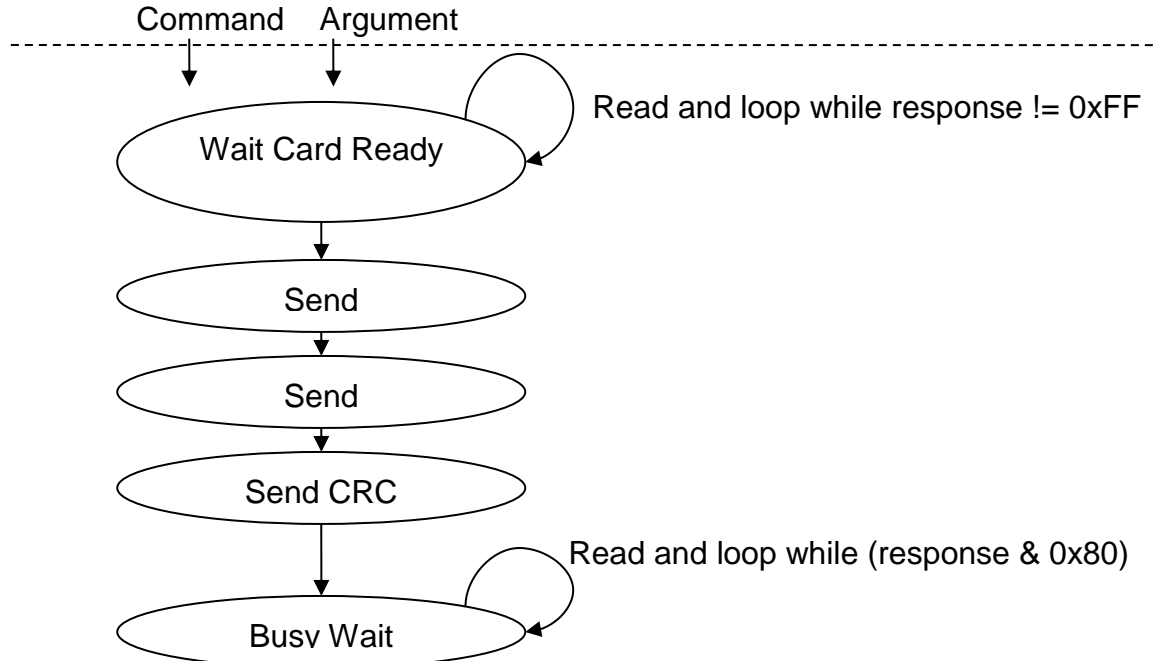

A list of in this project implemented commands is listed below:

#### Commands Table

Command	Value (SPI)	Description
CMD0	(0x40+0)	GO_IDLE_STATE
CMD1	(0x40+1)	SEND_OP_COND (MMC)
ACMD41	(0xC0+41)	SEND_OP_COND (SDC)
CMD8	(0x40+8)	SEND_IF_COND
CMD9	(0x40+9)	SEND_CSD
CMD10	(0x40+10)	SEND_CID
CMD12	(0x40+12)	STOP_TRANSMISSION
ACMD13	(0xC0+13)	SD_STATUS (SDC)
CMD16	(0x40+16)	SET_BLOCKLEN
CMD17	(0x40+17)	READ_SINGLE_BLOCK
CMD18	(0x40+18)	READ_MULTIPLE_BLOCK
CMD23	(0x40+23)	SET_BLOCK_COUNT (MMC)
ACMD23	(0xC0+23)	SET_WR_BLK_ERASE_COUNT (SDC)
CMD24	(0x40+24)	WRITE_BLOCK
CMD25	(0x40+25)	WRITE_MULTIPLE_BLOCK
CMD55	(0x40+55)	APP_CMD
CMD58	(0x40+58)	READ_OCR

#### 3.1.3 Disk I/O Interface

The MMC/SD Card Driver adapts to the disk I/O functions. The disk I/O functions having the function to link the data through standard functions - which are defined in the data link layer – to the driver. Following functions have to be implemented in the driver sections:

**DSTATUS disk\_initialize ( void )**

This function is assigned to handle the disk initialization progress and returns the disk status after the initialization progress.

**DSTATUS disk\_status ( void )**

This part returns the current disk status.

**DRESULT disk\_read ( BYTE \*buff, DWORD sector, BYTE count )**

The functions reads data from a storage. *\*buff* is the pointer to the memory in which the data is stored, *sector* is the sector position from which data is read and *count* is the length in sectors, which shall be read.

**DRESULT disk\_write ( BYTE \*buff, DWORD sector, BYTE count )**

The functions writes data to a storage. *\*buff* is the pointer to the memory in which the data is stored, *sector* is the sector position from which data is written and *count* is the length in sectors, which shall be written.

**DRESULT disk\_ioctl ( BYTE ctrl, void \*buff )**

This function handles Miscellaneous Functions, which are most specific on the storage which is used.


The different types of I/O-Controls can be found in *diskio.h*. Here are some definitions for standard I/O-operations and also some for MMC/SD Card specific.

**Definitions for *disk\_ioctl()* in *diskio.h***

```
/* Command code for disk_ioctl() */
/* Generic command */
#define CTRL_SYNC 0 /* Mandatory for write functions */
#define GET_SECTOR_COUNT 1 /* Mandatory for only f_mkfs() */
#define GET_SECTOR_SIZE 2
#define GET_BLOCK_SIZE 3 /* Mandatory for only f_mkfs() */
#define CTRL_POWER 4
#define CTRL_LOCK 5
#define CTRL_EJECT 6
/* MMC/SDC command */
#define MMC_GET_TYPE 10
#define MMC_GET_CSD 11
#define MMC_GET_CID 12
#define MMC_GET_OCR 13
#define MMC_GET_SDSTAT 14
```

**Disk Initialisation**

The following diagram shows how the initialisation process works. After Power On and 80 Dummy Cycles, the microcontroller tries to get the card in idle mode and gets the type of the card which was inserted. After all the card will be initiated for following operations.

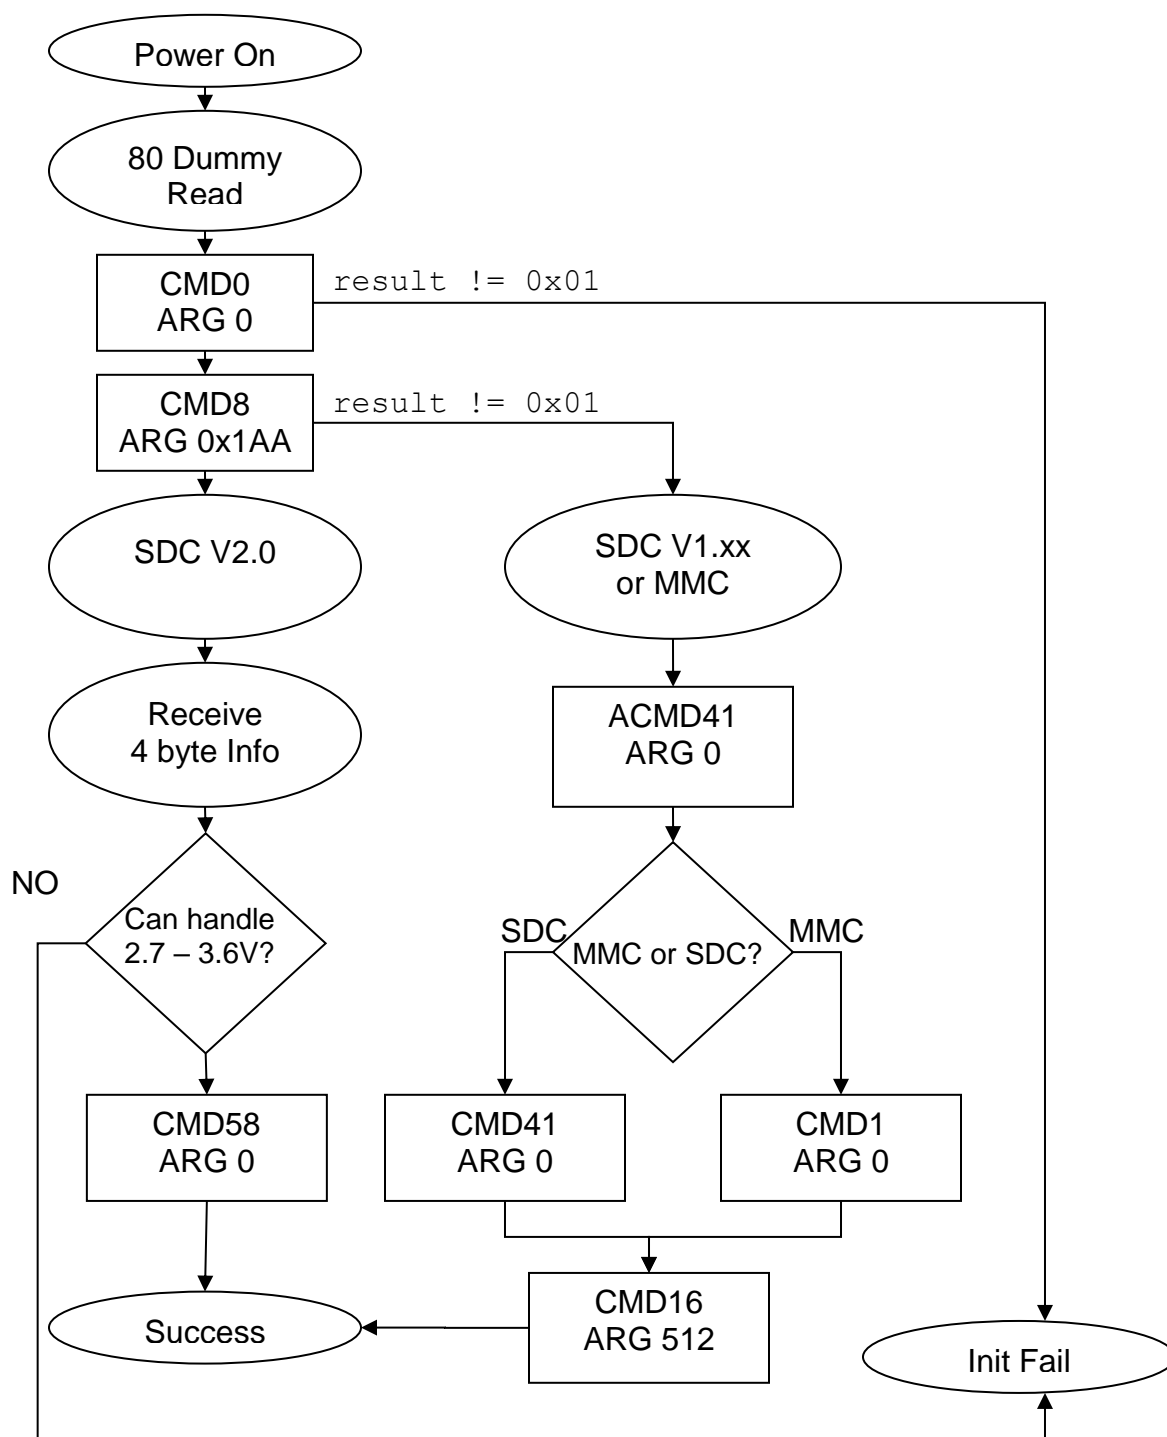

## Disk Status

The Disk Status is realized with a status variable. The status is permanent updated with a reload timer, that executes a status update every 10ms. The disk status has 3 status bits:

### Disk status bits, definitions in file *diskio.h*

```
#define STA_NOINIT      0x01  /* Drive not initialized */
#define STA_NODISK      0x02  /* No medium in the drive */
#define STA_PROTECT     0x04  /* Write protected */
```


**STA\_NOINIT** is handled during the initialization progress

**STA\_NODISK** is handled with the timer. The status is read directly from the disk insert switch

**STA\_NOINIT** is handled with the timer. The status is read directly from the write protect switch


## Disk Read

The Disk Read function has to do a conversion from sectors into LBA sectors. After the conversion it has to be checked if only one block or more than one blocks are read.

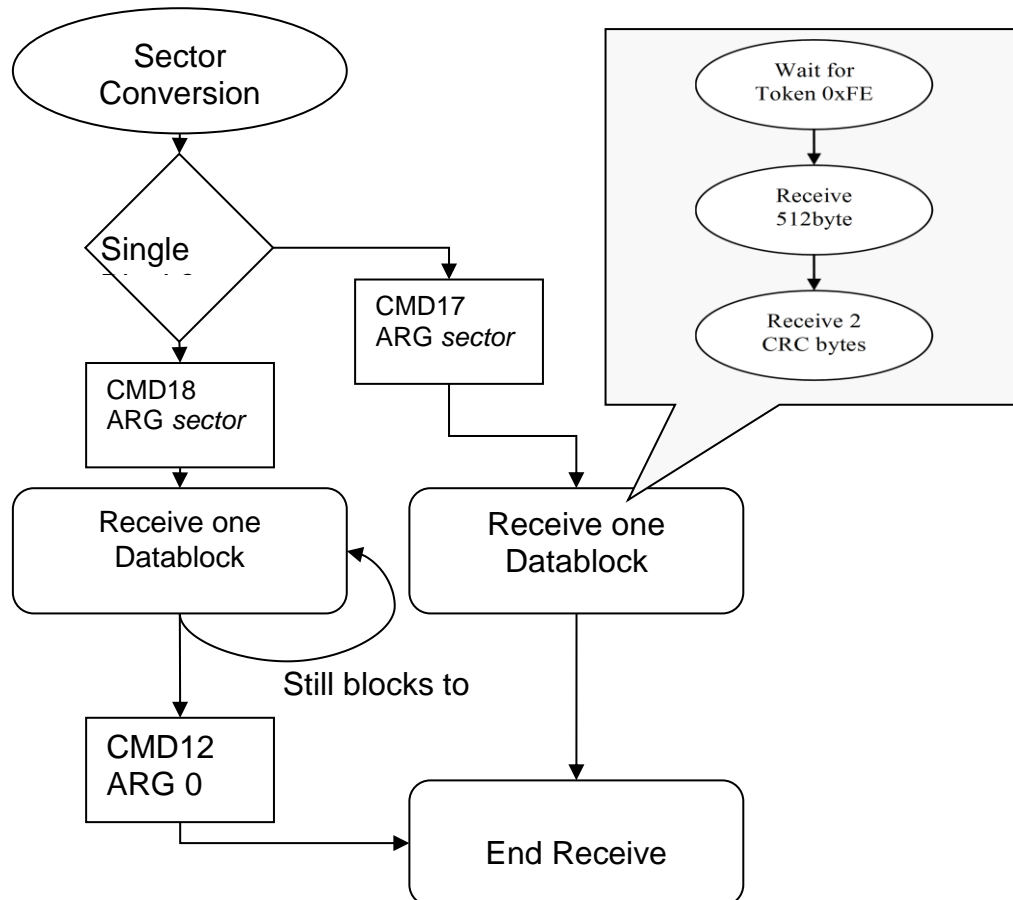

### Disk Write

The Disk Write function has to do a conversion from sectors into LBA sectors. After the conversion it has to be checked if only one block or more than one blocks are written.

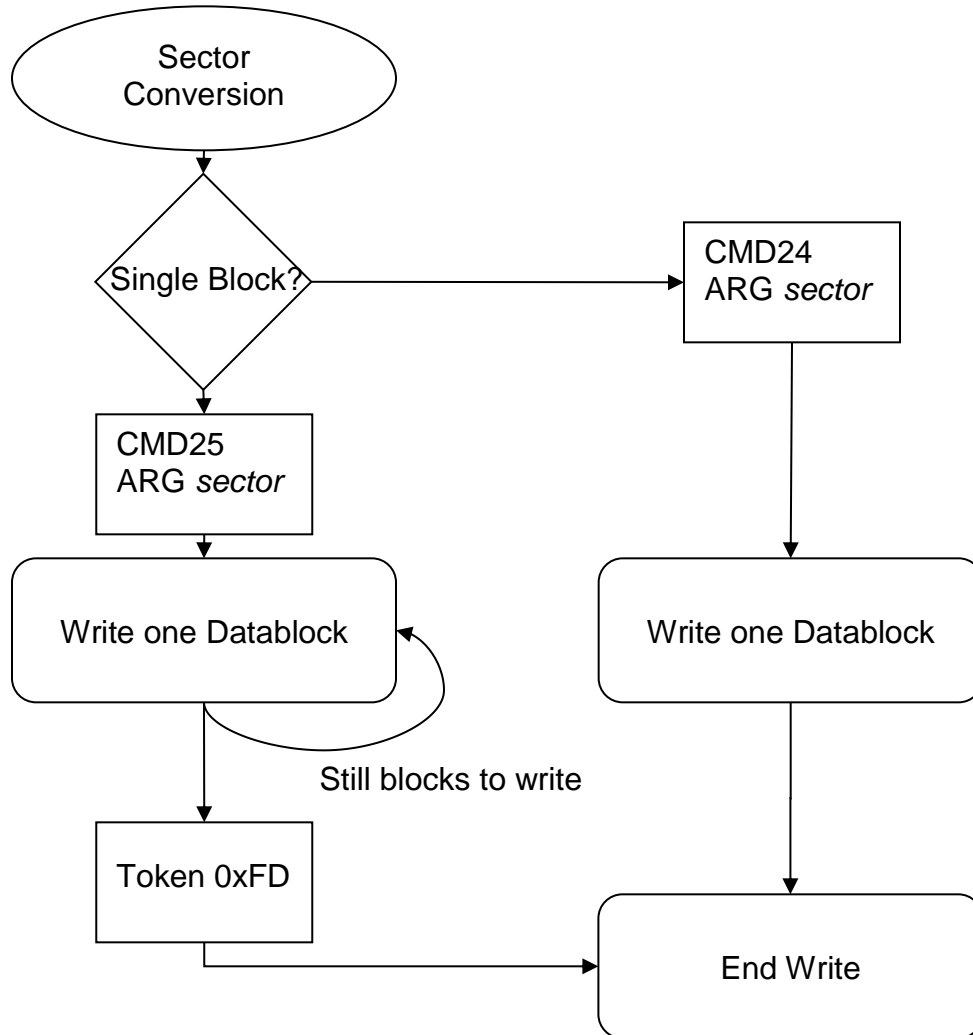

### Disk IO Ctrl

For more information see chapter Disk I/O

### Optimization/Minimization

In read/write datablock functions there is the need of a CRC-CIITT 16Bit checksum. For more speed but also secure transfers, the CRC algorithm is realized with a 512 byte table. If more flash is needed there is the possibility to disable CRC check in the *mcc.c* file:

```
#define USE_CRC 1 //by default 1 can be switched to 0
```

### 3.2 FatFs (FAT Filesystem) & Disk IO Module (supports FAT, FAT16, FAT32)

Implementation of Fat Filesystem

The FAT Filesystem is based on FAT Filesystem Module of Elm Chang ([http://elm-chan.org/fsw/ff/00index\\_e.html](http://elm-chan.org/fsw/ff/00index_e.html)). Version "R 0.06" which is used in this project. For detailed information have a look on the website. Available features are listed below:

#### 3.2.1 FatFs/Tiny-FatFs module provided functions

<code>f_mount</code>	Register or Unregister a Work Area
<code>f_open</code>	Open or Create a File
<code>f_close</code>	Close a File
<code>f_read</code>	Read File
<code>f_write</code>	Write File
<code>f_lseek</code>	Move File R/W Pointer
<code>f_truncate</code>	Truncate File
<code>f_sync</code>	Flush Cached Data
<code>f_opendir</code>	Open a Directory
<code>f_readdir</code>	Read a Directory Item
<code>f_getfree</code>	Get Free Clusters
<code>f_stat</code>	Get File Status
<code>f_mkdir</code>	Create a Directory
<code>f_unlink</code>	Remove a File or Directory
<code>f_chmod</code>	Change Attribute
<code>f_utime</code>	Change Timestamp
<code>f_rename</code>	Rename/Move a File or Directory
<code>f_mkfs</code>	Create a File System on the Drive
<code>f_forward</code>	Forward file data to the stream directly
<code>fgets</code>	Read a string
<code>fputc</code>	Write a character
<code>fputs</code>	Write a string
<code>fprintf</code>	Write a formatted string

#### 3.2.2 Disk I/O Interface

<code>disk_initialize</code>	Initialize disk drive
<code>disk_status</code>	Get disk status
<code>disk_read</code>	Read sector(s)
<code>disk_write</code>	Write sector(s)
<code>disk_ioctl</code>	Control device dependent features
<code>get_fattime</code>	Get current time

#### 3.2.3 Optimization/Minimization

For minimizations in the fat filesystem, some functions can be disabled. In *ff.h* some optimization options can be found:

```
#define _FS_READONLY      0
```

By default this is set to 0. Setting `_FS_READONLY` to 1 defines read only configuration. This removes writing functions, `f_write`, `f_sync`, `f_unlink`, `f_mkdir`, `f_chmod`, `f_rename`, `f_truncate` and useless `f_getfree`.

```
#define _FS_MINIMIZE      0
```

By default this is set to 0. The `_FS_MINIMIZE` option defines minimization level to remove some functions:

- 0: Full function.
- 1: `f_stat`, `f_getfree`, `f_unlink`, `f_mkdir`, `f_chmod`, `f_truncate` and `f_rename` are removed.
- 2: `f_opendir` and `f_readdir` are removed in addition to level 1.
- 3: `f_lseek` is removed in addition to level 2.

To use less resources, `tff.c` and `tff.h` (tiny fat filesystem) can be used instead of `ff.c` and `ff.h`. For more information have a look at the developers site:

[http://elm-chan.org/fsw/ff/00index\\_e.html](http://elm-chan.org/fsw/ff/00index_e.html)

### 3.3 Filesystem Functions

This Module adds some features and shows some examples for the FAT Filesystem. The module acts as a presentation layer or API to use FAT functionality from the main application. It is also possible to use directly the FAT Filesystem module without this module.

For a better directory handling, reading or writing files, some filesystem functions were added with this module. It is possible to change the current path, doing relative path or absolute path operations. Most of the functions are written for absolute directories. To handle absolute and relative directories, all absolute directory only functions are static and can only be used in this module and had been added by a public function, which does a conversion before running the absolute function. For example `BOOL absReadFile(char *filename)` which handles absolute directories only, has also a public function `BOOL readFile(char *filename)` which handles absolute and relative directories.

#### 3.3.1 Features Overview

- Error handling and error display over UART
- Directory- and File-String Functions
- Examples for reading, writing and append files
- Functions for copy, delete, rename and move files and folders
- Optimized String Functions to speed up processes and use less memory

#### 3.3.2 Function Overview (*fsfunctions.c*):

##### Error Handling

- **FRESULT CatchErr(char \*description, FRESULT exception );**  
Throw out an error message over UART and returns the error code as `FRESULT`

### File/Path String Operations

- **void getFullFileName( char \*strOut, char \*relFile );**  
Converts a relative file or directory path to a absolute filename or directory path.  
The result is stored in `strOut`.

Example:

Current path is `/test`. In this directory a file `file.txt` is located. `getFullFileName` returns a string `/test/file.txt`

- **void filenameFromFullfilename(char \*outFile, char \*inFullfilename);**  
Gets the filename from a fullfilename and stores it in the string `outFile`.

Example:

The fullfilename is `/test/file.txt`. `filenameFromFullfilename` returns a string `file.txt`

- **void pathFromFullfilename(char \*outDir, char \*inFullfilename);**  
Gets the path from a fullfilename and stores it in the string `outDir`.

Example:

The fullfilename is `/test/file.txt`. `pathFromFullfilename` returns a string `/test`

- **BYTE splitParameters(char \*inputStr);**  
splits the parameters stored in `inputString` separated by space into `params[]`. Returns the number of parameters. Maximum of available parameters and parametersize is stored in the headerfile.

### Workspace Operations

- **void mount\_workspace(BYTE drive);**  
mounts a workspace to use filesystem functions. (drive: 0 = MMC, 1 = USB)
- **void unmount\_workspace(BYTE drive);**  
unmounts a workspace. (drive: 0 = MMC, 1 = USB)

### File Operations

- **FRESULT fopen(FIL \*fp, const char \*mytextfile, BYTE mode);**  
does the same like `f_open` in the FatFs module but uses relative and absolute filenames. For file close use `f_close(FIL *fp)`
- **BOOL readFile( char \*mytextfile );**  
this is an example how to read the file `mytextfile` to the UART
- **BOOL appendFile( char \*mytextfile, char \*mytext );**  
this is an example how to add a text `mytext` to file `mytextfile`. If `mytext` is empty, `appendFile` asks for text input
- **BOOL writeFile( char \*mytextfile, char \*mytext );**  
this is an example how to write a text `mytext` to file `mytextfile`. If `mytext` is empty, `appendFile` asks for text input
- **void copyFile(char \* from, char \* to);**  
copy file `from` to `to`. Works only on the same drive not from one drive to another
- **BOOL existsFile( char \*myfile );**  
returns TRUE if file `myfile` does exists, otherwise FALSE

### Directory Operations

- `void makeDir(char *newdir);`  
creates a new Dir newdir
- `void changeDir( char *newDir );`  
changes current directory to the specified dir or goes a directory backward by entering “..” as newDir
- `void dirUpper( void );`  
does the same like changeDir(“..”)

### Filesystem Operations

- `BOOL delFile( char *thefile );`  
deletes the file thefile
- `BOOL moveFileFolder(char *file1, char *location);`  
moves file or folder to a new location
- `BOOL renameFileFolder(char *file1, char *file2);`  
renames file or folder
- `void scanFiles (char* path);`  
this is an example how to scan files in specified path and list them on UART
- `void diskSpace( void );`  
this is an example how to show the free and available disk space on UART
- `void formatDisk( BYTE drive );`  
this is an example how to format a disk drive, asks for confirmation over UART.  
(drive: 0 = SD/MMC, 1 = USB)

### Global Variables (*fsfunctions.c*):

```
extern FIL ffile;
/* global file for file i/o routines */

extern FATFS fatfs[2];
/* global filesystems for drive 0/1 */

extern currentdir[MAX_DIRLEN];
/* stores the current directory */

extern char params[MAX_PARAMS][MAX_PARMSIZE];
/* stores the parameters for a command */

extern BOOL batch;
/* if the command line reads from a batch file, batch is set */
```

### 3.3.3 Function Overview (strfunc.c):

```

unsigned char cmpFromStart(const char *s1, const char *s2);
/* optimized for speed; compares s1 and s2 from start. If s2 is in s1, function
   returns 0 if successful, returns 1 for not successful */

void putdec2(unsigned long x);
/* puts 2 digits of a value stored in x to the UART */

void addStr(char *s1, const char *s2);
/* adds string s2 to string s1 */

void remLineBreak(char *Str);
/* deletes a line break at the end of a string */

void shiftStr(char *Str, unsigned char offset);
/* shifts a string left "offset" times */

unsigned int fromHex(const char *inputStr, unsigned char * len);
/* gets hex value from a string containing 0x... */
void toHex(char * outStr, unsigned long n, unsigned char digits, char showzeros);
/* converts a number "n" to a string in hex format (0x...) with the maximum length
   of "digits". If showzeros is 1, zeros at the beginning are shown. */

unsigned int fromDec(const char *inputStr, unsigned char * len);
/* gets decimal value from a string containing a decimal value */

int strEmpty(const char * Str);
/* checks for a string is empty (first character = '\0') */

void fillspacesatend(char *str, unsigned char length);
/* fill space characters at the end of a string. Length defines the total length
   of the string. The number of spaces is length - length of str.
   This function can be used for tabulators for example */

int isNum(char c);
/* returns 1 if '0' <= c <= '9', else returns 0 */

int strIsNum(const char * c);
/* returns 1 if every char is a number, else returns 0 */

int isHex(char c);
/* returns 1 if '0' <= c <= 'F', else returns 0 */

int strIsHex(const char * c);
/* returns 1 if every char is hex and the string begins with "0x", else returns 0

```

### 3.3.4 Optimization/Minimization

If there is no use for a complex path and file management and also no use for useful string functions, this module can be removed. It is also possible to use the FatFs module directly. All examples in this module like file read or write can be also programmed in an own application. If the command line is used as frontend, this module can't be deleted but it can be minimized in some sections. In *ff.h* some minimizations can be done (see also chapter 3.2.3). This minimizations removing some functions in the FatFs module and also remove some functions in *fsfunctions.c* which had used the removed functions of *ff.c*.

```
#define MAX_DIRLEN 200 //in file fsfunctions.h
```

By default MAX\_DIRLEN is 200. If there is no directory structure or the depth of directories is not bigger than 2, MAX\_DIRLEN can be 30. MAX\_DIRLEN can be manually chosen by some parameters: MAX\_DIRLEN = Depth of directories \* 15

```
#define MAX_PARMSIZE 50 //in file fsfunctions.h
#define MAX_PARAMS 3 //in file fsfunctions.h
```

The maximum length of a parameter and maximum parameters are defined in `MAX_PARMSIZE` and `MAX_PARAMS`. Defaults are 50 for parameter length and a maximum of 3 parameters. If there is no directory structure or the depth of directories is not bigger than 2, `MAX_PARAMS` can be 30.

The RAM usage of the filesystem functions is about

$$\text{MAX\_DIRLEN} * 4 + 2 * (\text{MAX\_FILELEN} + 1) + \text{MAX\_PARAMS} * \text{MAX\_PARMSIZE} + 20$$

`FILE_LEN` is a const value which is 15.

## 3.4 Application Interface

Why was a command line chosen? A command line was chosen to doing multiple operations with the filesystem for testing and demonstrating reasons. A command line gives a user more options for testing and using a filesystem while exploring directories or executing filesystem commands. To add own commands makes the command line flexible and gives the programmer a good base for debugging and easily adding features in short time.

### 3.4.1 Example Command – How to add own commands

It is possible to add own commands by adding in just 3 sections some code. The following note gives an idea how to implement a own function `cmdMyCmd()` which is placed in the file `commands.c` and called from the command line as `mycommand`. The sample command shows how to handle parameters; in this case two parameters which are printed out through the UART. The array `params[]` contains the available parameters, `paramsc` contains the number of parameters which were entered.

**Example: `cmdMyCmd` located in `commands.c`**

```
int cmdMyCmd( void )
{
    puts("Hello World\n");
    puts("You've entered ");
    puts(paramsc + '0');
    puts(" parameters:\n");
    puts(The first parameter is "");
    puts(params[0]);
    puts("\n");
    if (paramsc > 1)
    {
        puts(The second parameter is "");
        puts(params[1]);
        puts("\n");
    }
    return 0;
}
```

**Input/Output in a Terminalprogram:**

```
0:./>mycommand myparameter1 myparameter2
Hello World
You've entered 2 parameters:
The first parameter is "myparameter1"
The second parameter is "myparameter2"
0:./>...
```

### 3.4.2 Command Sections

#### Prototype Section

In this section add the prototype from the sample application. The prototype section is located in the *commands.h* file.

```
/*  COMMAND SECTION */
int cmdHELP(void);
int cmdMKDIR(void);
int cmdDIR(void);
int cmdCD(void);
int cmdRENAME(void);
int cmdWRITE(void);
int cmdAPPEND(void);
...
int cmdMyCmd(void);
...
```

#### Struct s\_command cmds[]

This section is a table with constant data inside. For a command the table has some options which are needed before a command can be executed in the command line. First a line in the table has a command as string. In the example application it is *mycommand*. It is possible to add short information which is displayed in the *help* command. If the command should be a hidden command, the information has to begin with a "!". The next two parameters define how much parameters the command can handle. First the minimum of parameters which are required to execute a command is written, than the maximum parameters which are allowed for the command. At last a pointer to the function is added. The following textbox explains a line which represents an *s\_command* record construct:

#### Struct s\_command record

```
{ "mycommand", " information", 1, 2, cmdMyCmd },
```


					+--- command function
					+----- max. parameters
					+----- min. parameters
					+----- short information
					+----- command-string

The next code shows the example implemented in the *cmds[]* table in *commands.h*

```
/* Table of commands:
   {String Command, String Description, Min Parameters, Max Parameters, Function to
   execute}
*/
const struct s_command cmds[] = {
  {"help", " - displays aviable commands", 0, 0, cmdHELP},
  {"mkdir", " </dir1/newdir> - creates new directory \"sub2\"", 1, 1, cmdMKDIR},
  {"dir", " </dir1/dir2> - ... specified dir", 0, 1, cmdDIR},
  {"cd", " <DIR> - changes directory", 0, 1, cmdCD},
  ...
  {"mycommand", " information", 1, 2, cmdMyCmd},
  {"", "", 0, 0, cmdIDLE} // DO NOT REMOVE, HAS TO BE EVER THE LAST ITEM!!
};
```

## 4 Performance

The Performance was tested with two boards: SK-16FX-Euroscope and SK-16FX-144PMC-USB. In the test 1Mbyte data was written or read. If SK-16FX-144PMC-USB starterkit is used, it is possible to use USB mass storage devices and MMC/SD card support. At SK-16FX-Euroscope starterkit only MMC/SD is supported. The diagram compares MMC/SD cards and USB-Sticks with different write/read functions. `fgets` and `fputs` are string functions which are using `f_write` and `f_read`. If the correct length of bytes to be written or read is known, for performance issues it is better to use `f_write` and `f_read`. In the diagram it can be seen, that the direct `f_write` or `f_read` function is faster then `fputs` or `fgets`. The biggest differences are seen at USB read.

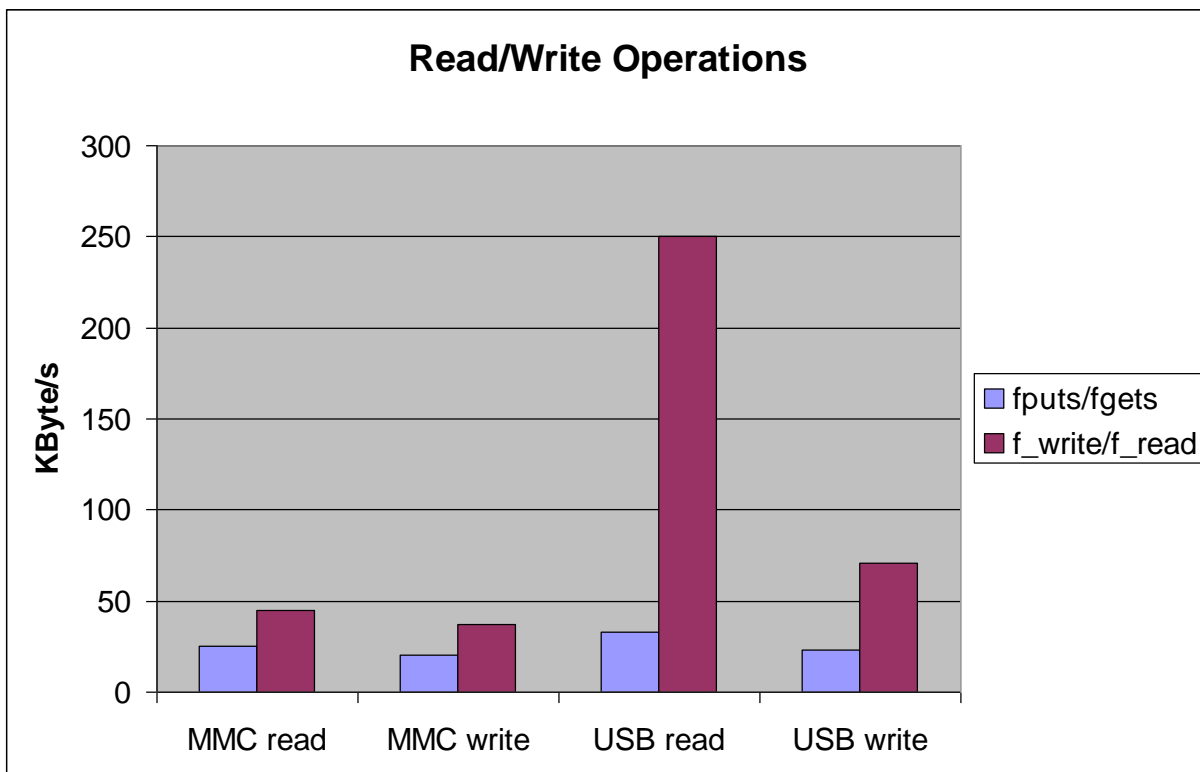

Function	Media/Operation			
	MMC/SD read	MMC/SD write	USB read	USB write
fputs/fgets	25 Kbyte/s	20 Kbyte/s	33 Kbyte/s	23 Kbyte/s
f_write/f_read	43 Kbyte/s	33 Kbyte/s	250 Kbyte/s	71 Kbyte/s

1Kbyte = 1000Byte, 1MByte = 1000Kbyte

1Mbytes in 50 byte blocks are written in this example

## A Appendix

### A.1 Related Documents

- Website Elm Chang – FatFs module: [http://elm-chan.org/fsw/ff/00index\\_e.html](http://elm-chan.org/fsw/ff/00index_e.html)
- Website Elm Chang – MMC/SD Card: [http://elm-chan.org/docs/mmc/mmc\\_e.html](http://elm-chan.org/docs/mmc/mmc_e.html)
- Website Ulrich Radig – MMC: <http://www.ulrichradig.de/home/index.php/avr/mmc-sd>
- SD Card Association – <http://www.sdcard.org/>
- Hardware Spec. (SanDisk): <http://static.sandisk.com/Oem>
- Example for MB96F338US: *96330\_usb\_mass\_storage\_spi\_sd\_card-v11.zip*
- Example for MB96F348: *96340\_spi\_sd\_card-v11.zip*

### A.2 Additional Information

Information about Cypress Microcontrollers can be found on the following Internet page:

<http://www.cypress.com/cypress-microcontrollers>

## Document History

Document Title: AN204830 - F<sup>2</sup>MC-16FX Family, SPI Communication with SD Card

Document Number: 002-04830

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	-	MKEA	01/20/2009	Initial Release
			01/26/2009	sw example without command-line
*A	5062028	MKEA	12/24/2015	Migrated Spansion Application Note from MCU-AN-300245-E-V11 to Cypress format
*B	5834980	AESATP12	07/27/2017	Updated logo and copyright.
*C	6037021	NOFL	01/19/2018	Update logo and links. Updated Section 1.2 Quick Start. Updated "Related Documents" in Appendix section. Updated Sales page and Copyright year.

## Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at [Cypress Locations](#).

## Products

Arm® Cortex® Microcontrollers	<a href="http://cypress.com/arm">cypress.com/arm</a>
Automotive	<a href="http://cypress.com/automotive">cypress.com/automotive</a>
Clocks & Buffers	<a href="http://cypress.com/clocks">cypress.com/clocks</a>
Interface	<a href="http://cypress.com/interface">cypress.com/interface</a>
Internet of Things	<a href="http://cypress.com/iot">cypress.com/iot</a>
Memory	<a href="http://cypress.com/memory">cypress.com/memory</a>
Microcontrollers	<a href="http://cypress.com/mcu">cypress.com/mcu</a>
PSoC	<a href="http://cypress.com/psoc">cypress.com/psoc</a>
Power Management ICs	<a href="http://cypress.com/pmic">cypress.com/pmic</a>
Touch Sensing	<a href="http://cypress.com/touch">cypress.com/touch</a>
USB Controllers	<a href="http://cypress.com/usb">cypress.com/usb</a>
Wireless Connectivity	<a href="http://cypress.com/wireless">cypress.com/wireless</a>

## PSoC® Solutions

[PSoC 1](#) | [PSoC 3](#) | [PSoC 4](#) | [PSoC 5LP](#) | [PSoC 6 MCU](#)

## Cypress Developer Community

[Community](#) | [Projects](#) | [Videos](#) | [Blogs](#) | [Training](#)  
[Components](#)

## Technical Support

[cypress.com/support](http://cypress.com/support)

All other trademarks or registered trademarks referenced herein are the property of their respective owners.



Cypress Semiconductor  
198 Champion Court  
San Jose, CA 95134-1709

© Cypress Semiconductor Corporation, 2009-2018. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. No computing device can be absolutely secure. Therefore, despite security measures implemented in Cypress hardware or software products, Cypress does not assume any liability arising out of any security breach, such as unauthorized access to or use of a Cypress product. In addition, the products described in these materials may contain design defects or errors known as errata which may cause the product to deviate from published specifications. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit [cypress.com](http://cypress.com). Other names and brands may be claimed as property of their respective owners.