

SmartSense2X Dual-Channel Datasheet SmartSense2X V 1.10

Copyright © 2013 Cypress Semiconductor Corporation. All Rights Reserved.

Resources	PSoC® Blocks				API Memory (Bytes)		Pins (in addition to sensors)
	Decimator	I²C/SPI	Digital	Analog	Flash	RAM	
CY8C28x45, CY8C28x52, CY8C28x13, CY8C28x33							
Single channel with IDAC	1	0	2	2			1
Threshold settings (manual)	–	–	–	–	1833	37	–
With auto-tune to sensitivity	–	–	–	–	2939	47	–
With auto-tune to noise	–	–	–	–	2956	47	–
Double channel with IDAC	2	–	4	4			2
Threshold settings (manual)	–	–	–	–	3125	45	–
With auto-tune to sensitivity	–	–	–	–	4231	55	–
With auto-tune to noise	–	–	–	–	4248	55	–
Each additional CapSense button (Single Channel with Manual Threshold settings)	–	–	–	–	5	16	1
Static code and RAM increase when using capacitive slider with 5 elements (Single Channel with Manual Threshold settings)	–	–	–	–	592	109	5
Each additional slider segment (manual)	–	–	–	–	5	16	1
With auto-tune to noise	–	–	–	–	4	26	
With auto-tune to sensitivity	–	–	–	–	4	26	
Static code and RAM increase during slider diplexing (5 sensors for manual threshold settings)	–	–	–	–	25	–	–

Features and Overview

- Dual-channel SmartSense™.
- Manual and auto threshold setting for finger detection.

- Configurable sensitivity for each sensor.
- Background scan.
- Autoreset and button debounce.
- Buttons, sliders, and proximity sensors.
- Enables guided sensor and pin assignments using the SmartSense2X wizard.

Introduction

The SmartSense2X User Module implements CapSense capacitive sensing. CapSense is a human-interface technology that operates by detecting the capacitance of the human body. This is done using sensors that have a conductive surface, usually a pad etched on the printed circuit board (PCB). Because CapSense detects body capacitance, it can sense through insulating layers, such as plastic or glass overlays. These overlays usually constitute the external enclosure of the end product. These attributes make CapSense an attractive alternative to mechanical input devices, such as push buttons and potentiometers. The major benefits of a CapSense user interface are. The major benefits of a CapSense user interface are:

- Cleaner and more aesthetically pleasing designs
- Reduced form-factor possibilities for smaller end products.
- Addition of advanced user interface features, such as LED effects and proximity sensing.
- Improved reliability with no components that wear or have finite cycle life.
- Improved spill-resistance due to lack of mechanical interface penetrations.
- Reduced tooling cost by eliminating penetrations or other mechanical features needed for mechanical input devices.

Similar to all Cypress CapSense solutions, SmartSense auto-tuning offers superior immunity to conducted and radiated noise interference, with the additional benefit of auto-tuning. Auto-tuning gives run-time compensation for IC and PCB characteristics, and environmental changes to ensure reliable sensor operation. For example, prototype and production PCBs frequently exhibit different material properties that affect sensor parasitic capacitance. This effect can be significant enough to require retuning of the CapSense system parameters. Auto-tuning automatically compensates for such changes, with no need for retuning. Furthermore, the auto-tuning algorithms in SmartSense continuously monitor sensor data to compensate for environment conditions, such as temperature and ambient noise level, to maintain proper sensor function.

The SmartSense2X User Module consists of PCB level, IC level, and software components.

PCB Level

Figure 1 and Figure 2 show the SmartSense2X User Module schematics for single and double channels. The physical sensor is typically a conductive pattern constructed on a PCB connected to a PSoC I/O pin with an insulating overlay. See the design guide [Getting Started with CapSense](#), application notes –

Layout Guidelines for PSoC CapSense AN2292 and CapSense Best Practices AN2394 – for more information on PCB level CapSense implementation.

Figure 1. SmartSense2X Single-channel Schematic


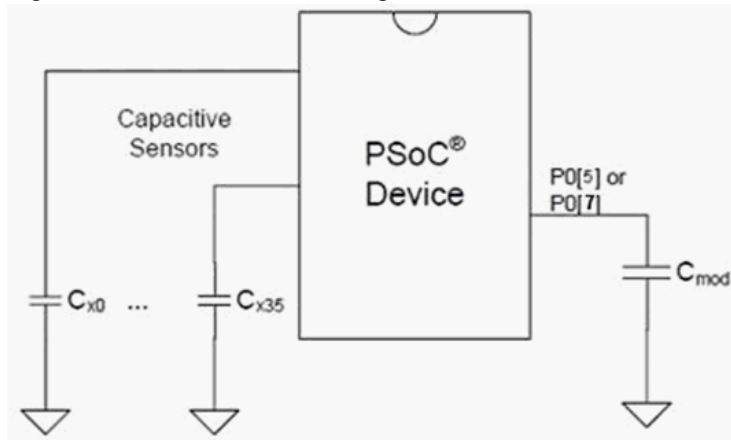


Figure 2. SmartSense2X Double-Channel Schematic

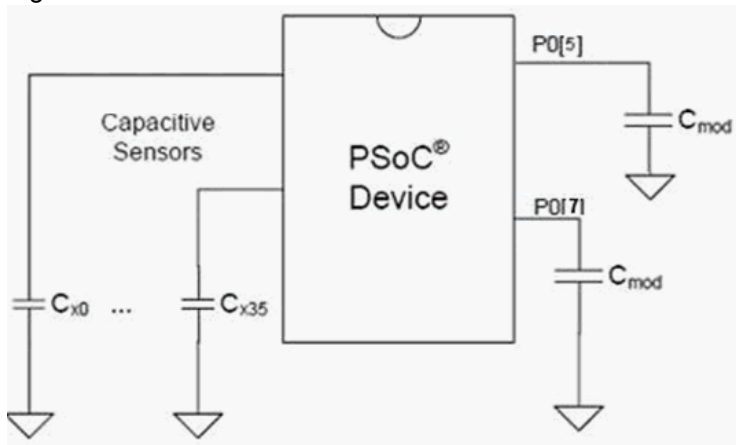


IC Level

The SmartSense2X User Module enables the capacitive sensing algorithm using a sigma-delta modulator with many of the CSD parameters configured automatically and dynamically during runtime or power-on-reset (POR). The SmartSense2X User Module's hardware use is similar to CSD2X, except for the addition of a software layer, which includes the SmartSense algorithm with background scanning. This user module will be available in the CY8C22x45 device.

The CY8C22x45 device has an analog mux (AMUX) bus that allows connecting capacitive sensing analog circuitry to any PSoC pin. The SmartSense2X User Module connects the active sensor to the AMUX bus, enabling the CapSense circuitry to measure its capacitance and translate that capacitance into a digital

code. The firmware serially scans the sensors by sequentially setting corresponding bits in the MUX_CRx registers. This is represented in Figure 3.

Figure 3. AMUX Block Diagram

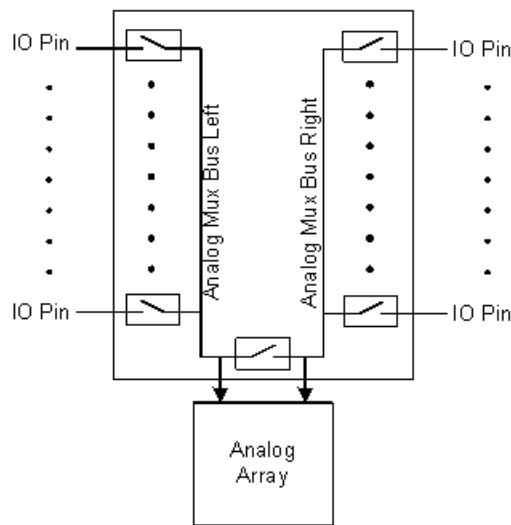

Software

The SmartSense2X software component has the following attributes:

- Auto-tuning algorithms configure the analog capacitive sensing circuitry in runtime for optimal performance. These algorithms take into account physical sensor characteristics, IC characteristics, and the Sensor Sensitivity user module parameter.
- The raw count value from the capacitance converter circuitry is analyzed in runtime by API functions to make sensor state decisions and to compensate for environmental changes.
- Background scanning algorithms that enable the CPU to perform other tasks while the scan is in progress in hardware.
- In the case of consecutive, dependent sensors (for example, sliders and touchpads), API functions are given to interpolate a position with greater resolution than the physical pitch of the sensors.
- High-level software functions accommodate slider diplexing so that one I/O pin can be routed to two physical sensors. This reduces by half the number of I/O pins consumed for a specific number of slider elements.

Recommended Reading

Cypress recommends reading the following documents before implementing a CapSense design using the SmartSense2X User Module. These documents are available at the Cypress website:

www.cypress.com.

- [Getting Started with CapSense](#)
- [CY8C20xx6A/H CapSense Design Guide](#)
- [CY8C21x34/B CapSense Design Guide](#)
- [CY8C20x34 CapSense Design Guide](#)
- [CY8CMBR2044 CapSense Design Guide](#)

Capacitance Sensing Implementation


The decision logic is implemented in firmware. The firmware analyzes capacitance measurement, tracks the slow capacitance change due to environmental factors, and runs decision logic to detect button touches and calculate slider position.

Scanning an Array of Sensors

The CY8C22x45 family of devices have a built-in analog bus, which allows capacitive sensor connections to any PSoC pin. The SmartSense2x User Module uses internal precharge switches to charge active sensors at clock signal phase, Ph1, and connects the analog bus to the sensor at phase, Ph2. The sigma-delta modulator capacitor and comparator inputs are connected to the analog bus permanently.


The firmware performs sensor scanning in series by setting corresponding bits in the MUX_CRx registers.

Figure 4. Analog Bus with Precharge Switches

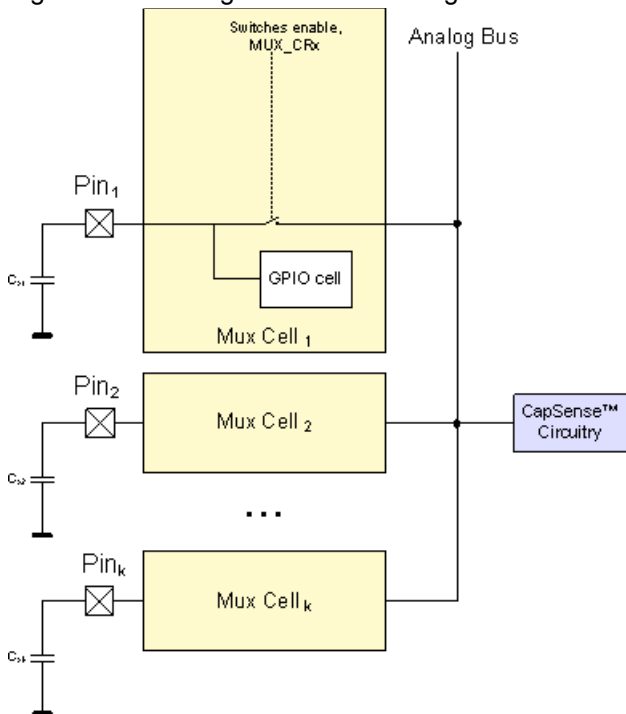

Sliders

Figure 5. Ordering Physical Sensor Locations

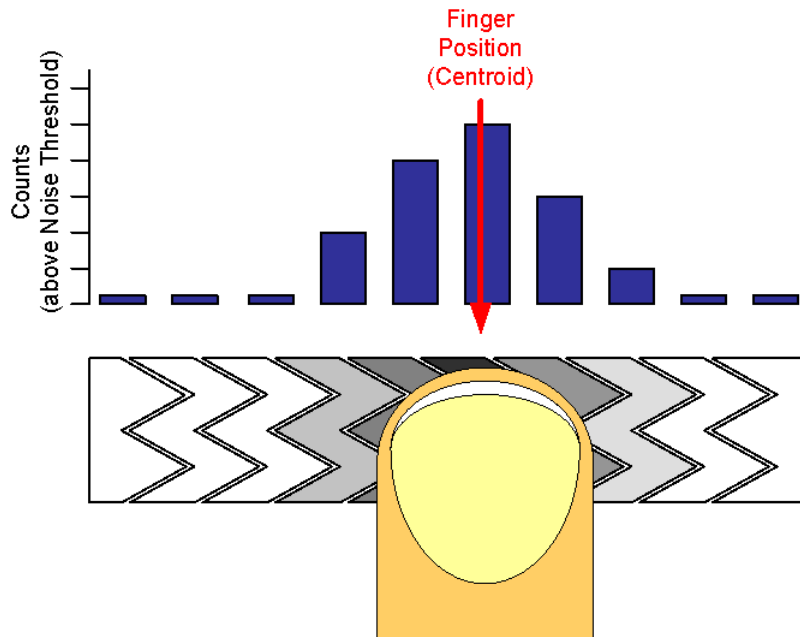


Sliders are used for controls that require gradual adjustments. Examples include a lighting control (dimmer), volume control, graphic equalizer, and speed control. These sensors are mechanically adjacent to one another. Actuating one sensor results in partial actuation of physically adjacent sensors. The actual position in the slider is found by computing the centroid location of the set of activated sensors. Sliders are accommodated in the CSD2x wizard by establishing groups, in which each group of sliders has a specific order. The practical lower limit number for sensor sliders is five, while the upper limit is simply the number of sensor positions available on the selected PSoC device.

The close proximity of strong signals in one half of the slider results in the same levels aliased into the upper half, but the results are scattered. The sensing algorithms search for strong adjacent sets of signals to declare the resolved slider position.

Radial Sliders

Figure 6. Finger Touches Radial Slider

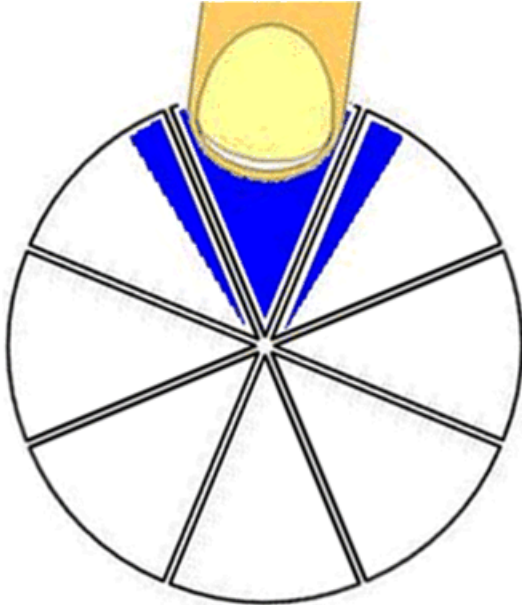

There are two slider types in the SmartSense2X User Module: linear and radial. While linear sliders have a beginning and an end, radial sliders do not. When a touch happens, the centroid calculation algorithm takes into account sensor counts of the switches to the right and left of the current switch. Radial sliders are not diplexed.


The SmartSense2X User Module has two API functions that support radial sliders. The first function, `SmartSense2X_wGetRadiaPos()`, returns a centroid location and the second, `SmartSense2X_wGetRadialInc()`, returns finger shift in resolution units. When the finger moves on the slider, the `SmartSense2X_wGetRadialInc()` returns a positive offset that increases in a clockwise direction and decreases in the anti-clockwise direction. The reference point (0) is located in the center of the first sensor. The resolution is limited to $(\text{number of pins used for sensors} - 1) \times 2^8 - 1$ or $(2 \times \text{pins used for sensors} - 1) \times 2^8 - 1$ for diplexed sliders.

Diplexing

Each PSoC sensor connection in a slider is mapped to two physical locations in the array of slider sensors. The first (or numerically lower) half of the physical locations is mapped sequentially to the base assigned sensors, with the designer assigning the port pin using the SmartSense2X wizard. The second (or upper) half of the physical sensor locations is automatically mapped by an algorithm in the wizard and listed in a `SmartSense2X.asm` file. The order is established in such a manner that adjacent sensor actuation in one half does not result in adjacent sensor actuation in the other half. Take care to determine this order and map it to the PCB.

Though there are many methods to order the second half of the physical sensor locations, the simplest is to index all of the even sensors in the upper half, followed by all of the odd sensors. Other methods include indexing by other values. The method selected for this user module is to index by three.

Figure 7. Indexing of Diplexed Slider Array

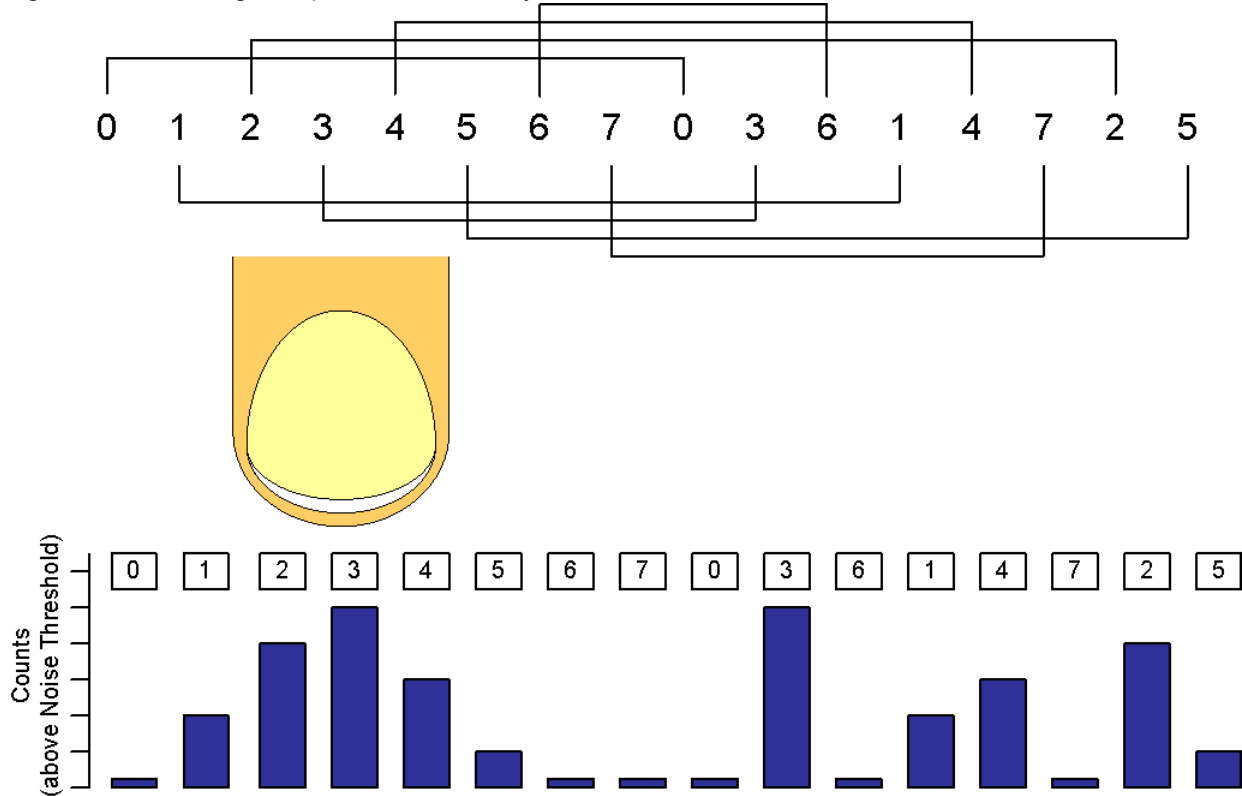

You must balance sensor capacitance in the slider. Depending on the sensor or PCB layouts, there may be longer routes for some of the sensor pairs. The diplex sensor index table is automatically generated by the SmartSense2X wizard when you select diplexing. The following table illustrates the diplexing sequences for different slider segments count.

Table 1. Diplexing Sequence for Different Slider Segment Counts

Total Slider Segment Count	Segment Sequence
10	0,1,2,3,4,0,3,1,4,2
12	0,1,2,3,4,5,0,3,1,4,2,5
14	0,1,2,3,4,5,6,0,3,6,1,4,2,5
16	0,1,2,3,4,5,6,7,0,3,6,1,4,7,2,5
18	0,1,2,3,4,5,6,7,8,0,3,6,1,4,7,2,5,8
20	0,1,2,3,4,5,6,7,8,9,0,3,6,9,1,4,7,2,5,8
22	0,1,2,3,4,5,6,7,8,9,10,0,3,6,9,1,4,7,10,2,5,8
24	0,1,2,3,4,5,6,7,8,9,10,11,0,3,6,9,1,4,7,10,2,5,8,11
26	0,1,2,3,4,5,6,7,8,9,10,11,12,0,3,6,9,12,1,4,7,10,2,5,8,11

Total Slider Segment Count	Segment Sequence
28	0,1,2,3,4,5,6,7,8,9,10,11,12,13,0,3,6,9,12,1,4,7,10,13,2,5,8,11
30	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,0,3,6,9,12,1,4,7,10,13,2,5,8,11,14
32	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,0,3,6,9,12,15,1,4,7,10,13,2,5,8,11,14
34	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,0,3,6,9,12,15,1,4,7,10,13,16,2,5,8,11,14
36	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,0,3,6,9,12,15,1,4,7,10,13,16,2,5,8,11,14,17
38	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,0,3,6,9,12,15,18,1,4,7,10,13,16,2,5,8,11,14,17
40	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,0,3,6,9,12,15,18,1,4,7,10,13,16,19,2,5,8,11,14,17
42	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,0,3,6,9,12,15,18,1,4,7,10,13,16,19,2,5,8,11,14,17,20
44	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,0,3,6,9,12,15,18,21,1,4,7,10,13,16,19,2,5,8,11,14,17,20
46	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,0,3,6,9,12,15,18,21,1,4,7,10,13,16,19,22,2,5,8,11,14,17,20
48	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,0,3,6,9,12,15,18,21,1,4,7,10,13,16,19,22,2,5,8,11,14,17,20,23
50	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,0,3,6,9,12,15,18,21,24,1,4,7,10,13,16,19,22,2,5,8,11,14,17,20,23
52	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,0,3,6,9,12,15,18,21,24,1,4,7,10,13,16,19,22,25,2,5,8,11,14,17,20,23
54	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,0,3,6,9,12,15,18,21,24,1,4,7,10,13,16,19,22,25,2,5,8,11,14,17,20,23,26
56	0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,0,3,6,9,12,15,18,21,24,27,1,4,7,10,13,16,19,22,25,2,5,8,11,14,17,20,23,26

Interpolation and Scaling

In sliding sensor and touchpad applications, it is often necessary to determine finger (or other capacitive object) position to greater resolution than the native pitch of the individual sensors. The contact area of a finger on a sliding sensor or a touchpad is often larger than any single sensor.

To calculate the interpolated position using a centroid, the array is first scanned to verify that a specific sensor location is valid. The requirement is for a certain number of adjacent sensor signals to be above a noise threshold. When the strongest signal is found, this signal and those contiguous signals larger than the noise threshold are used to compute a centroid. As few as two and as many as (typically) eight sensors are used to calculate the centroid in the form of:

Equation 1

$$N_{Cent} = \frac{n_{i-1}(i-1) + n_i i + n_{i+1}(i+1)}{n_{i-1} + n_i + n_{i+1}}$$

The calculated value is typically fractional. To report the centroid to a specific resolution, for example, a range of 0 to 100 for 12 sensors, the centroid value is multiplied by a calculated scalar. It is more efficient to combine the interpolation and scaling operations into a single calculation and report this result directly in the desired scale. This is handled in the High-Level APIs section.

Slider sensor count and resolution are set in the SmartSense2X wizard. A scaling value is calculated by the wizard and stored as fractional values. The multiplier for the centroid resolution is contained in three bytes with the definitions given in Table 2.

Table 2. Centroid Multiplier Bit Definition for Sliders

Resolution Multiplier MSB								
Bit	7	6	5	4	3	2	1	0
Multiplier	2^{15}	2^{14}	2^{13}	2^{12}	2^{11}	2^{10}	2^9	2^8
Resolution Multiplier ISB								
Multiplier	128	64	32	18	16	8	4	2
Resolution Multiplier LSB								
Multiplier	1/2	1/4	1/8	1/16	1/32	1/64	1/128	1/256

The resolution is found by using this equation:

$$\text{Resolution} = (\text{Number of Sensors} - 1) \times \text{Multiplier}$$

The centroid is held in a 24-bit unsigned integer and its resolution is a function of the number of sensors in the slider and the multiplier.

Feedback Component Selection Guidelines

The CY8C22xxx family of devices has a built-in analog bus. It allows capacitive sensor connections to any PSoC pin. The SmartSense2X User Module uses internal precharge switches to charge active sensors at clock signal phase Ph1 and connects the analog bus to the sensor at phase Ph2. The sigma-delta modulator modulation capacitor and comparator inputs are connected to the analog bus permanently. The firmware performs sensor scanning in series by setting corresponding bits in the MUX_CRx registers. The SmartSense2X User Module requires an external modulation capacitor and also supports an optional shielding electrode. This section explains how to select external components.

Modulation Capacitor

This user module requires an external modulation capacitor, C_{mod} , and a modulator feedback resistor, R_b . The capacitor can be connected to the P0[7] port pin and Vss ground. The feedback resistor R_b can be connected to port pins P0[5] and the capacitor pin. The pins are selected by the user module parameter setting. Do not use pins selected for the modulator component connection for any other purposes.

The recommended value for the modulation capacitor is 4.7 nF to 47 nF. The optimal capacitance can be selected by experiment to get maximum SNR. For the PRS16 and PRS8 configurations, a value of 5.6 nF to 10 nF gives good results in most cases. If a configuration with a prescaler is selected, the recommended value of the integration capacitor is 22 nF to 47 nF. After selecting the feedback resistor, you can experiment with several capacitor values to get the best SNR. Use a ceramic capacitor. The temperature capacitance coefficient is not important. The resistor values depend on the total sensor capacitance, C_s . The resistor value should be selected as follows:

- Monitor the raw counts for different sensor touches
- Select a resistance value that gives maximum readings of about 70% of the full-scale readings at the selected scanning resolution. The raw counts increase when resistor values increase

Typical values are 500 ohms to 10 kohms, depending on sensor capacitance. You can start with 2 kohms if you use the CY3280-22x45 evaluation board.

Shielding Electrode

The shielding electrode signal source can be selected from one of the free digital row buses (Row_0_Output_0 - Row_0_Output_3 for the Left Shield Electrode and Row_0_Output_0 - Row_0_Output_3 for the Right Shield Electrode). Each row output can be routed to one of the three pins. Set the Row LUT Function to A. Note: The first order modulator configuration does not have a Row_0_Output_0 bus for Left Shield Electrode and Row_1_Output_1 one for Right Shield Electrode.

Some applications require reliable operation in the presence of water films or droplets. White goods, automotive applications, various industrial applications, and others need capacitive sensors that do not give false triggering because of water, ice, and humidity changes. In this case, a separate shielding electrode can be used. This electrode is located behind or outside the sensing electrode. When water films are located on the device insulation overlay surface, the coupling between the shielding and sensing electrodes increases. The shielding electrode allows you to reduce the influence of parasitic capacitance, which gives you more dynamic range for processing sense capacitance changes.

In some applications it is useful to select the shielding electrode signal and placement relative to the sensing electrode, such that increasing the coupling between these electrodes causes the opposite of the touch change of the sensing electrode capacitance measurement. This simplifies the work of the high-level software API. The SmartSense2X User Module supports separate output for the shielding electrode.

Figure 8. Possible Shield Electrode PCB Layout

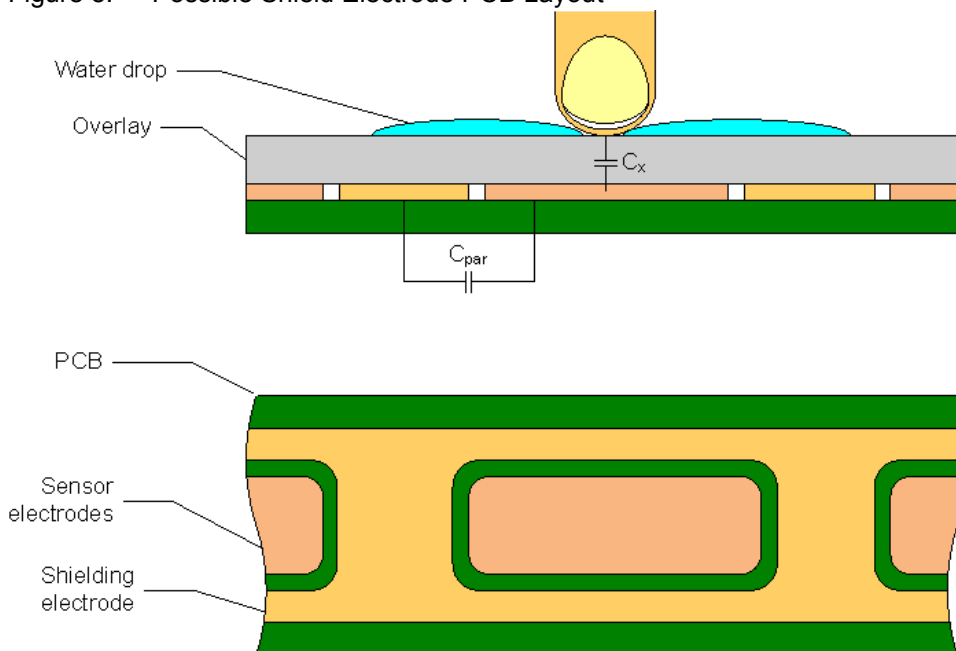


Figure 8 illustrates a possible layout configuration for the button's shield electrode. The shield electrode is especially useful for transparent ITO touchpad devices, where it blocks the LCD drive electrode's noise influence and reduces stray capacitance at the same time.

In this example, the button is covered by a shielding electrode plane. As an alternative, the shielding electrode can be located on the opposite PCB layer, including the plane under the button. A hatch pattern, with a fill ratio of about 30 to 40%, is recommended. No additional ground plane is required.

If there are water drops between the shielding and sensing electrodes, it increases the C_{par} and reduces modulator current. In practical tests, the API can increase the modulator reference voltage so that the raw count increase from water drops is close to zero or slightly negative. You can achieve this by selecting the appropriate modulator reference.

In this user module, the same signal used for the precharge clock is supplied to the shield electrode. The shield electrode can be connected to any of the PSoC pins to which it is routed. Set the drive mode to Strong Slow to reduce ground noise and radiated emissions. The optional slew-limiting resistor can be connected between the PSoC device and the shielding electrode. For the row LUT function, select A.

Comparator Reference Source

The comparator reference source is used to form the comparator reference voltage. The reference voltage value determines the sensitivity. The user module supports the following references:

- Bandgap reference
- V_{DD} reference

The following table summarizes the reference selection options for IDAC configuration.

Table 3. Reference Selection Options for IDAC Configuration

Type	External Components	UM Selection	When to Use
Bandgap reference	None	VBG	Recommended for most applications. Start testing from this option.
Power supply reference	None	VDD	Readings are proportional to the power supply voltage. Use only when the power supply is well-regulated.

In most cases, you will use only the bandgap reference or the analog modulator. The external resistive voltage divider is useful for special cases.

Placement

The SmartSense2X MUM for Emerald has two selection windows: IDAC configuration with 2 options to select from when placed - first selection window and second selection window.

The first selection window has the following options:

Selection	Description
Single Channel with IDAC configuration	This configuration uses one analog/compare column block. The analog mux bus left and the analog mux bus right are connected. No external Rb is required. IDAC is used for charging CMOD and Cp
Dual Channel with IDAC configuration	This configuration will use 2 analog/compare column blocks. The analog Mux bus left and the analog Mux bus right scan the sensors respectively. No external Rb required.

The second selection window has the following options:

- First order modulator (max parasitic capacitance, $C_{pmax} < 20 \text{ pF}$)
- Second order modulator (max parasitic capacitance, $C_{pmax} < 40 \text{ pF}$)

Selection	Description
First Order Modulator	First Order Sigma Delta Modulator (max parasitic capacitance, $C_{pmax} < 20 \text{ pF}$). This configuration uses one ACE and one ASE block per channel
Second Order Modulator	Second Order Sigma Delta Modulator (max parasitic capacitance, $C_{pmax} < 40 \text{ pF}$). This configuration uses one ACC and one ASC block per channel. It provides better resolution than the first order modulator configuration with the same scanning time

Figure 9. SmartSense2X MUM Wizard - First Selection Window


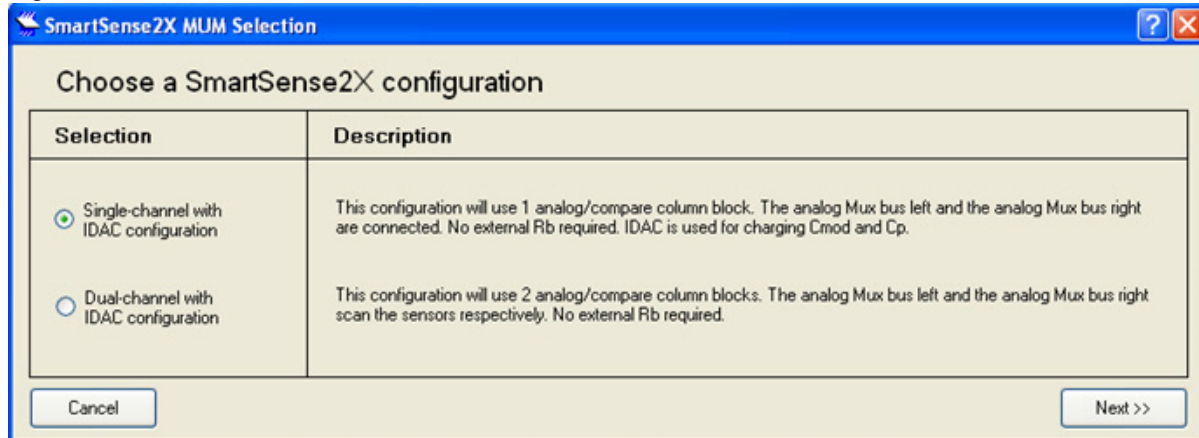


Figure 10. SmartSense2X MUM Wizard - Second Selection Window

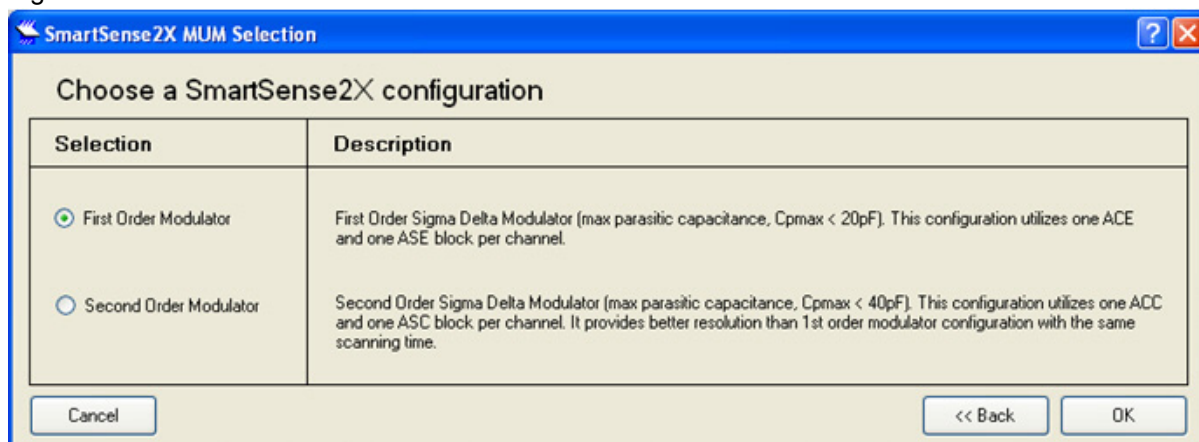

Note The second selection window is not available in the CY8C28x13 part because these devices support First Order Sigma Delta Modulator only.

The SmartSense2X MUM has four configurations.

Configuration	Abbreviation
Single ChannelIDAC + Second Order Modulator + Prescaler + PRS8	SmartSense2X_SGLIBCNT28
Single ChannelIDAC + First Order Modulator + Prescaler + PRS8	SmartSense2X_SGLIECNT28
Dual ChannelIDAC + Second Order Modulator + Prescaler + PRS8	SmartSense2X_DBLIBCNT28
Dual ChannelIDAC + First Order Modulator + Prescaler + PRS8	SmartSense2X_DBLIECNT28

Block Resources

The blocks for the user module are automatically placed when the user module is instantiated. The consumed resources depend on the SmartSense2X User Module configuration. User modules that require specific pin resources, including the LCD and I2CHW, must be placed before starting the SmartSense2X Wizard to establish pin connections for the SmartSense2X User Module.

Avoid P1[0] and P1[1] when placing capacitive sensor connections. These pins are used for programming the part and may have excess routing capacitance affecting sensor sensitivity and noise.

Figure 11. Digital Block Resources - Single Channel

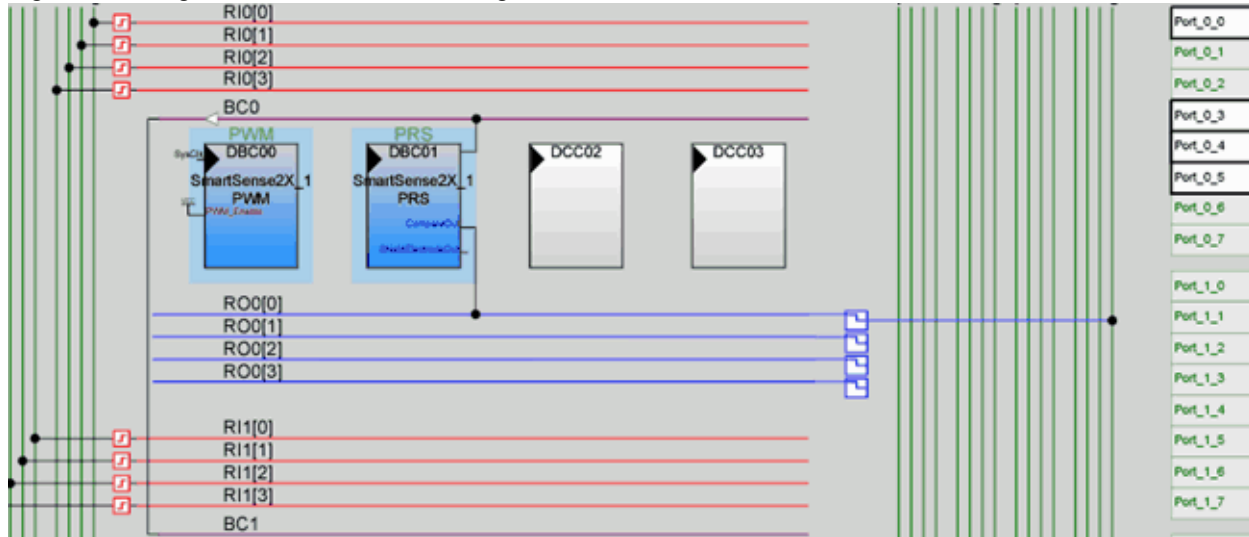


Figure 12. Digital Block Resources - Dual Channel

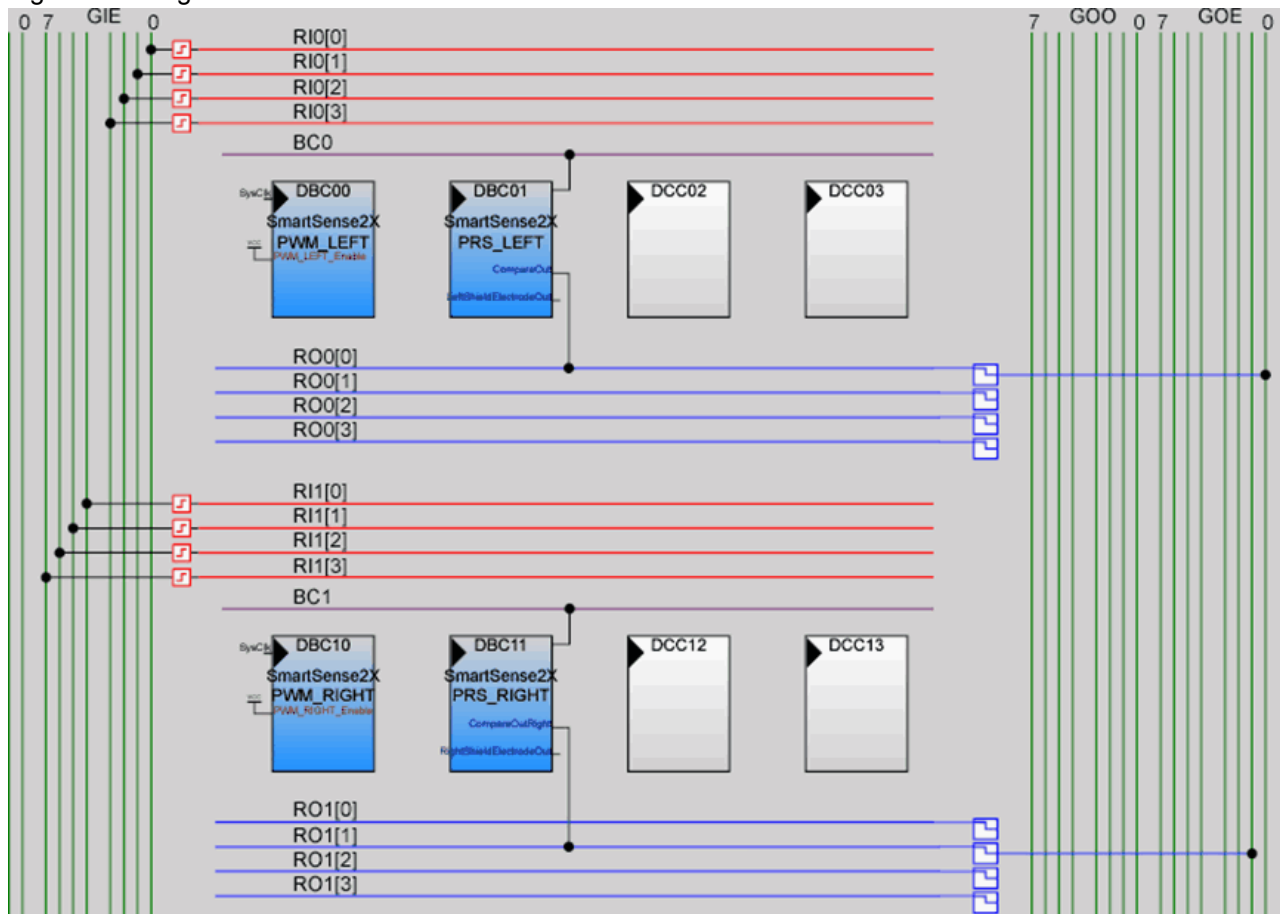


Figure 13. Analog Block Resources - Single Channel First Order Modulator

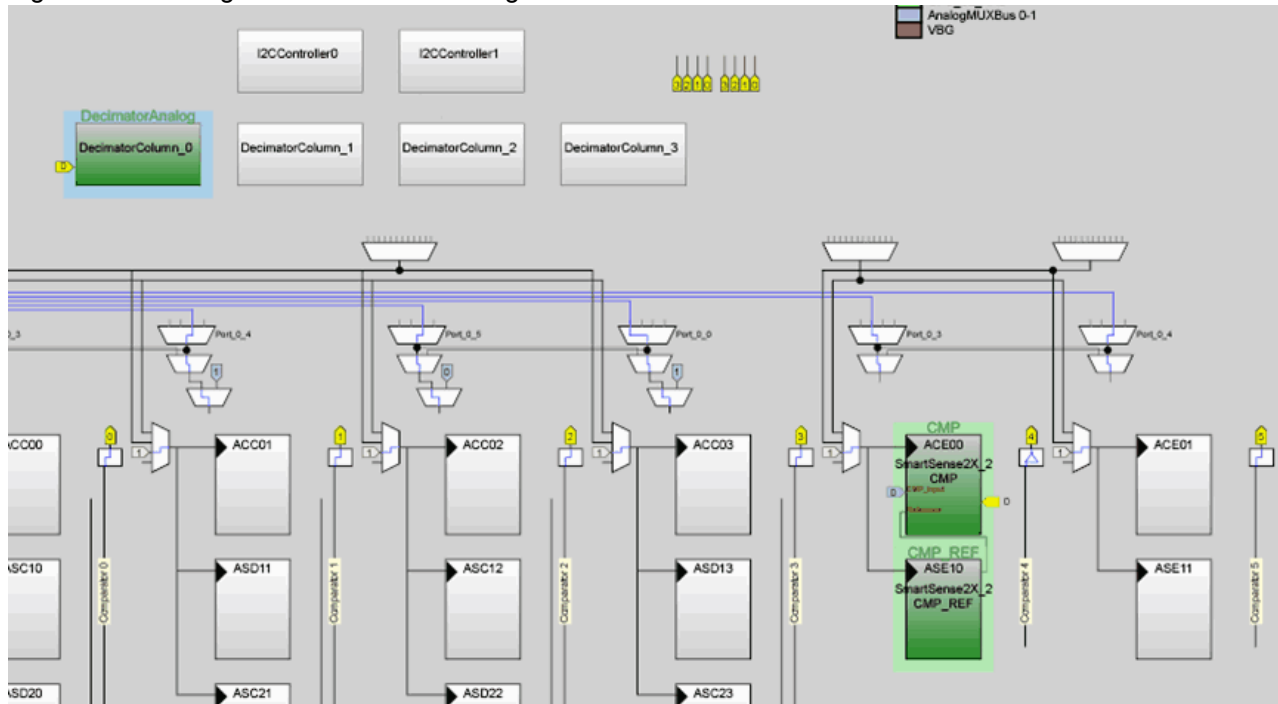


Figure 14. Analog Block Resources - Dual Channel First Order Modulator


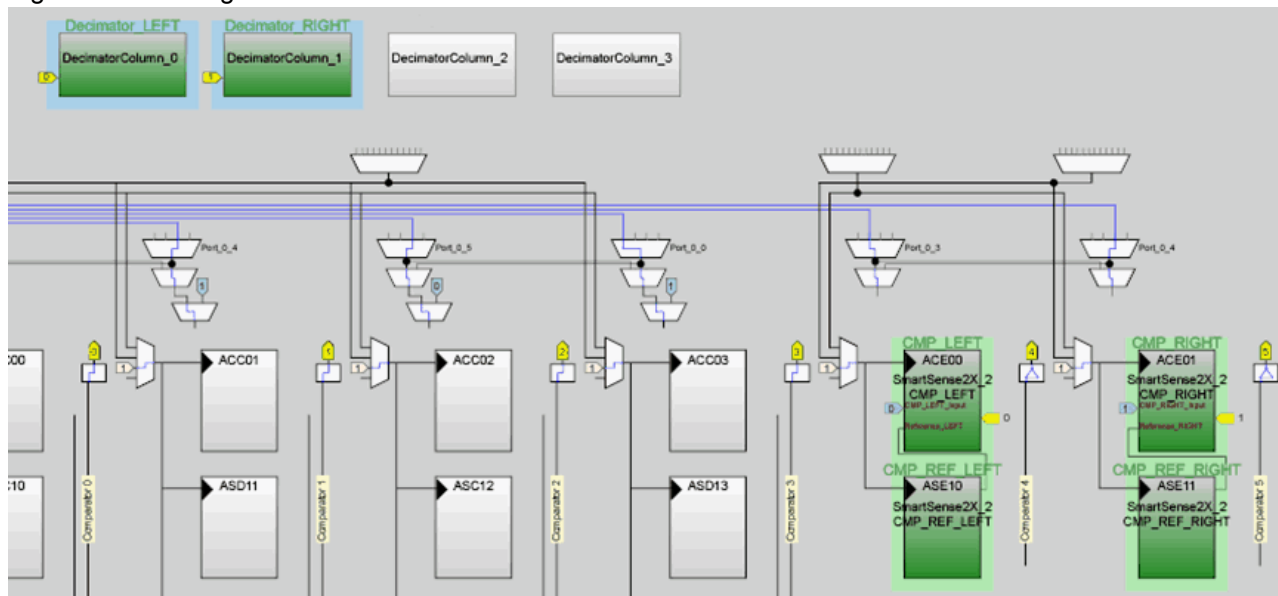



Figure 16. Analog Block Resources - Dual Channel Second Order Modulator

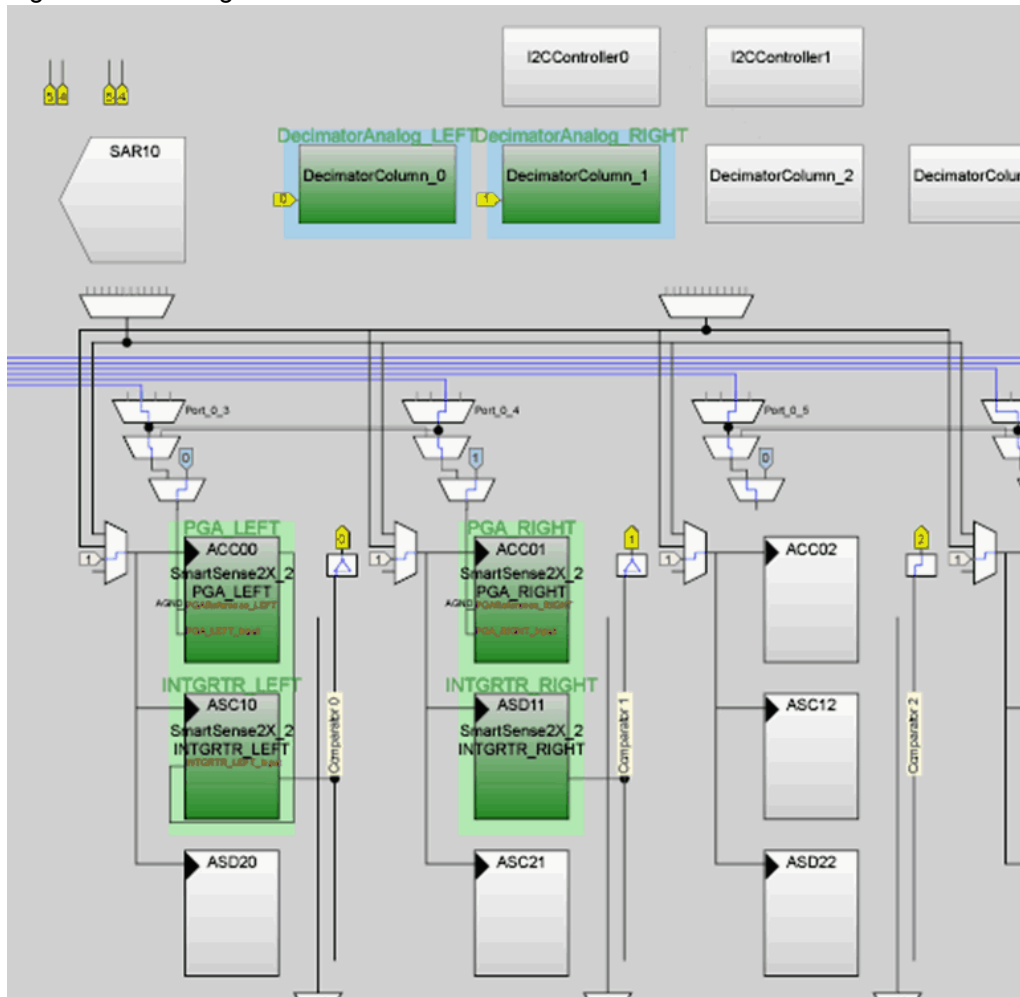

SmartSense2X Wizard

This wizard is used to set up the pinout for your CapSense buttons, sliders, and proximity sensors. You can choose a configuration and assign the buttons and segments using a drag and drop interface.

1. To access the wizard, right-click the user module in the Workspace Explorer and select the SmartSense2X Wizard.

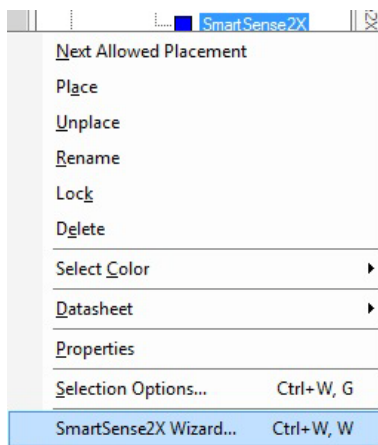

- The wizard opens showing the numeric entry boxes for the number of sensors and the number of slider sensors. The following figures show the SmartSense2X wizard for single-channel and dual-channel configurations respectively.

Figure 17. SmartSense2X Single-Channel Configuration


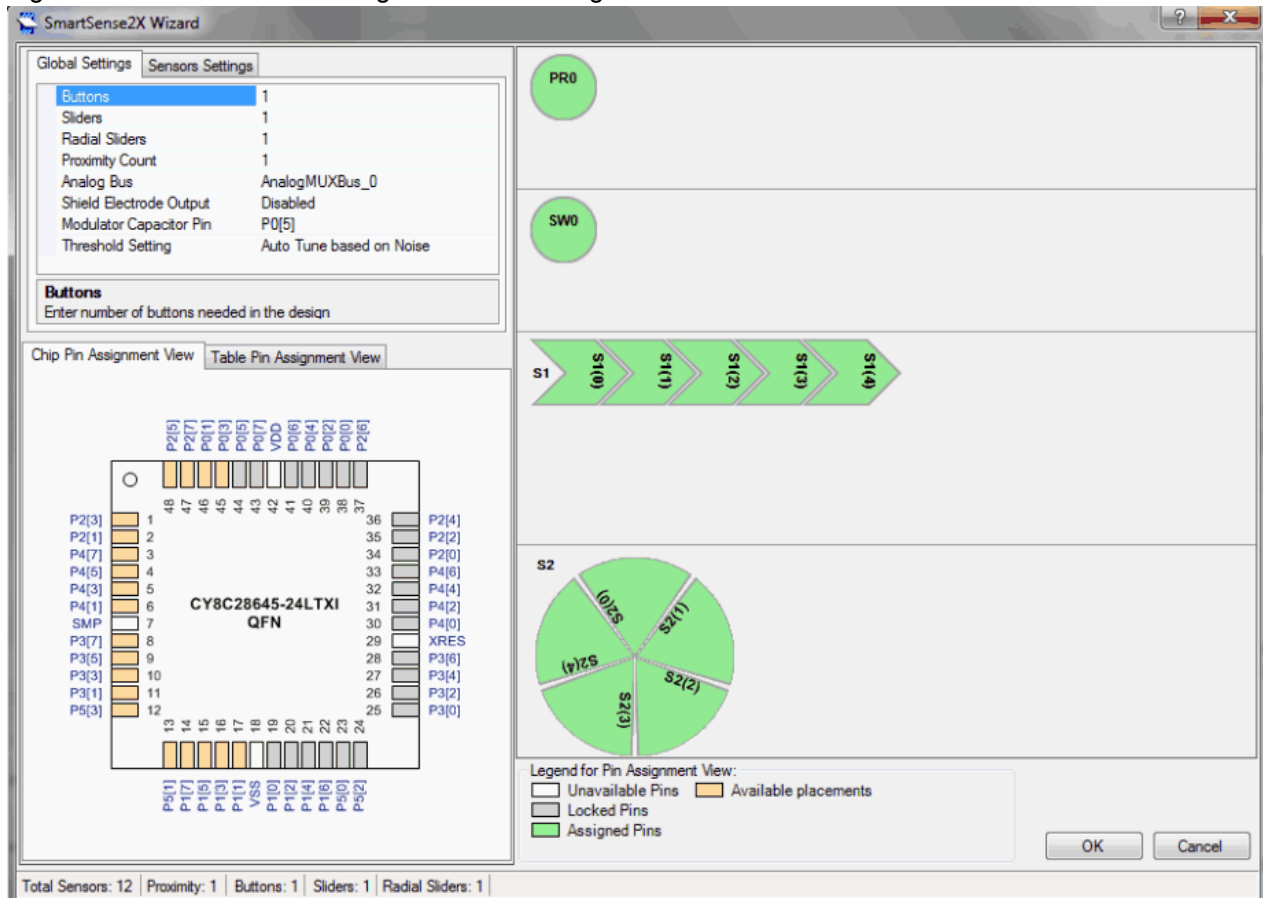


Figure 18. SmartSense2X Dual-Channel Configuration

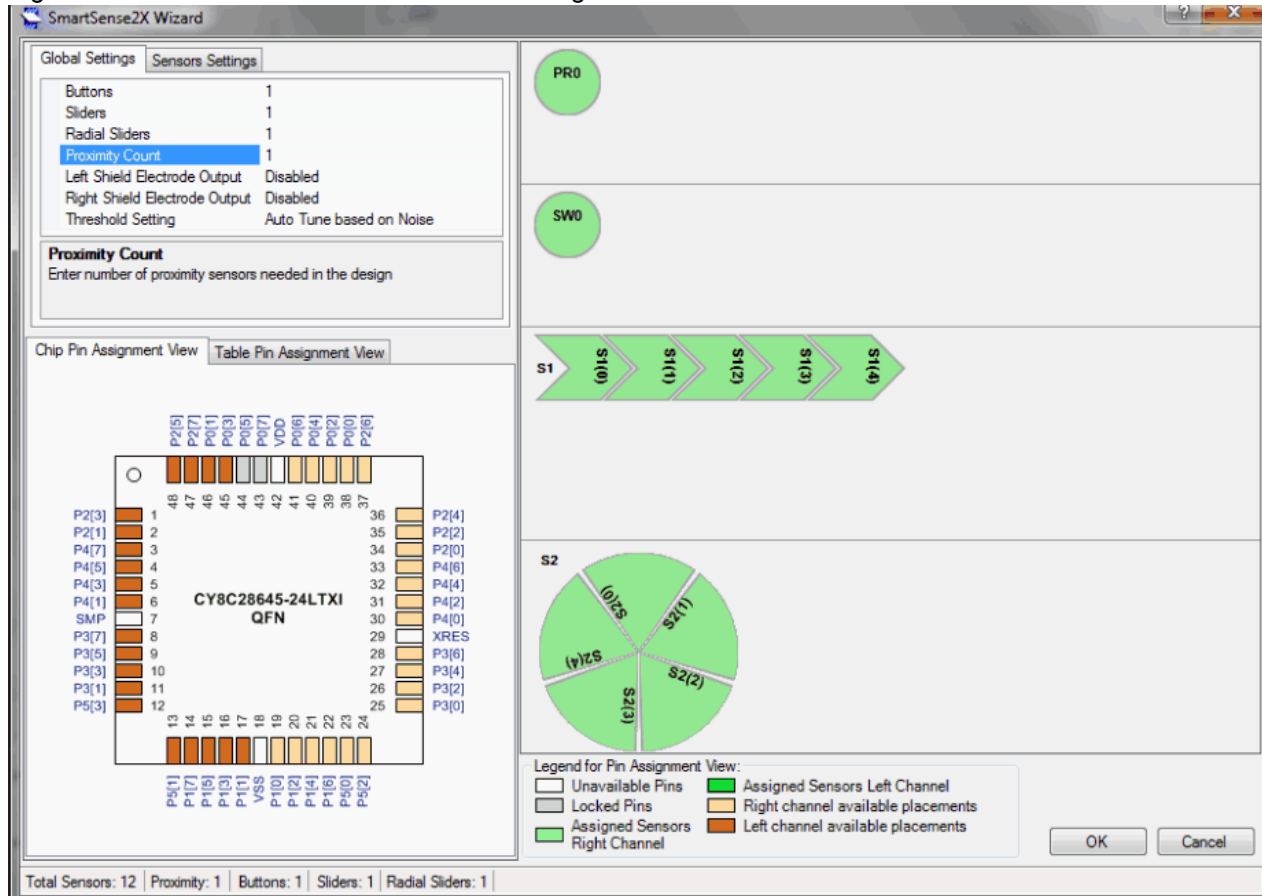

- Type the number of independent buttons, sliders, radial sliders, and proximity sensors. The total number of sensors (buttons plus slider elements) is limited to the number of pins available. After entering the data, press the [Enter] key to update the display with the new value.
- Select **Shield Electrode** and **Threshold Settings**. For more details on these settings, refer to the Global Settings Tab section on page 18.
- Type the number of sliders. X-Y touchpads require two sliders.
- Click a slider/sensor/proximity sensor to enter the sensor settings and select the **Sensor Settings** tab. Enter the Diplex, Finger Threshold, Resolution, Sensitivity Level, and Sensors Count parameters. For more details of these parameters, see the Sensor Settings Tab section on page 18.
- Type the output resolution. The minimum value is five. The maximum value is: (number of pins used for sensors - 1) x 2^8 - 1 or (2 x number of pins used for sensors - 1) x 28 - 1 for diplexed sliders. The software attempts to interpolate touches to this resolution based on the relative strength of the signals on adjacent slider sensors.
- Select Diplex, if required. This maps the number of pins selected for sensors to twice as many sensor locations on the board. Only the first half of the diplex sensors is shown; the second half is automatically mapped, as described in the Diplexing section on page 7.

- Sensor Elements area
- Pin Legend area

Global Settings Tab

The Global Settings tab consists of the following parameters: Buttons, Sliders, Radial Sliders, Proximity Number, Modulator Capacitor Pin, Threshold Setting, and Analog Bus.

Figure 20. Global Settings - Single Channel Configuration

Global Settings	Sensors Settings
Buttons	1
Sliders	1
Radial Sliders	0
Proximity Number	0
Shield Electrode Output	Disabled
Modulator Capacitor Pin	
Threshold Setting	Auto Tune based on Noise

Radial Sliders
Enter number of radial sliders needed in the design

Figure 21. Global Settings - Dual Channel Configuration

Global Settings	Sensors Settings
Buttons	1
Sliders	1
Radial Sliders	0
Proximity Number	0
Left Shield Electrode Output	Disabled
Right Shield Electrode Output	Disabled
Threshold Setting	Auto Tune based on Noise

Buttons
Enter number of buttons needed in the design


Buttons

Buttons parameter defines the number of single sensors. The maximum number is 42 capacitive sensors^[1]. It is restricted by the available number of device port pins. CapSense buttons are analogous to mechanical push-buttons. They are used for discreet controls such as on/off switches, function keys, menu keys, and so on. API functions monitor the capacitance signals from each sensor and compare them to the threshold levels calculated by the SmartSense2X auto-tuning algorithms. When a sensor is touched, its capacitance signal increases; if the increase is enough as determined by the SmartSense2X decision logic, that sensor is activated.

The following figure shows a typical signal (blue line) from a sensor when it is activated. SmartSense2X automatically sets the thresholds (red lines) based on user input to provide the

desired system behavior. Moreover, since the Manual Mode is accessible, it enables setting the Finger Threshold for each sensor.

Figure 22. Capacitance Signal from an Activated Sensor

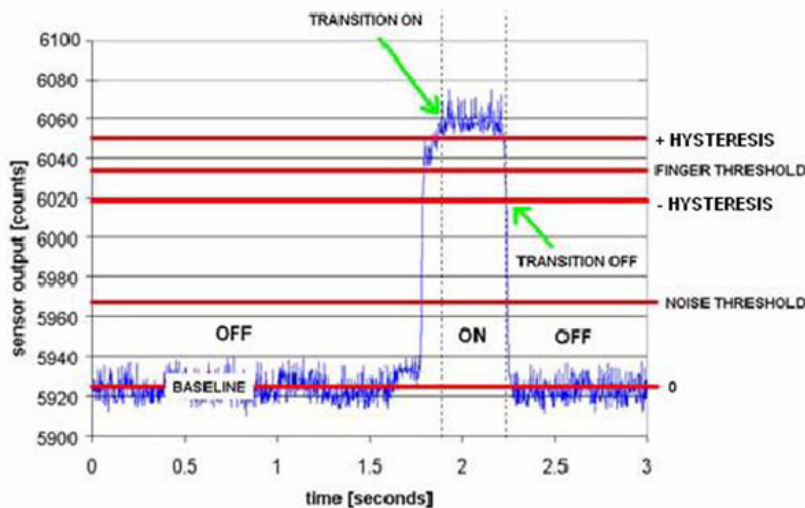

Note [1] For Threshold Setting = Manual.

Sliders

This parameter defines the number of linear sliders. The maximum number of sliders is defined by maximum number of sensors divided by 2. It is restricted by the available number of device port pins. CapSense sliders are analogous to mechanical potentiometers. Sliders are used for controls that require a continuum of levels, such as lighting dimmers, volume control, graphic equalizers, speed controls, and so on. A CapSense slider is implemented with an array of adjacent sensors. When a slider is actuated by a finger, several adjacent sensors register an increase in capacitance signal.

The exact position of the touch is found by computing the centroid location of the set of activated sensors. The minimum number of sensors in a slider is restricted to 2 but the practical minimum number of sensors in a slider is 5 (default value), and the maximum is limited only by the number of available I/O pins on the PSoC device.

Radial Sliders


This parameter defines the number of radial sliders. The maximum number of sliders is defined by maximum number of sensors divided to 2. It is restricted by the available number of device port pins.

Proximity Number

A proximity sensor detects the presence of a hand or another conductive object before it contacts the touch surface. For example, imagine a hand stretched out to operate a car audio system in the dark. The proximity sensor causes the buttons of the audio system to glow using backlight LEDs when your

hand is near. One implementation of a proximity sensor consists of a long trace on the perimeter of the user interface, as shown in the following figure.

Figure 23. Long Trace on the Perimeter of the User Interface

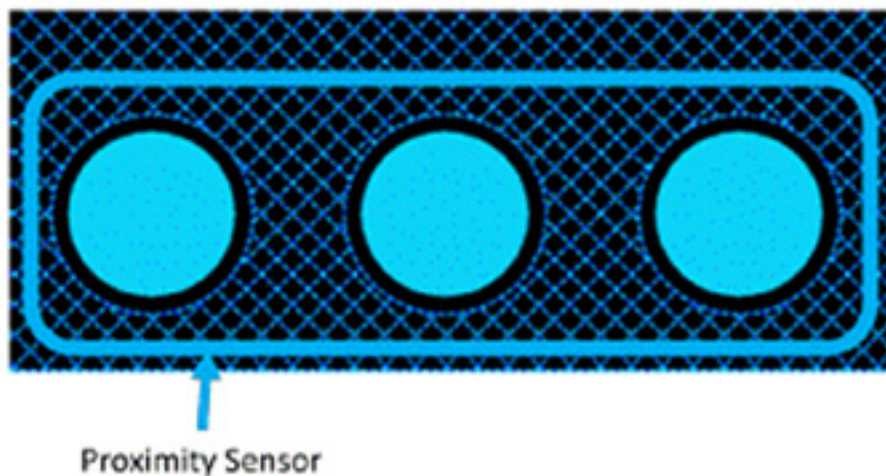

Shield Electrode Output

Single channel configuration:

The shielding electrode signal source can be selected from one of the free digital row buses (Row_0_Output_0 - Row_0_Output_3). Each row output can be routed to one of the three pins. Set the Row LUT Function to A. The range varies between Row_0_Output_0 and Row_0_Output_3. The default setting is Disabled.

Note: The first order modulator configuration does not have a Row_0_Output_0 bus for Shield electrode.

Dual channel configuration:

The dual channel configuration has a Left Shield Electrode Output and a Right Shield Electrode Output.

The Left Shield Electrode signal source can be selected from one of the free digital row buses (Row_0_Output_0 - Row_0_Output_3). The Right Shield Electrode signal source can be selected from one of the free digital row buses (Row_1_Output_0 - Row_1_Output_3). Each row output can be routed to one of the three pins. Set the Row LUT Function to A. The range for the Left Shield Electrode output varies from Row_0_Output_0 and Row_0_Output_3. The default setting is Disabled. The range for the Right Shield Electrode output varies from Row_1_Output_0 and Row_1_Output_3. The default setting is Disabled.

Note: The first order modulator configuration does not have Row_0_Output_0 bus for Left Shield electrode and Row_1_Output_1 bus for Right Shield electrode.

Modulator Capacitor Pin

SmartSense2X requires an external modulation capacitor, C_{mod}, connected from V_{ss} to one of two dedicated PSoC pins – P0[5] or P0[7]. The SmartSense2X dual-channel configuration requires two external modulation capacitors that must be connected to the P0[5] and P0[7] pins (the modulator capacitor pin property is not available and pins P0[5] and P0[7] are locked).

The selected pins must not be used for any other purpose. The recommended value for the external modulation capacitor is 2.2 nF. Make sure you use a ceramic capacitor. The temperature capacitance coefficient is not important. Cypress recommends using a 560-ohm series resistor on all CapSense sensor traces for RF interference suppression. This resistor must be placed near the PSoC device.

Threshold Setting

Selects between automatic and manual threshold setting. The threshold setting parameter has three options:

- **Manual** - All the thresholds are set manually with values ranging from 1 to 255. In this case, the Finger Threshold parameter should be adjusted for each sensor in the Sensor Settings Tab. The Hysteresis, NoiseThreshold, NegativeNoiseThreshold, BaselineUpdateThreshold, and LowBaselineReset values are fixed and calculated using the Finger Threshold parameter.
- **Auto Tune based on Sensitivity** - In this option the user module sets the finger threshold to the sensitivity candidate computed during SmartSense initialization. The sensitivity candidate is calculated in the same manner as the CY8C20xx6 SmartSense.
- **Auto Tune based on Noise** - Full auto-tuning ensures a minimum of 5:1 SNR – the user module implements a full-fledged SmartSense algorithm to update finger threshold during run time.

Analog Bus

This parameter defines one or two analog mux buses that are used. If AnalogMUXbus_0 is selected, then only sensors connected to the odd pins are scanned (with the exception of P0[7]). The default setting is to use AnalogMUXbus_0 analog bus. If AnalogMUXbus_0 is selected, then two analog mux buses are not connected. This gives an opportunity to other user modules to use the AnalogMUXbus_1 without conflicts.

User modules (such as AMuxN) that occupy the same analog mux bus may have a conflict with the SmartSense2X User Module when they are used at the same time. If you require a simultaneous operation, then the user modules should use the pins that belong to different analog mux buses.


Note: Available for Single Channel configurations only.

Type	API
Range	AnalogMUXbus_0 or AnalogMUXbus_1 (depends on analog block placement) Both
Default	AnalogMUXbus_0 or AnalogMUXbus_1 (depends on analog block placement)

Sensor Settings Tab


The Sensor Settings Tab consists of the following parameters: Diplex, Finger Threshold, Resolution, Sensitivity Level, and Sensors Count.

Figure 24. Sensor Settings for Buttons: Threshold Setting = "Auto Tune based on Noise"

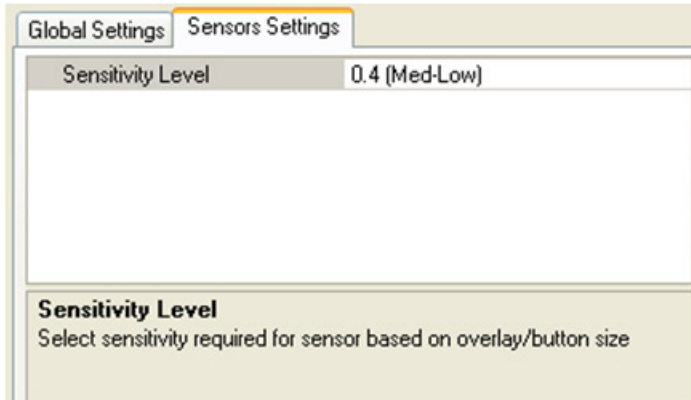


The screenshot shows the 'Sensors Settings' tab selected. The 'Sensitivity Level' is set to '0.4 (Med-Low)'. Below the settings, there is a section titled 'Sensitivity Level' with the description 'Select sensitivity required for sensor based on overlay/button size'.

Figure 25. Sensor Settings for Buttons: Threshold Setting = "Auto Tune based on Sensitivity"

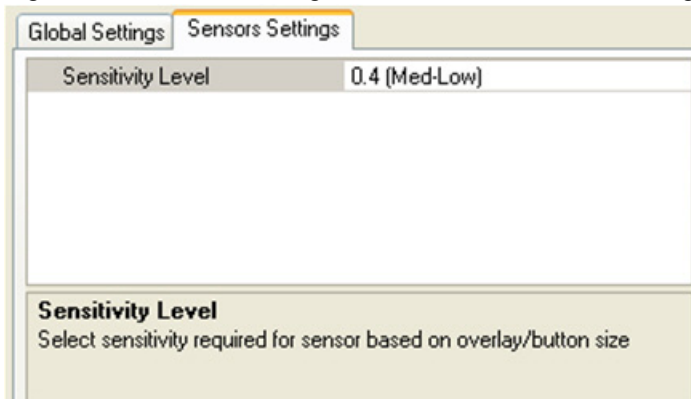

The screenshot shows the 'Sensors Settings' tab selected. The 'Sensitivity Level' is set to '0.4 (Med-Low)'. Below the settings, there is a section titled 'Sensitivity Level' with the description 'Select sensitivity required for sensor based on overlay/button size'.

Figure 26. Sensor Settings for Buttons: Threshold Setting = "Manual"

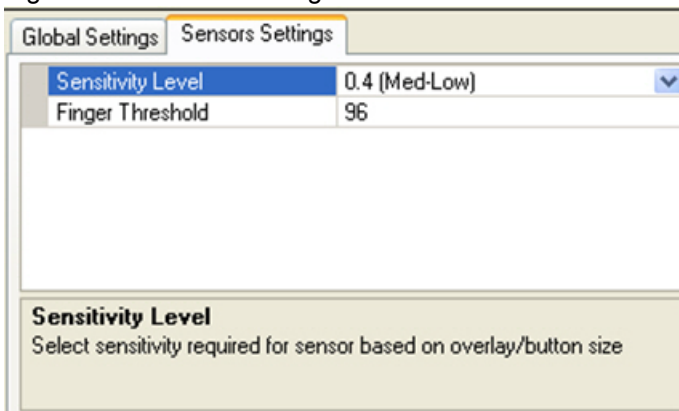

The screenshot shows the 'Sensors Settings' tab selected. The 'Sensitivity Level' is set to '0.4 (Med-Low)' and the 'Finger Threshold' is set to '96'. Below the settings, there is a section titled 'Sensitivity Level' with the description 'Select sensitivity required for sensor based on overlay/button size'.

Figure 27. Sensor Settings for Proximity Sensors: Threshold Setting = "Auto Tune based on Noise"

Global Settings	Sensors Settings
<div>Sensitivity Level High</div>	
<p>Sensitivity Level Select sensitivity required for sensor based on overlay/button size</p>	

Figure 28. Sensor Settings for Proximity Sensors: Threshold Setting = "Auto Tune based on Sensitivity"

Global Settings	Sensors Settings
<div>Sensitivity Level High</div>	
<p>Sensitivity Level Select sensitivity required for sensor based on overlay/button size</p>	

Figure 29. Sensor Settings for Proximity Sensors: Threshold Setting = "Manual"

Global Settings	Sensors Settings
<div> <div>Sensitivity Level High</div> <div>Finger Threshold 96</div> <div>Approaching speed Fast</div> </div>	
<p>Sensitivity Level Select sensitivity required for sensor based on overlay/button size</p>	

Figure 30. Sensor Settings for Linear Sliders: Threshold Setting = "Auto Tune based on Noise"

Global Settings	Sensors Settings
Sensors Count	5
Resolution	100
Diplex	False
Sensitivity Level	0.4 (Med-Low)
Sensors Count Slider Sensor Count	

Figure 31. Sensor Settings for Linear Sliders: Threshold Setting = "Auto Tune based on Sensitivity"

Global Settings	Sensors Settings
Sensors Count	5
Resolution	100
Diplex	False
Sensitivity Level	0.4 (Med-Low)
Sensors Count Slider Sensor Count	

Figure 32. Sensor Settings for Linear Sliders: Threshold Setting = "Manual"

Global Settings	Sensors Settings
Sensors Count	5
Resolution	100
Diplex	False
Sensitivity Level	0.4 (Med-Low)
Finger Threshold	96
Sensors Count Slider Sensor Count	

Figure 33. Sensor Settings for Radial Sliders: Threshold Setting = "Auto Tune based on Noise"

Global Settings		Sensors Settings
Sensors Count	5	
Resolution	100	
Sensitivity Level	0.4 (Med-Low)	
Sensors Count Radial Slider Sensor Count		

Figure 34. Sensor Settings for Radial Sliders: Threshold Setting = "Auto Tune based on Sensitivity"

Global Settings		Sensors Settings
Sensors Count	5	
Resolution	100	
Sensitivity Level	0.4 (Med-Low)	
Sensors Count Radial Slider Sensor Count		

Figure 35. Sensor Settings for Radial Sliders: Threshold Setting = "Manual"

Global Settings		Sensors Settings
Sensors Count	5	
Resolution	100	
Sensitivity Level	0.4 (Med-Low)	
Finger Threshold	96	
Sensors Count Radial Slider Sensor Count		

Finger Threshold

This threshold is used to determine the state of each button sensor. If any sensor is active, the `blsAnySensorActive()` function returns a 1. If all sensors are off, the `blsAnySensorActive()` function returns a 0. Possible values range from 1 to 255. The default value is 80. The Finger Threshold is visible only if the 'manual' mode is selected for the Threshold Setting global parameter.

The Finger Threshold property is disabled when "Threshold Setting" is set to "Auto Tune based on Sensitivity" or "Auto Tune based on Noise".

Diplex

This option enables or disables the slider diplex. See the Diplexing section for more information.

Resolution

This option sets the sensor resolution in the range from 5 to $(\text{number of pins used for sensors} - 1) \times 2^8 - 1$ or $(2 \times \text{number of pins used for sensors} - 1) \times 2^8 - 1$ for diplexed sliders. This parameter is available for linear and radial sliders only.

Sensors Count


Sensors Count is the number of physical sensors in the slider or radial slider. This parameter is available for linear and radial sliders only.

Sensitivity Level

Sensitivity Level sets the capacitance signal change (sensor response) in pF needed to activate a button sensor. The available settings are 0.1 (High), 0.2 (Med-High), 0.3 (Medium), 0.4 pF (Med-Low), and 0.5 pF (Low). The default setting is 0.5 pF, while 0.1 pF corresponds to highest sensitivity offered and 0.5 pF corresponds to the lowest sensitivity.

Sensitivity setting is also available for proximity sensors. The available options are High and Low, with the default setting being High. The following figure shows the relationship between the button size, overlay thickness (acrylic plastic), and sensor response (CF), and can be used as a guide for setting Sensor Sensitivity. The Sensor Sensitivity should always be set at or below the sensor response indicated in Figure 13. This ensures robust operation. Note that the area shaded in red must be avoided because the sensor response is below the minimum (0.1 pF) that can be detected by SmartSense2X.

Figure 36. Relationship Between Button Size, Overlay Thickness, and Sensor Response in pF

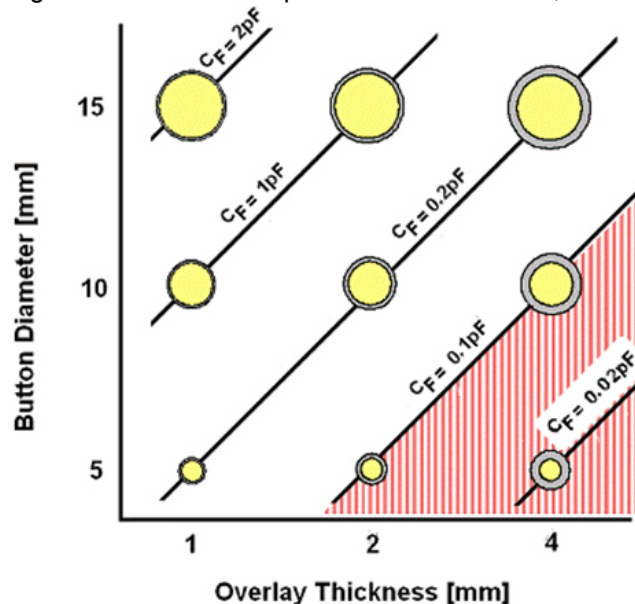

Approaching Speed

This parameter decides the rate at which the baseline of the proximity sensor is updated. It has the following values: slow, medium, and fast, and the default setting is Fast. This parameter is available if the Threshold Setting parameter is set to Manual.

Pin Assignment View

The Pin Assignment View allows assigning switches or sensors to pins by dragging the switch or sensor to the pin in the device. You can choose to drag switches or sensors to pins in the Chip Pin Assignment View or the Table Pin Assignment View. The port pin becomes green after it is assigned and is no longer

available. Change sensor assignments by dragging the port pin back to the uncommitted table. Make sure to avoid selecting pins already committed to other user modules.

To change the pin assignment, place your cursor on the assigned pin, click the pin, and drag and drop it outside the switches box. The pin is now unassigned and you can reassign it.

When you right-click on the wizard "Chip Pin Assignment View" and "Table Pin Assignment View", the "Clear All Pins" option appears. This option unassigns all chip pins.

Sensor Elements Area

The Sensor Elements area consists of Buttons View, Sliders View, and Radial Sliders View.

Buttons View

This part of the SmartSense2X Wizard shows the CapSense buttons sensors. These sensors can be assigned to pins by dragging the sensor to the pin in the Pin Assignment View.

Sliders View

This part of the SmartSense2X Wizard shows the linear sliders. Each slider sensor can be assigned to a pin by dragging the sensor to the pin in the Pin Assignment View.

Radial Sliders View

This part of the SmartSense2X Wizard shows the radial sliders. Each slider sensor can be assigned to a pin by dragging the sensor to the pin in the Pin Assignment View.

Pin Legend Area

The legend explains the colors on the pins.

- White - the pin cannot be used as a CapSense input
- Gray - the pin is locked. There are two possible causes for this. The first cause is that another user module such as the LCD or I2C has claimed the pin. The second cause is that the name of the pin has been changed from its default. To return the pin name to its default, expand the pin in the Pinout view, and select Default from the Select menu. The pin is now available for assignment in the Wizard
- Orange - the pin is available for assignment
- Green - the pin has been assigned as a CapSense input

Status Bar

The status bar shows the following information: total sensors count, number of buttons, number of sliders, and number of radial sliders.

OK, Cancel, Help buttons, and Legend

The OK button stores the SmartSense2X configuration. Based on your entries for sensor count, pin assignment, multiplexing, and resolution, a set of tables is generated. The tables are located in SmartSense2X_SGL.asm (SmartSense2X_DBL.asm) and SmartSense2XHL.asm (SmartSense2X_DBLHL.asm) and are described in the following sections.

The Cancel button exits from the Wizard and the Help button opens the CapSense Wizard Help.

Sensor Table

The Sensor table is located in the *SmartSense2X_Table.asm* and consists of a 2-byte entry for each sensor. The first byte is the port number and the second byte is the bit mask for the bit (not the bit number). An example for a table with six sensors is as follows:

```
SmartSense2X_Sensor_Table:
_ SmartSense2X_Sensor_Table
dw 0x0140 // Port 1 Bit 6
dw 0x0301 // Port 3 Bit 0
dw 0x0304 // Port 3 Bit 2
dw 0x0308 // Port 3 Bit 3
dw 0x0302 // Port 3 Bit 1
dw 0x0108 // Port 1 Bit 3
```

Group Table

The Group table defines each of the groups of button sensors or sliders. There is one entry for each slider and one for the independent button sensors. The first entry is always the independent buttons. Each entry is six bytes. The first byte is the index in the Sensor Table where the group starts. The second byte is the number of sensors in that group. The third byte signifies whether the slider is diplexed or not (4 is diplexed, 0 is not diplexed). The fourth, fifth, and sixth bytes are the fixed point multipliers by which the slider's centroid is scaled to achieve the resolution specified in the SmartSense2X wizard.

```
SmartSense2X_Group_Table:
_ SmartSense2X_Group_Table:
; Group Table:
; Origin Count Diplex? DivBtwSw(wholeMSB, wholeLSB, fractByte)
db 0x0, 0x3, 0x00, 0x00, 0x00, 0x00 ; Buttons
db 0x3, 0x8, 0x4, 0x0, 0x0, 0x44 ; Slider 1
```

Diplex Table

Diplex table scan order data is produced for a group that is a slider and with diplexing enabled. Otherwise, a label is created, but no data is placed. The table consists of two parts: sensor mapping for each slider, and a reference for each separate slider to its table. A typical example for an eight-sensor slider is shown here:

```
DiplexTable_0:
; This group is not a diplexed slider
DiplexTable_1:
db 0,1,2,3,4,5,6,7,0,3,6,1,4,7,2,5// 8 switch slider

SmartSense2X_Diplex_Table:
_SmartSense2X_Diplex_Table:
db >DiplexTable_0, <DiplexTable_0
db >DiplexTable_1, <DiplexTable_1
```

Order Table

The Order Table consists of one byte for each sensor. This byte is the left sensor order in raw counts result array without channel dependence. The table is generated by the wizard and reflects the sensor order.

```
SmartSense2X_Order_Table_Left:
_SmartSense2X_Order_Table_Left:
DB 0x01 // Position 1
```



```
SmartSense2X_Order_Table_Right:
_SmartSense2X_Order_Table_Right:
DB 0x00,0x02 // Position 0 and 2
```

Finger Threshold Table

The Finger Threshold table defines the normalized finger threshold for each sensor. A typical example for a one-button and five-sensor slider is shown here.

```
SmartSense2X_Finger_Threshold_Table:
_SmartSense2X_Finger_Threshold_Table:
db 255; Buttons
db 1, 1, 1, 1, 1; Sliders
```

Sensitivity Level Table

The Sensitivity Level Table defines the sensor sensitivity for each sensor. A typical example for a one-button and five-sensor slider is shown here.

```
SmartSense2X_Sensitivity_Level_Table:
_SmartSense2X_Sensitivity_Level_Table:
db 0; Buttons
db 0, 0, 0, 0, 0; Sliders
```

Table 4. Sensitivity Level Table Values for Buttons and Sliders

Parameter Value	Table Value
0.1 (High)	1
0.2 (Med-High)	2
0.3 (Medium)	3
0.4 pF (Med-Low)	4
0.5 pF (Low)	5

Table 5. Sensitivity Level Table Values for Proximity Sensors

Parameter Value	Table Value
High	1
Low	5

Approaching Speeds Table

The Approaching Speeds Table defines the approaching speeds for each proximity sensor. This table also has optional default values (equal to 2) for buttons and sliders that are intended to simplify the ASM code. A typical example is shown here:

```
SmartSense2X_Approaching_Speeds:
_SmartSense2X_Approaching_Speeds:
db 2, 2, 1, 0, 2
```

Table 6. Approaching Speeds Table Values for Buttons and Proximity Sensors

Parameter Value	Table Value	Notes
Slow	1	
Medium	0	
Fast	2	Buttons and slides have this value too.

Parameters and Resources


After completing configuration and I/O pin assignment in the SmartSense wizard, set the user module parameters. Note that for any user module parameter change to take affect, the project must be regenerated.

Sensors Autoreset

This parameter determines whether the baseline is updated at all times or only when the signal difference is below the Noise Threshold. The default value for this parameter is **Disabled**, that is, the baseline is updated only when the difference between the raw count and the baseline is below the Noise Threshold. Figure 36 illustrates this parameter's effect on baseline update. When Sensors Autoreset is set to **Enabled**, the baseline is always updated without regard to Noise Threshold. This limits the maximum activated time of sensors (typically to 5 - 10s). However, this provides the benefit of preventing sensors from getting stuck due to sudden rises in raw counts that are not caused by a touch. Such sudden rises can be caused by a large power supply voltage fluctuation, a high energy RF noise source, or rapid temperature change.

When Sensors Autoreset is disabled, the baseline is updated only when the difference between raw count and baseline is below the Noise Threshold. This parameter should generally be left in its default "Disabled" state. See the Appendix section for additional explanation of this parameter.

Figure 37. Effect of the Sensor Autoreset Parameter on Baseline Update

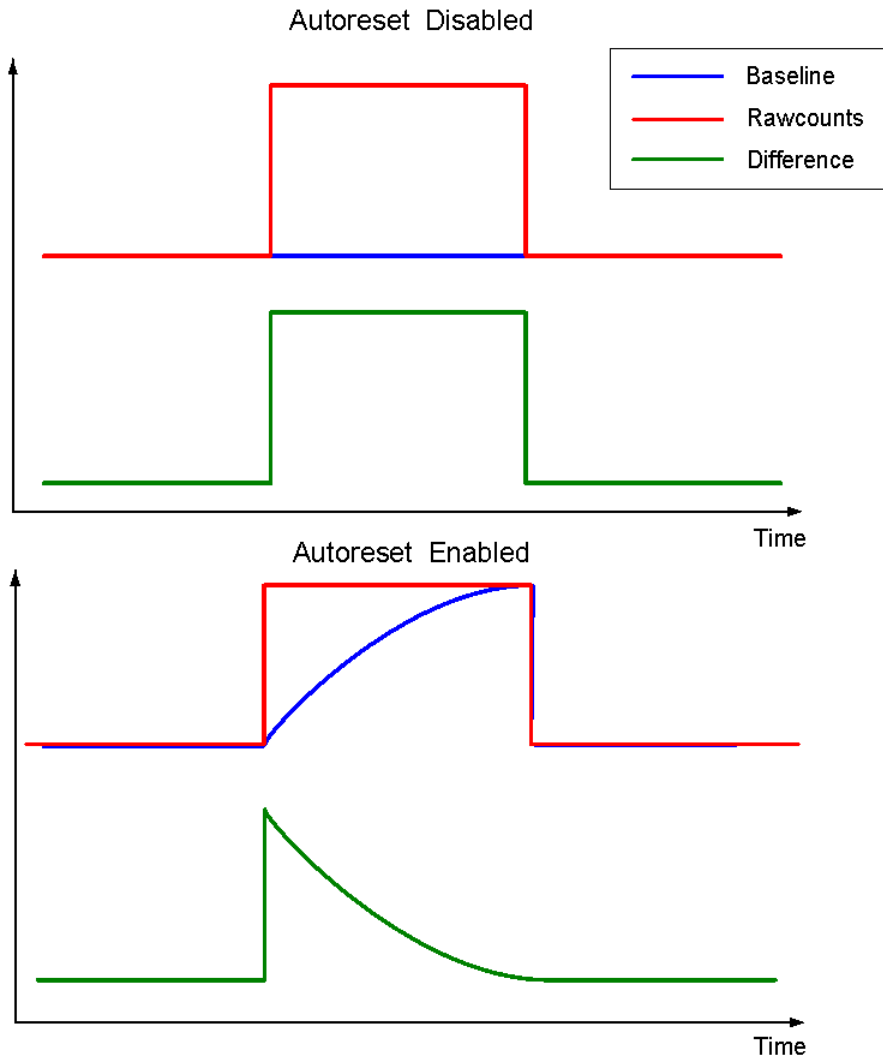

Debounce

This parameter adds a debounce counter to the sensor active transition. For a sensor to transition from inactive to active, the difference count value must stay above finger threshold plus hysteresis for the number of samples specified by this parameter. The debounce counter is incremented by the `blsSensorActive` or `blsAnySensorActive` API functions.

Possible values are 1 to 255. A setting of '1' has no debounce, but gives the fastest response. The default setting is 3.

Background Scanning

This parameter enables and disables background scan. The default setting is 'Disable'. If it is set to Enable, then background scanning is implemented.

PGA Gain/PGA Gain left/PGA gain right

This parameter is available in the Second Order Modulator configurations. It sets the PGA gain for the CapSense ADC. The two PGAs in the dual-channel configuration can be set independently. Gain ranges are 1 to 48.00, using PSoC Designer or the SmartSense2X_SetPGAGain routine provided in the API. Gain settings less than 1 are not supported. The default value is 4.00.

FMEA_Shorts_Test

This parameter enables/disables the FMEA GND, VDD, and Sensor short tests. The default setting is Disabled.

FMEA_Cmod_Test

This feature enables the test for Cmod and Rb calculation. The default setting is Disabled.

Application Programming Interface

The Application Programming Interface (API) functions are provided as part of the user module to enable you to deal with the module at a higher level. This section specifies the interface to each function together with related constants provided by the include files.

Each time a user module is placed, it is assigned an instance name. By default, PSoC Designer assigns the SmartSense_1 to the first instance of this user module in a particular project. It can be changed to any unique value that follows the syntactic rules for identifiers. The assigned instance name becomes the prefix of every global function name, variable, and constant symbol. In the following descriptions the instance name has been shortened to SmartSense for simplicity.

Note ** In this, as in all user module APIs, the values of the A and X register may be altered by calling an API function. It is the responsibility of the calling function to preserve the values of A and X before the call if those values are required after the call. This "registers are volatile" policy was selected for efficiency reasons and has been in force since version 1.0 of PSoC Designer. The C compiler automatically takes care of this requirement. Assembly language programmers must also ensure their code observes the policy. Though some user module API functions may leave A and X unchanged, there is no guarantee they may do so in the future.

For Large Memory Model devices, it is also the caller's responsibility to preserve any value in the CUR_PP, IDX_PP, MVR_PP, and MVW_PP registers. Even though some of these registers may not be modified now, there is no guarantee that will remain the case in future releases.

Entry Points are supplied to initialize the SmartSense, start it sampling, and stop the SmartSense. In all cases, the instance name of the module replaces the SmartSense prefix shown in the following entry points. Failure to use the correct instance name is a common cause of syntax errors.

API functions use different global arrays. Do not alter these arrays manually. However, you can inspect these values for debugging purposes. For example, you can use a charting tool to display the contents of the arrays. Here are some of the global arrays:

- SmartSense2X_waSnsBaseline[]
- SmartSense2X_waSnsResult[]
- SmartSense2X_waSnsDiff[]
- SmartSense2X_baSnsOnMask[]
- SmartSense2X_baDAC[]
- SmartSense2X_baCompensationDAC[]
- SmartSense2X_baDACCodeBaseline[]
- SmartSense2X_bScanComplete

- SmartSense2X_baSensorShortGnd[]
- SmartSense2X_baSensorShortVdd[]
- SmartSense2X_wCmod_L_Val and SmartSense2X_wCmod_R_Val
- SmartSense2X_baSnsShortChk[]
- Port_X_Data_SHADE

SmartSense2X_waSnsBaseline[] – This is an integer array that contains the baseline data of each sensor. The array size is equal to the sensor count. The SmartSense_waSnsBaseline[] array is updated by these functions:

- SmartSense2X_UpdateAllBaselines()
- SmartSense2X_UpdateSensorBaseline()
- SmartSense2X_InitializeBaselines()

SmartSense2X_waSnsResult[] – This is an integer array that contains the raw data of each sensor. The array size is equal to the sensor count. The SmartSense2X_waSnsResult[] data is updated by these functions:

- SmartSense2X_ScanSensor()
- SmartSense2X_ScanAllSensors().

SmartSense_waSnsDiff [] – This is an integer array that contains the difference between the raw data and the baseline data of each sensor. The array size is equal to the sensor count.

SmartSense_baSnsOnMask[] – This is a byte array that holds the sensor on or off state (for buttons or sliders). SmartSense_baSnsOnMask[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense_baSnsOnMask[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors. The value of a bit is 1 if the button is on and 0 if the button is off. The SmartSense2X_baSnsOnMask[] data is updated by these functions:

- SmartSense2X_blsSensorActive()
- SmartSense2X_blsAnySensorActive()

SmartSense2X_baDAC [] – This is a BYTE array that contains the IDAC Register value for each sensor. The values from this array are copied to the SmartSense2X_bldacValue variable before scan.

SmartSense2X_baCompensationDAC [] – This is a BYTE array that contains the Compensation IDAC Register value for each sensor. The values from this array are copied to the SmartSense2X_bCompensationIdacValue variable before scan.

SmartSense2X_baDACCodeBaseline [] – This table contains calibrated current values for each sensor, which can be changed in runtime. This can be useful in complex projects.

For double-channel configuration:

```
SmartSense2X_baDACCodeBaselineL:
_SmartSense2X_baDACCodeBaselineL:
BLK SmartSense2X_TotalLeftSensorCount
SmartSense2X_baDACCodeBaselineR:
_SmartSense2X_baDACCodeBaselineR:
BLK SmartSense2X_TotalRightSensorCount
```

For single-channel configuration:

```
SmartSense2X_baDACCodeBaselineL:
_SmartSense2X_baDACCodeBaselineL:
BLK SmartSense2X_TotalSensorCount
```

```
SmartSense2X_baDACCodeBaselineR:
_SmartSense2X_baDACCodeBaselineR:
BLK SmartSense2X_TotalSensorCount
```

SmartSense2X_bScanComplete [] – This variable is valid only when the background scanning feature is enabled. This variable should get set whenever sensor scanning is completed. The SmartSense2X_bScanComplete variable is updated in the SmartSense2X interrupt.

SmartSense2X_bScanComplete contains various flags that define the scanning state. The SmartSense2X_SCAN_COMPLETE flag says that all background scanning scans are complete. The SmartSense2X_SCAN_1COMPLETE flag says that one sensor is scanned after the ScanAllSensors API call. The SmartSense2X_SCAN_ALLSENSORS flag says that not all sensors are scanned yet after the ScanAllSensors API call.

SmartSense2X_baSensorShortGnd[] – This BYTE array is valid only when the FMEA feature is enabled. SmartSense2X_baSensorShortGND[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense2X_baSensorShortGND[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors. The SmartSense2X_baSensorShortGnd[] data is updated by the SmartSense2X_bFMEA_CheckGndShort() function.

SmartSense2X_baSensorShortVdd[] – This BYTE array is valid only when the FMEA feature is enabled. SmartSense2X_baSensorShortVdd[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense2X_baSensorShortVdd[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors. The SmartSense2X_baSensorShortGnd[] data is updated by SmartSense2X_bFMEA_CheckVddShort() function.

SmartSense2X_wCmod_L_Val and SmartSense2X_wCmod_R_Val – These are WORD variables that are valid only when the FMEA feature is enabled and the IDAC method is selected. These variables contain the value of Cmod calculated during the SmartSense2X_bFMEA_Left_Cmod_Check() and SmartSense2X_bFMEA_Right_Cmod_Check() functions. The Cmod value is in nF scaled to 100. For example, SmartSense2X_wCmod_Val = 2200 corresponds 22 nF (or 0.022 uF).

SmartSense2X_baSnsShortChk[] – This variable is valid only when FMEA feature is enabled. The variable has a '1' in a bit position if the sensor corresponding to that bit location is short to GND/VDD/Another Sensor, '0' otherwise. Also the variable will have '1' in all bit locations if CMOD is found to be in error. SmartSense2X_baSnsShortChk[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense2X_baSnsShortChk[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors. Since this variable contains mask for all shorts OR'ed, this variable shall be updated in all short/FMEA check APIs which includes - bFMEA_CheckSensorShort, bFMEA_CheckVddShort, bFMEA_CheckGndShort, bFMEA_Cmod_Check, bFMEA_Left_Cmod_Check, bFMEA_Right_Cmod_Check.

SmartSense2X_Start

Description:

Initializes registers and starts the user module. This function must be called before calling any other user module functions.

C Prototype:

```
void SmartSense2X_Start()
```

Assembly:

```
lcall SmartSense2X_Start
```

Parameters:

None

Return Value:

None

Side Effects:

**

SmartSense2X_Stop**Description:**

Restores the SmartSense2X block to its idle default configuration, releases the AMUX bus for other purposes, disables internal interrupts, and calls SmartSense2X_ClearSensors() to reset all sensors to their inactive state.

C Prototype:

```
void SmartSense2X_Stop()
```

Assembly:

```
lcall SmartSense2X_Stop
```

Parameters:

None

Return Value:

None

Side Effects:

**

SmartSense2X_Resume**Description:**

Resumes the user module operation after SmartSense2X_Stop call.

C Prototype:

```
void SmartSense2X_Resume()
```

Assembly:

```
lcall SmartSense2X_Resume
```

Parameters:

None

Return Value:

None

Side Effects:

**

SmartSense2X_SetDebounce

Description:

The function is used to set the SmartSense2X_baSnsDebounce variable used for debouncing the sensor difference count.

C Prototype:

```
void SmartSense2X_SetDebounce(BYTE bSensor, BYTE bDebounce)
```

Assembly:

```
mov A, bSensor
mov A, bDebounce
lcall SmartSense2X_SetDebounce
```

Parameters:

A => Sensor Number

X => Debounce value to be used for the selected sensor

Return Value:

None

Side Effects:

None

SmartSense2X_ScanSensor

Description:

Scans the selected sensors. Each sensor has a unique number within the sensor array. For single-channel configurations, this number is assigned by the CSD2X wizard in sequence. Sw0 is sensor 0, Sw1 is sensor 1, and so on.

For two-channel configurations, the sensor number is a value from 0 to Maximum Channel Sensor Number. For example, if there are two sensors on the left channel, their values are 0 and 1, respectively. If there are two sensors on the right channel too, their values are also 0 and 1, respectively. If a value of 0xFF is passed into this function as a sensor number, no sensor is scanned for that channel.

C Prototype:

In Single Channel Configuration:

```
void SmartSense2X_ScanSensor(BYTE bSensor);
```

In Double Channel Configuration:

```
void SmartSense2X_ScanSensor(BYTE bSensorLeft, BYTE bSensorRight);
```

Assembly:

In Single Channel Configuration:

```
mov A, bSensor
lcall SmartSense2X_ScanSensor
```

In Double Channel Configuration:

```
mov A, bSensorLeft
mov X, bSensorRight
lcall SmartSense2X_ScanSensor
```


Parameters:

In Single Channel Configuration:

A => Sensor Number

In Double Channel Configuration:

A => Sensor Number Left

X => Sensor Number Right

Return Value:

None

Side Effects

**

SmartSense2X_ScanAllSensors**Description:**

Scans all of the configured sensors by calling SmartSense2X_ScanSensor() for each sensor.

C Prototype:

```
void SmartSense2X_ScanAllSensors()
```

Assembly:

```
lcall SmartSense2X_ScanAllSensors
```

Parameter:

None

Return Value:

None

Side Effects:

**

SmartSense2X_UpdateAllBaselines**Description:**

Uses the SmartSense2X_bUpdateSensorBaseline() function to update the baselines for all sensors.

C Prototype:

```
void SmartSense2X_UpdateAllBaselines()
```

Assembly:

```
lcall SmartSense2X_UpdateAllBaselines
```

Parameter:

None

Return Value:

None

Side Effects:

**

SmartSense2X_bIsSensorActive**Description:**

Checks the difference count array for the given sensor compared to its finger threshold. Hysteresis is taken into account. The Hysteresis value is added or subtracted from the finger threshold based on whether the sensor is currently on. If it is active, the threshold is lowered. If it is inactive, the threshold is raised. This function also updates the sensor's bit in the SmartSense2X_baSnsOnMask[] array.

C Prototype:

```
BYTE SmartSense2X_bIsSensorActive (BYTE bSensorNum)
```

Assembly:

```
mov A, bSensorNum  
lcall SmartSense2X_bIsSensorActive
```

Parameters:

bSensor A => Sensor Number

Return Value:

Returns value of 1 if active, 0 if not active

A => 1 – Selected sensor is active, 0 – Selected sensor is not active.

Side Effects:

**

SmartSense2X_bIsAnySensorActive**Description:**

Checks the difference count array for all sensors compared to their finger threshold. Calls SmartSense2X_bIsSensorActive() for each sensor so that the SmartSense2X_baSnsOnMask[] array is up to date after calling this function.

C Prototype:

```
BYTE SmartSense2X_bIsAnySensorActive ()
```

Assembly:

```
lcall SmartSense2X_bIsAnySensorActive
```

Parameters:

None

Return Value:

Returns value of 1 if active, 0 if not active

A => 1 – One or more sensors are active, 0 – No sensors are active.

Side Effects:

**

SmartSense2X_wGetCentroidPos

Description:

Checks a linear slider array for a centroid. If there is a centroid, the offset and length are stored in temporary variables and the centroid position is calculated to the resolution specified in the SmartSense2X Wizard. This function is available only if slider is defined by the SmartSense2X Wizard.

C Prototype:

```
WORD SmartSense2X_wGetCentroidPos (BYTE bSnsGroup)
```

Assembly:

```
mov A, bSnsGroup  
lcall SmartSense2X_wGetCentroidPos
```

Parameters:

bSnsGroup A => Group Number

This parameter is the Group Number of the slider. Group 0 is always the independent buttons. Sliders are contained in group 1 and higher.

Return Value:

Position value of the slider, LSB in A and MSB in X.

Side Effects:

This routine modifies the difference counts by subtracting the noise threshold value and should only be called once after each scan to avoid getting negative difference values. If your application monitors difference count signals, call this routine after difference count data transmission.

If any slider sensor is active, the function returns values from zero to the Resolution value set in the Wizard. If no sensors are active, the function returns -1 (FFFFh). If an error occurs during execution of the centroid/diplexing algorithm, the function returns -1 (FFFFh). You can use the SmartSense2X_bIsSensorActive() routine to determine which slider segments are touched.

SmartSense2X_wGetRadialPos

Description:

Checks a radial slider array for a centroid. If there is a centroid, the centroid position is calculated to the resolution specified in the SmartSense2X Wizard.

C Prototype:

```
WORD SmartSense2X_wGetRadialPos (BYTE bSnsGroup)
```

Assembly:

```
mov A, bSnsGroup  
lcall SmartSense2X_wGetRadialPos
```

Parameters:

bSnsGroup A => Group Number

This parameter is the Group Number of radial slide. You can get its number through the SmartSense2X Wizard on the left side of radial slider representation (for example, "s2" means the radial slider Group Number is 2).

Return Value:

Position value of the radial slider, LSB in A and MSB in X.

Side Effects:

This routine modifies the difference counts by subtracting the noise threshold value and should only be called once after each scan to avoid getting negative difference values and baseline update. If your application monitors difference count signals, call this routine after difference count data transmission.

If any slider sensor is active, the function returns values from zero to the Resolution value set in the Wizard. If no sensors are active, the function returns -1 (FFFFh). If an error occurs during execution of the centroid algorithm, the function returns -1 (FFFFh). You can use the SmartSense2X_blsSensorActive() routine to determine which slider segments are touched.

SmartSense2X_wGetRadialInc**Description:**

Returns actual finger shift, the difference between current and previous finger positions. This function works in conjunction with SmartSense2X_wGetRadialPos().

C Prototype:

```
WORD SmartSense2X_wGetRadialInc (BYTE bSnsGroup)
```

Assembly:

```
mov A, bSnsGroup  
lcall SmartSense2X_wGetRadialInc
```

Parameters:

bSnsGroup A => Group Number

This parameter is the Group Number of radial slide. You can get its number through the SmartSense2X Wizard on the left side of radial slider representation (for example, "s2" means the radial slider Group Number is 2).

Return Value:

Finger shift value is positive, if clockwise, and negative, if anti-clockwise, LSB in A and MSB in X.
Finger shift value is the difference between current and previous finger positions.

Side Effects:

The routine must be called only after calling SmartSense2X_wGetRadialPos(), because it uses internal data stored in global variables by the latter.

SmartSense2X_InitializeSensorBaseline**Description:**

Loads the SmartSense2X_waSnsBaseline[bSensor] array element with an initial value by scanning the selected sensor. The raw count value is copied into the baseline array element for the selected sensor. This function can be used to reset the baseline of an individual sensor.

C Prototype:

```
void SmartSense2X_InitializeSensorBaseline (BYTE bSensorNum)
```

Assembly:

```
mov A, bSensorNum
```

```
lcall SmartSense2X_InitializeSensorBaseline
```

Parameters:

A => Sensor Number

Return Value:

None

Side Effects:

**

SmartSense2X_InitializeBaselines

Description:

Loads the SmartSense2X_waSnsBaseline[] array with initial values by scanning each sensor. The raw count values are copied in to baseline array for each sensor.

C Prototype:

```
void SmartSense2X_InitializeBaselines()
```

Assembly:

```
lcall SmartSense2X_InitializeBaselines
```

Parameters:

None

Return Value:

None

Side Effects:

**

SmartSense2X_ClearSensors

Description:

Clears all sensors to the non-sampling state by sequentially calling SmartSense2X_wGetPortPin() and SmartSense2X_DisableSensor() for each of the sensors.

C Prototype:

```
void SmartSense2X_ClearSensors()
```

Assembly:

```
lcall SmartSense2X_ClearSensors
```

Parameters:

None

Return Value:

None

Side Effects:

**

SmartSense2X_wReadSensor

Description:

Returns the key Raw scan value in A (LSB) and X (MSB).

C Prototype:

```
WORD SmartSense2X_wReadSensor (BYTE bSensor)
```

Assembly:

```
mov A, bSensor  
lcall SmartSense2X_wReadSensor
```

Parameters:

A => Sensor Number

Return Value:

None

Side Effects:

**

SmartSense2X_wGetPortPin - Single Channel

Description:

Returns the port number and pin mask for a given sensor. The passed parameter indexes and selects the data from the SmartSense2X_Sensor_Table[]. The return value can be passed to the SmartSense2X_EnableSensor(), SmartSense2X_DisableSensor().

C Prototype:

```
WORD SmartSense2X_wGetPortPin (BYTE bSensor)
```

Assembly:

```
mov A, bSensor  
lcall SmartSense2X_wGetPortPin
```

Parameters:

bSensor – the range is from 0 to (n – 1), where n is the total number of sensors set in the SmartSense2X Wizard plus the number of sensors included in sliders. The sensor number is used by SmartSense2X_wGetPortPin() to determine port and bit mask for the selected active sensor.

Return Value:

A => Sensor Bitmask

X => Port Number

Side Effects:

**

SmartSense2X_wGetPortPinLeft - Dual Channel

Description:

Returns the port number and pin mask for a given sensor. The passed parameter indexes and selects the data from the SmartSense2X_Sensor_Table_Left[]. The return value can be passed to the

SmartSense2X_EnableSensor(), SmartSense2X_DisableSensor(). This function is available in the dual channel configurations only.

C Prototype:

```
WORD SmartSense2X_wGetPortPinLeft (BYTE bSensor)
```

Assembly:

```
mov A, bSensor  
lcall SmartSense2X_wGetPortPinLeft
```

Parameters:

bSensor – Sensor Number, the range is 0 to (n – 1) where 'n' is the total of the number of sensors set in the SmartSense2X Wizard for left channel (which includes number of slider segments connected to left channel). The sensor number is used by SmartSense2X_wGetPortPinLeft() to determine the port and bit mask for the selected active sensor.

Return Value:

A => Sensor BitmapX => Port Number

Side Effects:

**

SmartSense2X_wGetPortPinRight - Dual Channel**Description:**

Returns the port number and pin mask for a given sensor that is connected to right channel. The passed parameter indexes and selects the data from the SmartSense2X_Sensor_Table_Right[]. The return value can be passed to the SmartSense2X_EnableSensor(), SmartSense2X_DisableSensor(). This function is available in the dual channel configurations only.

C Prototype:

```
WORD SmartSense2X_wGetPortPinRight (BYTE bSensor)
```

Assembly:

```
mov A, bSensor  
lcall SmartSense2X_wGetPortPinRight
```

Parameters:

bSensor – Sensor Number, the range is 0 to (n – 1) where 'n' is the total of the number of sensors set in the SmartSense2X Wizard for right channel (which includes number of slider segments connected to right channel). The sensor number is used by SmartSense2X_wGetPortPinRight() to determine port and bit mask for the selected active sensor.

Return Value:

A => Sensor BitmapX => Port Number

Side Effects:

**

SmartSense2X_EnableSensor

Description:

Configures the selected sensor to measure during the next measurement cycle. The port and sensor can be selected using the SmartSense2X_wGetPortPin() function, with the port number and sensor bitmask loaded into X and A, respectively. Drive modes are modified to place the selected port and pin into Analog High Z mode and to enable the correct Analog Mux Bus input.

C Prototype:

```
void SmartSense2X_EnableSensor(BYTE bMask, BYTE bPort)
```

Assembly:

```
mov    X, bPort
mov    A, bMask
lcall  SmartSense2X_EnableSensor
```

Parameters:

A => Sensor Bitmask
X => Port Number
bMask - Bitmask for given sensor
bPort - Port Number for given key

Return Value:

None

Side Effects:

**

SmartSense2X_DisableSensor

Description:

Disables the sensor selected by the SmartSense2X_wGetPortPin() function. The drive mode is changed to Strong (001). This effectively grounds the sensor. The connection from the port pin to the AnalogMuxBus is turned off. The function parameters are returned by SmartSense2X_wGetPortPin() function.

C Prototype:

```
void SmartSense2X_DisableSensor(BYTE bMask, BYTE bPort)
```

Assembly:

```
mov    X, bPort
mov    A, bMask
lcall  SmartSense2X_DisableSensor
```

Parameters:

A => Sensor Bitmask
X => Port Number
bMask - Bitmask for given sensor
bPort - Port Number for given key

Return Value:

None

Side Effects:

**

The following APIs apply only to dual-channel configurations.

SmartSense2X_UpdateSensorBaseline
Description:

The historical count value, calculated independently for each sensor, is called the sensor's baseline. This baseline is updated using the "Bucket Method", which uses the following algorithm:

1. Each time the SmartSense2X_UpdateSensorBaseline() is called, a difference count is calculated by subtracting the previous baseline from the raw count value. This difference is stored in the SmartSense2X_waSnsDiff[] array.
2. If Sensors Autoreset is disabled, each time SmartSense2X_UpdateSensorBaseline() is called, the difference count is compared to the noise threshold. If the difference is below the noise threshold, it is accumulated into a virtual bucket. If the difference is above the noise threshold, the bucket is not updated. If Sensors Autoreset is enabled, the difference is accumulated into a virtual bucket regardless of the noise threshold parameter.
3. After the accumulated difference counts in the virtual bucket reach the BaselineUpdateThreshold, the baseline is incremented by one and the bucket is reset to 0.
4. If the difference count is below the noise threshold, the value held in the waSnsDiff[] array is reset to 0. As a result, this array does not contain elements with values greater than 0, but below the Noise-ThresholdCd.

C Prototype:

```
void SmartSense2X_UpdateSensorBaseline (BYTE bSensorNum);
```

Assembly:

```
mov     A,    bSensorNum
lcall   SmartSense2X_UpdateSensorBaseline
```

Parameters:

A => Sensor Number

Return Value:

None

Side Effects:

None

BOOL SmartSense2X_bIsScanComplete
Description:

Checks the Scan Complete flag in the bScanComplete variable and returns TRUE or FALSE. This API should also reset this flag after the call. This API is available if the BG Scan property is set to Enable.

C Prototype:

```
BOOL SmartSense2X_bIsScanComplete()
```

Assembly:

```
lcall SmartSense2X_bIsScanComplete
```

Parameters:

None

Return Value:

Returns value of 1 if active, 0 if not active

A => 1 - scan is complete, 0 - scan is incomplete

Side Effects:

**

SmartSense2X_SetPGAGain
Description:

Sets the gain for the PGA block, overwriting value set in the Device Editor. This API is available in the Single Channel Second Order Modulator configuration.

C Prototype:

```
void SmartSense2X_SetPGAGain(BYTE bGain);
```

Assembly:

```
mov A, bGain
lcall SmartSense2X_SetPGAGain
```

Parameters:

bGain: Symbolic names provided in C and assembly include files, and their associated values, are given in the following table. PGA gain can be set from 1 to 48; settings below 1 are not supported. This function is common for the ADC and CSD modes. In the first case, it sets an ADC preamplifier gain and in the second it sets a modulator gain.

Symbolic Name	Value
SmartSense2X_PGA_G48_0	0x0C
SmartSense2X_PGA_G24_0	0x1C
SmartSense2X_PGA_G16_0	0x08
SmartSense2X_PGA_G8_00	0x18
SmartSense2X_PGA_G5_33	0x28
SmartSense2X_PGA_G4_00	0x38
SmartSense2X_PGA_G3_20	0x48
SmartSense2X_PGA_G2_67	0x58
SmartSense2X_PGA_G2_27	0x68

Symbolic Name	Value
SmartSense2X_PGA_G2_00	0x78
SmartSense2X_PGA_G1_78	0x88
SmartSense2X_PGA_G1_60	0x98
SmartSense2X_PGA_G1_46	0xA8
SmartSense2X_PGA_G1_33	0xB8
SmartSense2X_PGA_G1_23	0xC8
SmartSense2X_PGA_G1_14	0xD8
SmartSense2X_PGA_G1_06	0xE8
SmartSense2X_PGA_G1_00	0xF8

Return Value:

None

Side Effects:

None

SmartSense2X_SetPGAGainLeft
Description:

Sets the gain for the left PGA block, overwriting value set in the Device Editor. This API is available in the Dual Channel Second Order Modulator configuration.

C Prototype:

```
void SmartSense2X_SetPGAGainLeft (BYTE bGain);
```

Assembly:

```
mov    A, bGain
lcall  SmartSense2X_SetPGAGainLeft
```

Parameters:

bGain: Symbolic names provided in C and assembly include files, and their associated values, are given in the following table. PGA gain can be set from 1 to 48, settings below 1 are not supported. This function is common for ADC and CSD modes. In the first case it sets a ADC preamplifier gain, in the second it sets a modulator gain.

Symbolic Name	Value
SmartSense2X_PGA_G48_0	0x0C
SmartSense2X_PGA_G24_0	0x1C
SmartSense2X_PGA_G16_0	0x08
SmartSense2X_PGA_G8_00	0x18
SmartSense2X_PGA_G5_33	0x28

Symbolic Name	Value
SmartSense2X_PGA_G4_00	0x38
SmartSense2X_PGA_G3_20	0x48
SmartSense2X_PGA_G2_67	0x58
SmartSense2X_PGA_G2_27	0x68
SmartSense2X_PGA_G2_00	0x78
SmartSense2X_PGA_G1_78	0x88
SmartSense2X_PGA_G1_60	0x98
SmartSense2X_PGA_G1_46	0xA8
SmartSense2X_PGA_G1_33	0xB8
SmartSense2X_PGA_G1_23	0xC8
SmartSense2X_PGA_G1_14	0xD8
SmartSense2X_PGA_G1_06	0xE8
SmartSense2X_PGA_G1_00	0xF8

Return Value:

None

Side Effects:

None

SmartSense2X_SetPGAGainRight

Description:

Sets the gain for the right PGA block, overwriting value set in the Device Editor. This API is available in the Dual Channel Second Order Modulator configuration.

C Prototype:

```
void SmartSense2X_SetPGAGainRight (BYTE bGain);
```

Assembly:

```
mov    A, bGain
lcall  SmartSense2X_SetPGAGainRight
```

Parameters:

bGain: Symbolic names provided in C and assembly include files, and their associated values, are given in the following table. PGA gain can be set from 1 to 48, settings below 1 are not supported. This function is common for ADC and CSD modes. In the first case it sets a ADC preamplifier gain, in the second it sets a modulator gain.

Symbolic Name	Value
SmartSense2X_PGA_G48_0	0x0C
SmartSense2X_PGA_G24_0	0x1C
SmartSense2X_PGA_G16_0	0x08
SmartSense2X_PGA_G8_00	0x18
SmartSense2X_PGA_G5_33	0x28
SmartSense2X_PGA_G4_00	0x38
SmartSense2X_PGA_G3_20	0x48
SmartSense2X_PGA_G2_67	0x58
SmartSense2X_PGA_G2_27	0x68
SmartSense2X_PGA_G2_00	0x78
SmartSense2X_PGA_G1_78	0x88
SmartSense2X_PGA_G1_60	0x98
SmartSense2X_PGA_G1_46	0xA8
SmartSense2X_PGA_G1_33	0xB8
SmartSense2X_PGA_G1_23	0xC8
SmartSense2X_PGA_G1_14	0xD8
SmartSense2X_PGA_G1_06	0xE8
SmartSense2X_PGA_G1_00	0xF8

Return Value:

None

Side Effects:

None

SmartSense2X_bFMEA_CheckGndShort(void)

Description

This API checks if any of the sensors is shorted to ground. The SmartSense2X_bFMEA_CheckVddShort() function updates the SmartSense2X_baSensorShortGnd[] array, which is valid only when the FMEA feature is enabled. SmartSense2X_baSensorShortGnd[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense2X_baSensorShortGnd[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors.

An additional array, SmartSense2X_baSnsShortChk[], has the same structure as the SmartSense2X_baSensorShortGnd[]. This SmartSense2X_baSnsShortChk[] is updated by all

bFMEA_CheckSensorShort, bFMEA_CheckVddShort, bFMEA_CheckGndShort, bFMEA_Cmod_Check (or, bFMEA_Left_Cmod_Check, bFMEA_Right_Cmod_Check) APIs.

Constant (Single Configuration)	Value	Comments
SmartSense2X_SHIELD_NO_SHORT	0x00	Shield Electrode is not shorted to GND
SmartSense2X_SHIELD_GND_SHORT	0x02	Shield Electrode is shorted to GND

Constant (Single Configuration)	Value	Comments
SmartSense2X_LEFT_SHIELD_NO_SHORT	0x00	Left Shield Electrode is not shorted to GND
SmartSense2X_LEFT_SHIELD_GND_SHORT	0x02	Left Shield Electrode is shorted to GND
SmartSense2X_RIGHT_SHIELD_NO_SHORT	0x00	Right Shield Electrode is not shorted to GND
SmartSense2X_RIGHT_SHIELD_GND_SHORT	0x20	Right Shield Electrode is shorted to GND

C Prototype

```
BYTE SmartSense2X_bFMEA_CheckGndShort(void);
```

Assembly

```
lcall SmartSense2X_bFMEA_CheckGndShort
```

Parameters

None

Return Value

Returns value of 1 if any sensor is shorted to GND

Returns a value of 0 if none of the sensors is shorted to GND.

Side Effects

**

SmartSense2X_bFMEA_CheckVddShort(void)

Description

This API checks if any of the sensors is shorted to Vdd.

The SmartSense2X_bFMEA_CheckVddShort() function updates the SmartSense2X_baSensorShortVdd[] array, which is valid only when the FMEA feature is enabled. SmartSense2X_baSensorShortVdd[0] contains the masked bits for sensors 0 through 7 (sensor 0 is bit 0, sensor 1 is bit 1). SmartSense2X_baSensorShortVdd[1] contains the masked bits for sensors 8 through 15 (if they are needed), and so on. This byte array contains as many elements as are necessary to contain all the placed sensors. An additional array, SmartSense2X_baSnsShortChk[], has the same structure as the SmartSense2X_baSensorShortGnd[]. This SmartSense2X_baSnsShortChk[]

is updated by all bFMEA_CheckSensorShort, bFMEA_CheckVddShort, bFMEA_CheckGndShort, and bFMEA_Cmod_Check (or bFMEA_Left_Cmod_Check, bFMEA_Right_Cmod_Check) APIs.

Constant (Single Configuration)	Value	Comments
SmartSense2X_SHIELD_NO_SHORT	0x00	Shield Electrode is not shorted to VDD
SmartSense2X_SHIELD_VDD_SHORT	0x01	Shield Electrode is shorted to VDD

Constant (Single Configuration)	Value	Comments
SmartSense2X_LEFT_SHIELD_NO_SHORT	0x00	Left Shield Electrode is not shorted to VDD
SmartSense2X_LEFT_SHIELD_VDD_SHORT	0x01	Left Shield Electrode is shorted to VDD
SmartSense2X_RIGHT_SHIELD_NO_SHORT	0x00	Right Shield Electrode is not shorted to VDD
SmartSense2X_RIGHT_SHIELD_VDD_SHORT	0x10	Right Shield Electrode is shorted to VDD

C Prototype

```
BYTE SmartSense2X_bFMEA_CheckVddShort(void)
```

Assembly

```
lcall SmartSense2X_bFMEA_CheckVddShort
```

Parameters

None

Return Value

Returns a value of 1 if any sensor is shorted to VDD and a value of 0 if none of the sensors is shorted to VDD.

SmartSense2X_bFMEA_CheckSensorShort(void)

Description

This API checks if any of the sensors is shorted to another sensor. An additional array, SmartSense2X_baSnsShortChk[], has the same structure as the SmartSense2X_baSensorShortGnd[]. This SmartSense2X_baSnsShortChk[] is updated by all bFMEA_CheckSensorShort, bFMEA_CheckVddShort, bFMEA_CheckGndShort, and bFMEA_Cmod_Check (or, bFMEA_Left_Cmod_Check, bFMEA_Right_Cmod_Check) APIs. The optional SmartSense2X_baShieldShort variable contains the Shield Electrode status.

Constant (Single Configuration)	Value	Comments
SmartSense2X_SHIELD_NO_SHORT	0x00	Shield Electrode is not shorted to any sensor
SmartSense2X_SHIELD_SENS_SHORT	0x04	Shield Electrode is shorted to a sensor

Constant (Single Configuration)	Value	Comments
SmartSense2X_LEFT_SHIELD_NO_SHORT	0x00	Left Shield Electrode is not shorted to any sensor
SmartSense2X_LEFT_SHIELD_SENS_SHORT	0x04	Left Shield Electrode is shorted to a sensor
SmartSense2X_RIGHT_SHIELD_NO_SHORT	0x00	Right Shield Electrode is not shorted to any sensor
SmartSense2X_RIGHT_SHIELD_SENS_SHORT	0x40	Right Shield Electrode is shorted to a sensor
SmartSense2X_SHIELD_SHIELD_SHORT	0x80	Right Shield Electrode is shorted to Left Shield Electrode

C Prototype

```
BYTE SmartSense2X_bFMEA_CheckSensorShort(void)
```

Assembly

```
lcall SmartSense2X_bFMEA_CheckSensorShort
```

Parameters

None

Return Value

Returns a value of 1 if any sensor is shorted to another sensor and a value of 0 if no sensor is shorted to another sensor.

Side Effects

This API does not check the sensor to sensor short correctly if one of sensors is shorted to Vdd. The SmartSense2X_bFMEA_CheckVddShort() and SmartSense2X_bFMEA_CheckGndShort() APIs should be used to check Gnd or Vdd short.

SmartSense2X_bFMEA_Cmod_Check(void) - Single Channel

SmartSense2X_bFMEA_Left_Cmod_Check(void) - Dual Channel

SmartSense2X_bFMEA_Right_Cmod_Check(void) - Dual Channel

Description

This API is available only if the IDAC method is selected and if the FMEA feature is enabled. This checks Cmod for short test and also whether it is within the valid range or not. The valid range is

defined by the recommended minimum and maximum Cmod values, with an error of 20%. The minimum Cmod value is 3.7 nF and the maximum Cmod value is 56.4 nF. The SmartSense2X_bFMEA_Cmod_Check() function updates SmartSense2X_wCmod_Val (SmartSense2X_wCmod_L_Val and SmartSense2X_wCmod_R_Val for Dual Channel Configurations) WORD variable. This variable contains the value of Cmod in nF scaled to 100. This value is valid only if the SmartSense2X_bFMEA_Cmod_Check() API returns bRetVal.4. An additional array, SmartSense2X_baSnsShortChk[], has the same structure as the SmartSense2X_baSensorShortGnd[]. This SmartSense2X_baSnsShortChk[] is updated by all bFMEA_CheckSensorShort, bFMEA_CheckVddShort, bFMEA_CheckGndShort, and bFMEA_Cmod_Check (or, bFMEA_Left_Cmod_Check, bFMEA_Right_Cmod_Check) APIs.

C Prototype

Single Channel:

```
BYTE SmartSense2X_bFMEA_Cmod_Check(void);
```

Dual Channel:

```
BYTE SmartSense2X_bFMEA_Left_Cmod_Check(void);
BYTE SmartSense2X_bFMEA_Right_Cmod_Check(void);
```

Assembly

```
lcall SmartSense2X_bFMEA_Cmod_Check
```

Parameters

None

Return Value

bRetVal.0: Cmod shorted to GND

bRetVal.1: Cmod shorted to VDD

bRetVal.4: Cmod within +20%

bRetVal.8: Cmod is low (under the valid range) or Cmod is disconnected.

bRetVal.16: Cmod is high (over the valid range)

Single channel:

Constants	Value	Description
SMARTSENSE2X_CM0D_SHORTED_TO_GND	0	Cmod shorted to GND
SMARTSENSE2X_CM0D_SHORTED_TO_VDD	1	Cmod shorted to Vdd
SMARTSENSE2X_CM0D_WITHIN_20	4	Cmod within $\pm 20\%$
SMARTSENSE2X_CM0D_IS_LOW	8	Cmod is out of range
SMARTSENSE2X_CM0D_IS_HIGH	16	Cmod is out of range

Dual channel:

Constants	Value	Description
SMARTSENSE2X_LEFT_CM0D_SHORTED_TO_GND	0	Left Cmod shorted to GND
SMARTSENSE2X_LEFT_CM0D_SHORTED_TO_VDD	1	Left Cmod shorted to Vdd
SMARTSENSE2X_LEFT_CM0D_WITHIN_20	4	Left Cmod within $\pm 20\%$
SMARTSENSE2X_LEFT_CM0D_IS_LOW	8	Left Cmod is out of range
SMARTSENSE2X_LEFT_CM0D_IS_HIGH	16	Left Cmod is out of range
SMARTSENSE2X_RIGHT_CM0D_SHORTED_TO_GND	0	Right Cmod shorted to GND
SMARTSENSE2X_RIGHT_CM0D_SHORTED_TO_VDD	1	Right Cmod shorted to Vdd
SMARTSENSE2X_RIGHT_CM0D_WITHIN_20	4	Right Cmod within $\pm 20\%$
SMARTSENSE2X_RIGHT_CM0D_IS_LOW	8	Right Cmod is out of range
SMARTSENSE2X_RIGHT_CM0D_IS_HIGH	16	Right Cmod is out of range

DC and AC Electrical Characteristics

Table 7. DC and AC Electrical Characteristics

Parameters	Description	Conditions	Min	Typ	Max	Units
Cp (max)	Supported sensor parasitic capacitance max value	Over -40 to $+80$ $^{\circ}\text{C}$	4.5	–	–	pF
Cp (min)	Supported sensor parasitic capacitance min value	Over -40 to $+80$ $^{\circ}\text{C}$	–	–	5	pF

Sample Firmware Source Code

Example 1. This code starts the user module and continuously scans the sensors. The communication section can be used to communicate values to a PC charting tool.

```
//-----
// Sample C code for the SmartSense2X module
// Scanning all sensors continuously
//-----

#include <m8c.h>           // part specific constants and macros
#include "PSoC_API.h"     // PSoC API definitions for all User Modules

void main(void)
```

```
{
    M8C_EnableGInt;
    SmartSense2X_Start();
    SmartSense2X_InitializeBaselines() ; //scan all sensors first time, init baseline
    // Loop Forever

    while (1)
    {
        SmartSense2X_ScanAllSensors(); //scan all sensors in array (buttons and
        //sliders)
        SmartSense2X_UpdateAllBaselines(); //Update all baseline levels;
        //detect if any sensor is pressed
        if(SmartSense2X_bIsAnySensorActive())
        {
            // Add user code here to proceed with sensor touching
        }
        // now we are ready to send all status variables to chart program
        // communication here
        // OUTPUT SmartSense2X_waSnsResult[x] <- Raw Counts
        // OUTPUT SmartSense2X_waSnsDiff[x] <- Difference
        // OUTPUT SmartSense2X_waSnsBaseline[x] <- Baseline
        // OUTPUT SmartSense2X_baSnsOnMask[x] <- Sensor On/Off
    }
}
```

Example 2. This code starts the user module and continuously scans the sensors; however, unlike Example 1, looping through the sensors is done in the user code. The communication section can be used to communicate values to a PC charting tool.

```
//-----
// Sample C code for the SmartSense2X module
// Scanning all sensors continuously
//-----

#include <m8c.h>          // part specific constants and macros
#include "PSoC_API.h"     // PSoC API definitions for all user modules

void main(void)
{
    BYTE bIndex;
    M8C_EnableGInt;
    SmartSense2X_Start();
    SmartSense2X_InitializeBaselines() ; //Scan all sensors first time, init baseline
    while (1) //Loop forever
    {
        for(bIndex=0; bIndex < SmartSense2X_TotalSensorCount; bIndex++)
        //Loop through all sensors
        {
            SmartSense2X_ScanSensor(bIndex);          // Scan sensors
            SmartSense2X_UpdateSensorBaseline(bIndex); // Run baseline filter
            if(SmartSense2X_bIsSensorActive(bIndex))
            {
                // Add user code here to process the sensor touching
            }
        }
    }
}
```

```

    }
    // detect if any sensor is pressed
    // now we are ready to send all status variables to chart program
    // communication here
    //
    // OUTPUT SmartSense2X_waSnsResult[x] <- Raw Counts
    // OUTPUT SmartSense2X_waSnsDiff[x] <- Difference
    // OUTPUT SmartSense2X_waSnsBaseline[x] <- Baseline
    // OUTPUT SmartSense2X_baSnsOnMask[x] <- Sensor On/Off
}
}

```

Example 3. This code starts the user module and continuously scans the sensors when the background scanning feature is enabled. The communication section can be used to communicate values to a PC charting tool.

```

//-----
// Sample C code for the SmartSense2X module
// Scanning all sensors continuously
//-----

#include <m8c.h>           // part specific constants and macros
#include "PSoCAPI.h"      // PSoC API definitions for all user modules
void main(void)
{
    M8C_EnableGInt;
    SmartSense2X_Start();
    SmartSense2X_InitializeBaselines() ; //scan all sensors first time, init baseline
    //
    // Loop Forever
    //
    while (1)
    {
        SmartSense2X_ScanAllSensors();//scan all sensors in array (buttons and sliders)
        while(!SmartSense2X_bIsScanComplete()); // wait until scanned

        SmartSense2X_UpdateAllBaselines(); //Update all baseline levels;
        // now we are ready to send all status variables to chart program
        // communication here
        //
        // OUTPUT SmartSense2X_waSnsResult[x] <- Raw Counts
        // OUTPUT SmartSense2X_waSnsDiff[x] <- Difference
        // OUTPUT SmartSense2X_waSnsBaseline[x] <- Baseline
        // OUTPUT SmartSense2X_baSnsOnMask[x] <- Sensor On/Off

        //detect if any sensor is pressed
        if(SmartSense2X_bIsAnySensorActive())
        {
            // Add user code here to proceed the sensor touching
        }
        // Do other tasks
    }
}

```

Version History

Version	Originator	Description
1.10	HPHA	Initial version.
1.10	HPHA	<ol style="list-style-type: none"> 1. Fixed problem with saving information for sliders. 2. Split APIs for linear and radial sliders optimize RAM and ROM usage. 3. Updated ClearSensors() function to eliminate erroneous behavior when carry is set before calling the API. 4. Resolution is now tuned when using the Manual Threshold setting. 5. Added FMEA APIs. 6. Added CY8C28xxx support. 7. Added new configuration for CY8C2xx45 family. 8. Added SetDebounce(), SetSliderIdac() functions to User Module API. 9. Limited Number of sensors on CY8C28xxx family.

Note PSoC Designer 5.1 introduces a Version History in all user module datasheets. This section documents high level descriptions of the differences between the current and previous user module versions.

Document Number: 001-85898 Rev. **

Revised May 15, 2013

Page 61 of 61

Copyright © 2013 Cypress Semiconductor Corporation. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC Designer™ and Programmable System-on-Chip™ are trademarks and PSoC® is a registered trademark of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.