

TLI55950 2Go evaluation kit user guide

XENSIV™ linear sensors

About this document

Scope and purpose

This document describes the hardware and software functionality of the XENSIV™ TLI55950 2Go evaluation kit ([TLI55950 EVAL KIT](#)).

Intended audience

This document is intended for hardware and software engineers involved in the evaluation of the XENSIV™ TLI55950 tunnel magnetoresistance (TMR)-based linear sensors.

About this product group

Target applications

- Small field linear position and angle sensing
- Gaming applications, e.g., joysticks
- [PC accessories](#)
- Multisensor encoder setup

Product family

Infineon's portfolio of [XENSIV™ linear sensors](#) provides a broad range of solutions for different applications, including high-sensitivity linear tunneling magnetoresistance (TMR) sensors and Hall-effect sensors with integrated signal processing, designed for contactless position sensing.

Evaluation Board

This board is to be used during the design-in process for evaluating the TMR magnetic sensing capabilities of the XENSIV™ TLI55950 linear sensor.

Note: PCB and auxiliary circuits are NOT optimized for final customer design.

Safety precautions

Safety precautions

Note: Please note the following warnings regarding the hazards associated with development systems.

Table 1 **Safety precautions**

	Caution: <i>The heat sink and device surfaces of the evaluation or reference board may become hot during testing. Hence, necessary precautions are required while handling the board. Failure to comply may cause injury.</i>
	Caution: <i>The evaluation or reference board contains parts and assemblies sensitive to electrostatic discharge (ESD). Electrostatic control precautions are required when installing, testing, servicing, or repairing the assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with electrostatic control procedures, refer to the applicable ESD protection handbooks and guidelines.</i>

Table of contents

About this document.....	1
About this product group.....	1
Safety precautions.....	2
Table of contents.....	3
1 The board at a glance.....	4
2 System and functional description	5
2.1 Description of functional units	5
3 System design.....	6
3.1 Schematics	6
3.2 Layout	7
3.3 Bill of materials.....	8
4 Evaluation software	9
4.1 Requirements	9
4.2 Software download	9
4.3 Software installation	10
4.4 Uninstalling the software	12
5 Using the evaluation software	13
5.1 Startup screen	13
5.2 Primary GUI window.....	14
5.3 Data logging.....	15
5.4 Data Logging Visualization Window	16
6 Related resources	17
References.....	18
Glossary	19
Revision history.....	21
Disclaimer.....	22

1 The board at a glance

1 The board at a glance

The XENSIV™ TLI55950 linear sensor is a contactless, galvanically isolated magnetic sensor, featuring an internally amplified tunnel magnetoresistance (TMR) bridge, a single-ended output, a reduced footprint size, and lower cost.

The TLI55950 2Go evaluation kit capitalizes on the sensor's magnetic sensing features and allows linear position measurements to be performed, with configurable output gain. The compatible software provided is designed to visualize and log data acquired from the TLI55950 sensor, with accessible gain settings and data visualization functions.

The TLI55950 2Go evaluation kit is shown in [Figure 1](#).

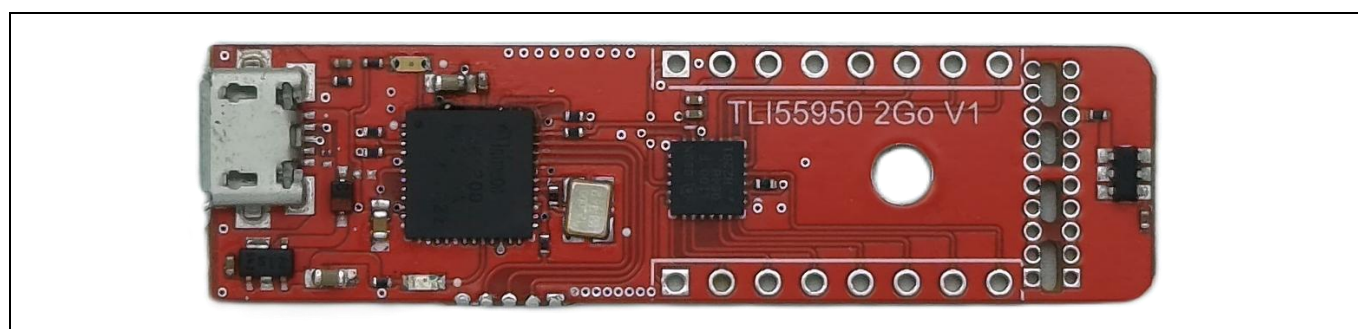


Figure 1 TLI55950 2Go evaluation kit

Note: [Figure 1](#) is generic; the latest variant may include modifications.

The evaluation hardware is compatible with the XENSIV™ 3D magnetic sensor add-ons:

- [ROTATE KNOB 3D 2GO KIT](#)
- [LINEAR-SLIDER 2GO](#)

The evaluation hardware can be ordered online from the [Infineon](#) website or via Infineon sales channels. The ordering part numbers are listed in [Table 2](#).

Table 2 TLI55950 2Go evaluation kit list with ordering part numbers

Name	Description	Infineon Sample Request (ISaR) SP number
TLI55950 EVAL KIT	TLI55950-A6E-E0001 2Go evaluation kit	SP006201529

2 System and functional description

2 System and functional description

2.1 Description of functional units

The hardware of the TLI55950 2Go evaluation kit contains the following main functional units.

Indices in parentheses match the schematic designators for each component.

- **Onboard debugger (U3):** The evaluation kit features an onboard debugger implemented via an XMC4200 microcontroller. This auxiliary microcontroller runs a debug probe firmware provided by SEGGER J-Link, which is used for flashing the target microcontroller and for establishing serial communication via USB
- **Target microcontroller (U1):** The main microcontroller is an XMC1100 in a VQFN24 package with 64 KB of flash. This device handles the digital conversion of the analog sensor output, and the forwarding of data to USB through the debugger
- **Power supply (U2):** The TLS202B1MBV33 low-dropout voltage regulator (LDO) steps down the 5 V from the USB connector to 3.3 V, supplying the debugger, the target microcontroller, and the sensor
- **Sensor under evaluation (U4):** XENSIV™ TLI55950 linear TMR sensor, whose single-ended amplified output is fed into the XMC1100 ADC
- **USB connector (J1):** Micro-USB, supplies the board with 5 V and ensures communication with the PC
- **Auxiliary connectors:** PCB side connectors (P1, P2, 2.54 mm headers, not assembled by default) that expose GPIO, UART, SPI, and PWM pins of the XMC1100 microcontroller, allowing the TLI55950 2Go evaluation kit to be connected to other components

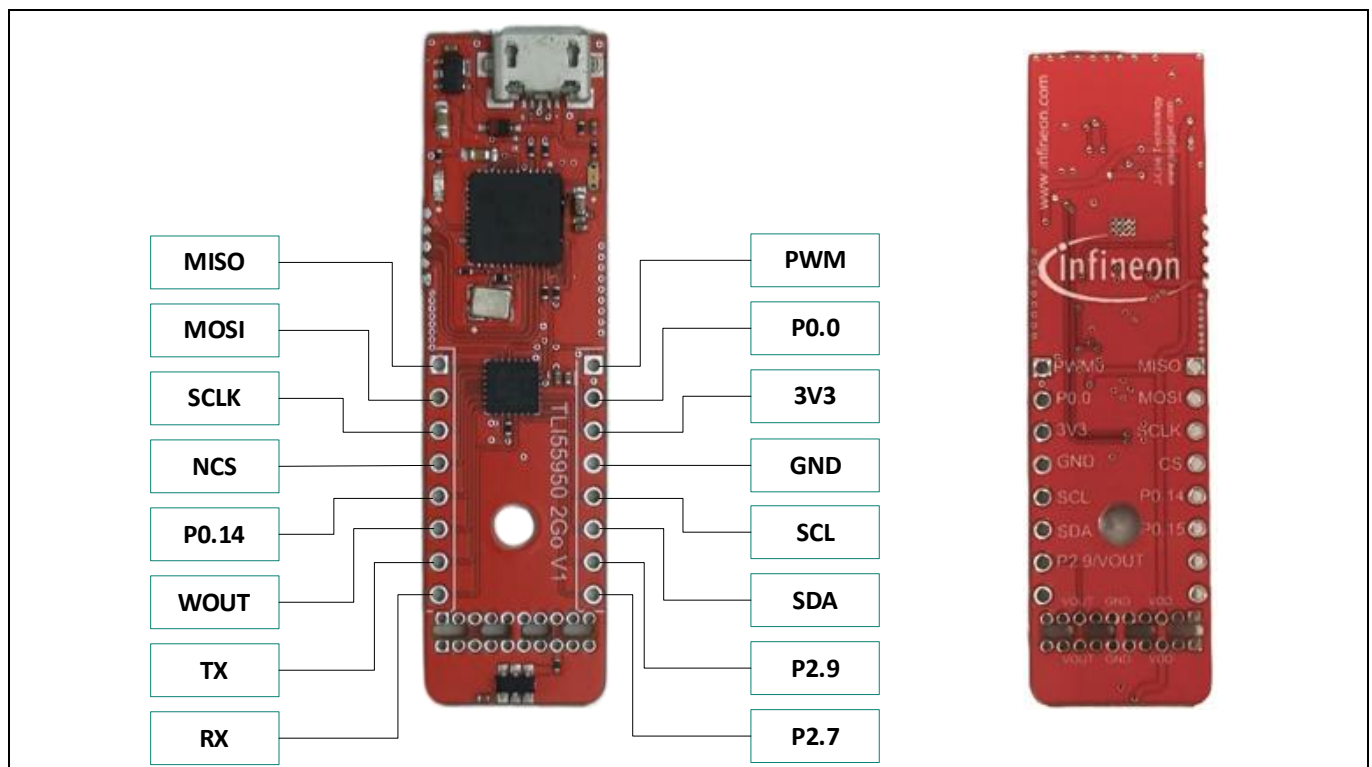


Figure 2 TLI55950 2Go evaluation kit auxiliary connector pinouts

TLI55950 2Go evaluation kit user guide

XENSIV™ linear sensors

3 System design

3 System design

3.1 Schematics

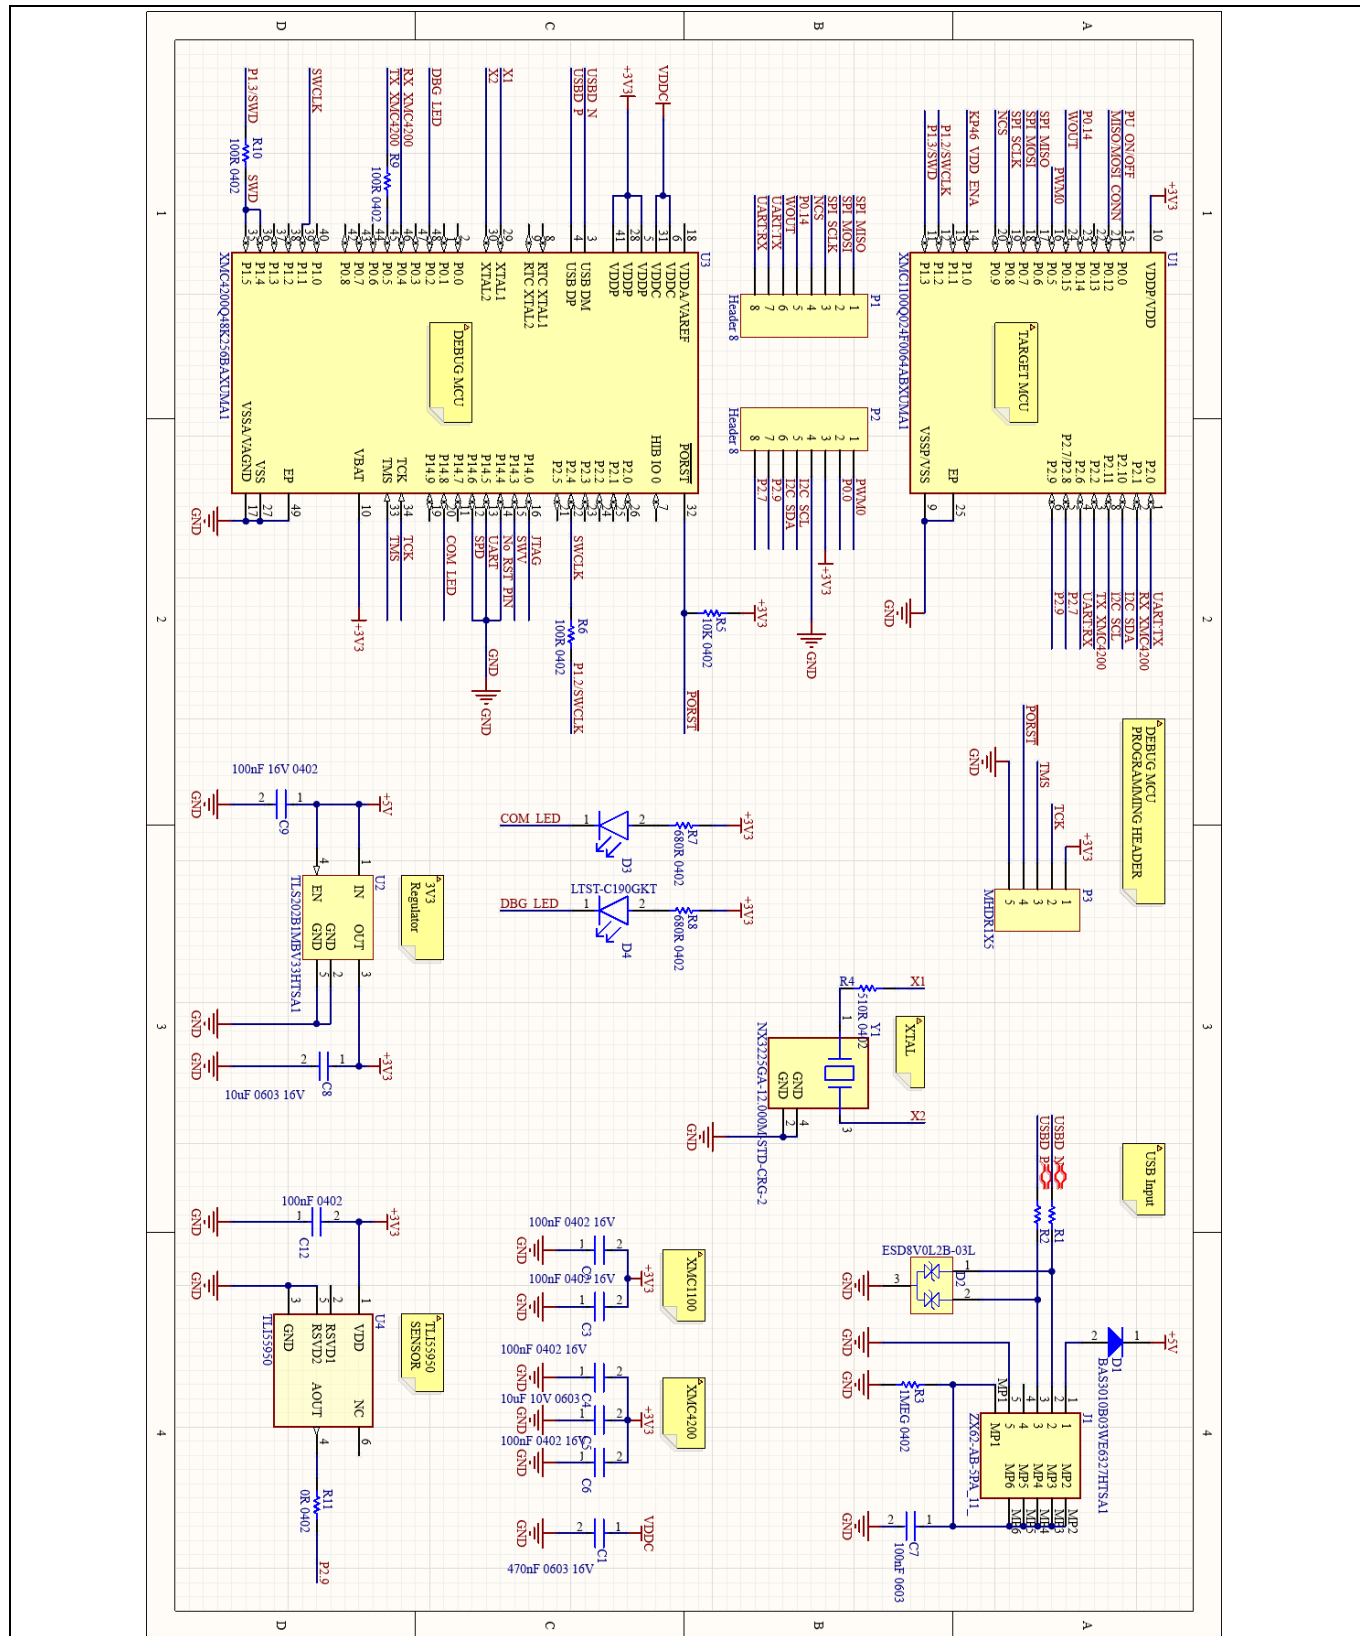


Figure 3 TLI55950 2Go evaluation kit schematic

3 System design

3.2 Layout

The design described in [Section 2.1](#) is physically implemented in PCB technology using a standard process with the following characteristics:

- **PCB material:** FR4
- **Copper:** 2 layers top/bottom, 140 µm thickness each
- 45-degree chamfer on sensor side

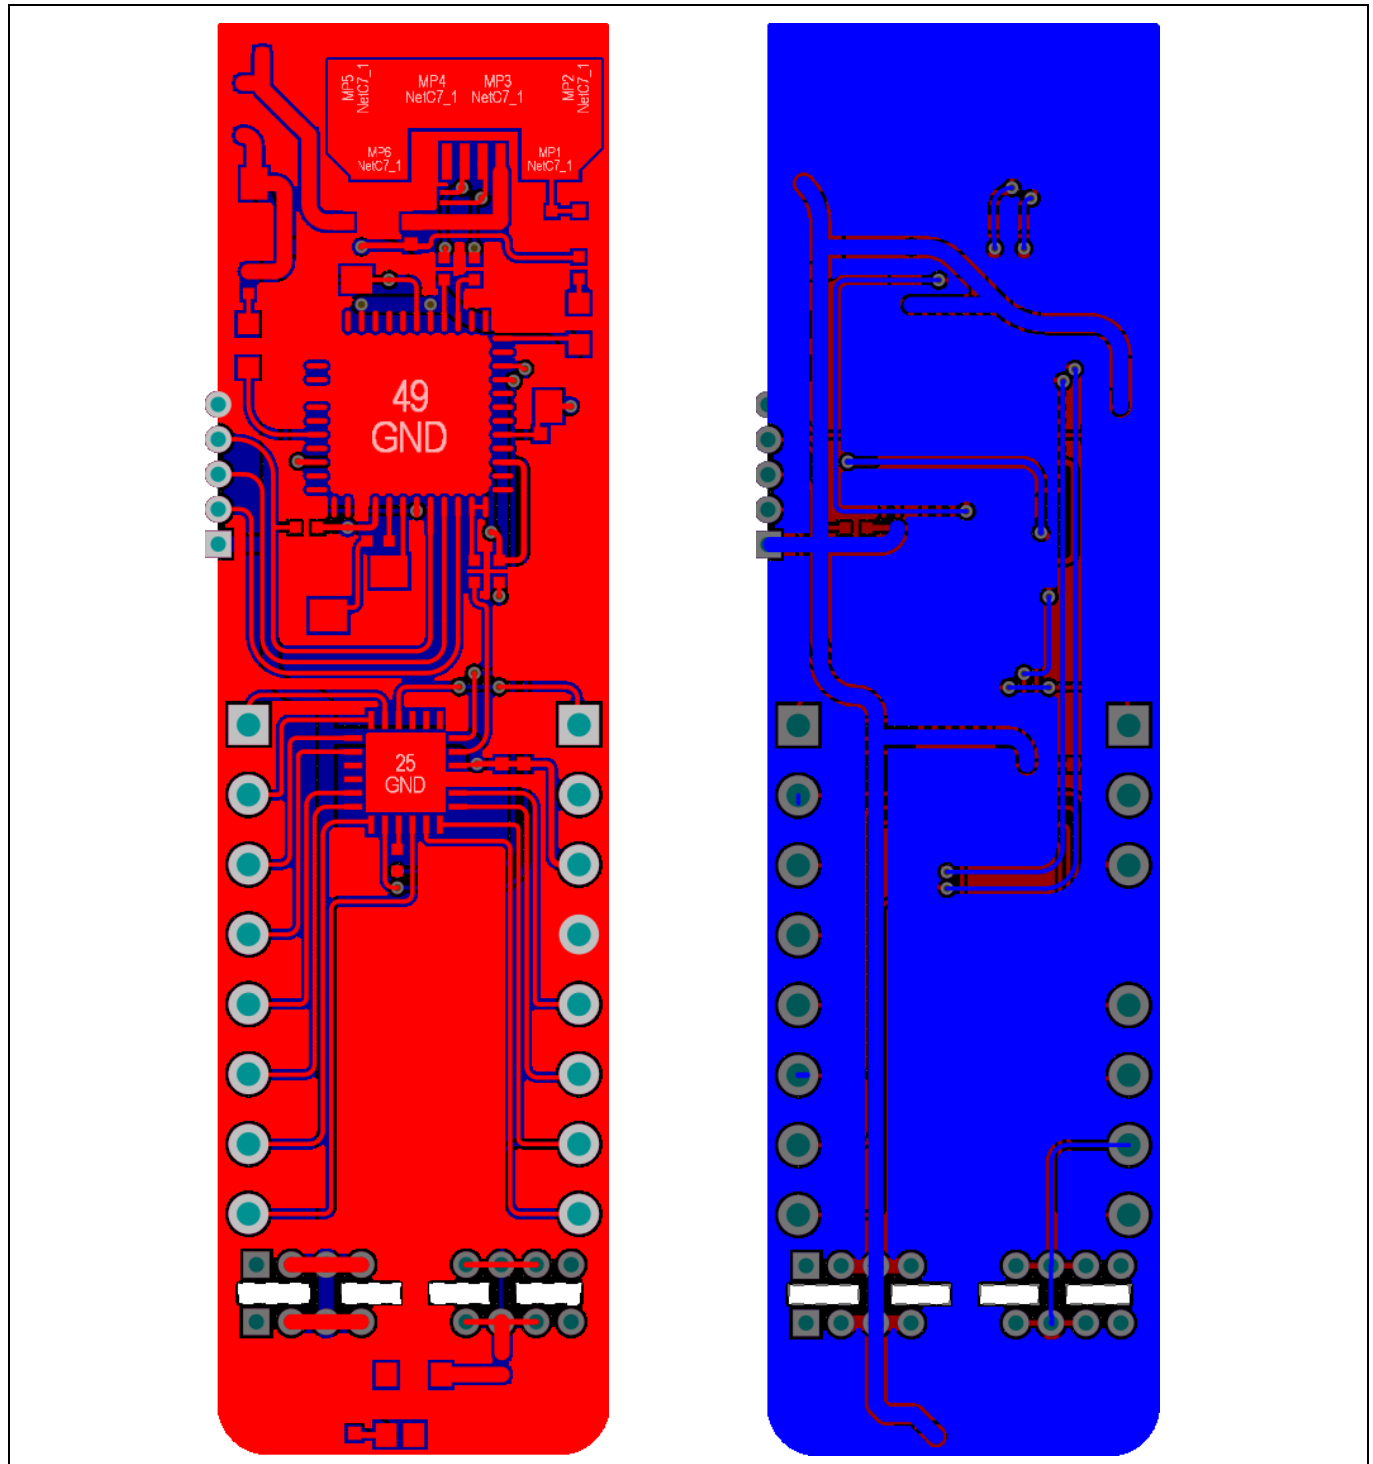


Figure 4 TLI55950 2Go evaluation kit PCB layout – Top (left), bottom (right)

3 System design

3.3 Bill of materials

Table 3 TLI55950 2Go evaluation kit bill of materials

Designator	Description	Quantity	Assembled on PCB	Infineon part
C1	Ceramic 470 nF 16 V X7R 0603 ±10%	1	Yes	No
C2, C3, C4, C6, C7, C9, C12	Ceramic 0.1 µF 16 V X7R 0402	7	Yes	No
C5, C8	Ceramic 10 µF 6.3 V X5R 0603	2	Yes	No
D1	BAS3010A-03W	1	Yes	Yes
D2	ESD8V0L2B-03L	1	Yes	Yes
D3	150060RS75000	1	Yes	No
D4	LTST-C190GKT	1	Yes	No
J1	ZX62-AB-5PA_11_	1	Yes	No
P1, P2	Header, 8-pin	2	Yes	No
P3	MHDR1X5 Header, 5-Pin	1	Yes	No
R1, R2	ERJ2RKF33R0X	2	Yes	No
R3	ERJ-2RKF1004X	1	Yes	No
R4	ERJ-2GEJ511X	1	Yes	No
R5	ERJ2RKF1002X	1	Yes	No
R6, R9, R10, R11	ERJ-2RKF1000X	4	Yes	No
R7, R8	ERJ2RKF6800X	2	Yes	No
U1	XMC1100Q024F0064ABXUMA1	1	Yes	Yes
U2	TLS202B1MBV33HTSA1	1	Yes	Yes
U3	XMC4200Q48K256BAXUMA1	1	Yes	Yes
U4	XENSIV™ TLI55950 (evaluated sensor)	1	Yes	Yes
Y1	NX3225GA-16.000M-STD-CRG-2	1	Yes	No

4 Evaluation software

4 Evaluation software

Download the evaluation software via the [Infineon Development Center](#) online platform or the [Infineon Developer Center Launcher](#) application. It is recommended to install the Infineon Development Center Launcher application.

The software package contains:

- A graphical user interface (GUI) software for sensor evaluation
- SEGGER J-Link debugger software with USB driver

4.1 Requirements

The TLI55950 2Go hardware and software bundle is developed and tested on the following PC configurations:

- **Operating system:** Windows 10/Windows 11 (also compatible with Windows 7)
- **RAM:** 8 GB (maximum RAM usage estimated at 250 MB, when data logging is ON)
- **Storage:** 512 GB (minimum required for installation: 250 MB, including dependencies)
- **CPU:** 3 GHz, 4 cores (lower performance CPUs might impact the performance of the GUI)

4.2 Software download

To access the evaluation software, go to the **Assets** section of your preferred platform and search for “TLI55950” or “TMR Sensor” and it displays as [XENSIV™ TLI559xx 2Go Evaluation App](#).

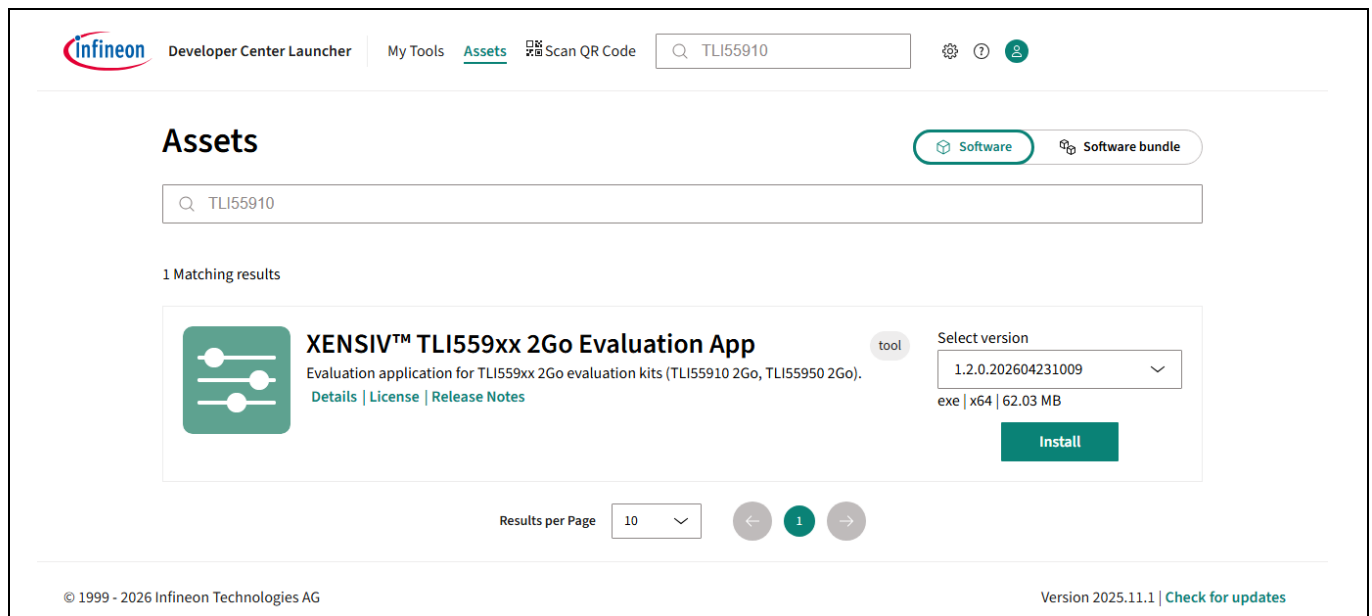


Figure 5 Infineon Development Center – online tools

Note: **XENSIV™ TLI559xx 2Go Evaluation App** is only available for users registered with a myInfineon account.

4 Evaluation software

4.3 Software installation

1. Download the XENSIV™ TLI559xx 2Go Evaluation App installer as mentioned in the previous section and click the **Install** button

Note: Ensure that administrator rights are enabled before installation.

The installer file contains the following:

- Binaries/compiled objects needed for running the GUI
- SEGGER J-Link debugger software with USB driver
- .NET 4.8 online installer (needed only for older versions of Windows, if you do not have this already installed). Requires a stable Internet connection

2. Accept the License Agreement and click **Next**

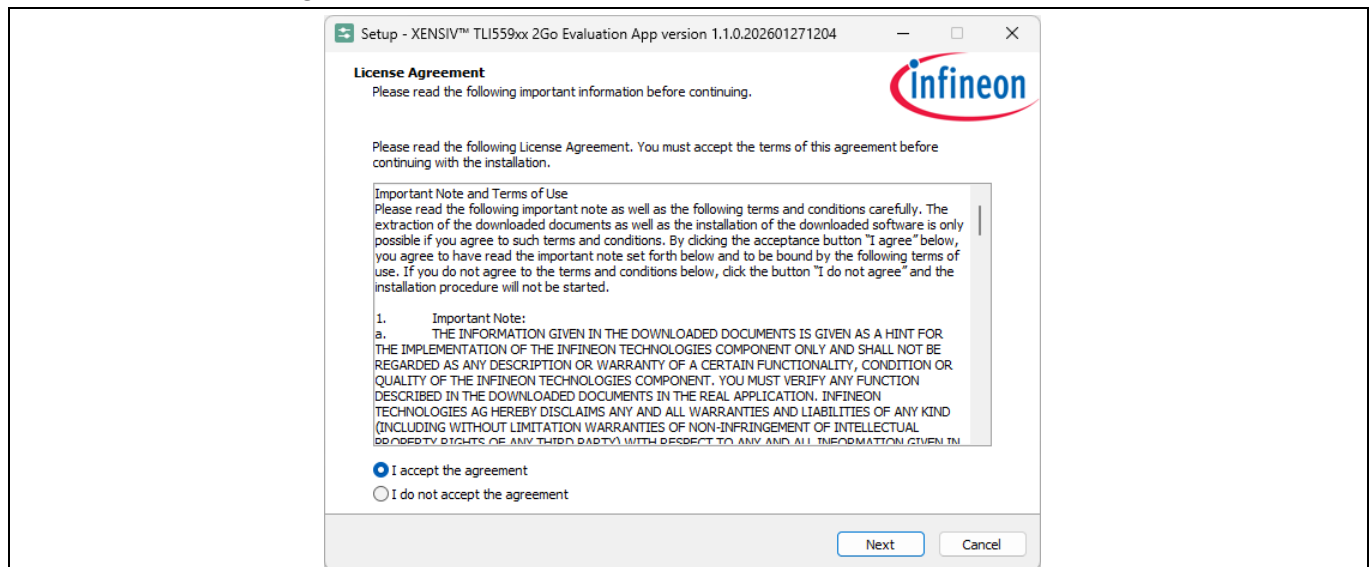


Figure 6 Software installation – license agreement

3. Select **Quick Installation** (recommended) and click **Install** to begin the installation process

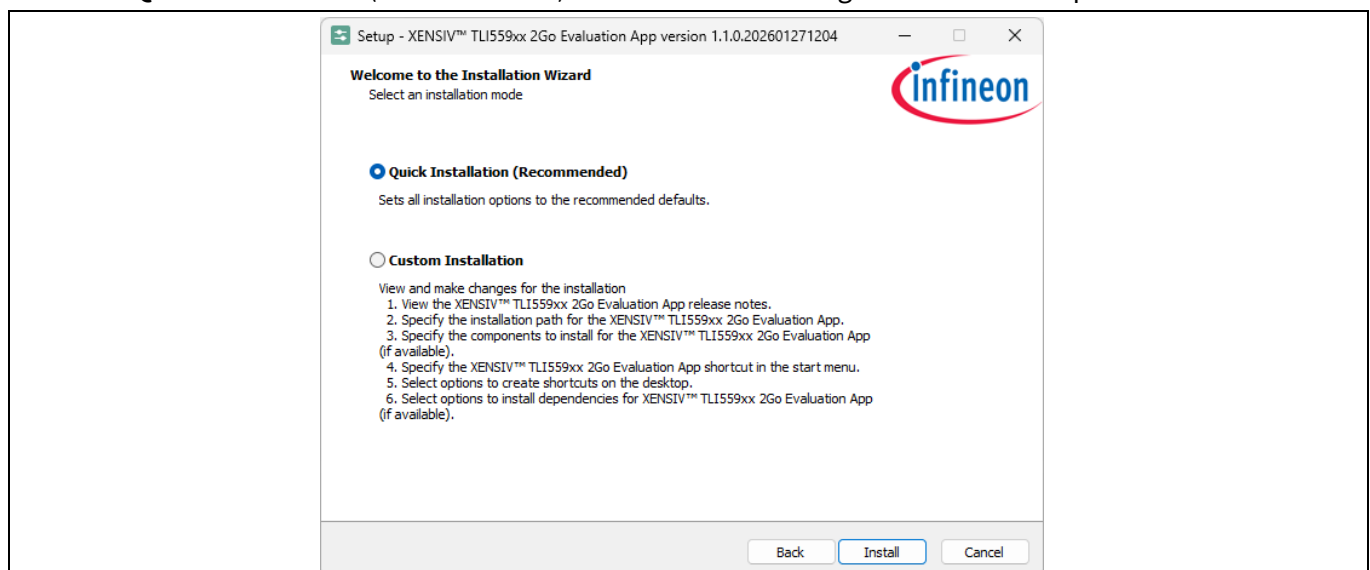


Figure 7 Software installation – quick installation

TLI55950 2Go evaluation kit user guide

XENSIV™ linear sensors

4 Evaluation software

4. After the binaries have been copied to the installation folder, install the **SEGGER J-Link driver**. If this driver is already installed on your PC, skip this operation. If this driver is not installed, the USB connection between the PC and the TLI55950 2Go evaluation kit will not function



Figure 8 Software installation – SEGGER J-Link driver installation

5. Install **.NET Framework 4.8**. For operating systems starting from **Windows 10, build 1903** and later, this comes pre-installed. If the framework is not already installed, an active Internet connection is required to complete the installation process

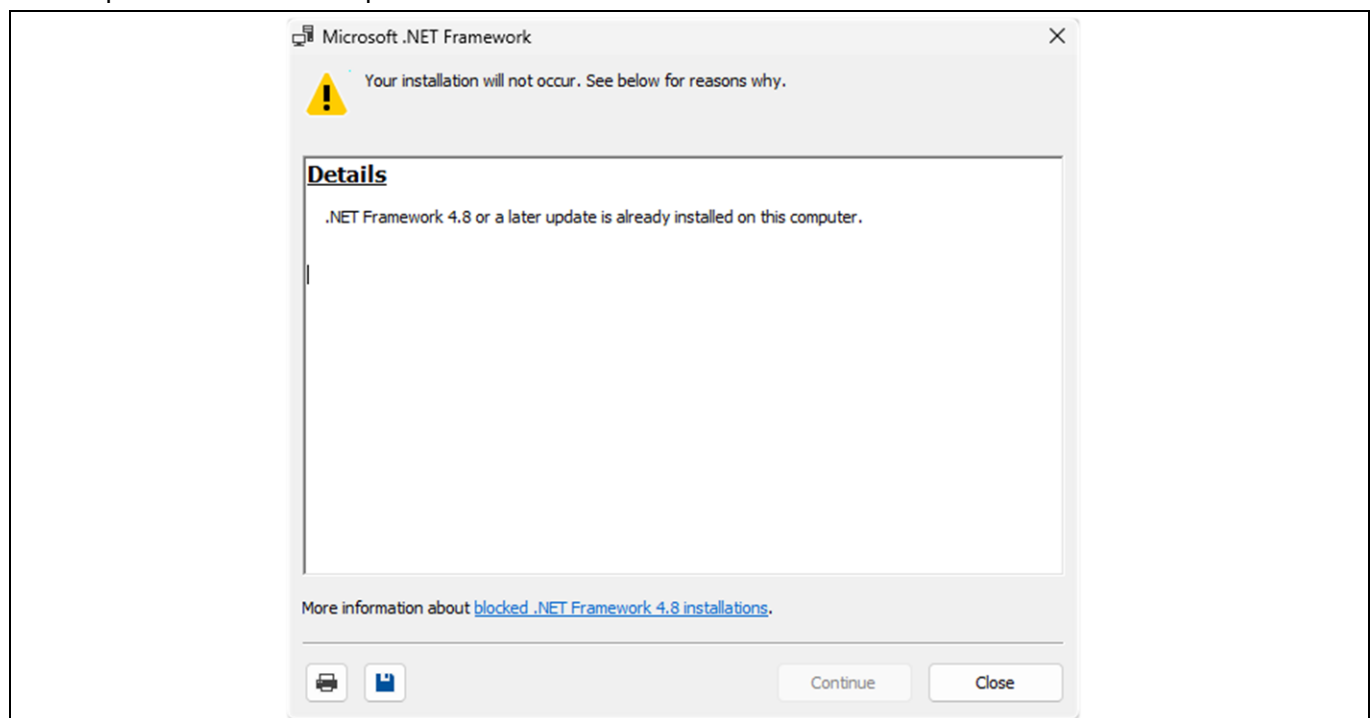


Figure 9 Software installation – .NET 4.8 installation

TLI55950 2Go evaluation kit user guide

XENSIV™ linear sensors

4 Evaluation software

6. You are notified when all installer processes are complete and a shortcut is created on the desktop by default. You can choose to run the installed **XENSIV™ TLI559xx 2Go Evaluation App** and click **Finish** to exit the setup

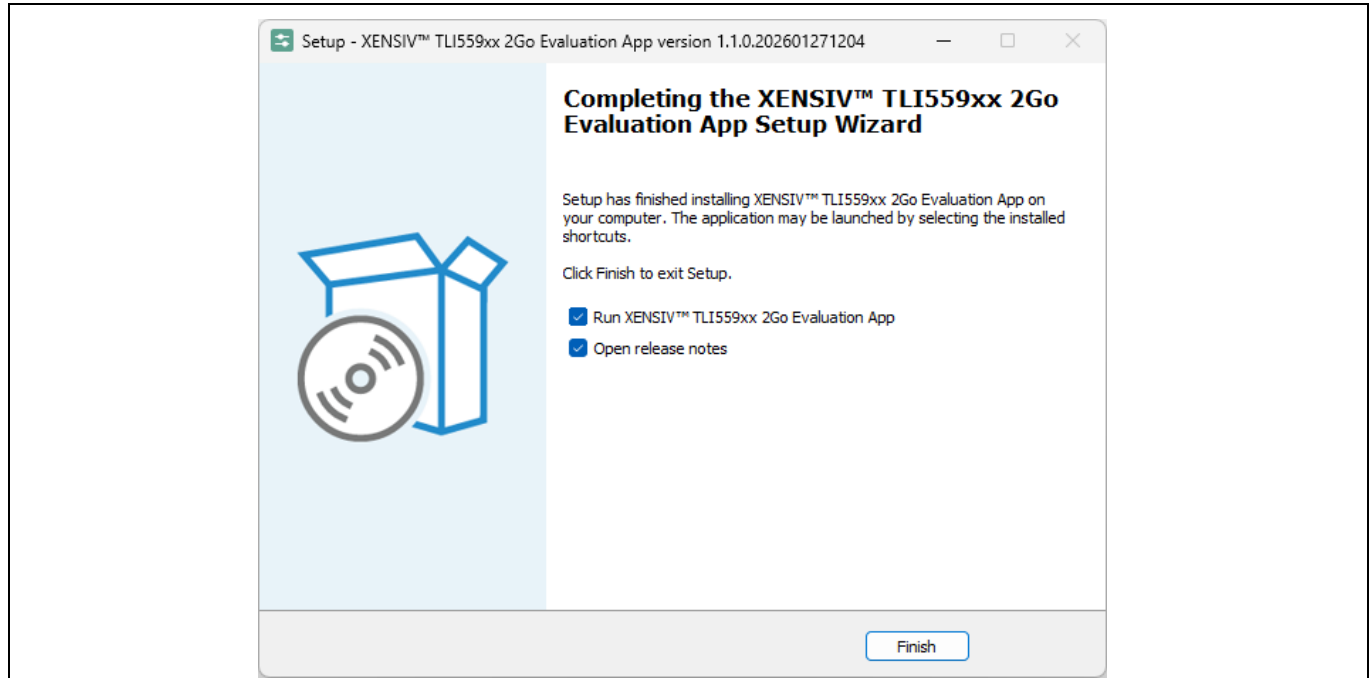


Figure 10 Software installation – completion

4.4 Uninstalling the software

To uninstall the software package, go to **Start > Add or remove programs** and search for the **XENSIV™ TLI559xx 2Go Evaluation App**. Select **Uninstall** to delete the software from your PC.

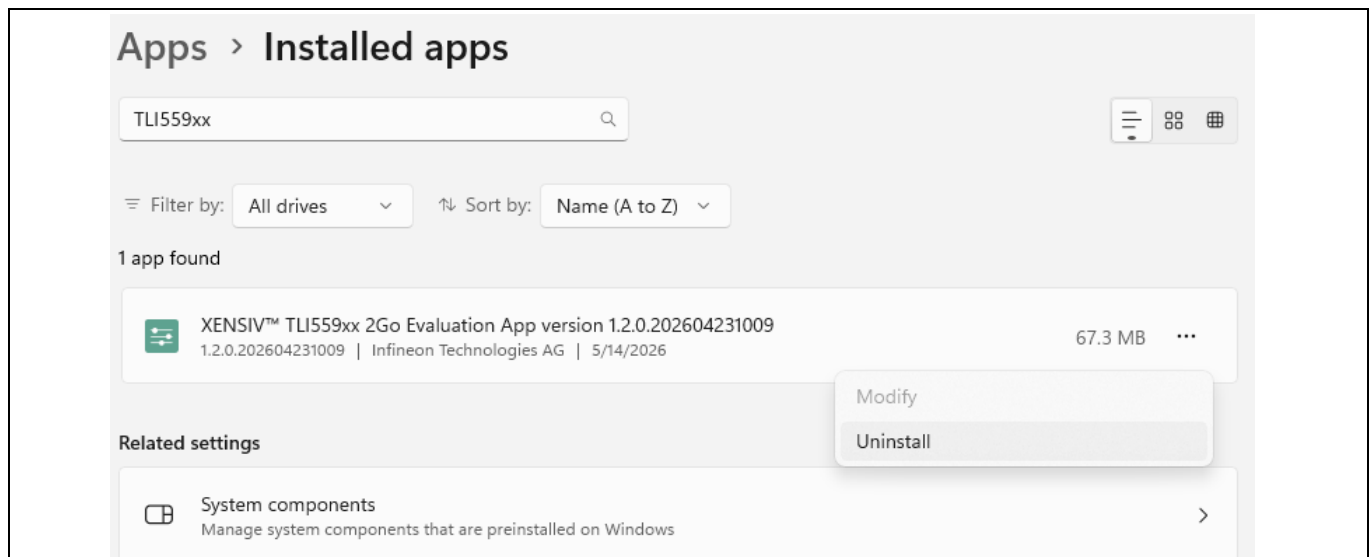


Figure 11 Software uninstall

All installation files are deleted from the system except:

- SEGGER J-Link driver, which can be uninstalled separately if required
- .NET 4.8 dependencies, which in most cases are part of the operating system

5 Using the evaluation software

5 Using the evaluation software

This section will describe all the functions provided by the evaluation software:

- Continuous readout, in both V and least significant bit (LSB) raw ADC output
- Data logging and visualization

5.1 Startup screen

Start the application by double-clicking the created shortcut, or run the executable file from the installation folder. Connect the TLI55950 2Go evaluation kit to the PC with a Micro-USB cable (not provided in the kit package).

If the evaluation kit is successfully connected, a COM port should be available to connect to. Click on the COM port and wait while the software flashes the firmware into the XMC1100 microcontroller. For subsequent launches of the software, the firmware will be flashed again only if communication errors occur.

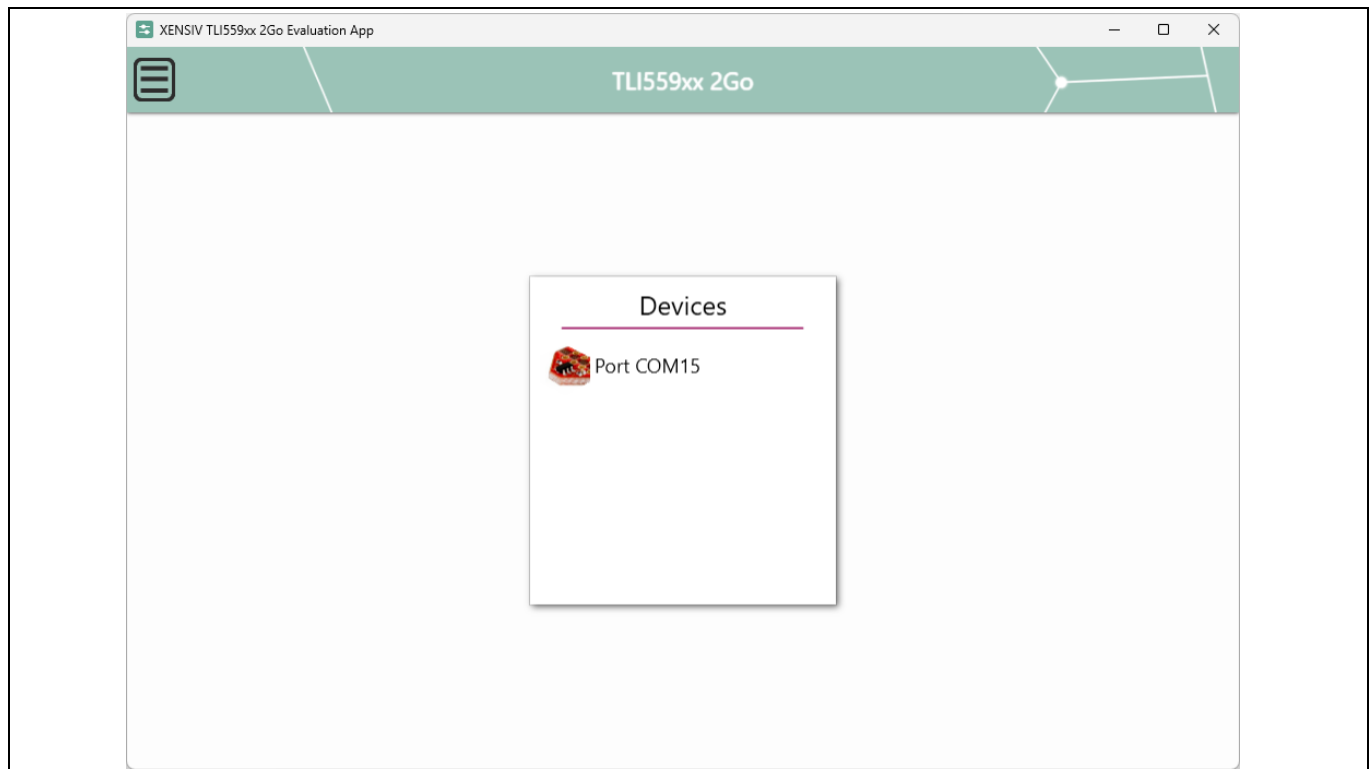


Figure 12 Startup screen with valid COM port connection

TLI55950 2Go evaluation kit user guide

XENSIV™ linear sensors

5 Using the evaluation software

5.2 Primary GUI window

After successfully connecting to the TLI55950 2Go evaluation kit, the evaluation software enters the continuous readout scenario. The chart is updated at a rate of **500 samples/second** and represents the amplified sensor output. The continuous readout starts automatically, in **LSB mode**.

The graphical elements on the left side of the screen are:

- **Back:** Go back to the startup screen
- **Information table:** Displays the evaluation kit name and the associated COM port
- **Start/Stop:** Start/stop the continuous readout

The graphical elements on the right side of the screen are:

- **Show V/Show LSB:** Switch between readout modes
- **Output [LSB/V]:** Updates periodically with the latest received data point
- **?:** Provides additional details about how the two readout modes differ

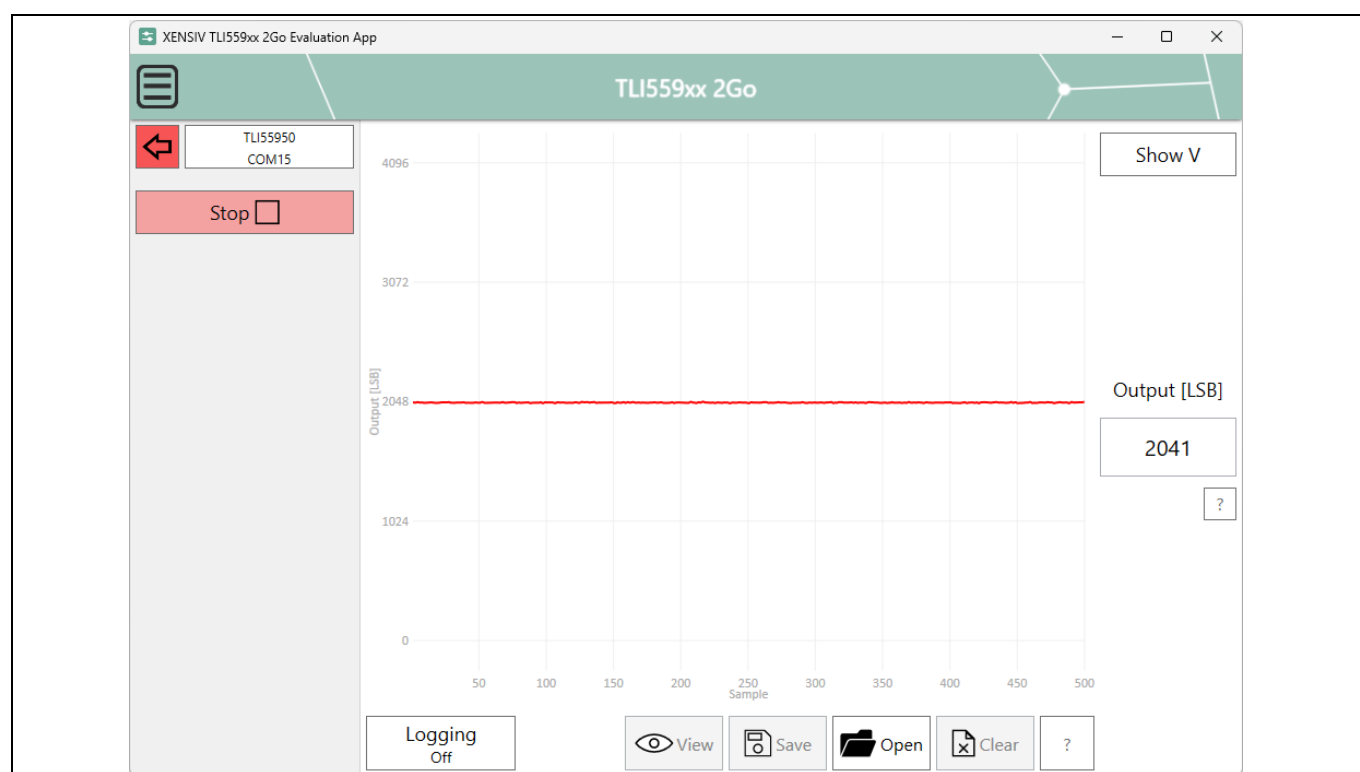


Figure 13 Continuous readout

5 Using the evaluation software

5.3 Data logging

The evaluation software offers an option to log data points. The TLI55950 2Go evaluation kit outputs data to the evaluation software at a rate of **5000 samples/second**, while the continuous readout is down sampled to **500 samples/second**. Data logging allows you to record all the data points transmitted by the TLI55950 2Go evaluation kit, with flexible editing and visualization options.

At the bottom of the screen, a ribbon of buttons is dedicated to the software logging function:

- **Logging On/Off:** Activates the logging function, which will record all incoming data points from the TLI55950 2Go evaluation kit
- **Logged points:** Displays the current number of logged points. This is visible only if there are any points that were logged, but they are not yet saved to a .CSV file or cleared
- **View:** Displays the currently logged points in a new window
- **Save:** Saves the currently logged points in .CSV format with the option to add a comment and to choose the file name and save path
 - **Default name:** Evaluation kit name + timestamp (e.g., *TLI55950_2GO_2026-05-20_11-46-49.csv*)
 - **Default save location:** Desktop
- **Open:** Displays previously logged and saved points in a new window
- **Clear:** Deletes all the currently logged points
- **?:** Displays the same information provided in this section, accessible from the software main window

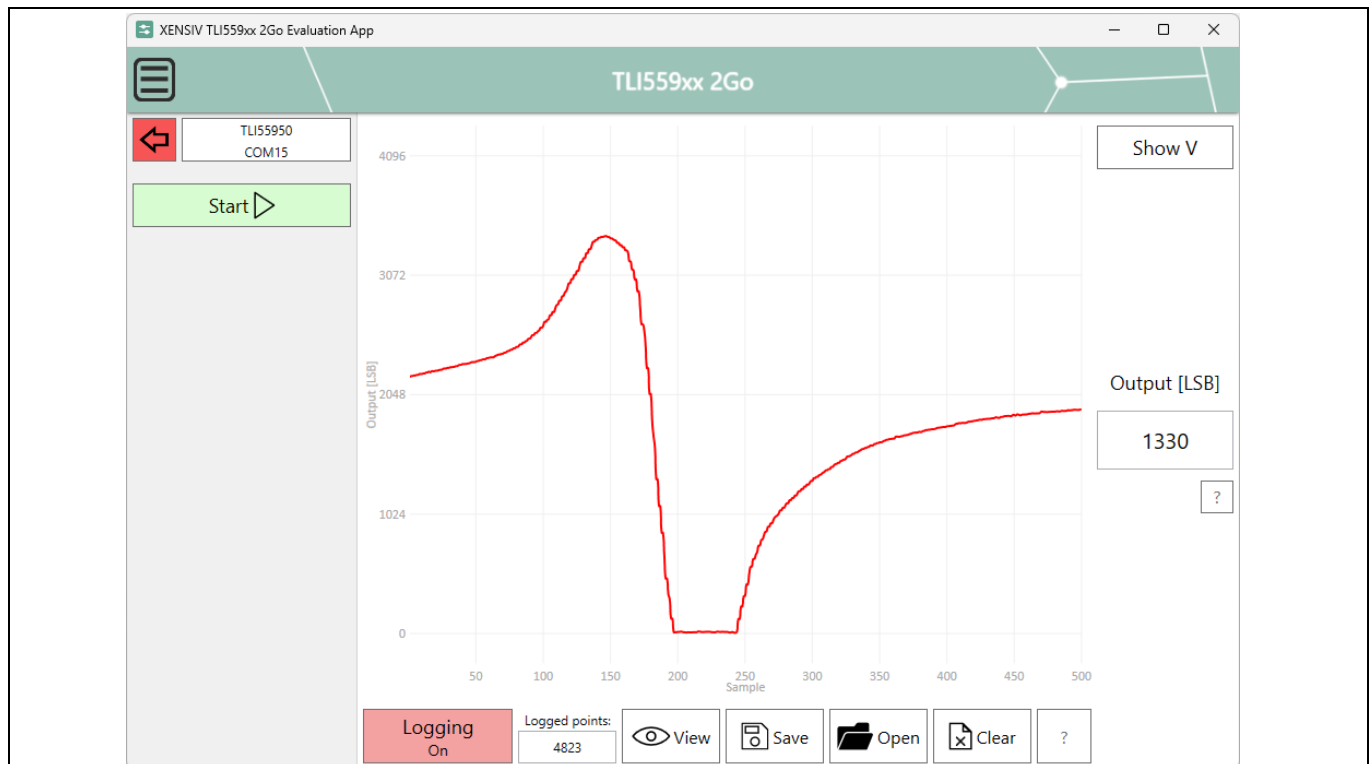


Figure 14 Using the data logging feature

5 Using the evaluation software

5.4 Data Logging Visualization Window

After logging data and pressing the **View** button, or after opening a .CSV file by pressing the **Open** button, a new window is displayed over the main window. As an example, [Figure 15](#) shows the logging data corresponding to the continuous readout data from [Figure 14](#).

The following controls are available in the Data Logging Visualization Window:

- **Series:** Regardless of the continuous readout mode (V/LSB), the logging view captures all the data points from the sensor. You can view the following series on the chart:
 - **Voltage:** Represents the amplified sensor output, in V
 - **LSB:** Represents the ADC conversion of the amplified sensor output
- **Cursor:** Toggles the vertical gray bar and data-point bubble at the mouse position
- **Zoom:** Selects the zoom mode (X axis, Y axis, both, or no zoom) or resets any zoom to default. Zooming and panning are done using the mouse



Figure 15 **Logged Data**

The bottom-left section of the screen offers additional data selection tools:

- **Cut:** When you select the Cut button, you can select a collection of points on the chart by holding the left mouse button and dragging the mouse over the area of interest. Upon releasing the left mouse button, the chart zooms in on the selected area
- **Save cut:** Saves the last Cut section of the chart. The other points are temporarily discarded. Closing and opening the data logging visualization window reloads all logged points
- **Reload:** Reloads the last saved section of the chart
- **Save:** Copies the last saved cut of the chart and saves it to .CSV format

6 Related resources

6 Related resources

- Webpage: [XENSIV™ linear sensors](#)
- Infineon Developer Community: [XENSIV™ linear sensors](#) forum
- [XENSIV™ TLI559xx 2Go Evaluation App](#)

References

References

- [1] Infineon Technologies AG: *XENSIV™ TLI55950 TMR-based linear sensor datasheet*; [Available online](#)

Glossary

Glossary

ADC

analog-to-digital converter (ADC)

COM

communication port (COM)

CPU

central processing unit (CPU)

CSV

comma-separated values (CSV)

ESD

electrostatic discharge (ESD)

GB

gigabyte (GB)

GHz

gigahertz (GHz)

GND

ground (GND)

GPIO

general-purpose input/output (GPIO)

GUI

graphical user interface (GUI)

IDC

Infineon Developer Center (IDC)

ISaR

Infineon Sample Request (ISaR)

KB

kilobyte (KB)

LDO

low-dropout regulator (LDO)

LSB

least significant bit (LSB)

MB

megabyte (MB)

PCB

printed circuit board (PCB)

PC

personal computer (PC)

Glossary

PWM

pulse-width modulation (PWM)

RAM

random-access memory (RAM)

SPI

serial peripheral interface (SPI)

TMR

tunnel magnetoresistance (TMR)

UART

universal asynchronous receiver/transmitter (UART)

USB

universal serial bus (USB)

VDD

positive supply voltage (VDD)

Revision history

Revision history

Document revision	Date	Description of changes
1.00	2026-07-21	Initial release

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition: 2026-07-21

Published by
Infineon Technologies AG
Am Campeon 1-15
85579 Neubiberg, Germany

© 2026 Infineon Technologies AG.
All rights reserved

Do you have a question about this document?
Email: erratum@infineon.com

Document reference:
UG100631

Important Notice

This evaluation board, demonstration board, reference board or kit and any related documentation ("Evaluation Board") is sold or provided and delivered by Infineon Technologies AG and its affiliates ("Infineon"). Evaluation Boards are part of Infineon's non-serial products.

This Evaluation Board is delivered to customer "AS IS", without any warranty (whether express or implied) or liability of Infineon of any kind, including but without limitation any warranty of merchantability, fitness for a particular purpose or non-infringement. These limitations and exclusions shall not apply in case of Infineon's willful misconduct or in any other case where liability is mandatory at law.

This Evaluation Board shall only be used by customer for test purposes and not for series production. However, the Evaluation Board shall not to be used for reliability testing. The Evaluation Board is exclusively intended for technically qualified and skilled customer representatives. The Evaluation Board shall not be used in any way where a failure of the Evaluation Board, or any consequences of the use thereof, can reasonably be expected to result in personal injury. Evaluation Boards may not comply with CE or similar standards (including without limitation the EMC Directive 2004/EC/108 and the EMC Act) and may not fulfill other requirements of the country in which they are operated by the customer. The customer shall ensure that each Evaluation Board will be handled in a way which is compliant with all relevant requirements and standards in the country in which it is operated. Software and associated documentation and materials included or referenced in the Evaluation Board ("Software") is owned by Infineon and is protected by and subject to worldwide patent protection, worldwide copyright laws, and international treaty provisions. Therefore, you may use this Software only as provided in the license agreement accompanying the software package from which you obtained this Software.

If no license agreement applies, then any use, reproduction, modification, translation, or compilation of this Software is prohibited without the express written permission of Infineon. Unless otherwise expressly agreed with Infineon, this Software is provided to customer "AS IS", without any warranty (whether express or implied) or liability of Infineon of any kind, including but without limitation any warranty of merchantability, fitness for a particular purpose or non-infringement.

These limitations and exclusions shall not apply in case of Infineon's willful misconduct or in any other case where liability is mandatory at law. Infineon reserves the right to make changes to the Software without notice. You are responsible for properly designing, programming, and testing the functionality and safety of your intended application of the Software, as well as complying with any legal requirements related to its use. Infineon does not guarantee that the Software will be free from intrusion, data theft or loss, or other breaches ("Security Breaches"), and Infineon shall have no liability arising out of any Security Breaches. The Software shall not be used in any way where a failure of the Evaluation Board or any consequences of the use thereof, can reasonably be expected to result in personal injury.

Safety & Operating Instructions:

Customer shall check the Evaluation Board for any physical damage which may have occurred during transport. If customer detects any damages or defects in the Evaluation Board, customer shall not connect the Evaluation Board to a power source. Customer shall contact Infineon for further support. If customer observes unusual operating behavior during the evaluation process, customer shall immediately shut off the power supply to the Evaluation Board and consult Infineon for support.

Customer shall not touch the Evaluation Board during operation and keep a safe distance.

Customer shall not touch the Evaluation Board after disconnecting the power supply, several components may still store electrical voltage and can discharge through physical contact. Several parts, like heat sinks and transformers, may still be very hot. Allow the components to cool before touching or servicing.

The electrical installation must be completed in accordance with the appropriate safety requirements.