

ModusToolbox™ CAPSENSE™ Configurator user guide

ModusToolbox™ CAPSENSE™ and Multi-Sense Pack
CAPSENSE™ Configurator version 9.0

About this document

[A newer revision of this document may be available on the web here.](#)

Scope and purpose

The CAPSENSE™ Configurator is used to create and configure CAPSENSE™ widgets and generate code to control the application firmware.

Intended audience

This document helps application developers understand how to use the CAPSENSE™ Configurator as part of creating a ModusToolbox™ application.

Conventions used

The following are the conventions used in this guide:

Convention	Explanation
Bold	Emphasizes heading levels, column headings, menus and sub-menus.
<i>Italics</i>	Denotes file names and paths.
Monospace	Denotes APIs, functions, interrupt handlers, events, data types, error handlers, file/folder names, directories, command line inputs, code snippets.
File > New	Indicates that a cascading sub-menu opens when you select a menu item.

Abbreviations and definitions

- Application – One or more projects related to each other.
- BIST – Built-In Self-Test
- CAPDAC – capacitive digital-to-analog converter
- CAPSENSE – capacitive sensing
- Configurator – A GUI-based tool used to configure a resource.
- CSD – CAPSENSE™ sigma-delta – self-capacitance sensing method
- CSX – CAPSENSE™ Transmit/Receive (CAPSENSE™ with two electrodes: Tx and Rx) – mutual capacitance sensing method
- EFS – external frame start
- IDAC – current-output digital-to-analog converter
- IDE – integrated development environment
- IIR filter – infinite-impulse response filter
- CSD HW – CAPSENSE™ Sigma Delta – 4th generation hardware (HW) block
- ISX – inductive sensing method
- LFSR – linear-feedback shift register
- MFS – multi-frequency scan
- MSC HW – multi-sense converter – 5th generation hardware (HW) block
- MSCLP HW – multi-sense converter low power – 5th generation LP hardware (HW) block
- Peripheral – Any external analog or digital device that provides input and output for the computer.
- PRS – pseudo-random sequencer

About this document

- PSOC™ – programmable system-on-chip
- SNR – signal-to-noise ratio
- SSC - spread spectrum clock
- Widget – This CAPSENSE™ functional unit consists of one sensor or a group of similar sensors that implement(s) a specific higher-level functionality such as a Button, Proximity Sensor, Linear Slider, Radial Slider, Matrix Buttons, Touchpad, Low Power, and Liquid Level widget.

Reference documents

Refer to the following documents for more information as needed:

- [ModusToolbox™ tools package user guide](#)
- [Eclipse IDE for ModusToolbox™ user guide](#)
- [VS Code for ModusToolbox™ user guide](#)
- [CAPSENSE™ Tuner user guide](#)
- [Device Configurator user guide](#)
- [CAPSENSE™ Middleware API reference guide](#)
- [MTB CAT1 Peripheral driver library](#)
- [MTB CAT2 Peripheral driver library](#)
- Device datasheets
- Device technical reference manuals

Table of contents

Table of contents

	About this document	1
	Table of contents	3
1	Overview	5
1.1	Supported middleware	5
2	Launch the CAPSENSE™ Configurator	6
2.1	From the Device Configurator	6
2.2	make command	7
2.3	VS Code and Eclipse IDE	7
2.4	Executable (GUI)	8
2.5	Executable (CLI)	8
2.6	Parallel design	9
3	Quick start	10
4	Code generation	11
5	GUI description	12
5.1	Tabs	13
5.2	Toolbar	13
6	Basic tab [all gen]	14
6.1	Widget Type [all gen]	14
6.2	Widget Name [all gen]	16
6.3	Widget Sensing Method [all gen]	16
6.4	Tuning Mode	16
6.5	Widget Sensing Element(s) [all gen]	17
6.6	Touch Sensitivity [all gen]	18
6.7	Miscellaneous controls [all gen]	18
7	Advanced tab [all gen]	19
7.1	General subtab [various gen]	19
7.2	CSD Settings subtab [various gen]	27
7.3	CSX Settings subtab [various gen]	31
7.4	ISX Settings subtab [5th gen LP]	33
7.5	Widget Details subtab [various gen]	34
8	Pins tab [4th gen]	60
9	Scan Configuration tab [5th gen LP], [5th gen]	61
9.1	Widgets tree	62
9.2	Widgets configuration pane	62
9.3	Summary table	63
9.4	Detailed report / Low power detailed report	63



Table of contents

10	Known Issues	65
11	Version changes	66
	Revision history	69
	Disclaimer	70


1 Overview

1 Overview

CAPSENSE™ is our capacitive sensing solution used in a variety of applications including home appliances, automotive, IoT, and industrial applications. CAPSENSE™ supports multiple interfaces (widgets) using the CSD, CSX, and ISX sensing methods ([Widget Sensing Method \[all gen\]](#)) with robust performance.

The CAPSENSE™ Configurator is part of a collection of tools included with ModusToolbox™. Use it to create and configure CAPSENSE™ widgets, and generate code to control the application firmware. There is a separate CAPSENSE™ Tuner application for easy tuning, testing, and debugging.

The CAPSENSE™ Configurator supports all PSOC™ 6 and PSOC™ 4 families with the CSD HW block, the PSOC™ 4 MAX family with the MSC HW block, and the PSOC™ 4000T and 4100TP families with the MSCLP HW block. Each block – the [4th gen], [5th gen], and [5th gen LP] sections respectively – is configured differently.

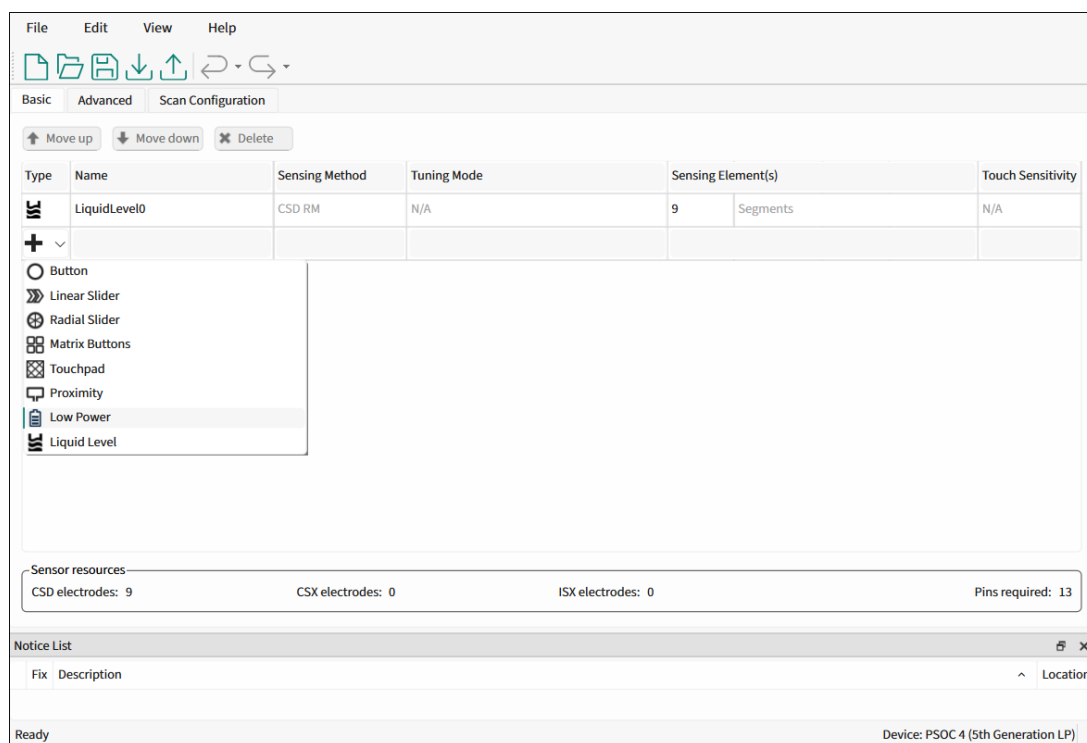

1.1 Supported middleware

Name	Version	Link
CAPSENSE™ Middleware Library	2.0, 2.10, 3.0, 4.0, 5.0, 6.10, 7.0, 8.0	https://github.com/Infineon/capsense

2 Launch the CAPSENSE™ Configurator

2 Launch the CAPSENSE™ Configurator

There are several ways to launch the CAPSENSE™ Configurator, and those ways depend on how you use the various tools in ModusToolbox™. However, the easiest way is to launch it using the Device Configurator because you can configure the rest of the parameters for your application right there. Refer to [Device Configurator user guide](#) for more details.


2.1 From the Device Configurator

You can launch the CAPSENSE™ Configurator by using the Device Configurator. The Device Configurator displays information based on the *design.modus* file. When you open the CAPSENSE™ Configurator from the Device Configurator, information about the device and the application is passed to the CAPSENSE™ Configurator. When you save changes in the CAPSENSE™ Configurator, it updates/generates a *design.cycapsense* configuration file in the same location as the *design.modus* file. For information about how to launch the Device Configurator, refer to the [Device Configurator user guide](#).


The process to launch the CAPSENSE™ Configurator from the Device Configurator differs slightly depending on the hardware block:

- The 4th generation CAPSENSE™ – one CSD resource
- The 5th generation CAPSENSE™ – two or more MSC resources
- The 5th generation LP CAPSENSE™ – one MSCLP resource


1. On the **Peripherals** tab, select the **CSD (CapSense)** resource or the **CapSense** and one or more **MSC** or **MSCLP** resources, as applicable for your device.

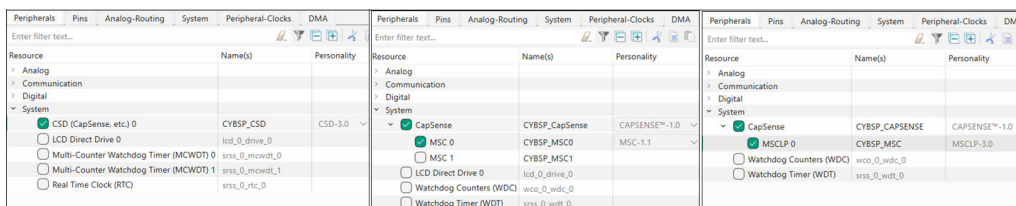

2. (Skip this step for MSCLP). On the **Parameters** pane, select an appropriate input **Clock** for **CSD (CapSense)** and **CapSense** respectively.

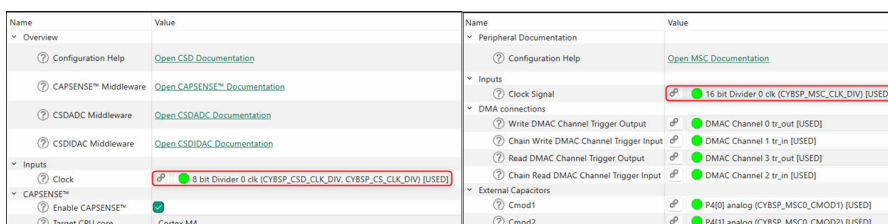

3. For the MSC and MSCLP HW blocks, select the **CapSense** resource category on the **Peripherals** tab.

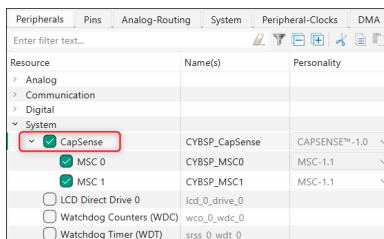

4. On the **Parameters** pane, click the **Launch CAPSENSE™ Configurator** button.

2 Launch the CAPSENSE™ Configurator

Name	Value	Name	Value
Overview		Peripheral Documentation	
Configuration Help	Open CSD Documentation	Configuration Help	Open MSC Documentation
CAPSENSE™ Middleware	Open CAPSENSE™ Documentation	Inputs	
CSDADC Middleware	Open CSDADC Documentation	Clock Signal	16 bit Divider 0 clk (CYBSP_MSC_CLK_DIV) [USED]
CSDIDAC Middleware	Open CSDIDAC Documentation	DMA connections	
Inputs		Write DMA Channel Trigger Output	DMA Channel 0 tr_out [USED]
Clock	8 bit Divider 0 clk (CYBSP_CSD_CLK_DIV, CYBSP_CS_CLK_DIV) [USED]	Chain Write DMA Channel Trigger Input	DMA Channel 1 tr_in [USED]
Enable CAPSENSE™	<input checked="" type="checkbox"/>	Read DMA Channel Trigger Output	DMA Channel 3 tr_out [USED]
Target CPU core	Cortex M4	Chain Read DMA Channel Trigger Input	DMA Channel 2 tr_in [USED]
		External Capacitors	
		Cmod1	P4[0] analog (CYBSP_MSC0_CMOD1) [USED]
		Cmod2	P4[1] analog (CYBSP_MSC0_CMOD2) [USED]

2.2 make command

As described in the [ModusToolbox™ tools package user guide](#) "ModusToolbox™ Build System" chapter, you can run numerous make commands in the application directory, such as launching the CAPSENSE™ Configurator. After you have created a ModusToolbox™ application, navigate to the application directory and type the following command in the appropriate bash terminal window:

```
make capsense-configurator
```

This command opens the CAPSENSE™ Configurator GUI for the specific application in which you are working.

2.3 VS Code and Eclipse IDE

VS Code and Eclipse have tools to launch the CAPSENSE™ Configurator from within an open application. Refer to the applicable user guide for more details:

- [VS Code for ModusToolbox™ user guide](#)
- [Eclipse IDE for ModusToolbox™ user guide](#)


2 Launch the CAPSENSE™ Configurator

2.4 Executable (GUI)

If you don't have an application or if you just want to see what the configurator looks like, you can launch the CAPSENSE™ Configurator GUI by running its executable as appropriate for your operating system. By default, it is installed here:

```
<install_dir>\\ModusToolbox\\packs\\ModusToolbox-Multi-Sense-Pack\\tools\\capsense-configurator
```

When opened this way, the CAPSENSE™ Configurator GUI opens blank without any information.

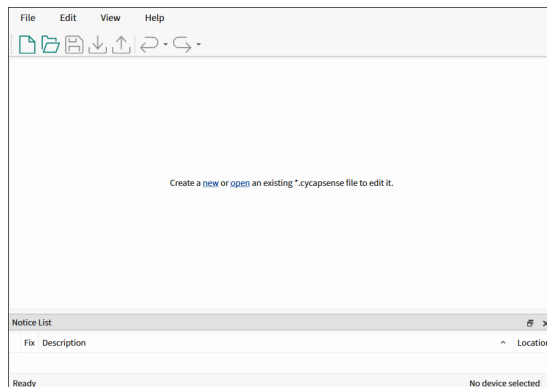

You must open an existing *.cycapsense file or create a new one for the application in which you want to configure CAPSENSE™, and it must be in the same directory as the *design.modus* file.

2.5 Executable (CLI)

You can run the capsense-configurator executable from the command line. There is also a capsense-configurator-cli executable, which regenerates source code based on the latest configuration settings from a command-line prompt or from within batch files or shell scripts. The exit code for the capsense-configurator-cli executable is zero if the operation is successful, or non-zero if the operation encounters an error. To use the capsense-configurator-cli executable, you must provide at least the --config argument with a path to the configuration file.

For details about command-line options, run the capsense-configurator or capsense-configurator-cli executable using the -h option:

Provides the command-line interface for generating CAPSENSE(TM) Configurator output files.

Options:

-?, -h, --help	Displays help on commandline options.
--help-all	Displays help including Qt specific options.
-v, --version	Displays version information.
-c, --config <config_file>	Path to the configuration file.
-o, --output-dir <dir>	The path to the generated source directory. It is either an absolute path or a path relative to the configuration file parent directory.
--clean	Removes the generated files from the output folder.

2 Launch the CAPSENSE™ Configurator

2.6 Parallel design

With Device Configurator

You can simultaneously open the CAPSENSE™ and Device Configurators and share data between these applications. The introduced "edit-lock" mechanism takes over the ownership of the write operation and allows only one application to make changes to the *design.modus* file once until the save-to-disk operation is complete. The *design.modus* file-related changes made in one application are reflected in the other opened applications.

With CAPSENSE™ Tuner

You can simultaneously open the CAPSENSE™ Configurator and Tuner to work with the same <file_name>.cycapsense configuration file. To get the values in the CAPSENSE™ Configurator, which were updated in the CAPSENSE™ Tuner, use the **Import** option or reopen the CAPSENSE™ Configurator.

3 Quick start

3 Quick start

This section provides a simple workflow for how to use the CAPSENSE™ Configurator.

1. From the Eclipse IDE, create a CAPSENSE™ application that provides simple [CAPSENSE™ Buttons and Slider \[4th gen\]](#), [MSC CAPSENSE™ Button Tuning \[5th gen\]](#), and [MSCLP CAPSENSE™ low-power proximity tuning \[5th gen LP\]](#) examples.
2. Launch the Device Configurator. Refer to the [Device Configurator user guide](#).
3. Enable and configure a communication peripheral. The examples use an SCB configured as EZI2C.
4. Launch the CAPSENSE™ Configurator.
5. Add and configure widgets on the [Basic tab \[all gen\]](#).
6. Configure parameters on the [Advanced tab \[all gen\]](#).
7. [4th gen] Assign pins on the [Pins tab \[4th gen\]](#).
8. [5th gen] Assign channels, pins, and slots on the [Scan Configuration tab \[5th gen LP\], \[5th gen\]](#).
9. [5th gen LP] Assign pins and slots on the [Scan Configuration tab \[5th gen LP\], \[5th gen\]](#)
10. Save to generate code.
11. Include `cycfg_capsense.h` in the `main.c` file.
12. Build the application in the Eclipse/VS Code, and program the device.
13. Launch the CAPSENSE™ Tuner.

4 Code generation

4 Code generation

The CAPSENSE™ Configurator generates .c and .h files into directory *GeneratedSource* next to the *.cycapsense file, which contains the user configuration. These files – *cycfg_capsense.h*, *cycfg_capsense.c*, *cycfg_capsense_defines.h*, *cycfg_capsense_tuner_regmap.h* – contain relevant firmware used for the CAPSENSE™ Middleware configuration and operation. The directory contains the necessary source (.c) and header (.h) files for the generated firmware, which uses the relevant driver APIs to configure the hardware.

The file *cycfg_capsense_defines.h* is required for the CAPSENSE™ Middleware to build successfully. It must be located in the *GeneratedSource* directory when the CAPSENSE™ Middleware is included in the application.

The tool generates code every time you save the configuration file. Code can be generated during the application build if it is missing or out-of-date.

5 GUI description

5 GUI description

The CAPSENSE™ Configurator GUI contains menus, [toolbar](#), and [tabs](#) to configure CAPSENSE™ settings, as well as **Notice List** and **Status bar** to provide indications.

Menus

File

- **New*** – Creates a new file with new configuration.
- **Open...*** – Opens a specified <file_name>.cycapsense configuration file. The current file, if any, will be closed.
- **Close*** – Closes the current file.
- **Save** – Saves the current configuration file and generates CAPSENSE™ middleware configuration code. If there are errors in the application, a dialog will indicate such.
- **Open in System Explorer** – This opens your computer's File Explorer browser to the folder that contains the *.cycapsense file.
- **Import...** – Imports a specified configuration file based on the *design.modus* file loaded before.
- **Export...** – Exports the current configuration file into a specified file.
- **Export Register Map to PDF...** – Exports the current configuration register map in the PDF format for the latest version of the middleware available on the date of the CAPSENSE™ Configurator release.
- Recent files ** – Shows recent files that you can open directly.
- **Exit** – Closes the configurator. You will be prompted to save any pending changes.

Note: * – The menu item is locked when the application is launched from the ModusToolbox™ Eclipse IDE.

Note: ** – The menu item is not available when the application is launched from the ModusToolbox™ Eclipse IDE.

Edit

- **Undo** – Undoes the last action or sequence of actions.
- **Redo** – Redoes the last undone action or sequence of undone actions.

View

- **Notice List** – Hides or shows the Notice List pane. The pane displays by default.
- **Toolbar** – Hides or shows the Toolbar.
- **Reset View** – Resets the view to the default.

Help

- **View Help** – Opens this document.
- **About CAPSENSE™ Configurator** – Opens the About box for version information, with links to open <https://www.infineon.com> and the current session log files of the application and hardware configuration server.

Notice List

The **Notice List** pane combines notices (errors, warnings, tasks, and infos) from many places in the configuration into a centralized list. You can double-click a notice location to show the parameter causing the error or warning. For more information about the Notice List, refer to .

Status bar

The status bar displays various information about the file operation status. On the right side, it displays the selected device.

5 GUI description

5.1 Tabs

The CAPSENSE™ Configurator contains the tabs to provide access to specific parameters. Separate sections in this document provide more descriptions of these tabs.

- [Basic tab \[all gen\]](#)
- [Advanced tab \[all gen\]](#)
- [Pins tab \[4th gen\]](#)
- [Scan Configuration tab \[5th gen LP\], \[5th gen\]](#)

5.2 Toolbar


The toolbar contains buttons for the commands that duplicate the [Menus](#) items: **New**, **Open**, **Save**, **Import**, **Export**, **Undo/Redo** respectively.



6 Basic tab [all gen]

6 Basic tab [all gen]

The **Basic** tab¹⁾ defines the high-level middleware configuration. Use this tab to add various [Widget Type \[all gen\]](#) and assign [Widget Sensing Method \[all gen\]](#), [Tuning Mode](#), [Widget Sensing Element\(s\) \[all gen\]](#), and [Touch Sensitivity \[all gen\]](#) for each widget.

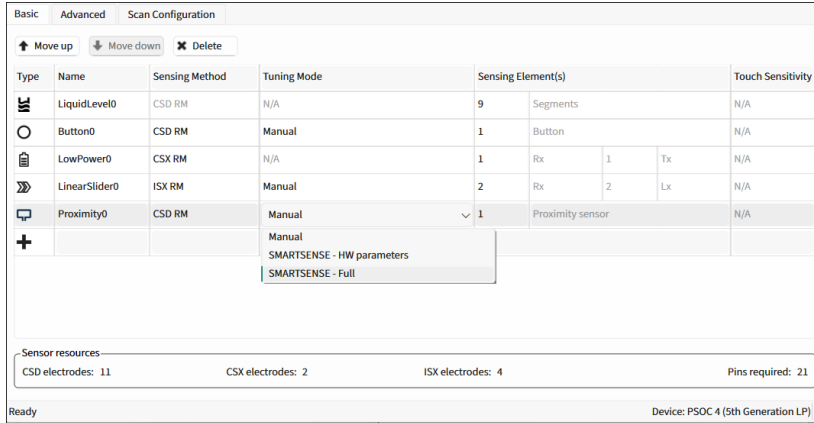

Type	Name	Sensing Method	Tuning Mode	Sensing Element(s)	Touch Sensitivity
	LiquidLevel0	CSD RM	N/A	9 Segments	N/A
	Button0	CSD RM	Manual	1 Button	N/A
	LowPower0	CSX RM	N/A	1 Rx 1 Tx	N/A
	LinearSlider0	ISX RM	Manual	2 Rx 2 Lx	N/A
	Proximity0	CSD RM	Manual	1 Proximity sensor	N/A

Sensor resources
CSD electrodes: 11 CSX electrodes: 2 ISX electrodes: 4 Pins required: 21

Ready Device: PSOC 4 (5th Generation LP)

The following sections contain the descriptions of the various **Basic** tab parameters.

6.1 Widget Type [all gen]

A widget is one sensor or a group of sensors that perform(s) specific user-interface functionality.

Refer to section [Widget Sensing Method \[all gen\]](#) for information on the supported sensing methods of the widgets.

The widgets types:

- **Button** – One or more sensors. Each sensor in the widget can detect the two states — presence or absence — of a finger on the sensor.
- **Linear Slider** – More than two sensors arranged in the specific order to detect the presence and movement of a finger on a linear axis. If a finger is present, Linear Slider detects the finger physical position – single axis position. Note that the CSX Linear Slider is supported only by CAPSENSE™ Middleware 3.0 and later.
- **Radial Slider** – More than one sensor arranged in the circular order to detect the presence and radial movement of a finger. The Radial Slider detects the present finger physical position.
- **Matrix Buttons** – Two or more sensors arranged in the specific horizontal and vertical order to detect the presence or absence of a finger on the intersections of vertically and horizontally arranged sensors. If M and N are the numbers of the sensors in the horizontal and vertical axis respectively, the M x N intersection positions total can detect a finger touch. When using the CSD sensing method, a simultaneous finger touch on more than one intersection is invalid and produces invalid results. This limitation does not apply for the CSX sensing method where all intersections can detect a valid touch simultaneously.
- **Touchpad** – Multiple sensors arranged in the specific horizontal and vertical order to detect the presence or absence of a human finger. If a finger is present, the widget will detect both X and Y axis physical position of the touch. The CSD sensing method supports the detection of up to 2 simultaneous touches (when Advanced Centroid is enabled). The CSX sensing method supports the detection of up to 3 simultaneous finger touches.
- **Proximity Sensor** – One or more sensors. Each sensor in the widget can detect the proximity of conductive objects, such as a human hand or finger to the sensors. The proximity sensor has two thresholds:
 - [Proximity touch threshold](#) – To detect a finger touch on the sensor.
 - [Proximity threshold](#) – To detect an approaching hand or finger.

¹ [all gen] means that this applies to all CAPSENSE™ generations.

6 Basic tab *[all gen]*

- **Low Power** *[5th gen LP]* – One or more sensors scanned in LP-AoS (Low Power-Always-on-Sensing) power mode in MSCLP devices. LP-AoS mode is capable of scanning and processing a widget while the device is in Deep Sleep. It wakes up the device on a touch detection or on a timeout.
- **Liquid Level** *[5th gen LP]* – Enables the Liquid Level algorithm. Calculates a liquid level including foam.

Note: *All the widgets are deemed active, except the Low Power widget.*

6 Basic tab [all gen]

6.2 Widget Name [all gen]

A widget name can be defined to aid in referring to a specific widget in a design. A widget name does not affect functionality or performance. A widget name is used throughout source code to generate macro definitions. A maximum of 255 alphanumeric characters (the first letter must be an alphabetic character) is acceptable for a widget name.

6.3 Widget Sensing Method [all gen]

The parameter to select Sensing Method for each widget: CSD, CSX, ISX sensing methods – Cypress-Semiconductor-patented methods to perform self- or mutual-capacitance measurement.

Widget type	CSD	CSX	ISX
Button	√	√	√
Linear Slider	√	√	√
Radial Slider	√		
Matrix Buttons	√	√	
Touchpad	√	√	
Proximity	√		√
Low Power	√	√	√
Liquid Level	√		

6.4 Tuning Mode

Use the **Tuning mode** field to select the sensing method for which you want to configure [SMARTSENSE](#). You can configure it using auto-tuning or manually.

Note: *The selected tuning mode will be applied to all widgets that use it as the sensing method.*

The auto-tuning options are **SMARTSENSE – HW parameters** and **SMARTSENSE – Full**.

The **Manual** option means that SMARTSENSE auto-tuning is disabled. The hardware and threshold parameters are tuned manually. This mode consumes the lowest memory and CPU process-time.

6.4.1 SMARTSENSE

Auto-tuning is a process of finding appropriate values for configurable parameters for proper functionality and optimized performance of the CAPSENSE™ system. SMARTSENSE auto-tuning is an algorithm embedded in the CAPSENSE™ middleware. The algorithm automatically finds optimum values for configurable parameters based on the hardware properties of capacitive sensors. This allows the user to avoid the manual tuning process.

Configurable parameters that affect the operation of the sensing hardware are called hardware parameters. Parameters that affect the operation of the touch-detection firmware algorithm are called threshold parameters.

You can enable SMARTSENSE separately for CSD or ISX sensing method, active widgets and Low Power widgets.

SMARTSENSE – Full

This mode is the quickest way to tune a design. Most hardware and threshold parameters are tuned automatically by the middleware and the Configurator GUI displays them as Set by SMARTSENSE mode. Note that Full auto-tuning mode is not available for Low Power widgets.

6 Basic tab *[all gen]*

SMARTSENSE – HW parameters

In this mode, the hardware parameters are set automatically by the middleware. The threshold parameters are set manually by the user. This mode consumes less memory and CPU processing time – thus, consumes lower than average power.

6.5 Widget Sensing Element(s) *[all gen]*

A sensing element refers to the sensing terminals assigned to port pins to connect to physical sensors on a user-interface panel (such as a pad or layer on a PCB, ITO, or FPCB). For the description of the elements, refer to sections [Widget Sensing Method *\[all gen\]*](#) and [Widget Type *\[all gen\]*](#).

The following element numbers are supported by the CSD/CSX/ISX sensing methods:

Sensing element	Sensing method		
	Button	CSX	ISX
Button	Supports 1 to 64 sensors within a widget.	Supports 1 to 64 Rx electrodes (for 1 to 64 sensors) and Tx is fixed to 1.	Supports 1 to 64 Rx and Lx electrodes.
Linear Slider	Supports 2 (5 for diplexed) to 64 segments within a widget.	Supports 2 (5 for diplexed) to 64 Rx electrodes and Tx is fixed to 1.	Supports 2 (5 for diplexed) to 64 Rx and Lx electrodes.
Radial Slider	Supports 3 to 64 segments within a widget.		
Matrix Buttons	Supports 2 to 64 rows and columns.	Supports 2 to 64 Tx and Rx electrodes.	
Touchpad	Supports 2 to 64 rows and columns.	Supports 2 to 64 Tx and Rx electrodes. The total intersections (node) number is equal to $Rx \times Tx$.	
Proximity	Supports 1 to 64 rows and columns.		Supports 3 to 64 Tx and Lx electrodes.
Low Power	Supports 1 to 64 rows and columns.	Supports 1 to 64 Rx electrodes (for 1 to 64 sensors) and Tx is fixed to 1.	Supports 1 to 64 Rx and Lx electrodes.
Liquid Level	Supports 3 to 32 rows and columns.		

6 Basic tab *[all gen]*

6.6 Touch Sensitivity *[all gen]*

Touch sensitivity is defined as capacitance/inductance introduced by a user touch on the sensors. This parameter is used to indicate the sensitivity of the widget tuned by the **SMARTSENSE** algorithm.

Parameter	Description	
	Touch sensitivity	
	CSD (pF)	ISX (μH)
SMARTSENSE – Full	0.1-1	0.1-1
SMARTSENSE – HW parameters	0.02-20.48	0.02-20.48

CAPSENSE™ sensor sensitivity is inversely proportional to a touch sensitivity value. A smaller value of touch sensitivity provides higher sensitivity for a sensor. To detect a user touch on a thick overlay (4-mm plastic overlay), touch sensitivity is set to a small value – 0.1 pF, for example. For a sensor with a thin overlay or no overlay, the 0.1 pF touch sensitivity setting makes the sensor too sensitive and may cause false touches. For the robust operation, set the appropriate touch sensitivity value considering the sensor size and overlay thickness of the design. Refer to the [AN85951](#) and [AN239751](#) for more information.

6.7 Miscellaneous controls *[all gen]*

- **Move up / Move down** – Moves the selected widget up or down by one on the list. It defines the widget scanning order.
- **Delete** – Deletes the selected widget from the list.
- **CSD electrodes** – Indicates the total number of electrodes (port pins) used by the CSD widgets.
- **CSX electrodes** – Indicates the total number of electrodes (port pins) used by the CSX widgets.
- **ISX electrodes** – Indicates the total number of electrodes (port pins) used by the ISX widgets.
- **Pins required** – Indicates the total number of port pins required for the design. This does not include port pins used by other peripherals in the application or SWD pins in Debug mode. Pins required includes the number of CSD, CSX, and ISX, Cmod, Csh, Shield, CintA, and CintB electrodes.

7 Advanced tab [all gen]

7 Advanced tab [all gen]

The **Advanced** tab provides advanced configuration parameters. In **SMARTSENSE** mode, most of the advanced parameters are tuned automatically. Select Manual tuning to control and configure the CAPSENSE™ middleware parameters.

The parameters in the Advanced tab are systematically arranged in the following subtabs.


- **General subtab [various gen]²** – Contains the parameters common for all widgets irrespective of the sensing method used for the widgets.
- **CSD Settings subtab [various gen]** – Contains the parameters common for widgets that use the CSD sensing method. This subtab is relevant only if at least one widget uses the CSD sensing method.
- **CSX Settings subtab [various gen]** – Contains the parameters common for widgets that use the CSX sensing method. This subtab is relevant only if at least one widget uses the CSX sensing method.
- **ISX Settings subtab [5th gen LP]** – Contains the parameters common for widgets that use the ISX sensing method. This subtab is relevant only if at least one widget uses the ISX sensing method.
- **Widget Details subtab [various gen]** – Contains the parameters specific to widgets and/or sensors.

Note: Hover over the parameter value to display its description.

7.1 General subtab [various gen]

The **General** subtab contains the parameters common for all widgets irrespective of **Widget Sensing Method [all gen]** used for a widget.

5th generation LP CAPSENSE™

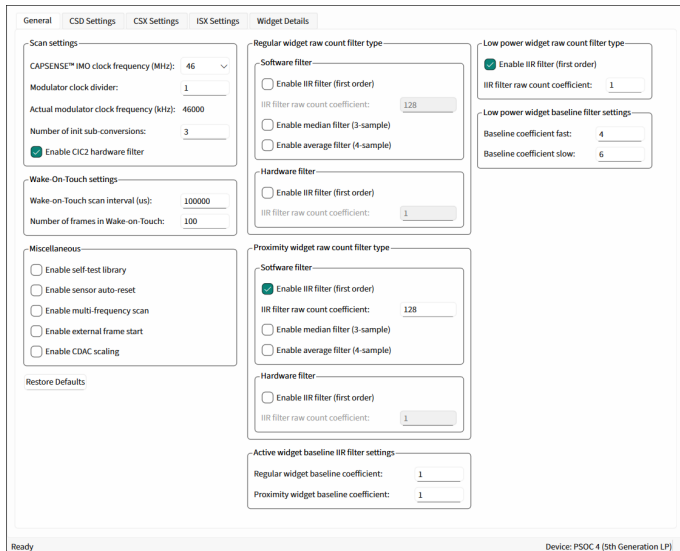

The screenshot shows the 'General' subtab of the CAPSENSE Configurator for a PSOC 4 (5th Generation LP) device. The interface is divided into several sections:


- Scan settings:** Includes CAPSENSE™ IMO clock frequency (46 MHz), Modulator clock divider (1), Actual modulator clock frequency (46000 kHz), Number of init sub-conversions (3), and an option to 'Enable CIC2 hardware filter' (checked).
- Wake-On-Touch settings:** Includes Wake-on-Touch scan interval (100000 us) and Number of frames in Wake-on-Touch (100).
- Miscellaneous:** Includes options for 'Enable self-test library', 'Enable sensor auto-reset', 'Enable multi-frequency scan', 'Enable external frame start', and 'Enable CDAC scaling'.
- Regular widget raw count filter type:** Includes 'Software filter' (Enable IIR filter (first order) checked, IIR filter raw count coefficient: 128, Enable median filter (3-sample), Enable average filter (4-sample)) and 'Hardware filter' (Enable IIR filter (first order), IIR filter raw count coefficient: 1).
- Low power widget raw count filter type:** Includes 'Enable IIR filter (first order)' (checked) and 'IIR filter raw count coefficient: 1'.
- Low power widget baseline filter settings:** Includes 'Baseline coefficient fast: 4' and 'Baseline coefficient slow: 6'.
- Proximity widget raw count filter type:** Includes 'Software filter' (Enable IIR filter (first order) checked, IIR filter raw count coefficient: 128, Enable median filter (3-sample), Enable average filter (4-sample)) and 'Hardware filter' (Enable IIR filter (first order), IIR filter raw count coefficient: 1).
- Active widget baseline IIR filter settings:** Includes 'Regular widget baseline coefficient: 1' and 'Proximity widget baseline coefficient: 1'.

At the bottom, there is a 'Restore Defaults' button and a status bar showing 'Ready' and 'Device: PSOC 4 (5th Generation LP)'.


² [various gen] means certain sections apply differently to various CAPSENSE™ generations.

7 Advanced tab [all gen]

5th generation CAPSENSE™

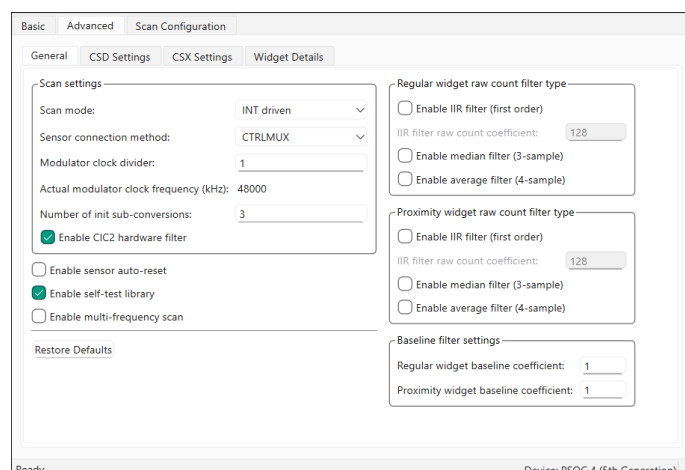

4th generation CAPSENSE™

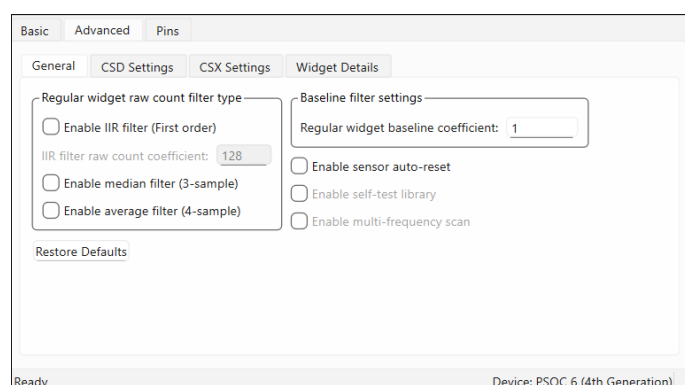

The **General** subtab contains the following sections:

7 Advanced tab [all gen]

7.1.1 Scan settings [5th gen LP], [5th gen]

Parameter/ Group name	Description	CAPSENSE™ generation	
		5 th LP	5 th
Scan mode	<p>Selects a sensor sequencing method.</p> <p>INT driven (default) – In Interrupt driven mode, the CPU extracts the results and programs the MSC HW for the next scan in the scope of the End of Scan interrupt servicing routine.</p> <p>CS-DMA – In Chained Scan DMA mode, the DMA functionality extracts the results and programs the MSC HW for the next scan. The CPU does not need to intervene between scans</p>		√
Sensor connection method	<p>Selects the method how to connect a sensor to the CAPSENSE™ HW block.</p> <p>AMUXBUS – In this mode, the CSD sensors, shield electrodes, and Rx electrodes are connected to the MSC HW using the analog bus and can be assigned to any GPIO which supports a connection with the analog bus for the particular device.</p> <p>CTRLMUX (default)– In this mode, the CSD sensors, shield electrodes, and Rx electrodes are connected to the MSC HW using the direct connection and can be assigned to the dedicated pads only.</p>		√
CAPSENSE™ IMO clock frequency (MHz)	The frequency of the CAPSENSE™ IMO clock.	√	
Modulator clock divider	Selects the Modulator clock divider used for the CSD, CSX, and ISX sensing methods (Widget Sensing Method [all gen]). This divider defines the operating frequency of the MSC block.	√	√
Actual modulator clock frequency (kHz)	This field shows the real ModClk, which depends on the PeriClk and selected Modulator clock divider .	√	√
Number of init sub-conversions	Selects the number of initialization sub-conversions at the start of the scan. This part of scan is intended to ensure proper initialization of CAPSENSE™ hardware and does not perform the raw count measurement.	√	√
Enable CIC2 hardware filter	The cascaded integrator-comb 2 (CIC2) filter is a second-order digital low-pass (decimation) filter for delta-sigma converters. It provides a higher resolution result for the equivalent scan time. MSCLP has a built-in CIC2, which improves the effective resolution and thereby the SNR for a given scan period.	√	√

7.1.2 Wake-on-Touch settings [5th gen LP]

Parameter/Group name	Description
Wake-on-Touch scan interval (us)	The desired scan interval in Wake-on-Touch mode. The real interval depends on ILO frequency which have a big tolerance (above +/- 50%), see device datasheets.
Number of frames in Wake-on-Touch	The maximum number of frames in Wake-on-Touch mode under no touch. The valid range is [1..65535].

7 Advanced tab [all gen]

7.1.3 Miscellaneous [various gen]

The miscellaneous settings are applicable to the whole CAPSENSE™ middleware behavior.

Parameter/ Group name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Enable sensor auto-reset	<p>When enabled, the baseline is always updated and when disabled, the baseline is updated only when the difference between the baseline and raw count is less than the noise threshold.</p> <p>When enabled, the feature prevents the sensors from permanently turning on when the raw count accidentally rises due to a large power supply voltage fluctuation or other spurious conditions.</p>	√	√	√
Enable self-test library	<p>The CAPSENSE™ middleware provides the Built-In Self-Test (BIST) library to support the design compliant with the safety-integrity level of Class B (IEC-60730) white goods and automotive, and design for manufacturing testing. The library includes a set of tests for board validation, middleware configuration, and operation. The feature includes safety functions to reduce the risk, validate boards at manufacturing, and verify the middleware operation at run-time.</p> <p>The BIST tests are classified into two categories:</p> <p>Hardware tests – To confirm the CAPSENSE™ HW block and sensor hardware (external to chip) function correctly:</p> <ul style="list-style-type: none"> • Chip analog-routing verification • Pin faults checking • PCB-trace opens/shorts checking • Integration capacitors and sensors capacitance measurement • VDDA measurement <p>FW tests – To confirm the integrity of data used for decision-making on the sensor status:</p> <ul style="list-style-type: none"> • Global and widget specific configuration verification • Sensor baseline duplication • Sensor raw count and baseline are in the specified range • The application layer is responsible for running BIST tests. 	√	√	√

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Enable multi-frequency scan	<p>The MFS provides superior immunity against external noises and is suitable for applications subjected to harsh environments.</p> <p>MFS implementation for the 4th generation CAPSENSE™</p> <p>When the MFS is enabled, each sensor is scanned three times with three different sensor frequencies. The base frequency F0 (zero channel) is the nominal sensor frequency. The second F1 and the third F2 frequencies are obtained by increasing the sense clock-divider by 1 and by 2 correspondingly.</p> <p>SMARTSENSE and the multi-frequency features are mutually exclusive. If SMARTSENSE is enabled, MFS cannot be enabled.</p> <p>Note: <i>Enabling the MFS increases RAM usage by three times approximately.</i></p> <p> <i>Enabling the MFS increases the sensor scan duration by three times.</i></p> <p>MFS implementation for the 5th generation and 5th generation LP CAPSENSE™</p> <p>When MFS is enabled for a particular widget, the Configurator creates two supplementary widgets with the same properties but different CSD Sense clock divider or CSX Tx clock divider. The supplementary widgets have “_F1” and “_F2” suffixes in their names. Their sensors are ganged with the main widget sensors. The slot assignment should be performed manually on the Scan Configuration tab [5th gen LP], [5th gen].</p> <p>The Enable multi-frequency scan check box displays as checked when the MFS is enabled for all widgets, and partially checked when the MFS is enabled only for some widgets. You can enable or disable the MFS for a particular widget on the Widget Details subtab [various gen].</p> <p>SMARTSENSE * and the multi-frequency features are mutually exclusive. If the SMARTSENSE is enabled, MFS cannot be enabled for CSD widgets.</p> <p>Note: <i>* 5th generation LP allows you to combine MFS with SMARTSENSE – HW parameters mode.</i></p>	√	√	√
Enable external frame start	<p>Enables the external frame scan only under the rising edge of the signal on the dedicated pin (see Scan Configuration tab [5th gen LP], [5th gen]). The constraints for the external frame signal are as follows:</p> <ul style="list-style-type: none"> • A period between the two subsequent EFS pulses is larger than the full scan duration including processing. An EFS signal that arises during the scan will be stored and the next scan will start immediately even if the processing has not completed yet. • The minimal pulse width is longer than 2 ILO cycles. • The maximal pulse width is shorter than frame duration. 	√		

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Enable CDAC Scaling	Applicable only for the devices having factory programmed CDAC trim code in SFLASH (Example: PSOC™ 4100-TP).	√		

7.1.4 Regular widget – raw count filter parameters [various gen]

The regular widget raw count filter applies to raw counts of sensors belonging to non-proximity widgets. These parameters can be enabled only when one or more non-proximity widgets are added to the [Basic tab \[all gen\]](#). The filter algorithm is executed when any processing function is called by the application layer. When enabled, each filter consumes RAM to store a previous raw count (filter history). If multiple filters are enabled, the total filter history correspondingly increases so that the size of the total filter history is equal to a sum of all enabled filter histories.

Software filter [all gen]

Parameter/Group name	Description
Enable IIR filter (First order)	<p>Enables the IIR filter (See equation below) with a step response similar to an RC low-pass filter, thereby passing the low-frequency signals (finger touch responses).</p> $Output = \frac{N}{K} \times input + \frac{(K - N)}{K} \times previousOutput$ <p>where: K is always 256. N is the IIR filter raw count coefficient selectable from 1 to 128 in the Configurator. A lower N (set in the IIR filter raw count coefficient parameter) results in lower noise, but slows down the response. This filter eliminates high-frequency noise. Consumes 2 bytes of RAM per each sensor to store a previous raw count (filter history).</p>
IIR filter raw count coefficient	<p>The coefficient (N) of IIR filter for raw counts is explained in the Enable IIR filter (First order) parameter. The range of valid values: 1-128.</p>
Enable median filter (3-sample)	<p>Enables a non-linear filter that takes three of most recent samples and computes the median value. This filter eliminates spike noise typically caused by motors and switching power supplies. Consumes 4 bytes of RAM per each sensor to store a previous raw count (filter history).</p>
Enable average filter (4-sample)	<p>The finite-impulse response filter (no feedback) with equally weighted coefficients. It takes four of most recent samples and computes their average. Eliminates periodic noise (e.g. noise from AC mains). Consumes 6 bytes of RAM per each sensor to store a previous raw count (filter history).</p>

Notes:

If multiple filters are enabled, the execution order is as follows:

1. Median filter
2. IIR filter
3. Average filter

7 Advanced tab [all gen]

Hardware filter [5th gen LP]

Parameter/ Group name	Description
Enable IIR filter (First order)	Enables the hardware IIR filter for Low Power widgets. The design of these parameters is different from the regular widget raw count filter parameters. These dedicated parameters allow for setting Low Power filter configuration and behavior differently compared to the other widgets.
IIR filter raw count coefficient	
	$RawCount = \frac{1}{2^{iirRCcoef}} RawCount_{New} + \left(1 - \frac{1}{2^{iirRCcoef}}\right) RawCount_{Previous}$ <p>where,</p> <p><i>iirRCcoef</i> – IIR filter raw count coefficient; valid range: 1 to 8. A low coefficient means lower filtering; a higher coefficient means a higher response time.</p> <p>Note: There is no filtering for coefficient value “0”.</p>

7.1.5 Proximity widget – raw count filter parameters [various gen]

The proximity widget raw count filter applies to raw counts of sensors belonging to the proximity widgets, these parameters can be enabled only when one or more proximity widgets are added on the [Basic tab \[all gen\]](#).

Software filter [all gen]

Parameter/ Group name	Description
Enable IIR filter (First order)	The design of these parameters is the same as the Regular widget – raw count filter parameters [various gen] . The Proximity (Widget Type [all gen]) sensors require high-noise reduction. These dedicated parameters allow for setting the proximity filter configuration and behavior differently compared to other widgets.
IIR filter raw count coefficient	
Enable median filter (3-sample)	
Enable average filter (4-sample)	

Hardware filter [5th gen LP]

Parameter/ Group name	Description
Enable IIR filter (First order)	Enables the hardware IIR filter for Proximity widgets. The equation is the same as for hardware IIR filter for regular widgets.
IIR filter raw count coefficient	

7.1.6 Low power widget – raw count filter parameters [5th gen LP]

The Low Power widget raw count filter applies to raw counts of sensors belonging to Low Power widgets, these parameters can be enabled only when one or more Low Power widgets are added on the [Basic tab \[all gen\]](#).

7 Advanced tab [all gen]

Parameter/ Group name	Description
Enable IIR filter (First order)	Enables the hardware IIR filter for Low Power widgets. The design of these parameters is different from the regular widget raw count filter parameters. These dedicated parameters allow for setting Low Power filter configuration and behavior differently compared to the other widgets.
IIR filter raw count coefficient	
	$RawCount = \frac{1}{2^{iirRCcoef}} RawCount_{New} + \left(1 - \frac{1}{2^{iirRCcoef}}\right) RawCount_{Previous}$ <p>where, <i>iirRCcoef</i> – IIR filter raw count coefficient; the valid range: 1 to 8. A low coefficient means lower filtering, a higher coefficient – a higher response time.</p>
Baseline coefficient (fast)	Baseline IIR filter coefficient (fast) selection for sensors in Low Power widgets only. The range of valid values: 1-15. When the raw count starts increasing, the baseline value is updated quickly to attempt to track the raw count using <i>iirBLcoeffast</i> .
Baseline coefficient (slow)	Baseline IIR filter coefficient (slow) selection for sensors in Low Power widgets only. The range of valid values: 1-15. Once the noise threshold is exceeded, the baseline is updated slowly (using <i>iirBLcoefslow</i>) under raw count increase due to a touch or signal event.

7.1.7 Baseline filter settings / Active widget baseline filter settings [various gen]

The baseline filter settings are applied to all sensor baselines. But, filter coefficients for the proximity, regular, and Low Power widgets can be controlled independently from each other.

The design baseline IIR filter is the same as the [Enable IIR filter \(First order\)](#) parameter. But, filter coefficients can be separate for both baseline and raw count filters to produce a different roll-off. The baseline filter is applied to a filtered raw count (if the widget raw count filters are enabled).


Parameter/ Group name	Description	CAPSENSE™ generation		
		5th LP	5th	4th
Regular widget baseline coefficient	Select the Baseline IIR filter coefficient for sensors in non-proximity widgets. The range of valid values: 1-255.	√	√	√
Proximity widget baseline coefficient	The design of these parameters is the same as the Regular widget baseline coefficient , but with a dedicated parameter allows controlling the baseline update-rate of the proximity sensors differently compared to other widgets.	√	√	√

7 Advanced tab [all gen]

7.2 CSD Settings subtab [various gen]

Contains the parameters common for widgets that use the CSD sensing method ([Widget Sensing Method \[all gen\]](#)). This subtab is relevant only if at least one widget uses the CSD sensing method.

5th generation LP CAPSENSE™

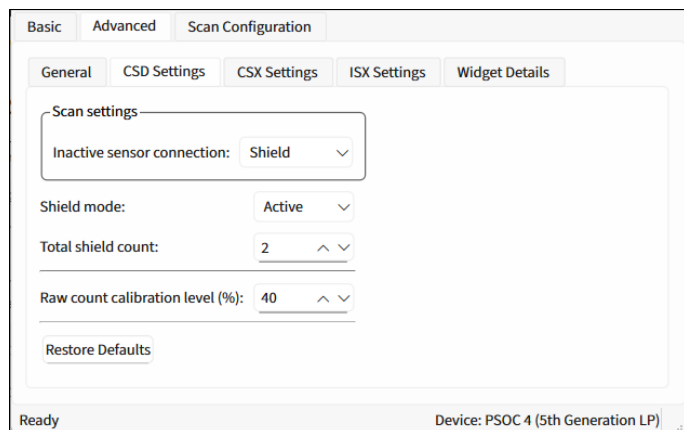


The screenshot shows the 'CSD Settings' subtab for a PSOC 4 (5th Generation LP) device. The 'Scan settings' section includes:

- Inactive sensor connection: Shield (dropdown)
- Shield mode: Active (dropdown)
- Total shield count: 2 (spinner)
- Raw count calibration level (%): 40 (spinner)
- Restore Defaults button

The status bar at the bottom indicates 'Ready' and 'Device: PSOC 4 (5th Generation LP)'.

5th generation CAPSENSE™

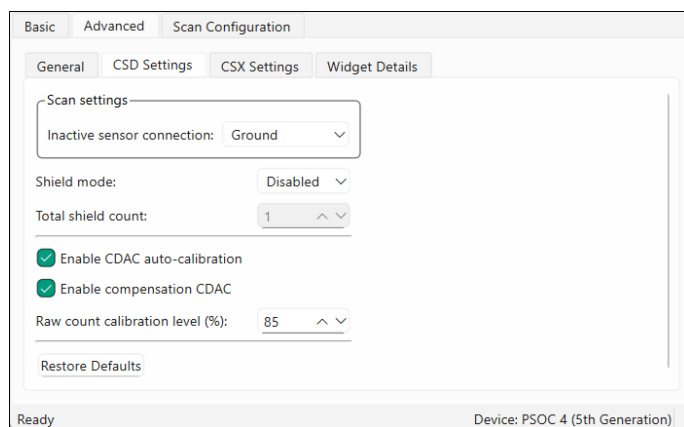


The screenshot shows the 'CSD Settings' subtab for a PSOC 4 (5th Generation) device. The 'Scan settings' section includes:

- Inactive sensor connection: Ground (dropdown)
- Shield mode: Disabled (dropdown)
- Total shield count: 1 (spinner)
- Enable CDAC auto-calibration (checked checkbox)
- Enable compensation CDAC (checked checkbox)
- Raw count calibration level (%): 85 (spinner)
- Restore Defaults button

The status bar at the bottom indicates 'Ready' and 'Device: PSOC 4 (5th Generation)'.

4th generation CAPSENSE™

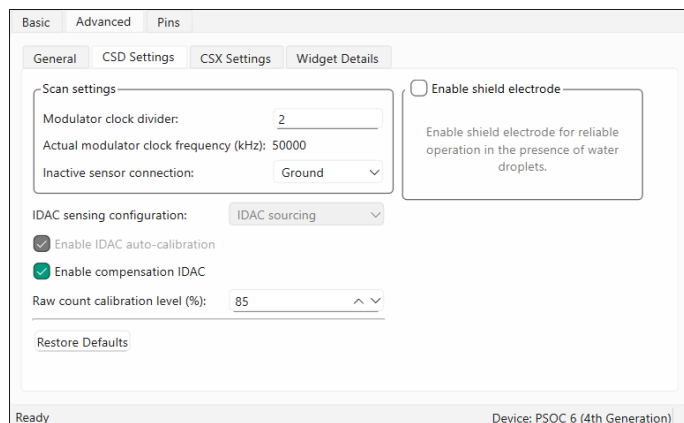

The screenshot shows the 'CSD Settings' subtab for a PSOC 6 (4th Generation) device. The 'Scan settings' section includes:

- Modulator clock divider: 2 (spinner)
- Actual modulator clock frequency (kHz): 50000 (text field)
- Inactive sensor connection: Ground (dropdown)
- IDAC sensing configuration: IDAC sourcing (dropdown)
- Enable IDAC auto-calibration (checked checkbox)
- Enable compensation IDAC (checked checkbox)
- Raw count calibration level (%): 85 (spinner)
- Restore Defaults button

There is also an 'Enable shield electrode' checkbox with a note: 'Enable shield electrode for reliable operation in the presence of water droplets.'

The status bar at the bottom indicates 'Ready' and 'Device: PSOC 6 (4th Generation)'.

7 Advanced tab [all gen]

7.2.1 CSD Settings subtab parameters [various gen]



The **CSD Settings subtab** contains the following parameters:

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Modulator clock divider	Selects the modulator clock divider used for the CSD sensing method (see Widget Sensing Method [all gen]). Defines the operating frequency of the CSD block.			√
Actual modulator clock frequency (kHz)	This field shows the real ModClk, which depends on the CSD peripheral clock and selected Modulator clock divider .			√
Inactive sensor connection	Selects the state of the sensor when it is not scanned. Ground (default) – Inactive sensors are connected to the ground. High-Z – Inactive sensors are floating (not connected to GND or Shield). Shield – Inactive sensors are connected to Shield. Ground is the recommended selection for this parameter when water tolerance is not required for the design. Select Shield when the design needs water tolerance or to reduce the sensor parasitic capacitance in the design.	√	√	√
IDAC sensing configuration	Selects the type of IDAC switching: IDAC Sourcing (default) – Sources current into the modulator capacitor (Cmod). The analog switches are configured to alternate between the Cmod and GND. IDAC Sourcing is recommended for most designs because of the better SNR. IDAC sinking – Sinks current from the modulator capacitor (Cmod). The analog switches are configured to alternate between V _{DD} and Cmod.			√
Enable IDAC auto-calibration	When enabled, values of the CSD widget IDACs are automatically set by the middleware. Select this parameter for robust operation and to enable SMARTSENSE .			√
Enable compensation IDAC	Used to compensate for sensor parasitic capacitance to improve performance. Enable it unless one IDAC is required for general purpose (other than CAPSENSE™) in the application.			√
Enable CDAC auto-calibration	When enabled, the values of the CSD widget CDACs are automatically set by the middleware. Select this parameter for robust operation.		√	
Enable compensation CDAC	Used to compensate for sensor parasitic capacitance to improve the system performance.		√	
Raw count calibration level	The raw count calibration level.	√	√	√

7 Advanced tab *[all gen]*

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Enable shield electrode	Used to reduce the sensor parasitic capacitance, enable water-tolerant CAPSENSE™ designs, and enhance the detection range for the Proximity (Widget Type [all gen]). When the shield electrode is disabled, configurable parameters associated with the shield electrode are hidden.			√
Enable shield tank (Csh) electrode	The shield tank capacitor is used to increase the drive capacity of the shield electrode driver. Enable it when the shield electrode capacitance is higher than 100 pF. The recommended value for a shield tank capacitor is 10nF/5V/X7R or an NP0 capacitor. The shield tank capacitor is not supported in configuration that includes both CSD and CSX sensing-based widgets.			√
Shield SW resistance	Select the resistance of switches to drive the shield electrode. The four options: Low; Medium (default); High; Low EMI.			√
Total shield count	Selects the number of shield electrodes required in the design. Most designs work with one dedicated shield electrode but, some designs require multiple dedicated shield electrodes to ease the PCB layout routing or to minimize the PCB area used for the shield layer. The minimum value is 0 (for example, shield signal could be routed to sensors using the Inactive sensor connection parameter) and the maximum value is equal to the total number of CAPSENSE™-enabled port pins available for the selected device.	√	√	√

7 Advanced tab [all gen]

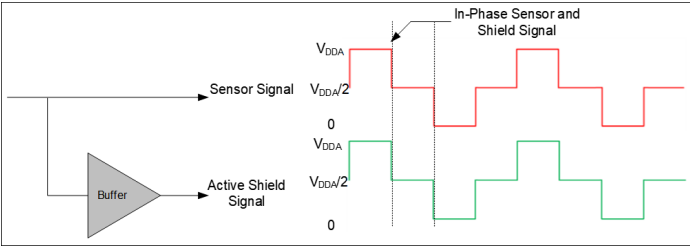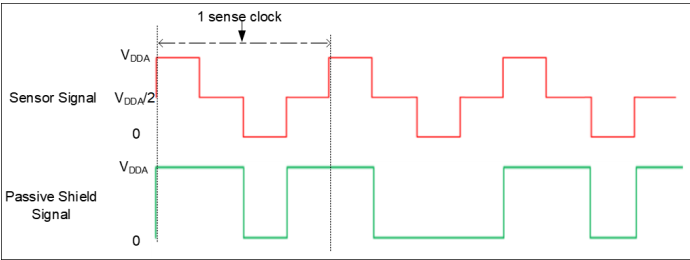Parameter name	Description	CAPSENSE™ generation		
		5th LP	5th	4th
Shield mode	<p>Selects the shield drive. The options:</p> <p>Disabled (default) – No shield. In this mode the configurable parameters associated with it are not applicable.</p> <p>Active – A shield circuit drives the shield electrode with a replica of the sensor signal. The internal buffer operational amplifier (opamp) is used to drive the $V_{DDA}/2$ voltage onto the shield pin during the corresponding phases. The Active shielding provides better capabilities in comparison to the Passive shielding.</p> <p>For high-performance applications, recommended the shield electrode capacitance less than 1.2nF.</p>  <p>Passive – In this mode the buffer is not used, instead the shield is switched between V_{DDA} and GND. The Passive shielding provides worse shielding capabilities in comparison to the Active shielding since it does not replicate the sensor signal. The Passive shielding is preferred for low power applications if high shielding performance is not critical.</p> 	✓	✓	

Commands:


- **Restore Defaults** – Restores parameters values on the current tab to their default values.

7 Advanced tab [all gen]

7.3 CSX Settings subtab [various gen]


Contains the parameters common for widgets that use the CSX sensing method (see [Widget Sensing Method \[all gen\]](#)). This subtab is relevant only if at least one widget uses the CSX sensing method.

5th generation LP CAPSENSE™

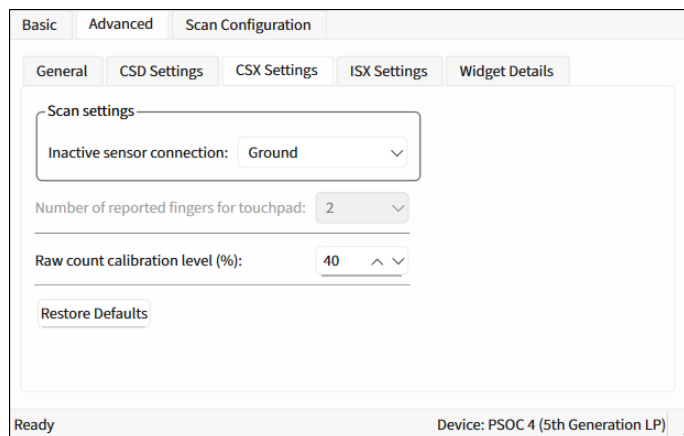


The screenshot shows the 'CSX Settings' subtab for a 'PSOC 4 (5th Generation LP)' device. The 'Scan settings' section includes a dropdown for 'Inactive sensor connection' set to 'Ground', a dropdown for 'Number of reported fingers for touchpad' set to '2', and a slider for 'Raw count calibration level (%)' set to '40'. A 'Restore Defaults' button is at the bottom. The status bar shows 'Ready' and 'Device: PSOC 4 (5th Generation LP)'.

5th generation CAPSENSE™

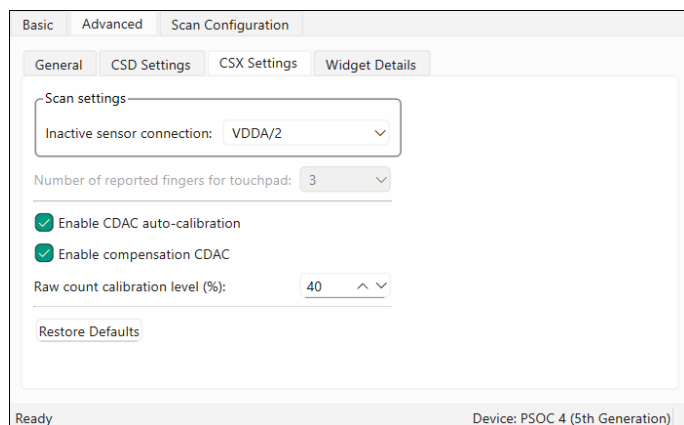

The screenshot shows the 'CSX Settings' subtab for a 'PSOC 4 (5th Generation)' device. The 'Scan settings' section includes a dropdown for 'Inactive sensor connection' set to 'VDDA/2', a dropdown for 'Number of reported fingers for touchpad' set to '3', and two checked checkboxes: 'Enable CDAC auto-calibration' and 'Enable compensation CDAC'. The 'Raw count calibration level (%)' slider is set to '40'. A 'Restore Defaults' button is at the bottom. The status bar shows 'Ready' and 'Device: PSOC 4 (5th Generation)'.

4th generation CAPSENSE™

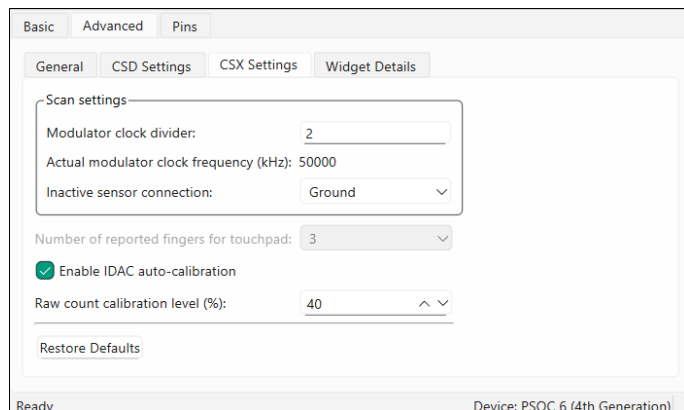

The screenshot shows the 'CSX Settings' subtab for a 'PSOC 6 (4th Generation)' device. The 'Scan settings' section includes a text input for 'Modulator clock divider' set to '2', a text input for 'Actual modulator clock frequency (kHz)' set to '50000', a dropdown for 'Inactive sensor connection' set to 'Ground', a dropdown for 'Number of reported fingers for touchpad' set to '3', and a checked checkbox for 'Enable IDAC auto-calibration'. The 'Raw count calibration level (%)' slider is set to '40'. A 'Restore Defaults' button is at the bottom. The status bar shows 'Ready' and 'Device: PSOC 6 (4th Generation)'.

7 Advanced tab [all gen]

7.3.1 CSX Settings subtab parameters [various gen]

The **CSX Settings** subtab contains the following parameters:

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Modulator clock divider	Selects the modulator clock divider used for the CSX sensing method (see Widget Sensing Method [all gen]). Defines the operating frequency of the CSX block. A higher modulator clock frequency reduces the sensor scan time, results in lower power, and reduces the noise in raw counts, so use the highest possible frequency.			√
Actual modulator clock frequency (kHz)	This field shows the real ModClk, which depends on the CSX peripheral clock and selected Modulator clock divider .			√
Inactive sensor connection	Selects the state of the sensor when it is not scanned. Ground (default) – Inactive sensors are connected to the ground. High-Z – Inactive sensors are floating (not connected to GND or Shield). VDDA/2 – Inactive sensors are connected to the VDDA/2 voltage level source.	√	√	√
		√	√	
Number of reported fingers for Touchpad	Sets the number of reported fingers for CSX Touchpad widgets only. The available options are from 1 to 3.	√	√	√
Enable IDAC auto-calibration	When enabled, IDAC values are automatically set by the middleware. Recommended to select the Enable IDAC auto-calibration for robust operation.			√
Enable CDAC auto-calibration	When enabled, the values of the CSX widget CDACs are automatically set by the middleware. Select this parameter for robust operation.		√	
Enable compensation CDAC	Used to compensate for sensor parasitic capacitance to improve the system performance.		√	
Raw count calibration level	The raw count calibration level in percentage for CSX widgets.	√	√	√


Commands:

- **Restore Defaults** – Restores parameters values on the current tab to their default values.

7 Advanced tab *[all gen]*

7.4 ISX Settings subtab *[5th gen LP]*

Contains the parameters common for widgets that use the ISX sensing method (see [Widget Sensing Method *\[all gen\]*](#)). This subtab is relevant only if at least one widget uses the ISX sensing method.

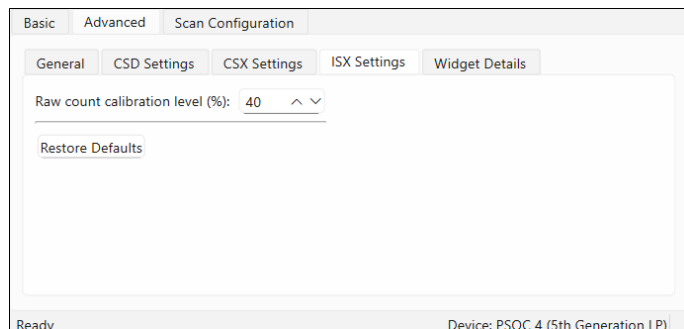

7.4.1 ISX Settings subtab parameters *[5th gen LP]*

The **ISX Settings** subtab contains the following parameters:

Parameter	Description
Raw count calibration level (%)	The raw count calibration level in percent.


Commands:

- **Restore Defaults** – Restores parameters values on the current tab to their default values.

7 Advanced tab [all gen]

7.5 Widget Details subtab [various gen]

Contains parameters specific to each widget and sensor. These parameters are set manually when **SMARTSENSE** is not enabled. The parameters are unique for each widget type. When a parameter is selected, its description displays on the panel below the parameters list.

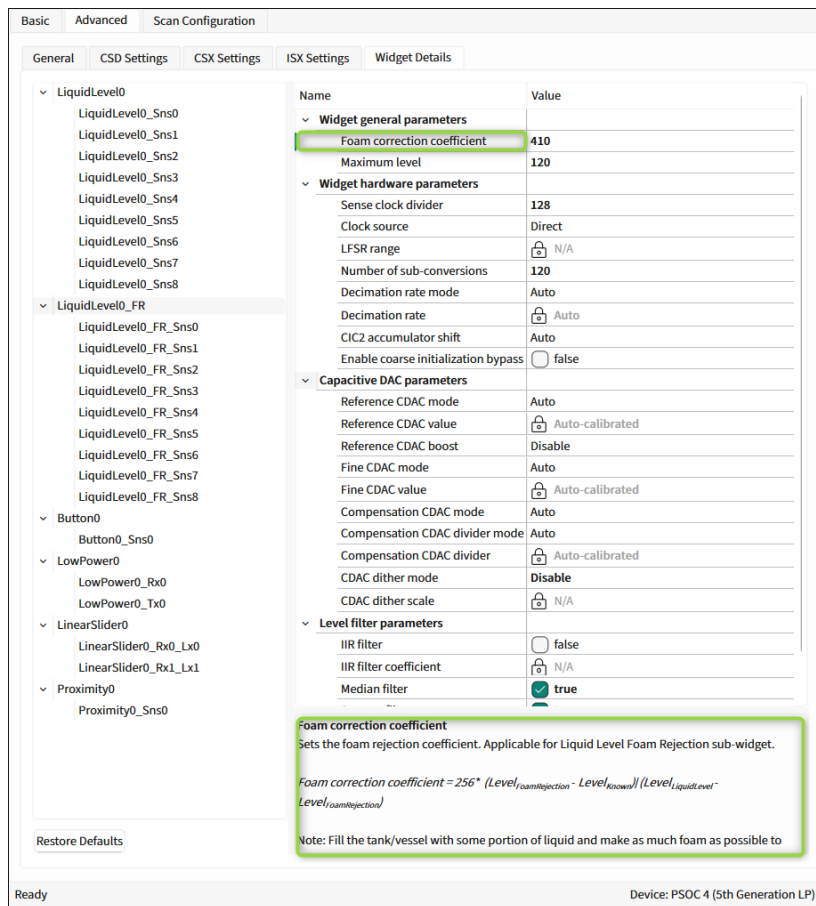

Commands:

- **Restore Defaults** – Restores parameters values on the current tab to their default values.

The **Widget Details** subtab contains the following parameters:

7.5.1 Widget general parameters [various gen]

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Diplexing	Enabling Diplexing allows doubling the linear slider physical touch sensing area by using the specific diplexing sensor pattern and without using additional port pins and sensors. Applicable for linear sliders only.	√	√	√
Maximum position	Represents the maximum Centroid position for the slider. A touch on the slider would produce a position value from 0 to the maximum position-value set. No Touch would produce 0x0000.	√	√	√

7 Advanced tab [all gen]

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Maximum X-axis position	Represents the maximum column (X-axis) Centroid position and row (Y-axis) Centroid positions for a touchpad. A touch on the touchpad would produce a position value from 0 to the maximum position set. No Touch would produce 0x0000.	√	√	√
Enable multi-frequency scan	Enables the multi-frequency scan for the current widget. Refer to Enable multi-frequency scan for details.	√	√	
Enable foam rejection	Set this parameter to true to create the Liquid Level Foam Rejection (FR) sub-widget, which calculates a liquid level excluding foam. Liquid Level FR sensors are ganged with the Liquid Level widget's sensors. Assign slots manually on the tab. Scan Configuration tab [5th gen LP], [5th gen]	√		
Maximum level	Represents the maximum measurable capacity of the sensor. The sensor produces the measured liquid level starting from value 0 to the maximum level set. The value range is 1-16384.	√		
Foam correction coefficient	<p>Set this parameter to true to create the Liquid Level Foam Rejection (FR) sub-widget, which calculates a liquid level excluding foam. Liquid Level FR sensors are ganged with the Liquid Level widget's sensors. Assign slots manually on the Scan Configuration tab [5th gen LP], [5th gen] tab.</p> <p>Sets the foam correction (rejection) coefficient. Displays when the Liquid level foam rejection widget is enabled. The foam rejection coefficient:</p> $256 \times \frac{Level_{FoamRejection} - Level_{known}}{Level_{LiquidLevel} - Level_{FoamRejection}}$ <p>where:</p> <p>$Level_{FoamRejection}$ is the level reported by the Liquid Level foam rejection widget – to obtain the correct result, set the foam rejection coefficient to "0".</p> <p>$Level_{LiquidLevel}$ is the level reported by the Liquid Level widget.</p> <p>$Level_{known}$ is the real liquid level in the tank without foam.</p> <p>Note: <i>To obtain better results, fill the tank with some liquid and create maximum foam.</i></p> <p>The value range is 0-4095.</p>	√		

7 Advanced tab [all gen]

7.5.2 Widget hardware parameters [various gen]

Note: All the Widget hardware parameters are set automatically when SMARTSENSE is enabled on Basic tab [all gen].

Parameter/ Group name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Touch sensitivity (pF/μH)	See Touch Sensitivity [all gen] for the description.	√	√	√
Sense clock divider	Sets the CSD Sense clock divider. For the 5 th generation CAPSENSE™, the value will be a multiple of 4. When SMARTSENSE is selected in Basic tab [all gen] , the Sense clock divider is automatically set by the middleware to an optimal value by following the 2*5*R*C rule for the 4 th generation CAPSENSE™ and 4*5*RC for the 5 generation CAPSENSE™ (refer to CAPSENSE™ design guide for more information on this rule) and this control is not editable.	√	√	√
Row sense clock divider	Sets the CSD Sense clock divider for row and column sensors of the Matrix Buttons and Touchpad (Widget Type [all gen]).	√	√	√
Column sense clock divider	For the 5 th generation CAPSENSE™, the value will be a multiple of 4.			
Tx clock divider	Sets the Tx clock divider for the CSX widgets. For the 5 th generation CAPSENSE™, the value will be a multiple of 2.	√	√	√

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation		
		5th LP	5th	4th
Sense clock source	<p>The Sense clock frequency is derived from the modulator clock frequency using a clock-divider and is used to sample the sensor. Both the clock source and clock divider are configurable.</p> <p>The Spread Spectrum Clock (SSC) provides a dithering clock source with a center frequency equal to the sense clock frequency. The Pseudo-Random Sequencer (PRS) clock source spreads the clock using the pseudo-random sequence and the Direct source disables both SSC and PRS sources and uses a fixed-frequency clock.</p> <p>Both PRS and SSC reduce the radiated noise by spreading the clock and improve the immunity against external noise. Using a higher number of bits of SSC and PRS lowers the radiation and increases the immunity against external noise.</p> <p>The following sources are available:</p> <ul style="list-style-type: none"> • Direct – PRS and SSC are disabled and a fixed clock is used. • PRS8 – The clock spreads using PRS to modulator clock / 256. • PRS12 – The clock spreads using PRS to modulator clock / 4096. • SSC6, SSC7, SSC9 and SSC10 – The clock spreads using from 6 to 10 bits of the sense-clock divider respectively. • Auto – The middleware automatically selects optimal SSC, PRS or Direct sources individually for each widget. The Auto is the recommended sense clock source selection. <p>The rules and recommendations for the SSC selection:</p> <ul style="list-style-type: none"> • The ratio between the modulator clock frequency and sense clock frequency must be greater than or equal to 20. • 20% of the ratio between the modulator clock frequency and sense clock frequency will be greater or equal to the SSC frequency range = 32, which allows varying the ratio between the modulator and sense clock frequencies to 32 different clocks evenly spaced over +/- 10% from the center frequency: $160 \leq SnsClkDiv$ <p>where <i>SnsClkDiv</i> is sense clock divider.</p> <p>Recommended that at least one full-spread spectrum polynomial complete during the scan time:</p> $(2^N - 1) / SnsClkDiv \geq 2^{SSCN} - 1$ <p>where N is the Scan resolution, SSCN is the number of bits used for SSC (6, 7, 9 and 10), and SnsClkDiv is sense clock divider.</p> <p>Recommended that the number of sub-conversions for the widget be an integer multiple of the SSC polynomial selected. For example, if SSC6 is selected, the number of the sub-conversion should be multiple of $(2^{SSC6} - 1) = 63$.</p> <p>The recommendation for the PRS selection:</p> <p>At least one full PRS polynomial completes during the scan time:</p> $(2^N - 1) / SnsClkDiv \geq 2^{PRCN} - 1$			√

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation		
		5th LP	5th	4th
	where N is the Scan resolution , PRSN is the number of bits used for PRS (8 and 12), ModClk is the Modulator clock frequency and SnsClk is the average sense clock frequency.			
Tx clock source	<p>The Tx clock frequency derives from the modulator clock frequency using a clock-divider and is used to sample the sensor. Both the clock source and clock divider are configurable.</p> <p>The Spread Spectrum Clock (SSC) provides a dithering clock source with a center frequency equal to the Tx clock frequency and the Direct source disables the SSC source and uses a fixed frequency clock. The SSC reduces the radiated noise by spreading the clock and improves the immunity against external noise. Using a higher number of bits of SSC lowers the radiation and increases the immunity against external noise.</p> <p>The following clock sources are available:</p> <ul style="list-style-type: none"> Direct – SSC is disabled and a fixed clock is used. SSC6, SSC7, SSC9 and SSC10 – The clock spreads using from 6 to 10 bits of the sense-clock divider respectively. Auto – The middleware automatically selects optimal SSC or Direct sources individually for each widget. Auto is the recommended sense clock source selection. <p>The rules and recommendations for the SSC selection:</p> <ul style="list-style-type: none"> The ratio between the modulator clock frequency and Tx clock frequency must be greater than or equal to 20. 20% of the Tx clock divider should be greater or equal to the SSC frequency range = 32. It allows varying the ratio between the modulator and Tx clock frequencies to 32 different clocks evenly spaced over +/- 10% from the center frequency. <p>$TxClkDiv \geq 160$ where $TxClkDiv$ is Tx clock divider.</p> <p>Recommended that at least one full-spread spectrum polynomial complete during the scan time.</p> <p>$N_Sub \geq 2^{SSCN} - 1$ where N_Sub is the number of sub-conversions, SSCN is the number of bits used for SSC (6, 7, 9 and 10).</p> <p>Recommended that the number of sub-conversions for the widget be an integer multiple of the SSC polynomial selected. For example, if SSC6 is selected, the number of sub-conversions should be multiple of $(2^{SSC6}-1) = 63$.</p>			√

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation																																														
		5 th LP	5 th	4 th																																												
Clock source	<p>The clock frequency is used to sample the sensor. It is derived from the modulator clock frequency using a clock divider. Both the clock source and clock divider are configurable.</p> <p>The Spread Spectrum Clock (SSC) provides a dithering clock source with a center frequency equal to the sense clock frequency. The PRS clock source spreads the clock using the pseudo-random sequencer and the Direct source disables both SSC and PRS sources and uses a fixed-frequency clock.</p> <p>Both PRS and SSC reduce the radiated noise by spreading the clock and improve the immunity against external noise. Using a higher number of bits of SSC and PRS lowers the radiation and increases the immunity against external noise.</p> <p>The sources:</p> <ul style="list-style-type: none">• Direct – Disable PRS and SSC, and use a fixed clock.• SSC – The clock spreads the by variation of sense-clock divider in the [-16,15] range.• PRS – The clock spreads using PRS to sensor clock.• SSC Auto – The middleware automatically selects optimal SSC or Direct sources individually for each widget.• PRS Auto – The middleware automatically selects optimal PRS or Direct sources individually for each widget. <p>The rules and recommendations for the SSC selection:</p> <table><tr><th>Sensing method</th><th>LFSR range</th><th>Sense clock divider Min</th><th>Sense clock divider Max</th></tr><tr><td>CSD</td><td>[-2; 1]</td><td>10</td><td>4095</td></tr><tr><td>CSD</td><td>[-4; 3]</td><td>12</td><td>4094</td></tr><tr><td>CSD</td><td>[-8; 7]</td><td>16</td><td>4089</td></tr><tr><td>CSD</td><td>[-16; 15]</td><td>24</td><td>4081</td></tr><tr><td>CSD</td><td>Auto</td><td>10</td><td>4095</td></tr><tr><td>CSX</td><td>[-2; 1]</td><td>6</td><td>4094</td></tr><tr><td>CSX</td><td>[-4; 3]</td><td>8</td><td>4092</td></tr><tr><td>CSX</td><td>[-8; 7]</td><td>12</td><td>4088</td></tr><tr><td>CSX</td><td>[-16; 15]</td><td>20</td><td>4080</td></tr><tr><td>CSX</td><td>Auto</td><td>6</td><td>4094</td></tr></table>	Sensing method	LFSR range	Sense clock divider Min	Sense clock divider Max	CSD	[-2; 1]	10	4095	CSD	[-4; 3]	12	4094	CSD	[-8; 7]	16	4089	CSD	[-16; 15]	24	4081	CSD	Auto	10	4095	CSX	[-2; 1]	6	4094	CSX	[-4; 3]	8	4092	CSX	[-8; 7]	12	4088	CSX	[-16; 15]	20	4080	CSX	Auto	6	4094	√	√	
Sensing method	LFSR range	Sense clock divider Min	Sense clock divider Max																																													
CSD	[-2; 1]	10	4095																																													
CSD	[-4; 3]	12	4094																																													
CSD	[-8; 7]	16	4089																																													
CSD	[-16; 15]	24	4081																																													
CSD	Auto	10	4095																																													
CSX	[-2; 1]	6	4094																																													
CSX	[-4; 3]	8	4092																																													
CSX	[-8; 7]	12	4088																																													
CSX	[-16; 15]	20	4080																																													
CSX	Auto	6	4094																																													

7 Advanced tab [all gen]

Parameter/ Group name	Description	CAPSENSE™ generation		
		5th LP	5th	4th
LFSR range	<p>The linear-feedback shift register (LFSR). For CSD widgets, sets the sense clock divider deviation range. For CSX widgets, sets the Tx clock divider deviation range.</p> <p>For example, if the clock divider is set to 16 and LFSR range to [-2; 1], the MSC HW block will vary the clock divider in the range from 14(16 – 2) to 17 (16 + 1) during a scan.</p> <p>This parameter is editable when the clock source is SSC or SSC Auto.</p>	√	√	
Decimation rate mode	<p>Decimation rate mode is set automatically by the middleware or manually depending on the mode.</p> <p>Widget Type [all gen]</p>	√		
Decimation rate	<p>Sets the configurable decimation rate when Enable CIC2 hardware filter is enabled. The minimum recommended value considering two valid CIC2 samples (valid samples = Total CIC2 samples - 1):</p> $Decimationrate(N) \leq \frac{Sns_Clk_Div \times Nsub}{3}$	√	√	
CIC2 accumulator shift	<p>The CIC2 and Row CIC2 accumulator shifts set the right shift value applied to the CIC2 accumulator to form raw counts when the Enable CIC2 hardware filter is enabled. Both parameters are configurable.</p>	√		
Row CIC2 accumulator shift				
Scan resolution	<p>Selects the scan resolution of the CSD widgets (the resolution of the capacitance-to-digital conversion). Acceptable values are from 6 to 16 bits.</p>			√
Reference CDAC value	<p>Sets the reference CDAC value for the Button, Slider or Proximity (under Widget Type [all gen]).</p> <p>This parameter's value is set automatically when Reference CDAC mode is set to the AUTO value or Enable CDAC auto-calibration is selected in the CSD Settings subtab [various gen] is selected.</p>		√	
Row reference CDAC value	<p>These parameters set separate CDAC values for the row and column sensors of the Matrix Buttons and Touchpad (under Widget Type [all gen]).</p> <p>These parameters' values are set automatically when Reference CDAC mode is set to the AUTO value or Enable CDAC auto-calibration is selected in the CSD Settings subtab [various gen] is selected.</p>		√	
Column reference CDAC value				
CDAC dither mode	<p>Select CDAC dither mode used to reduce Flat-spots (or dead zones).</p>		√	
CDAC dither scale	<p>CDAC dither value in bits. The parameter's value is set automatically when the parameter is set to the AUTO value.</p>		√	

7 Advanced tab *[all gen]*

Parameter/ Group name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Compensation CDAC divider	The ratio between the modulator clock frequency and compensation CDAC switching frequency. The ratio between the Sense clock divider and Compensation CDAC divider shows the number of times the compensation CDAC switches in the sense clock period. The value range is [3 .. 4095].		√	
Number of sub-conversions	Selects the number of sub-conversions. For the CSD block, applicable to the CSX and ISX sensing methods ().	√	√	√
Modulator IDAC	Sets the modulator IDAC value for the CSD Button, Slider, or Proximity (under Widget Type [all gen]). The value of this parameter is automatically set when Enable IDAC auto-calibration is selected in the (CSD Settings subtab [various gen]).			√
Row modulator IDAC	Sets a separate modulator IDAC value for the row and column sensors of the CSD Matrix Buttons and Touchpad (under Widget Type [all gen]).			√
Column modulator IDAC	These parameters values are automatically set when Enable IDAC auto-calibration is selected in the (CSD Settings subtab [various gen]).			
IDAC gain index	Sets the IDAC gain index. Options include: <ul style="list-style-type: none"> Index 0 – 37.5 nA Index 1 – 75 nA Index 2 – 300 nA (default for CSX widgets) Index 3 – 600 nA Index 4 – 2400 nA (default for CSD widgets) Index 5 – 4800 nA Index 6 – 1200 nA The value of this parameter is automatically set when Enable IDAC auto-calibration is selected.			√
Enable coarse initialization bypass	Enables skipping the coarse initialization and thus, the scan refresh rate increases.	√		
Multi-phase Tx order	The Multi-phase Tx technic is used for mutual capacitance sensing. The Tx driver is modulated with different patterns by the firmware and the result is de-convoluted. The advantage is a higher SNR because MPTX performs spatial filtering of the result with sqrt(N) improvement in noise, where N is the number of driven lines and the scan is performed by N times longer than a single sensor scan. The parameter becomes visible if the Tx electrodes number is greater than 3.	√	√	

7 Advanced tab [all gen]

7.5.3 Capacitive DAC parameters [5th gen LP]

These parameters belong to the Widget hardware parameters group for the 5th generation CAPSENSE™.

Parameter name	Description
Reference CDAC mode	Selects the Reference CDAC mode. Widget Type [all gen]
Reference CDAC value	Set the reference CDAC value for the Button, Slider or Proximity widget. These parameter's value is set automatically when Reference CDAC mode is set to the AUTO value or Enable CDAC auto-calibration (CSD Settings subtab [various gen]) is selected.
Row reference CDAC value	These parameters set separate CDAC values for the row and column sensors of the Matrix Buttons and Touchpad (under Widget Type [all gen]).
Column reference CDAC value	These parameter's value is set automatically when Reference CDAC mode is set to the AUTO value or Enable CDAC auto-calibration (CSD Settings subtab [various gen]) is selected.
Reference CDAC boost	Increases the sensitivity by 2x, 3x, and 4x. Achieved by dividing the actual Reference CDAC values by the factors of 2,3, and 4 for auto-calibration.
Fine CDAC mode	Select Fine CDAC mode. The Fine CDAC is a programmable CDAC used to achieve finer resolution for the Reference CDAC.
Fine CDAC value	These parameters are available when Fine CDAC mode is set to the MANUAL value. Sets Fine CDAC values separately for the row and column sensors of the Matrix Buttons and Touchpad (under Widget Type [all gen]). These parameters values are set automatically when Fine CDAC mode is set to the AUTO value.
Row fine CDAC value	
Compensation CDAC mode	Select Compensation CDAC mode used to compensate for sensor mutual capacitance in order to improve the system performance.
Compensation CDAC divider mode	Select Compensation CDAC divider mode. This parameter depends on Compensation CDAC mode.
Compensation CDAC divider	The ratio between the Modulator clock frequency and Compensation CDAC switching frequency. The ratio between the Sense clock divider and Compensation CDAC divider shows the number of times the Compensation CDAC switches in the sense clock period. The value range is [3..4095].
CDAC dither mode	Select CDAC dither mode used to reduce Flat-spots (or dead zones).
CDAC dither scale	CDAC dither value in bits. The parameter's value is set automatically when CDAC dither mode is set to the AUTO value.

7 Advanced tab [all gen]

7.5.4 Widget threshold parameters [all gen]

Note: All threshold parameters for the CSD widgets are set automatically when **SMARTSENSE** is selected in Basic tab [all gen].

Parameter name	Description
Finger threshold	<p>The finger threshold parameter is used along with the hysteresis parameter to determine the sensor state as follows:</p> <ul style="list-style-type: none"> • ON – $\text{Signal} > (\text{Finger Threshold} + \text{Hysteresis})$ • OFF – $\text{Signal} \leq (\text{Finger Threshold} - \text{Hysteresis})$. <p>Note that "Signal" in the above equations refers to: $\text{Signal} = \text{Raw Count} - \text{Baseline}$.</p> <p>Recommended to set the Finger threshold parameter value equal to the 80% of the touch signal. The Finger Threshold parameter is not available for the Proximity widget (under Widget Type [all gen]). Instead, Proximity has two thresholds:</p> <ul style="list-style-type: none"> • Proximity touch threshold • Proximity threshold
Noise threshold	<p>Sets a signal limit, below which a signal is considered as noise. When a signal is above the Noise Threshold, a difference count is produced and the baseline is updated only if Enable sensor auto-reset is selected. If it is not selected, the baseline remains constant as long as the raw count is above the baseline + noise threshold. This prevents the baseline from following the raw counts during a finger touch detection event.</p> <p>Recommended to set the noise threshold parameter value equal to 2x noise in the raw count or the 40% of the signal.</p>
Negative noise threshold	<p>Sets an absolute signal value limit below which the baseline is not updated for the number of samples specified by the Low baseline reset parameter.</p> <p>The negative noise threshold ensures that the baseline does not fall low because of any high-amplitude repeated negative-noise spikes on a raw count caused by different noise sources such as ESD events.</p> <p>Recommended to set the negative noise threshold parameter value equal to the Noise threshold parameter value.</p>
Low baseline reset	<p>This parameter is used along with the Negative noise threshold parameter. It counts the number of abnormally low raw counts required to reset the baseline.</p> <p>If a finger is placed on the sensor during a device startup, the baseline gets initialized to a high raw count value at startup. When the finger is removed, the raw count falls to a lower value. In this case, the baseline should track low raw counts. The Low baseline reset parameter helps handle this event. It resets the baseline to a low raw count value when the number of low samples reaches the low-baseline reset number.</p> <p>Note: After a finger is removed from the sensor, the sensor will not respond to finger touches for low baseline-reset time.</p> <p>The recommended value is 30, which works for most designs.</p>

7 Advanced tab [all gen]

Parameter name	Description
Hysteresis	<p>The hysteresis parameter is used along with the Finger threshold parameter (Proximity touch threshold and Proximity threshold for Proximity sensor) to determine the sensor state. Hysteresis provides immunity against noisy transitions of the sensor state.</p> <p>See the description of the Finger threshold parameter for details.</p> <p>The recommend value for the hysteresis is the 10% the Finger threshold.</p> <p>Hysteresis is not available for Low Power widgets.</p>
ON debounce	<p>Selects a number of consecutive CAPSENSE™ scans during which a sensor must be active to generate an ON state from the middleware. Debounce ensures that high-frequency, high-amplitude noise does not cause false detection.</p> <ul style="list-style-type: none"> Buttons/Matrix buttons/Proximity – An ON status is reported only when the sensor is touched for a consecutive debounce number of samples. Sliders/Touchpads – The position status is reported only when any of the sensors is touched for a consecutive debounce number of samples. <p>The recommended value for the Debounce parameter is 3 for reliable sensor-status detection.</p>
Proximity touch threshold	<p>The design of the Proximity touch threshold and Proximity threshold parameters is the same as for the Finger threshold parameter. The proximity sensor requires a higher noise reduction, and supports two levels of detection:</p> <p>The proximity level to detect an approaching hand or finger.</p> <p>The touch level to detect a finger touch on the sensor similarly to other Widget Type [all gen] sensors.</p> <p>Note that for valid operation, the Proximity touch threshold must be higher than the Finger threshold.</p> <p>The threshold parameters such as Hysteresis and ON debounce are applicable to both detection levels.</p>
Proximity threshold	
Velocity	<p>Defines the maximum speed of a finger movement in terms of the squared distance of the touchpad resolution. The parameter is applicable for the touchpad (CSX Touchpad) only. If the detected position of the next scan is further than the defined squared distance, then this touch is considered as a separate touch with a new touch ID.</p>

7.5.5 Raw count filter parameters [all gen]

Common mode filter is a software filter that can be applied to all scanning methods (CSD, CSX, ISX). It is applicable to widgets with multiple identical sensor elements, such as matrix buttons, touchpads, and sliders). The larger the number of sensor elements, the better the performance. Common mode filter method minimizes common mode noises up to 75% of signal.

Parameter	Description
Common mode filter	<p>Supported by all widgets except Proximity, Low Power, and Liquid Level. Available with the minimum sensor count 2 for the widget. Not supported with enabled:</p> <ul style="list-style-type: none"> Enable multi-frequency scan Multi-phase Tx order SMARTSENSE

7 Advanced tab [all gen]

Parameter	Description
Common mode filter threshold	Sets a threshold value. Sensors with smaller signals are used to calculate common mode noise. The recommended value is 75% of the touch. Calculated noise is applied to all sensors by correcting their raw counts. The value range is 0-65535.

7.5.6 Position / Level filter parameters [all gen]


These parameters enable firmware filters on a centroid position to reduce noise. These filters are available for Slider and Touchpad widgets only. If multiple filters are enabled, the execution order corresponds to the listed below and the total RAM consumption increases so that the size of the total filter history is equal to a sum of all enabled filter histories.

Parameter name	Description
IIR filter	Enables the IIR filter (see equation below) with a step response. $\text{Output} = N/K \times \text{input} + (K-N)/K \times \text{previousOutput}$ where: <ul style="list-style-type: none"> • K is always 256; • N is the IIR filter raw count coefficient selectable from 1 to 255 in the configurator. A lower N (set in the IIR filter coefficient parameter) results in lower noise, but slows down the response. This filter eliminates high-frequency noise. Consumes 2 bytes of RAM per each position (filter history).
IIR filter coefficient	The coefficient (N) of the IIR filter for a position as explained in the IIR filter parameter. The range of valid values: 1-255.
Median filter	Enables a non-linear filter that takes three of most recent samples and computes the median value. This filter eliminates the spikes noise typically caused by motors and switching power supplies. Consumes 4 bytes of RAM per each position (filter history).
Average filter	Enables the finite-impulse response filter (no feedback) with equally weighted coefficients. It takes two of most recent samples and computes their average. Eliminates periodic noise (e.g. noise from AC mains). Consumes 2 bytes of RAM per each position (filter history).
Jitter filter	This filter eliminates the noise in the position data that toggles between the two most recent values. If the most recent position value is greater than the previous one, the current position is decremented by 1; if it is less, the current position is incremented by 1. The filter is most effective at low noise. Consumes 2 bytes of RAM per each position (filter history).

7 Advanced tab [all gen]

7.5.7 Adaptive IIR filter parameters [all gen]

The **Adaptive IIR filter** group parameters can be applied for the following widgets: Linear slider (CSD and CSX), Radial slider (CSD), Touchpad (CSD and CSX).

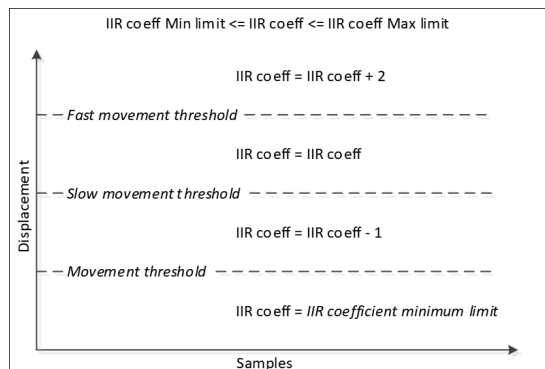


Parameter name	Description
Adaptive IIR filter	Enables the Adaptive IIR filter – an IIR filter that changes its own IIR coefficient according to the speed of the finger movement. This is done to smooth the fast movement of the finger and at the same time control properly the position movement. The filter coefficients are automatically adjusted by the adaptive algorithm with the speed of the finger movement. If the finger moves slowly, the IIR coefficient decreases; if the finger moves fast, the IIR coefficient increases from the existing value. Consumes 3 bytes of RAM per each position (filter history).
Position movement threshold	Defines the position threshold below, whose position displacement is ignored or considered as no movement.
Position slow movement threshold	Defines the position threshold below (and the above Position movement threshold), whose position displacement (the difference between the current and previous position) is considered as a slow movement. If the position displacement is within the threshold limits, the IIR filter coefficient decreases during each new scan. So, the filter impact on the position becomes less intensive.
Position fast movement threshold	Defines the position threshold above, whose position displacement is considered as a fast movement. If the position displacement is above the threshold limit, the IIR filter impact on the position becomes more intensive during each new scan as the filter coefficient increases.
IIR coefficient maximum limit	Defines the maximum limit of the IIR coefficient when the finger moves fast. The fast movement event is defined by the position fast movement threshold.
IIR coefficient minimum limit	Defines the minimum limit of the IIR coefficient when the finger moves slowly. The slow movement event is defined by the position slow movement threshold.
IIR coefficient divisor	This parameter acts as the scale factor for the filter IIR coefficient. Output = $\text{Coeff} / \text{Divisor} \times \text{input} + (\text{Divisor} - \text{Coeff}) / \text{Divisor} \times \text{previousOutput}$ where: <ul style="list-style-type: none"> Input, Output, and Previous Output are the touch positions; Coeff is the automatically adjusted IIR filter coefficient; Divisor is the IIR coefficient divisor (this parameter).



7 Advanced tab [all gen]

7.5.8 Centroid parameters [all gen]

These parameters are available for the CSD Touchpad widgets only.

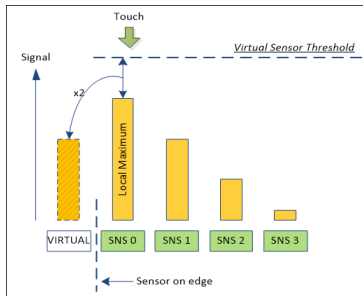Parameter name	Description
Centroid type	<p>Selects a sensor matrix size for centroid calculation. The 5x5 centroid (also known as Advanced Centroid) provides benefits such as Two-finger detection, Edge correction and improved accuracy.</p> <p>If Advanced Centroid is selected, the below parameters are configured as well.</p>
Cross-coupling position threshold	<p>Defines the cross-coupling threshold. This value is subtracted from the sensor signal used for centroid position calculation to improve the accuracy.</p> <p>The threshold should be equal to a sensor signal when a finger is near the sensor but is not touching the sensor. This can be determined by slowly dragging the finger across the panel and finding the inflection point of the difference counts at the base of the curve. The difference value at this point is the Cross-coupling threshold. The default value is 5.</p>
Edge correction	<p>This feature is available if the Centroid Type is configured to 5x5.</p> <p>When enabled, a matrix of centroid calculation is updated with virtual sensors on the edges of a touchpad. It improves the accuracy of the reported position on the edges.</p> <p>When enabled, two more parameters must be configured: Virtual Sensor threshold and Penultimate threshold.</p>
Virtual sensor threshold	<p>This parameter is applicable only if Edge correction is enabled and used to calculate a signal (difference count) for a virtual sensor used for the edge correction algorithm.</p> <p>A touch position on a slider or touchpad is calculated using a signal from the local-maxima sensor and its neighboring sensors. A touch on the edge sensor of a slider or touchpad does not accurately report a position because the edge sensor lacks signal from one side of neighboring sensors of the local-maxima sensor.</p> <div data-bbox="384 1247 748 1541" data-label="Figure">  </div> <p>If the Edge correction is enabled, the algorithm adds a virtual neighbor sensor to correct the deviation in the reported position. The Virtual sensor signal is defined by the Virtual sensor threshold:</p> $\text{DiffCount}_{\text{virtual}} = (\text{Threshold}_{\text{virtual}} - \text{DiffCount}_{\text{sns0}}) \times 2$ <p>where:</p> <ul style="list-style-type: none"> DiffCount VIRTUAL is the virtual sensor difference count; Threshold VIRTUAL is the virtual sensor threshold; DiffCount SNS0 is the sensor 0 difference count. <p>The conditions for a virtual sensor (and Edge correction algorithm) to be applied:</p> <ul style="list-style-type: none"> Local-maxima is detected on the edge sensor The difference count from the penultimate sensor is less than the Penultimate threshold.


7 Advanced tab [all gen]

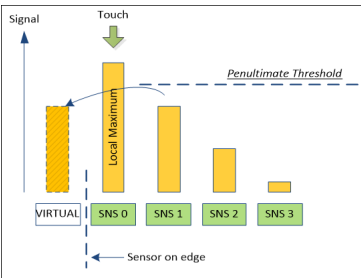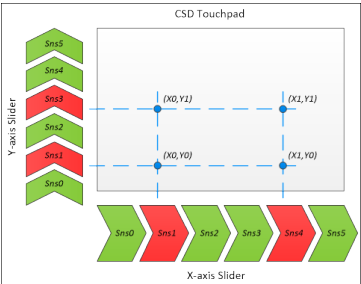Parameter name	Description
Penultimate threshold	<p>This parameter is applicable only if the Edge correction is enabled and it works along with the Virtual sensor threshold parameter.</p> <p>This parameter defines the threshold of penultimate sensor signal. If the signal from penultimate sensor is below the Penultimate threshold, the edge correction algorithm is applied to the centroid calculation.</p> <p>The conditions for the edge correction to be applied:</p> <ul style="list-style-type: none"> Local-maxima is detected on the edge sensor The difference count from the penultimate sensor (SNS 1 in the image below) is less than the Penultimate threshold. 
Pseudo two-finger detection	<p>Enables the detection of the second finger on a CSD touchpad.</p> <p>In general, a CSD touchpad can detect only one true touch position. A CSD touchpad widget consists of two Linear Sliders and each slider reports the X and Y coordinates of a finger touch. If there are two touches on the touchpad, there are four possible touch positions as shown in the figure below. The two of these touches are real touches and two are known as "ghost" touches. There is no possibility to differentiate between ghost and real touches in a CSD widget (to get true multi-touch performance, use the CSX Touchpad widget).</p>  <p>But, if this feature is enabled, the CSD touchpad can report up to two touches, mainly to be used in conjunction with two-finger gestures where real and ghost touches do not need to be fully differentiated. It is available for the CSD touchpad only when the Centroid type is configured to 5x5.</p> <p>The Advanced centroid (Centroid type is 5x5) uses the 3x3 centroid matrix when detects two touches.</p>

7 Advanced tab [all gen]

7.5.9 Ballistic multiplier parameters [all gen]



These parameters are available for the CSD Touchpad widgets only.

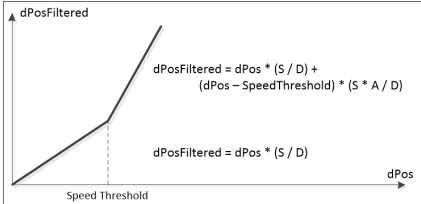Parameter name	Description
Ballistic multiplier	<p>Enables the Ballistic multiplier filter used to provide better user experience of the pointer movement. Fast movement will increase the position more quickly. Consumes 16 bytes of RAM when enabled.</p> <p>The simplified diagram of the Ballistic Multiplier filter operation:</p>  <p>where,</p> <ul style="list-style-type: none"> dPos is an input position displacement either in the X axis or Y axis, dPosFiltered is the filtered displacement; SpeedThreshold is either the X-axis speed threshold or Y-axis speed threshold; A is the Acceleration coefficient; S is the Speed coefficient; D is the Divisor value.
Acceleration coefficient	Defines the value at which the position movement needs to be interpolated when the movement is classified as fast movement. The reported position displacement is multiplied by this parameter.
Speed coefficient	Defines the value at which the position movement is interpolated when the movement is classified as slow movement. The reported position displacement is multiplied by this parameter.
Divisor value	Defines the divisor value used to create a fraction for the acceleration and speed coefficients. The interpolated position coordinates are divided by the value of this parameter.
X-axis speed threshold	Defines the threshold to distinguish fast and slow movement on the X axis. If the X-axis position displacement reported between two consecutive scans exceeds this threshold, then it is considered as fast movement, otherwise as slow movement.
Y-axis speed threshold	Defines the threshold to distinguish fast and slow movement on the Y axis. If the Y-axis position displacement reported between two consecutive scans exceeds this threshold, then it is considered as fast movement, otherwise as slow movement.




7 Advanced tab [all gen]

7.5.10 Gesture parameters [all gen]



The **Gesture** group parameters cannot be applied for the following widgets: Proximity (CSD, ISX), Low power (CSD, CSX, ISX), Liquid level (CSD).

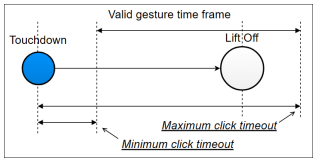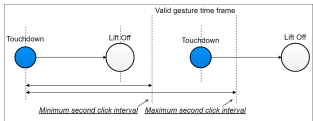Parameter name	Description
Enable gestures	Master enable for gestures feature. A gesture consists of a sequence of Touchdown and Lift Off events. A simple touch on a widget is reported as a Touchdown event. Removal of a finger from a widget is reported as a Lift Off event. If the Lift Off event triggers another higher-level Gesture, then the Lift Off event is not reported.
Enable one-finger single click gestures	<p>The one-finger single click gesture is a combination of Touchdown and Lift Off events under specific conditions:</p> <ul style="list-style-type: none"> A Touchdown event is followed by a Lift Off event. The touch duration (between Touchdown and Lift Off) is greater than the Minimum click timeout and less than the Maximum click timeout. Position displacements between the Touchdown and Lift Off events must be within the Maximum click distance. 
Enable one-finger long press gestures	<p>The one-finger long press gesture is a Touchdown event with the conditions to be met:</p> <ul style="list-style-type: none"> The touch duration must be greater than Minimum long press timeout. Position displacements must be within the Maximum click distance. <p>Note: This option is supported by CAPSENSE™ Middleware 4.0 and later.</p>
Enable one-finger double click gestures	<p>The one-finger double click gesture is a combination of two sequential one-finger single click gestures under specific conditions:</p> <ul style="list-style-type: none"> Both clicks in the sequence must meet one-finger single click conditions. The touch duration between two Touchdown events must be within the Minimum second click interval and Maximum second click interval timeout limits. The distance between two clicks must not exceed the Maximum second click distance. 
Enable one-finger click & drag gestures	<p>This gesture is a one-finger click and then a hold followed by a drag. A typical use case is while moving items on the screen from one point to another. It is triggered when the finger movement follows this sequence: Touchdown → Lift Off → Touchdown → Drag.</p> <p>The gesture triggers under specific conditions:</p> <p>A one-finger click gesture and a subsequent Touchdown were detected within the Minimum click timeout and Maximum click timeout limits and within Maximum second click distance. Then the finger exceeds the Maximum click distance from a drag touchdown.</p>

7 Advanced tab [all gen]

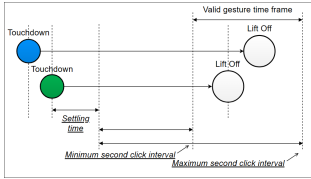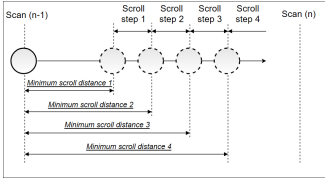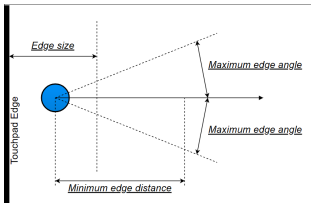Parameter name	Description
Enable two-finger single click gestures	<p>A two-finger single click gesture is a combination of Touchdown and Lift Off events under specific conditions:</p> <ul style="list-style-type: none"> Two simultaneous finger touches (Touchdown and Lift Off) are detected. The duration between the second finger Touchdown and Lift Off events of both fingers must be within the Minimum second click interval and Maximum second click interval timeout limits. The duration counting starts when the settling time elapsed for the second finger Touchdown event. A position displacement between the Touchdown and Lift Off events is less than the Maximum second click distance.  <p>The diagram illustrates the timing and sequence of a two-finger single click gesture. It shows two fingers, each with a Touchdown (blue circle) and Lift Off (green circle) event. A 'Settling time' is indicated for the second finger's Touchdown. The 'Valid gesture time frame' is defined by the 'Minimum second click interval' and 'Maximum second click interval' between the second finger's Touchdown and Lift Off events. A position displacement is also shown between the Touchdown and Lift Off events.</p>
Enable one-finger scroll gestures	<p>The one-finger scroll gesture is a combination of a Touchdown followed by a displacement in a specific direction under specific conditions:</p> <p>For a slider, the position displacement between two consecutive scans must exceed the Minimum scroll distance.</p> <p>The scroll debounce number of a scroll gesture in the same direction is already detected.</p>  <p>The diagram shows a sequence of scans: Scan (n-1), Scroll step 1, Scroll step 2, Scroll step 3, Scroll step 4, and Scan (n). It illustrates the 'Minimum scroll distance' required between consecutive scans for a scroll gesture to be detected.</p>
Enable two-finger scroll gestures	<p>The design of the two-finger scroll gesture is the same as of the one-finger scroll under specific conditions:</p> <ul style="list-style-type: none"> There must be two simultaneous finger touches detected on a widget for a scroll to be considered as a two-finger scroll. The displacement of both finger touches must be on the same direction for a two-finger scroll to be valid.
Enable one-finger edge swipe gestures	<p>The edge swipe gesture is a combination of a Touchdown on an edge followed by a displacement towards the center. This gesture works under specific conditions:</p> <ul style="list-style-type: none"> A Touchdown event must occur in the edge area defined by the Edge size. A finger displacement must occur from the edge towards the center within the Maximum edge angle. The displacement must exceed the Minimum edge distance within the Maximum edge timeout duration.  <p>The diagram shows a Touchdown event on an 'Edge' of a widget. It illustrates the 'Edge size' (the area where the Touchdown must occur), the 'Maximum edge angle' (the angle of displacement from the edge towards the center), and the 'Minimum edge distance' (the distance from the edge towards the center).</p>

7 Advanced tab [all gen]

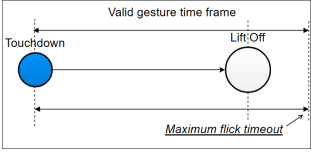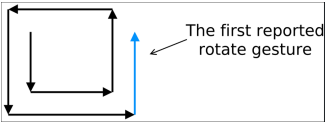Parameter name	Description
Enable one-finger flick gestures	<p>A flick gesture is a combination of a Touchdown followed by a high-speed displacement and a Lift Off event.</p> <p>A flick gesture starts at a Touchdown and completes and reported at a Lift Off event. This gesture works under specific conditions:</p> <ul style="list-style-type: none"> The displacement must exceed the Minimum flick distance. The duration between a Touchdown and Lift Off events must be less than the Maximum flick timeout.  <p>Note: The flick gesture is detected in 8 directions: Up; Down; Left; Right; Up-Right; Down-Left; Up-Left; Down-Right</p>
Enable one-finger rotate gestures	<p>A one-finger rotate gesture is reported when a circular displacement is detected. The decoding algorithm uses four directions to identify a circular displacement. A displacement in all four directions must be in the succession order to report a rotate gesture. The rotation direction can be clockwise or counter-clockwise.</p> 
Enable two-finger zoom gestures	<p>A two-finger zoom gesture is reported when two touches move towards each other (Zoom Out) or move away from each other (Zoom In). This gesture works under specific conditions:</p> <ul style="list-style-type: none"> An increase or decrease in distance between two-finger touch positions must exceed the Minimum zoom distance. The zoom debounce number of a Zoom In or Zoom Out gesture must be sequentially detected to report a Zoom gesture. A scroll to the zoom debounce number of a zoom gestures must be sequentially detected to report a Zoom gesture. If a Zoom gesture occurs after a scroll, the gesture is reported and there was no Lift Off event between the scroll and Zoom gestures.
Enable gesture filtering	<p>Enables filtering of the detected gestures.</p> <p>The gesture priority is defined as follows (starting from the most important):</p> <p>Two-finger zoom; Two-finger scroll; One-finger rotate; One-finger edge swipe; One-finger flick; One-finger scroll; Two-finger single click; One-finger click and drag; One-finger double click; One-finger single click; Touchdown; Liftoff</p>
Maximum click timeout	Defines the maximum duration between a Touchdown and Lift Off events of a click event. This parameter is used in all click-based gestures.
Minimum click timeout	Defines the minimum duration between a Touchdown and Lift Off events of a click event. This parameter is used in all click-based gestures.
Maximum click distance	Defines the maximum displacement between a Touchdown and Lift Off events of a click event. This parameter is used in all click-based gestures.

7 Advanced tab [all gen]

Parameter name	Description
Maximum second click interval	Defines the maximum displacement between a Touchdown and Lift Off events of a click event. This parameter is used in all click-based gestures.
Minimum second click interval	This parameter defines the minimum duration between the first Lift Off and the second Touchdown events. If the second click occurs early this limit, the double-click and click&drag gestures are not reported.
Maximum second click distance	Defines the maximum distance between the first Lift Off event and the second Touchdown event. If the second click occurs outside this limit, the double-click and click&drag gestures are not reported.
Minimum long press timeout	Defines the minimum duration after a touchdown event and before a lift off event of a long press event.
Maximum long press distance	Defines the maximum displacement to be detected for a long press to be valid.
Scroll debounce	Defines the minimum number sequential scroll steps in the same direction to be detected prior to the scroll is considered valid. A widget must detect scroll steps, at the minimum of Debounce times in the same direction to be considered as a scroll in that direction.
Minimum scroll distance	Defines the minimum displacement to recognize a single scroll step. A scroll step is calculated between two consecutive scans.
Rotate debounce	Defines the maximum number of sequential rotate steps in the same direction to deem a rotate gesture invalid. For example, if the Debounce value is set to 5, then the touch cannot continue in the same direction for 5 rotate steps and still have a valid rotate gesture. After this threshold, the reported gesture stops being a rotate gesture. If this parameter is set to 0, then the Debounce is disabled.
Minimum rotate distance	Defines the minimum displacement to recognize a single rotate step.
Zoom debounce	Defines the minimum number of zoom steps in a particular direction (in or out) to report a zoom gesture.
Minimum zoom distance	Defines the minimum displacement to recognize a single zoom step.
Maximum flick timeout	Defines the maximum duration of how long a flick gesture is searched after a Touchdown event. A position displacement and Lift Off event must happen within the duration defined by this parameter for a flick to be valid.
Minimum flick distance	Defines the minimum displacement to be detected for a one-finger flick to be valid.
Edge size	Defines the maximum edge area where a Touchdown must be detected for an edge swipe to be reported.
Minimum edge distance	Defines the minimum displacement to be detected from an edge to the center for an edge swipe to be reported.
Maximum edge timeout	Defines the maximum duration, within which an edge swipe must occur to be reported. The displacement must exceed the displacement threshold within the duration defined by this parameter for the edge swipe to be reported.

7 Advanced tab *[all gen]*

Parameter name	Description
Maximum edge angle	To report this gesture, a finger movement starts from an edge and moves in the center direction. This is the ideal line. These parameters define the maximum angle deviation (in degree) from this ideal line for the edge swipe to be valid. Degree 1 means that the user can do gestures only on a single ideal line.

7.5.11 Sensor parameters *[various gen]*

Parameter name	Description	CAPSENSE™ generation		
		5 th LP	5 th	4 th
Compensation IDAC value(s)	Sets the Compensation IDAC value for each sensor/node when Enable compensation IDAC value is selected on the CSD Settings tab. For CSD sensing method (see), a higher Compensation IDAC value without saturating raw counts provides better sensitivity for sensor/nodes. Select the Enable IDAC auto-calibration for robust operation. Widget Sensing Method [all gen]			√
Compensation CDAC value(s)	Sets the Compensation CDAC value for each sensor/node when Enable compensation CDAC is selected on the CSX Settings tabs. For CSX sensing method (see Widget Sensing Method [all gen]), a higher Compensation CDAC value without saturating raw counts provides better sensitivity for sensor/nodes. Select the Enable CDAC auto-calibration for robust operation.	√	√	
Selected pins	Selects a port pin for the sensor (CSD sensing) and electrode (CSX sensing). The available options use a dedicated pin for a sensor or re-use one or more pins from any other sensor. Re-using the pins of any other sensor from any widgets helps create a ganged sensor.			√

7.5.12 Widget/Sensor parameters table *[various gen]*

The following table shows which Widget/Sensor parameters belong to a given widget type:

- B = Button
- LS = Linear Slider
- RS = Radial Slider
- MB = Matrix Buttons
- T = Touchpad
- P = Proximity
- LP = Low Power
- LL = Liquid Level

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget				ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T P	B	L S	P	L P
Diplexing	√	√	√		√							√					√		

7 Advanced tab [all gen]

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget					ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T	L P	B	L S	P	L P
Maximum position	√	√	√		√	√							√					√		
Maximum X-axis position	√	√	√					√							√					
Maximum Y-axis position	√	√	√					√							√					
Enable multi-frequency scan	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Enable foam rejection	√											√								
Foam correction coefficient	√											√								
Maximum level	√											√								
Sense clock divider	√	√	√	√	√	√			√	√	√									
Column sense clock divider	√	√	√				√	√												
Row sense clock divider	√	√	√				√	√												
Sense clock source			√	√	√	√	√	√	√											
Tx clock divider	√	√	√									√	√	√	√	√				
Tx clock source			√									√	√	√	√					
Lx clock divider																	√	√	√	√
Clock source	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
LFSR range	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Decimation rate mode	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Decimation rate	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
CIC2 accumulator shift	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Row CIC2 accumulator shift	√						√	√												
Scan resolution			√	√	√	√	√	√	√											
Number of sub-conversions	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Modulator IDAC			√	√	√	√			√											
Column modulator IDAC			√				√	√												
Row modulator IDAC			√				√	√												
IDAC gain index			√	√	√	√	√	√	√			√	√	√	√					
Reference CDAC mode	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Reference CDAC value	√	√		√	√	√			√	√	√	√	√	√	√	√	√	√	√	√
Column reference CDAC value	√	√					√	√												

7 Advanced tab [all gen]

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget					ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T	L P	B	L S	P	L P
Row reference CDAC value	√	√					√	√												
Reference CDAC boost	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Fine CDAC mode	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Fine CDAC value	√			√	√	√			√	√	√	√	√	√	√	√	√	√	√	√
Column fine CDAC value	√						√	√												
CDAC dither mode	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
CDAC dither scale	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Enable coarse initialization bypass	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Compensation CDAC mode	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Compensation CDAC divider mode	√			√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Compensation CDAC divider	√	√		√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√	√
Multi-phase Tx order	√	√													√					
Proximity threshold	√	√	√						√										√	
Proximity touch threshold	√	√	√						√										√	
Finger threshold	√	√	√	√	√	√	√	√		√		√	√	√	√	√	√	√		√
Noise threshold	√	√	√	√	√	√	√	√	√	√		√	√	√	√	√	√	√		√
Negative noise threshold	√	√	√	√	√	√	√	√	√	√		√	√	√	√	√	√	√		√
Low baseline reset	√	√	√	√	√	√	√	√	√	√		√	√	√	√	√	√	√		√
Hysteresis	√	√	√	√	√	√	√	√	√	√		√	√	√	√		√	√		√
ON debounce	√	√	√	√	√	√	√	√	√	√		√	√	√	√	√	√	√		√
Velocity	√	√	√												√					
Common mode filter	√	√	√	√	√	√	√				√	√	√	√		√	√	√		
Common mode threshold	√	√	√	√	√	√	√	√			√	√	√	√		√	√	√		
Compensation IDAC value(s)			√	√	√	√	√	√	√			√	√	√	√					
Compensation CDAC value(s)	√	√		√	√	√	√	√	√	√		√	√	√	√	√	√	√		√
Selected pins			√	√	√	√	√	√	√			√	√	√	√					
IIR filter	√	√	√		√	√		√			√		√		√			√		
IIR filter coefficient	√	√	√		√	√		√			√		√		√			√		
Median filter	√	√	√		√	√		√			√		√		√			√		

7 Advanced tab [all gen]

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget					ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T	L P	B	L S	P	L P
Average filter	√	√	√		√	√		√			√		√		√			√		
Jitter filter	√	√	√		√	√		√			√		√		√			√		
Adaptive IIR filter	√	√	√		√	√		√					√		√					
Position movement threshold	√	√	√		√	√		√					√		√					
Position slow movement threshold	√	√	√		√	√		√					√		√					
Position fast movement threshold	√	√	√		√	√		√					√		√					
IIR coefficient maximum limit	√	√	√		√	√		√					√		√					
IIR coefficient minimum limit	√	√	√		√	√		√					√		√					
IIR coefficient divisor	√	√	√		√	√		√					√		√					
Centroid type	√	√	√					√												
Cross-coupling position threshold	√	√	√					√												
Edge correction	√	√	√					√												
Virtual sensor threshold	√	√	√					√												
Penultimate threshold	√	√	√					√												
Pseudo two-finger detection	√	√	√					√												
Ballistic multiplier	√	√	√					√												
Acceleration coefficient	√	√	√					√												
Speed coefficient	√	√	√					√												
Divisor value	√	√	√					√												
X-axis speed threshold	√	√	√					√												
Y-axis speed threshold	√	√	√					√												
Enable gestures	√	√	√	√	√	√	√	√				√	√	√	√		√	√		
Enable one-finger single click gestures	√	√	√	√	√	√	√	√				√	√	√	√			√	√	
Enable one-finger long press gestures	√	√	√	√	√	√	√	√				√	√	√	√			√	√	
Enable one-finger double click gestures	√	√	√	√	√	√	√	√				√	√	√	√			√	√	
Enable one-finger click & drag gestures	√	√	√		√			√					√		√			√		

7 Advanced tab [all gen]

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget					ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T	L P	B	L S	P	L P
Enable two-finger single click gestures	√	√	√					√							√					
Enable one-finger scroll gestures	√	√	√		√			√					√		√					
Enable two-finger scroll gestures	√	√	√					√							√					
Enable one-finger edge swipe gestures	√	√	√					√							√					
Enable one-finger flick gestures	√	√	√		√			√					√		√			√		
Enable one-finger rotate gestures	√	√	√					√							√					
Enable two-finger zoom gestures	√	√	√					√							√					
Enable gesture filtering	√	√	√	√	√		√	√				√	√	√	√	√	√			
Maximum click timeout	√	√	√	√	√		√	√				√	√	√	√	√	√			
Minimum click timeout	√	√	√	√	√		√	√				√	√	√	√	√	√			
Maximum click distance	√	√	√	√	√		√	√				√	√	√	√	√	√			
Maximum second click interval	√	√	√	√	√		√	√				√	√	√	√	√	√			
Minimum second click interval	√	√	√	√	√		√	√				√	√	√	√	√	√			
Maximum second click distance	√	√	√	√	√		√	√				√	√	√	√	√	√			
Minimum long press timeout	√	√	√	√	√		√	√				√	√	√	√	√	√			
Maximum long press distance	√	√	√	√	√		√	√				√	√	√	√	√	√			
Scroll debounce	√	√	√		√			√					√		√		√			
Minimum scroll distance	√	√	√		√			√					√		√		√			
Rotate debounce	√	√	√					√							√					
Minimum rotate distance	√	√	√					√							√					
Zoom debounce	√	√	√					√							√					
Minimum zoom distance	√	√	√					√							√					
Maximum flick timeout	√	√	√		√			√					√		√		√			
Minimum flick distance	√	√	√		√			√					√		√		√			
Edge size	√	√	√					√							√					

7 Advanced tab *[all gen]*

Parameters	5 th gen LP	5 th gen	4 th gen	CSD widget								CSX widget					ISX widget			
				B	L S	R S	M B	T	P	L P	L L	B	L S	M B	T	L P	B	L S	P	L P
Minimum edge distance	√	√	√					√							√					
Maximum edge timeout	√	√	√					√							√					
Maximum edge angle	√	√	√					√							√					

8 Pins tab [4th gen]

8 Pins tab [4th gen]

Use the **Pins** tab to assign pins to each sensor. Select the appropriate signal from the pull-down menu.


Basic	Advanced	Pins
Cmod		P7[7] analog (CYBSP_CMOD) [SHARED]
CintA		P7[1] analog (CYBSP_CINA) [SHARED]
CintB		P7[2] analog (CYBSP_CINB) [SHARED]
Button0_Rx0		P8[1] analog (CYBSP_CSD_BTN0, CYBSP_CS_BTN0) [SHARED]
Button0_Tx		P1[0] analog (CYBSP_CSD_TX, CYBSP_CS_TX) [SHARED]
Button1_Rx0		P8[2] analog (CYBSP_CSD_BTN1, CYBSP_CS_BTN1) [SHARED]
Button1_Tx		P1[0] analog (CYBSP_CSD_TX, CYBSP_CS_TX) [SHARED]
LinearSlider0_Sns0		P8[3] analog (CYBSP_CSD_SLD0, CYBSP_CS_SLD0) [SHARED]
LinearSlider0_Sns1		P8[4] analog (CYBSP_CSD_SLD1, CYBSP_CS_SLD1) [SHARED]
LinearSlider0_Sns2		P8[5] analog (CYBSP_CSD_SLD2, CYBSP_CS_SLD2) [SHARED]
LinearSlider0_Sns3		P8[6] analog (CYBSP_CSD_SLD3, CYBSP_CS_SLD3) [SHARED]
LinearSlider0_Sns4		P8[7] analog (CYBSP_CSD_SLD4, CYBSP_CS_SLD4) [SHARED]
Ready		
Device: P5OC 6 (4th Generation)		

9 Scan Configuration tab [5th gen LP], [5th gen]

9 Scan Configuration tab [5th gen LP], [5th gen]


Use the **Scan Configuration** tab to distribute the electrodes among the channels, make ganged connection, assign pins and scan slots to each sensor.

5th generation LP CAPSENSE™

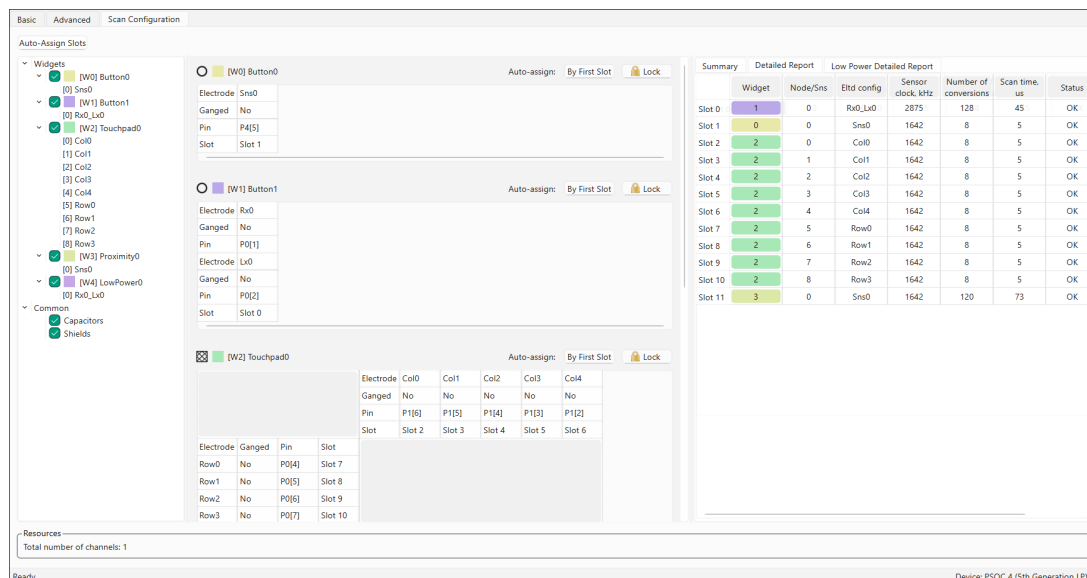

Slot	Widget	Node/Sns	Eltd config	Sensor clock, kHz	Number of conversions	Scan time, us	Status
Slot 0	1	0	Rx0_Lx0	2875	128	45	OK
Slot 1	0	0	Sns0	1642	8	5	OK
Slot 2	2	0	Col0	1642	8	5	OK
Slot 3	2	1	Col1	1642	8	5	OK
Slot 4	2	2	Col2	1642	8	5	OK
Slot 5	2	3	Col3	1642	8	5	OK
Slot 6	2	4	Col4	1642	8	5	OK
Slot 7	2	5	Row0	1642	8	5	OK
Slot 8	2	6	Row1	1642	8	5	OK
Slot 9	2	7	Row2	1642	8	5	OK
Slot 10	2	8	Row3	1642	8	5	OK
Slot 11	3	0	Sns0	1642	120	73	OK

5th generation CAPSENSE™

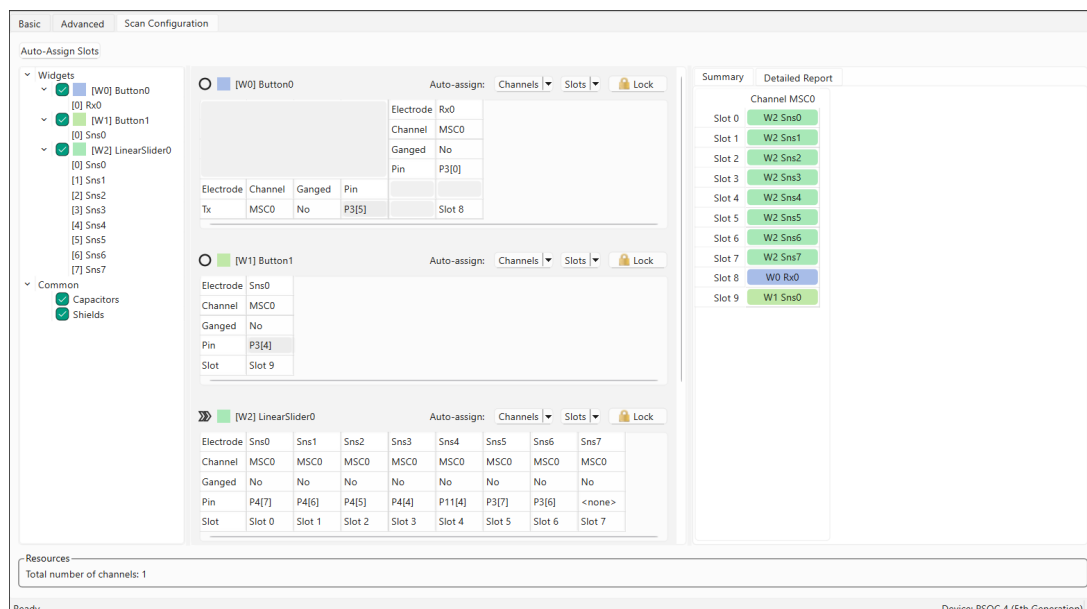

Slot	Channel	Widget	Sensor
Slot 0	W2 Sns0	W2	Sns0
Slot 1	W2 Sns1	W2	Sns1
Slot 2	W2 Sns2	W2	Sns2
Slot 3	W2 Sns3	W2	Sns3
Slot 4	W2 Sns4	W2	Sns4
Slot 5	W2 Sns5	W2	Sns5
Slot 6	W2 Sns6	W2	Sns6
Slot 7	W2 Sns7	W2	Sns7
Slot 8	W0 Rx0	W0	Rx0
Slot 9	W1 Sns0	W1	Sns0


Commands:

- Auto-Assign Slots** – Automatically reassigns all slots for sensors based on a widget and sensor order depending on the assigned channel. Locked widgets are not modified.

Multi-pin selection

You can use the multi-pin selection to configure more than one pin assigned to one sensor. The feature supports all sensing methods: CSD, CSX, and ISX (see [Widget Sensing Method \[all gen\]](#)) for MSCLP only.

9 Scan Configuration tab [5th gen LP], [5th gen]

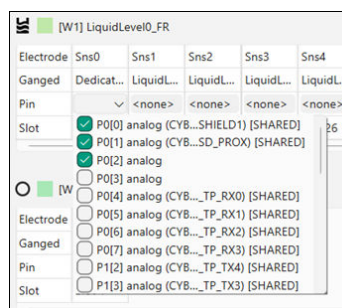


9.1 Widgets tree

The **Widgets** tree is used for toggling widgets, capacitors, and shields on the **Widgets configuration pane**.

9.2 Widgets configuration pane

The **Widgets configuration pane** contains tables for configuring channels, pins, and slots for each instance from the **Widgets** tree.

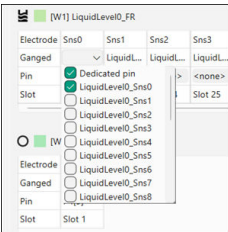Part/Parameter	Description	CAPSENSE™ generation	
		5 th LP	5 th
Channel	Selects a channel in the multi-channel solutions. The available channels correspond to the enabled MSC resources.		✓
Ganged	Selects a port pin for the sensor (CSD sensing) and electrode (CSX sensing). The available options use a dedicated pin for a sensor or re-use one or more pins from any other sensor. The latter helps create a ganged sensor. 	✓	✓
Pin	Assigns pins for sensors. Select the appropriate signal from the pull-down menu.	✓	✓
Slot	Selects scan slots for sensors. In Multi-channel mode, a scan slot represents a group of sensors scanned together. In Single-channel mode, one sensor is scanned per scanning slot.	✓	✓

9 Scan Configuration tab [5th gen LP], [5th gen]

9.2.1 Commands

Part/Parameter	Description	CAPSENSE™ generation	
		5 th LP	5 th
Auto-Assign Channels	Automatically assigns channels for widget electrodes. Multiple options are available: <ul style="list-style-type: none"> Assign all electrodes to one channel. Assign electrodes to different channels sequentially. Assign electrodes to different channels alternately. Assign only columns or rows. 		√
Auto-Assign Slots	Incrementally assigns the slots for all widget sensors based on: <ul style="list-style-type: none"> The slot of the first electrode. The slots of the first electrodes on each channel. [5th gen]. This command does not reassign channels.	√	√
Lock	Prevents the widget scan configuration from editing and slot reassignment.	√	√

9.3 Summary table

The Summary table visually represents scan slot configuration. The cell color indicates the state of a scan slot:

- white – not occupied
- red – occupied by more than one sensor
- gray – shield or Tx
- other – corresponds to the color of the widget, which occupies the slot; green-color shades for CSD widgets and blue-color shades for CSX widgets.

The red color in the index column cell indicates an error in this slot. The tooltip provides a description of the error

9.4 Detailed report / Low power detailed report

Detailed Report [5th gen LP], [5th gen] provides all relevant information about slot assignment of active widgets. **Low power Detailed Report** [5th gen LP] provides all relevant information about slot assignment of Low Power widgets.

Part/Parameter	Description	CAPSENSE™ generation	
		5 th LP	5 th
Widget	The index of the widget, which sensor is assigned on that slot.	√	√
Node/Sns	The index of the node or sensor assigned to that slot.	√	√
Eltd config	The electrode configuration of the node.	√	√
Sensor clock, kHz	The CSD Sense clock frequency or CSX Tx clock frequency of the widget assigned to that slot.	√	√
Number of conversions	The Number of sub-conversions of the widget assigned to that slot.	√	√

9 Scan Configuration tab [5th gen LP], [5th gen]

Part/Parameter	Description	CAPSENSE™ generation	
		5 th LP	5 th
Scan time, us	Time needed to perform a scan of the slot. It does not include: <ul style="list-style-type: none">• HW configuration time• Initialization time• Post scan processing time	√	√
Status	Displays errors if any. The text of the error is shown in the cell's tooltip.	√	√

10 Known Issues

10 Known Issues

Problem	Workaround
The Export Register Map to PDF of the MSCLP configuration with CAPSENSE™ middleware version 2.0 or 3.0 generates the wrong structure.	No workaround. The CAPSENSE™ configuration has to be aligned with CAPSENSE™ middleware in the context of the supported platform.

For a complete description of the known issues and possible workarounds, refer to the CAPSENSE™ Middleware API Reference Guide – section "Errata":

https://infineon.github.io/capsense/capsense_api_reference_manual/html/index.html#section_capsense_errata

11 Version changes

11 Version changes

This section lists and describes the changes for each version of this tool.

Version	Description
1.0	New tool.
1.1	Added the Notice List.
	Added more configuration parameters validation.
	Fixed minor issues.
2.0	Added "IDAC gain index" parameter.
	Changed the data storage location from the header (.h) file to XML-based file with the .cycapsense extension.
	For backward compatibility, the configurator is still able to load the header (.h) file that contains the legacy format configuration. But, if the legacy header (.h) with the configuration is passed via a command-line parameter, a message appears saying that the .h file is not supported.
	Added the Import and Export options to the File menu that enable importing and exporting the configuration file from and into the external file.
	Added the Reset View command to the View menu that resets the view to the default.
	Changed the Widget / Sensor parameters and Widget Type table to align with the actual CapSense Configurator widget parameters and types.
	Changed the name of Section "Sensor Parameters" to "Sensing Parameters" to align with the tool.
	Changed generation of the middleware initialization structure according to the changes in CapSense v2.0 middleware (adding fields for flash memory optimization, fixed the defect with the raw count filters config, IDAC gain index, etc.)
	Added verification if the provided MPNs match the contents of the design.modus xml config file.
	Added the warning about opening a broken configuration file.
	Added highlighting bold of modified properties in the property grid.
	Added handling of invalid command-line arguments.
	Fixed the pin assignment issues.
3.0	Added the self-test library support.
	Added the Undo / Redo feature.
	Improved configuration validation. Added new validation rules.
3.10	Updated versioning to support patches.
	Added Copy feature to the Notice List.
	Fixed the error visualization for the Enable shield electrode parameter.
	Removed duplicated gesture defines from the generated code.
	Fixed the xxx_PARAM_ID define value with the correct widget id.
3.11	Updated versioning to support the updated backend, for detail, see Device Configurator User Guide.

11 Version changes

Version	Description
3.15	Added support of PSoC 4 devices.
	Prohibited saving configurations with errors.
	Removed the command-line generate options: -g and -generate.
4.0	Added support for the PSoC 4100S Max family.
	Added support for the CAPSENSE™ Middleware Library 3.0.
	Added support of the CSX Linear Slider.
	Added two more generated files: cycfg_capsense_defines.h and cycfg_capsense_tuner_regmap.h
	Added Undo/Redo support for pins selection.
	Removed: the migration of configuration to the current XML format – configuration saved in the comments in generated HEADER files (the old method).
5.0	Added support for the 5th generation LP devices.
	Surrounded generated C code with the directive, which checks the presence of the CAPSENSE™ Middleware and excludes the code if it is absent.
	Added tooltips and a panel for different tabs to display parameters description.
6.0	Added the Multi-phase self order and row order parameters for CSD widgets (5th generation LP devices).
	Added the External frame start parameter for the 5th generation LP devices.
	Added CIC2 hardware filter parameter (General tab) for the 5th generation LP devices.
	Added the Fine CDAC parameters.
	Added the SmartSense support for the 5th generation LP devices.
	Changed the IMO clock frequency options for the 5th generation LP devices to 46 MHz, 38 MHz, and 25 MHz.
	Improved the speed of the saving and loading configuration process.
6.10	Updated sections with hardware IIR filters.
	Introduced the Raw count calibration level and the CDAC dither scale parameters.
	Proximity widget: Changed the default value of the Proximity touch threshold to 1000. Swapped the Proximity touch threshold and the Proximity threshold values for the CAPSENSE™ Middleware 4.0. The Proximity touch threshold generates a default value for the fingerTh field and the Proximity threshold - for the proxTh field. For older versions of the CAPSENSE™ Middleware the values are generated vice versa.
	Removed unused cy_stc_capsense_common_config_t fields from the generated C code.
	Added 'const' to the declaration of the ptrDmaWrChSnsConfigs and ptrDmaRdChSnsConfigs arrays in the generated C code. Added ptrDmaWrChSnsConfigsLocal and ptrDmaRdChSnsConfigsLocal arrays.
	Added VDDA/2 option for the CSX inactive sensor connection parameter.
	Added a new option Index 6 -1200 nA for the IDAC gain index parameter for the 4th gen PSoC 4 devices.
6.20	Added Capacitive DAC parameters group of parameters to the Widget details subtab.

11 Version changes

Version	Description
	Added parallel design support with the Device Configurator.
	Added support of CapDAC Auto-Dithering.
	Added auto-decimation rate selection for CIC2 for 5th generation CAPSENSE™.
	Supported middleware version 5.0.
	Decreased the range of Number of sub-conversions to 0-16383 for the LP devices 5th generation.
	Removed the command-line library options: -l and -library.
	Decreased the range of Compensation CDAC/IDAC value to 0-255.
	Changed the default Fine CDAC value from 31 to 1.
6.30	Minor back-end changes.
6.40	Minor back-end changes.
7.10	Added support for ISX sensing method.
	Added support for Liquid Level widget.
	Added support for: <ul style="list-style-type: none"> • Common mode filter – CMF • Pin multi-selection
8.00	Added support of the PSOC™ 4100T Plus device family.
8.10	GUI style update.
9.0	Added support for Linear Slider 2x1, Touchpad 2x2, Liquid Level 3 segments.

Revision history
Revision history

Revision	Date	Description
**	2018-11-26	New document.
*A	2018-12-05	Documents were updated with changes from business unit.
*B	2019-02-26	Updated to version 1.1.
*C	2019-10-16	Updated to version 2.0.
*D	2020-03-27	Updated to version 3.0.
*E	2020-09-01	Updated to version 3.10.
*F	2020-12-14	Updated to version 3.11.
*G	2021-03-15	Updated to version 3.15.
*H	2021-09-27	Updated to version 4.0.
*I	2022-09-29	Updated to version 5.0.
*J	2022-10-17	<ul style="list-style-type: none"> Removed the unsupported ISX method Updated section 6.2.1.7 Baseline filter settings Updated the widgets/sensors parameters table Added the link to the MSCLP code example Added the raw count formula for the low power widget
*K	2023-02-15	Updated to version 6.0.
*L	2023-05-31	Updated to version 6.10.
*M	2023-07-12	Added the "Troubleshooting" section.
*N	2024-02-13	Updated to version 6.20.
*O	2024-04-01	Updated the product references for the PSOC™ families.
		Fixed the wrong links for CSD tuning mode for [5th gen].
*P	2024-10-02	Updated to version 6.30.
*Q	2024-12-09	Updated to version 6.40.
*R	2025-02-12	Updated to version 7.10.
*S	2025-03-28	Updated to version 8.00.
*T	2025-09-04	Updated to version 8.10.
*U	2025-10-06	Updated to version 9.0.

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2025-10-06

Published by

Infineon Technologies AG
81726 Munich, Germany

© 2025 Infineon Technologies AG
All Rights Reserved.

Do you have a question about any aspect of this document?

Email: erratum@infineon.com

Document reference
IFX-jbh1711738801434

Important notice

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.