

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671

About this document

Scope and purpose

This document describes the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board. The user is encouraged to refer to the corresponding datasheet and user manual for information on the product features and configurability. The evaluation board also supports a graphical user interface together with an Aurix™ TC375 shield buddy board to provide a simple, easy-to-use tool for getting familiar with the features and for high-voltage tests with power semiconductor devices.

Intended audience

The intended audiences for this document are design engineers, technicians, and developers of electronic systems.

Important notice

Important notice

“Evaluation Boards and Reference Boards” shall mean products embedded on a printed circuit board (PCB) for demonstration and/or evaluation purposes, which include, without limitation, demonstration, reference and evaluation boards, kits and design (collectively referred to as “Reference Board”).

Environmental conditions have been considered in the design of the Evaluation Boards and Reference Boards provided by Infineon Technologies. The design of the Evaluation Boards and Reference Boards has been tested by Infineon Technologies only as described in this document. The design is not qualified in terms of safety requirements, manufacturing and operation over the entire operating temperature range or lifetime.

The Evaluation Boards and Reference Boards provided by Infineon Technologies are subject to functional testing only under typical load conditions. Evaluation Boards and Reference Boards are not subject to the same procedures as regular products regarding returned material analysis (RMA), process change notification (PCN) and product discontinuation (PD).

Evaluation Boards and Reference Boards are not commercialized products, and are solely intended for evaluation and testing purposes. In particular, they shall not be used for reliability testing or production. The Evaluation Boards and Reference Boards may therefore not comply with CE or similar standards (including but not limited to the EMC Directive 2004/EC/108 and the EMC Act) and may not fulfill other requirements of the country in which they are operated by the customer. The customer shall ensure that all Evaluation Boards and Reference Boards will be handled in a way which is compliant with the relevant requirements and standards of the country in which they are operated.

The Evaluation Boards and Reference Boards as well as the information provided in this document are addressed only to qualified and skilled technical staff, for laboratory usage, and shall be used and managed according to the terms and conditions set forth in this document and in other related documentation supplied with the respective Evaluation Board or Reference Board.

It is the responsibility of the customer’s technical departments to evaluate the suitability of the Evaluation Boards and Reference Boards for the intended application, and to evaluate the completeness and correctness of the information provided in this document with respect to such application.

The customer is obliged to ensure that the use of the Evaluation Boards and Reference Boards does not cause any harm to persons or third party property.

The Evaluation Boards and Reference Boards and any information in this document is provided "as is" and Infineon Technologies disclaims any warranties, express or implied, including but not limited to warranties of non-infringement of third party rights and implied warranties of fitness for any purpose, or for merchantability.

Infineon Technologies shall not be responsible for any damages resulting from the use of the Evaluation Boards and Reference Boards and/or from any information provided in this document. The customer is obliged to defend, indemnify and hold Infineon Technologies harmless from and against any claims or damages arising out of or resulting from any use thereof.

Infineon Technologies reserves the right to modify this document and/or any information provided herein at any time without further notice.

Safety precautions

Safety precautions

Note: Please note the following warnings regarding the hazards associated with development systems

Table 1 Safety precautions

	Warning: The DC link potential of this board is up to 1000 VDC. When measuring voltage waveforms by oscilloscope, high voltage differential probes must be used. Failure to do so may result in personal injury or death.
	Warning: ELECTRIC SHOCK HAZARD Contact can cause an electric shock. If a voltage above 60 V is applied to the evaluation board, then only persons trained in working with voltages above 60 V are allowed to handle the evaluation board. In addition, ensure that hazardous live parts are not accessible and that accessible live parts are not hazardous.
	Caution: The evaluation or reference board contains parts and assemblies sensitive to electrostatic discharge (ESD). Electrostatic control precautions are required when installing, testing, servicing or repairing the assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with electrostatic control procedures, refer to the applicable ESD protection handbooks and guidelines.
	Caution: The evaluation or reference board is shipped with packing materials that need to be removed prior to installation. Failure to remove all packing materials that are unnecessary for system installation may result in overheating or abnormal operating conditions.

Table of contents

About this document.....	1
Important notice	2
Safety precautions.....	3
Table of contents.....	4
1 EiceDRIVER™ gate driver 1EDI3040AS overview	5
2 EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards.....	6
2.1 PCB overview	7
2.1.1 Connectors	7
2.1.2 LED indicators	8
2.1.3 BNC connectors.....	9
2.1.4 Jumper configurations	10
2.1.5 Gate resistors.....	15
2.1.6 External SI interface	17
2.1.7 Operating conditions	17
2.2 Schematic.....	17
2.3 Layout	24
2.4 Bill of materials.....	30
3 Getting started with the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board.....	35
3.1 Step by step instructions	35
Revision history.....	38
Disclaimer.....	39

1 EiceDRIVER™ gate driver 1EDI3040AS overview

The EiceDRIVER™ gate driver 1EDI3040AS is a high-voltage galvanic isolated gate driver for IGBTs and SiC MOSFETs designed for automotive traction inverter applications. The device is based on Infineon's Coreless Transformer (CT) technology, providing reinforced galvanic insulation between low voltage and high voltage domains. The device is designed to drive 600 V, 750 V and 1200 V IGBTs and SiC-MOSFETs directly. Short propagation delays and controlled internal tolerances minimize distortions of the PWM signal.

The device features a split output stage to achieve a slew rate control with an output stage of 20 A peak current capability. In addition, there is an integrated and external Miller clamping available to support highest dV/dT . A large panel of safety-related functions supports functional safety requirements at system level as per ISO 26262.

The fast and configurable desaturation protection in combination with the SOFTOFF pin enables the system to use IGBTs and SiC-MOSFETs to its limits for optimum system efficiency.

The device includes an 11-bit SAR-ADC, which can be multiplexed to two output pins to precisely monitor the DC-link voltage and the power semiconductor temperature. Moreover, the ADC also measures voltages at VCC2, VEE2, DESAT input and others. The gate timing capture functionality enables predictive maintenance of the system.

A flyback controller is integrated to support accurate and on-the-fly configurable secondary side supply voltage generation.

For more details regarding the features and the configurability of the device, the user is encouraged to refer to the product datasheet and user manual.

Type	Package	Marking
1EDI3040AS	PG-LDSO-36	1EDI3040AS

2 EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

This evaluation board is designed to be compatible with four components – Aurix™ TC375 shield buddy board, adapter board and an ID-PAK base board. The evaluation board can be used as a standalone test board or as a combination with the above four components. When used in combination with the Aurix™ TC375 shield buddy board, a graphical user interface is also available to provide the user an easy-to-use way to configure, control and test the gate drivers.

Each evaluation board consists of two 1EDI3040AS gate drivers connected in a half bridge configuration (further referred to in this document as “HS” and “LS” gate drivers respectively) with each gate driver having its own built-in flyback controller, which is used to generate the corresponding power supplies - VCC2 and VEE2. The system architecture of the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board together with the Aurix™ TC375 shield buddy board, is shown in Figure 1.

The evaluation boards and interface components can be ordered with your local Infineon sales representative with the corresponding SP order number.

Component	SP order Number
1EDI3040AS IDPAK evaluation board with adapter board	SP006185594
Aurix™ TC375 Shieldbuddy board	SP005432164
ID-PAK base board 750V	SP006198416
ID-PAK base board 1200V	SP006198414

A functional set-up consists of:

- 1 piece of 1EDI3040AS IDPAK evaluation board with adapter board
- 1 piece of Aurix™ TC375 Shieldbuddy board
- 1 piece of ID-PAK base board 750V **or** ID-PAK base board 1200V

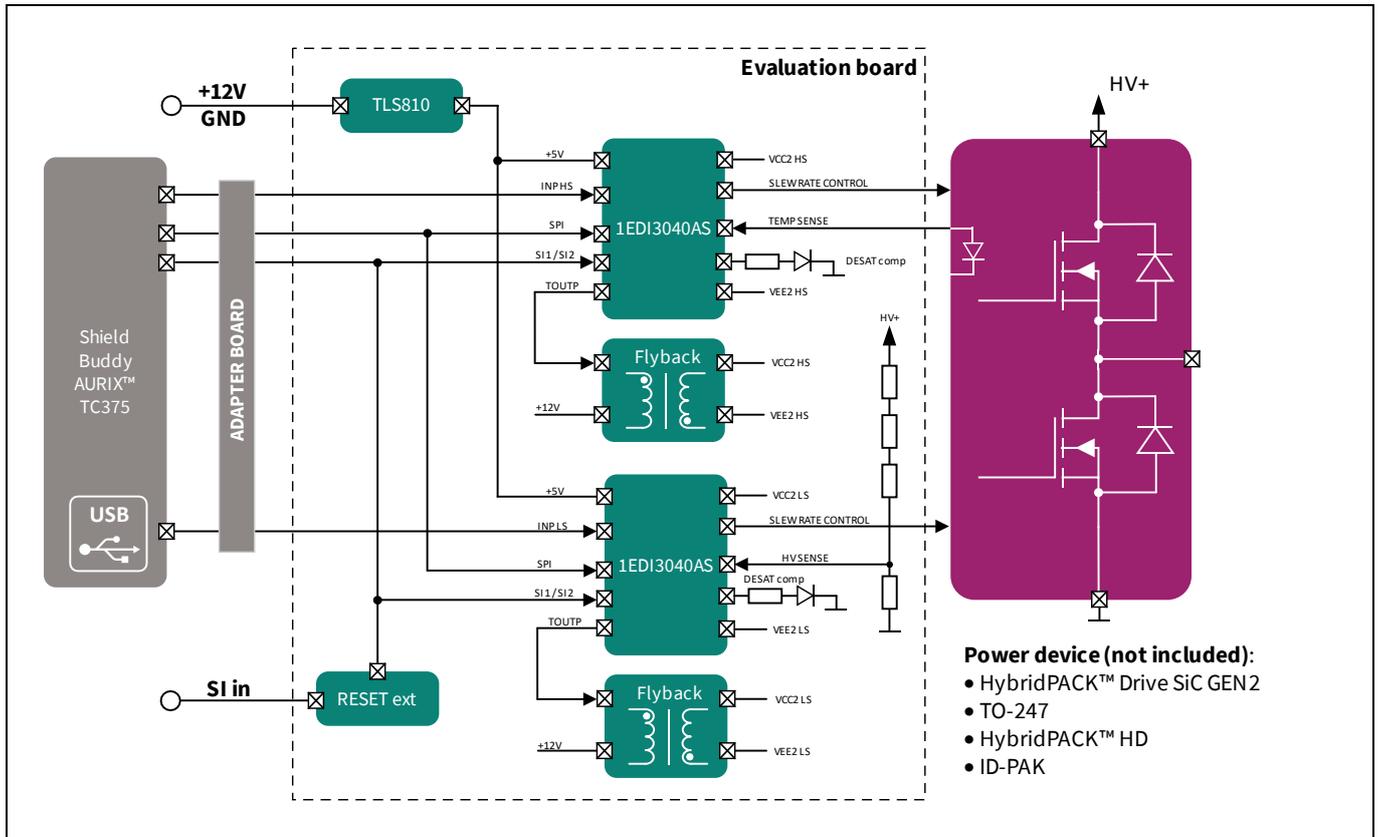


Figure 1 System architecture of 1EDI3040AS evaluation boards

2.1 PCB overview

This section provides an overview of all the connectors, LEDs and jumpers available on the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board.

2.1.1 Connectors

The EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board has three banana connectors as shown in Figure 2 with the functionalities as mentioned in Table 1. Please see Chapter 2.1.5 for operating ranges of the connectors.

Table 1 Connectors

Connector # from Figure 2	Functionality
1	Primary power supply ground
2	+12 V primary power supply
3	Safety inputs (SI) control pin

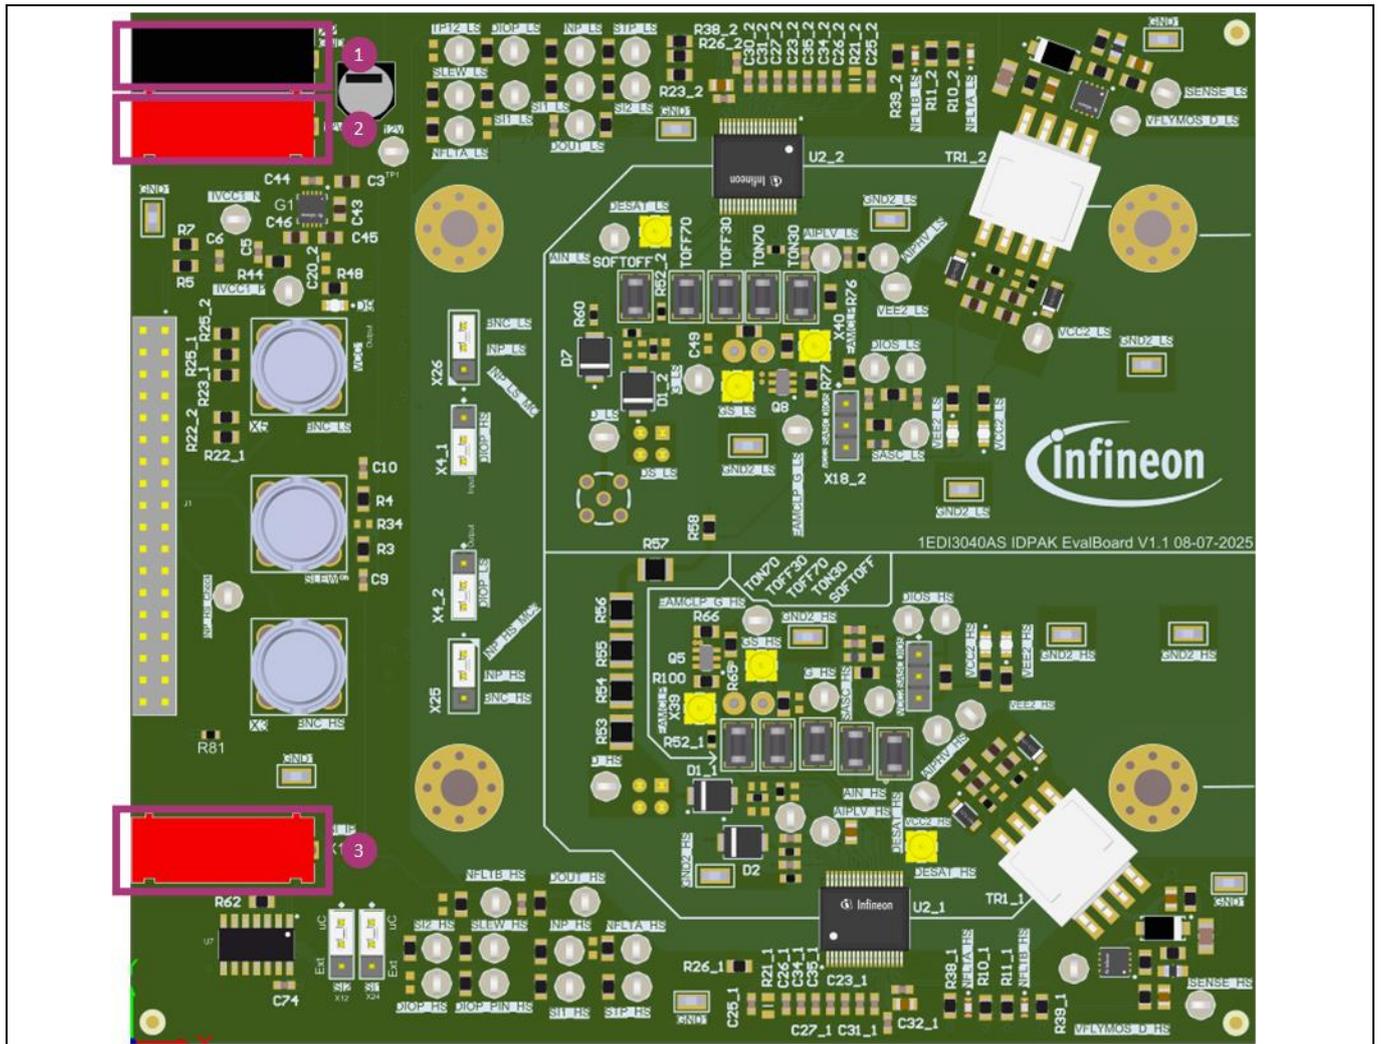


Figure 2 Connectors

2.1.2 LED indicators

The EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board is equipped with the following LEDs to signal important information.

Table 2 LED indicators

LED # from Figure 3	Functionality
1	VCC1 +5 V power supply
2	NFLTBS_LS
3	NFLTA_LS
4	VCC2_LS
5	VEE2_LS
6	VEE2_HS
7	VCC2_HS
8	NFLTA_HS
9	NFLTBS_HS

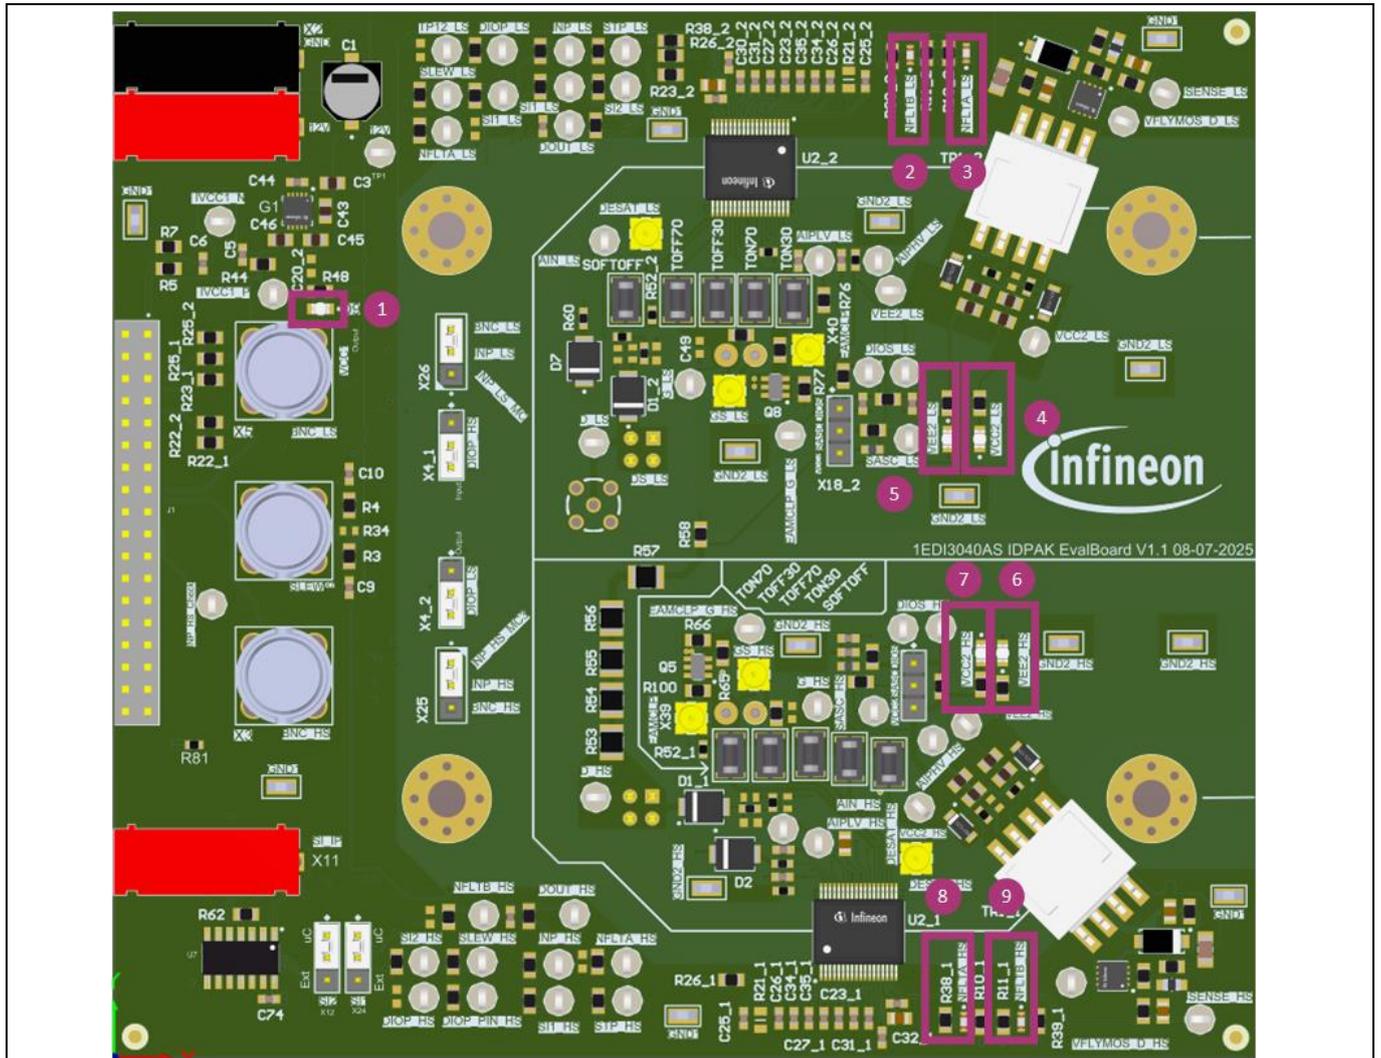


Figure 3 LED indicators

2.1.3 BNC connectors

The 1EDI3040AS evaluation board has the following BNC connectors to connect function generator inputs in case the Aurix™ TC375 shield buddy board and the graphical user interface are not used. Please see [Chapter 2.1.5](#) for operating ranges of the BNC connectors.

Table 3 BNC connectors

BNC label from Figure 4	Functionality
1	INP PWM signal for LS gate driver
2	SLEW PWM signal for both LS and HS gate drivers
3	INP PWM for HS gate driver

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

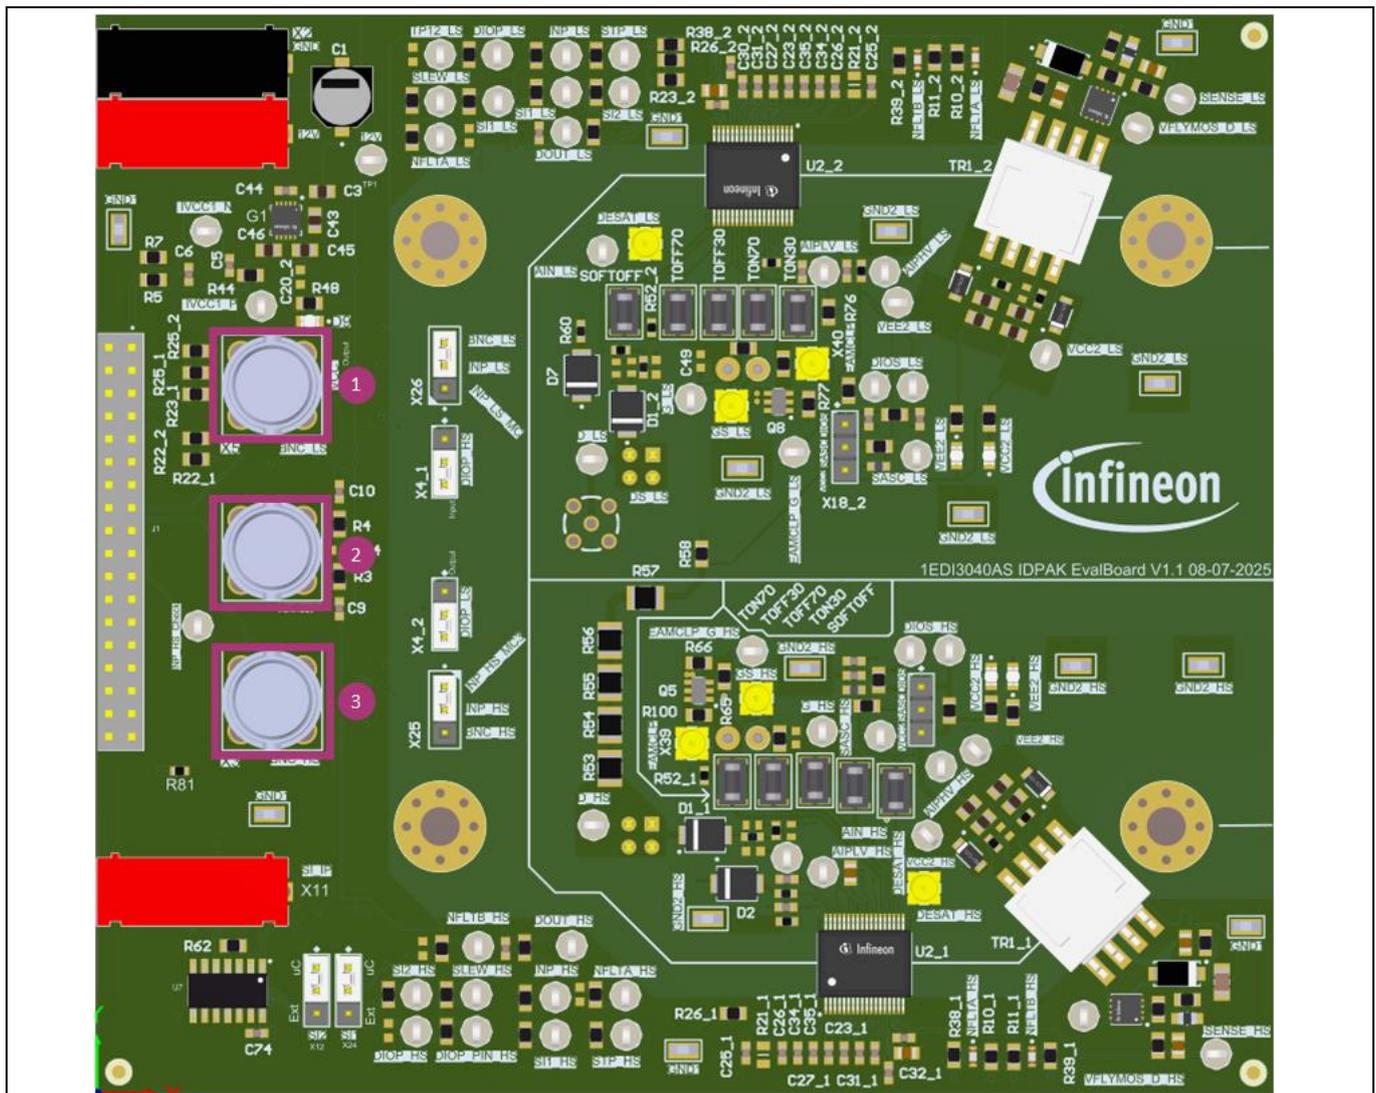


Figure 4 BNC connectors

2.1.4 Jumper configurations

The 1EDI3040AS evaluation board provides the following configuration options with jumpers:

1. DIOP_HS and DIOP_LS
 - This jumper provides flexibility to use the DIOP pins of both the HS and LS device either as an input or output when using the 1EDI3040AS evaluation board in combination with the Aurix™ shield buddy board and the graphical user interface

Table 4 Jumper configuration options for DIOP_HS and DIOP_LS

Jumper configuration	Functionality
1-2	DIOP used as input
2-3	DIOP used as output

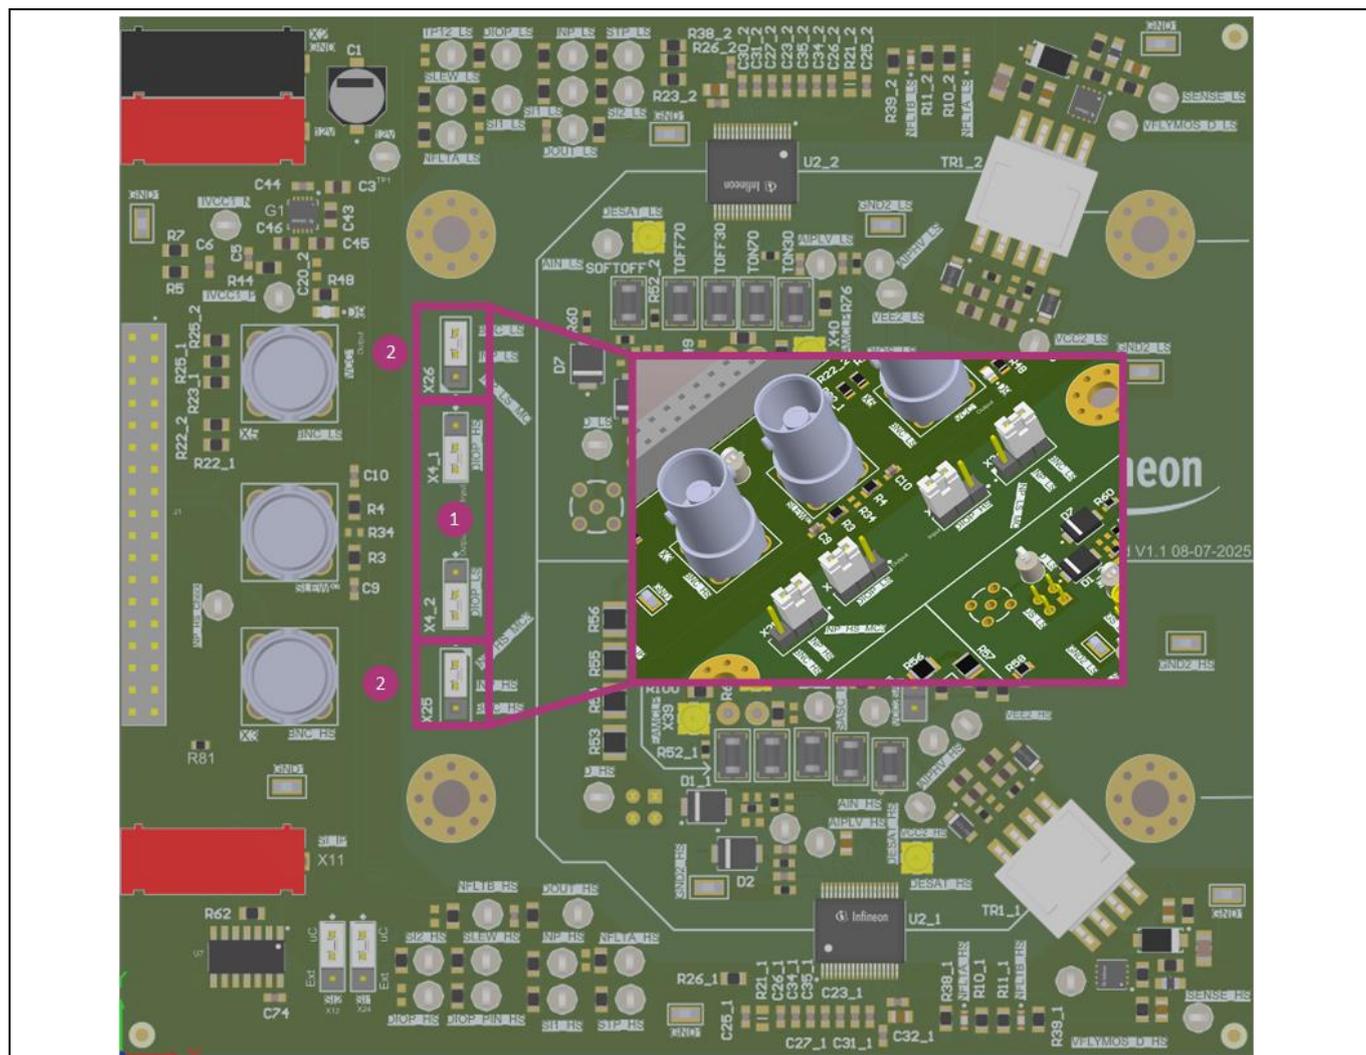


Figure 5 DIOP_HS and DIOP_LS, INP_HS and INP_LS configuration jumpers

2. INP_HS and INP_LS

- Select the PWM input source from the microcontroller or BNC connectors
- Can be used for scenarios where programming is required but a function generator creates the PWM signals

Table 5 Jumper configuration for INP_HS and INP_LS

Jumper configuration	Functionality
Open – no jumper placed	PWM path not driven, no switching possible
1-2	PWM provided by microcontroller
2-3	PWM provided by external BNC

3. SASC/DIOS_HS and SASC/DIOS_LS

- This jumper provides the following configuration options:

Table 6 Jumper configuration for SASC/DIOS_HS and SASC/DIOS_LS

Jumper configuration	Functionality
Open – no jumper placed	DIOS: input or output as configured SASC: inactive
1-2	DIOS: output SASC: controlled by DIOS
2-3	DIOS: input or output as configured SASC: connected to VCC2

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

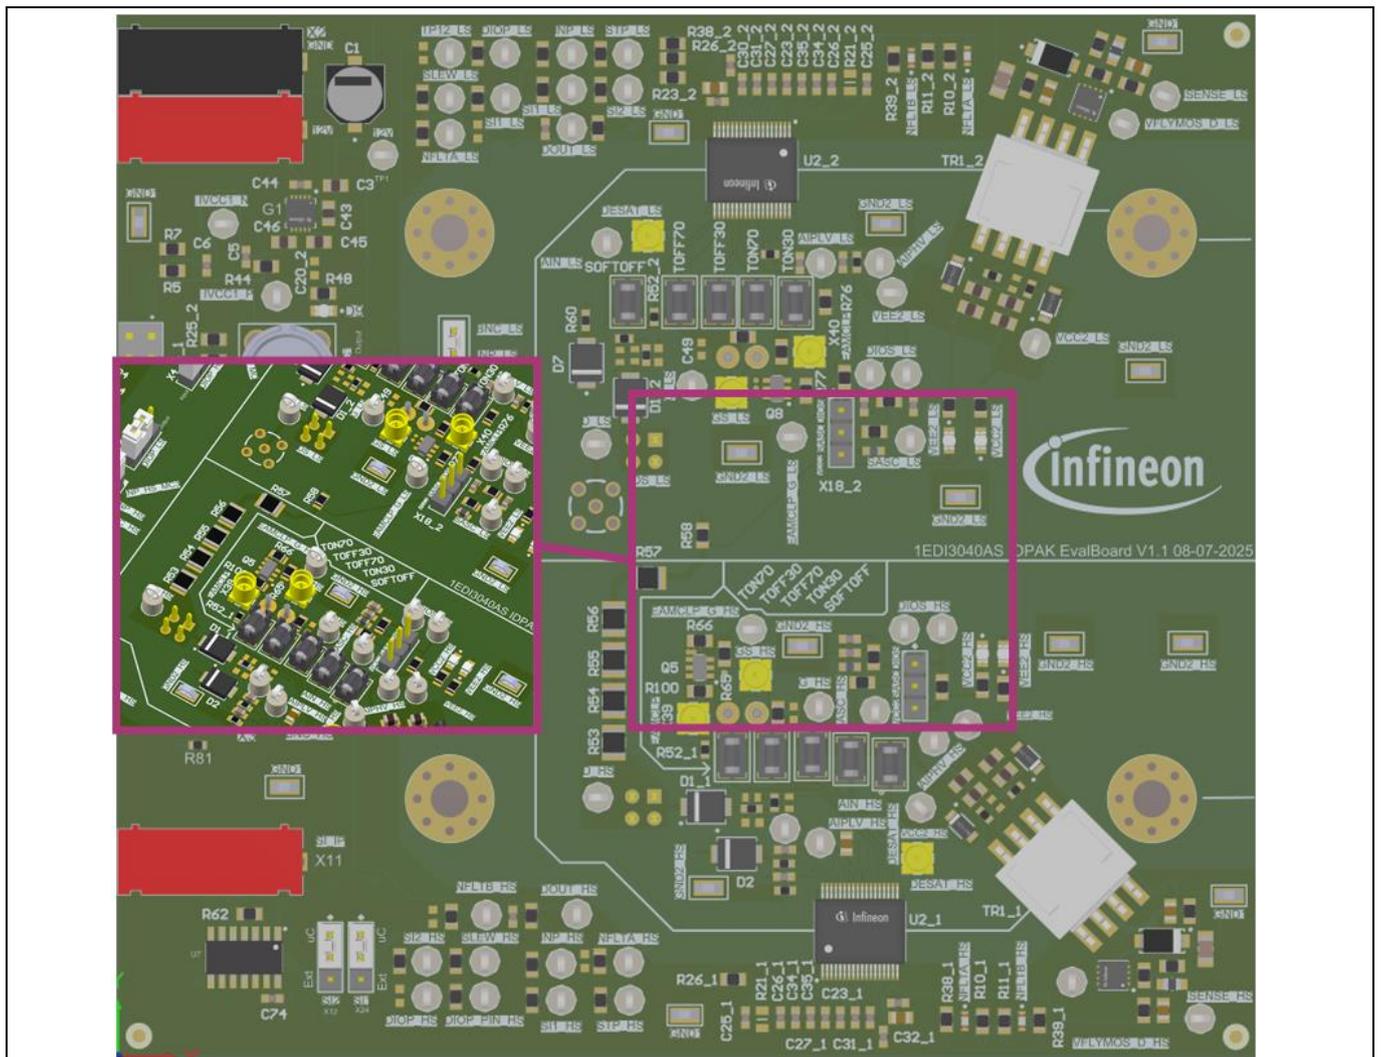


Figure 6 SASC jumpers left open

4. SI1 and SI2

- These jumpers are used to select if the SI1 and SI2 signals are controlled by the Aurix™ TC375 Shieldbuddy board or through the SI reset circuit connected to the banana connector SI_IP

Table 7 Jumper configuration for SI1 and SI2

Jumper configuration	Functionality
1-2	SI1 and SI2 controlled by the microcontroller
2-3	SI1 and SI2 controlled by banana connector SI_IP

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

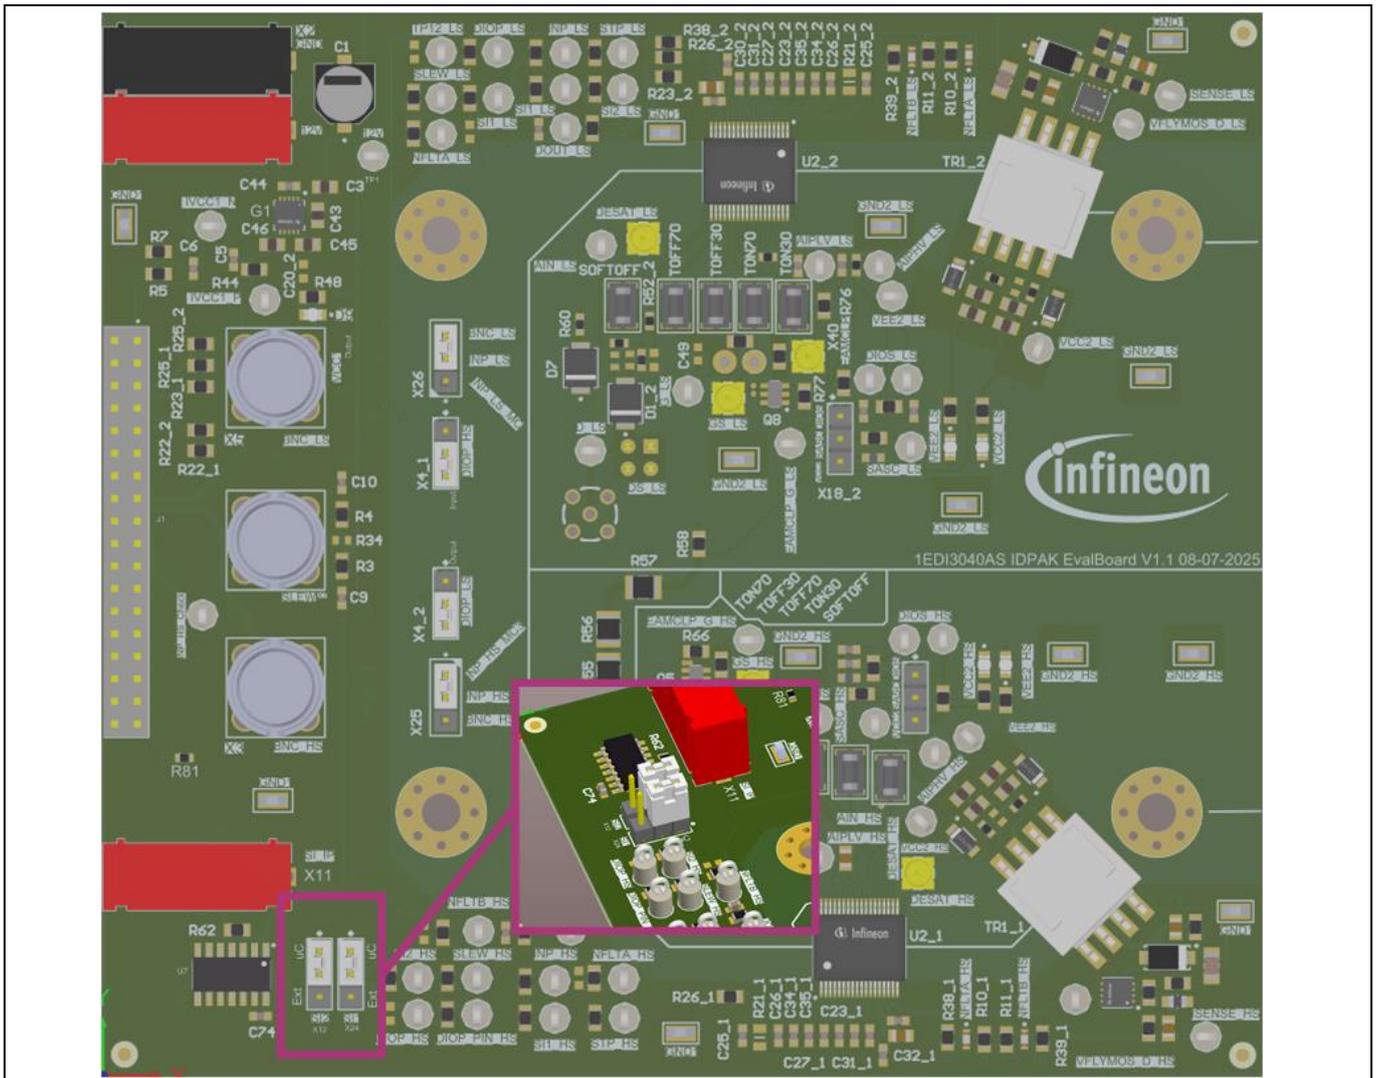


Figure 7 SI1 and SI2 jumpers configured to be controlled by the microcontroller

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

2.1.5 Gate resistors

Mechanical fuse holders are provided for the mounting of the gate resistors and the SOFTOFF resistor. This allows for convenient swapping of resistor values when using the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board for characterization purposes.

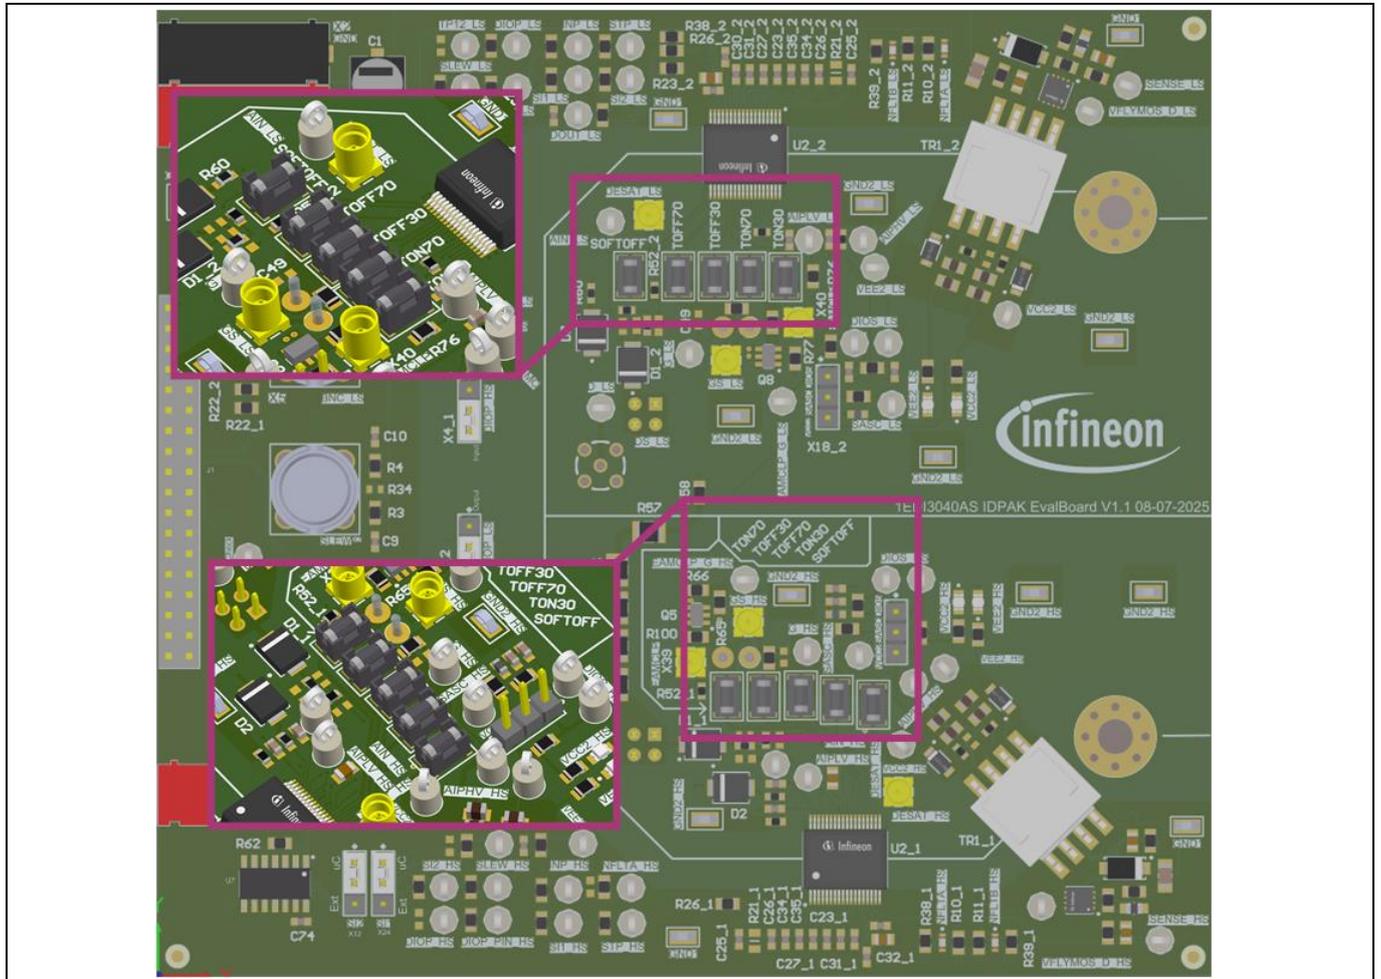


Figure 8 Mini-melf gate resistor holders

By default, there are no gate resistors mounted in the fuse holders. On the bottom of the board there is a selection of resistors soldered with typical values. After

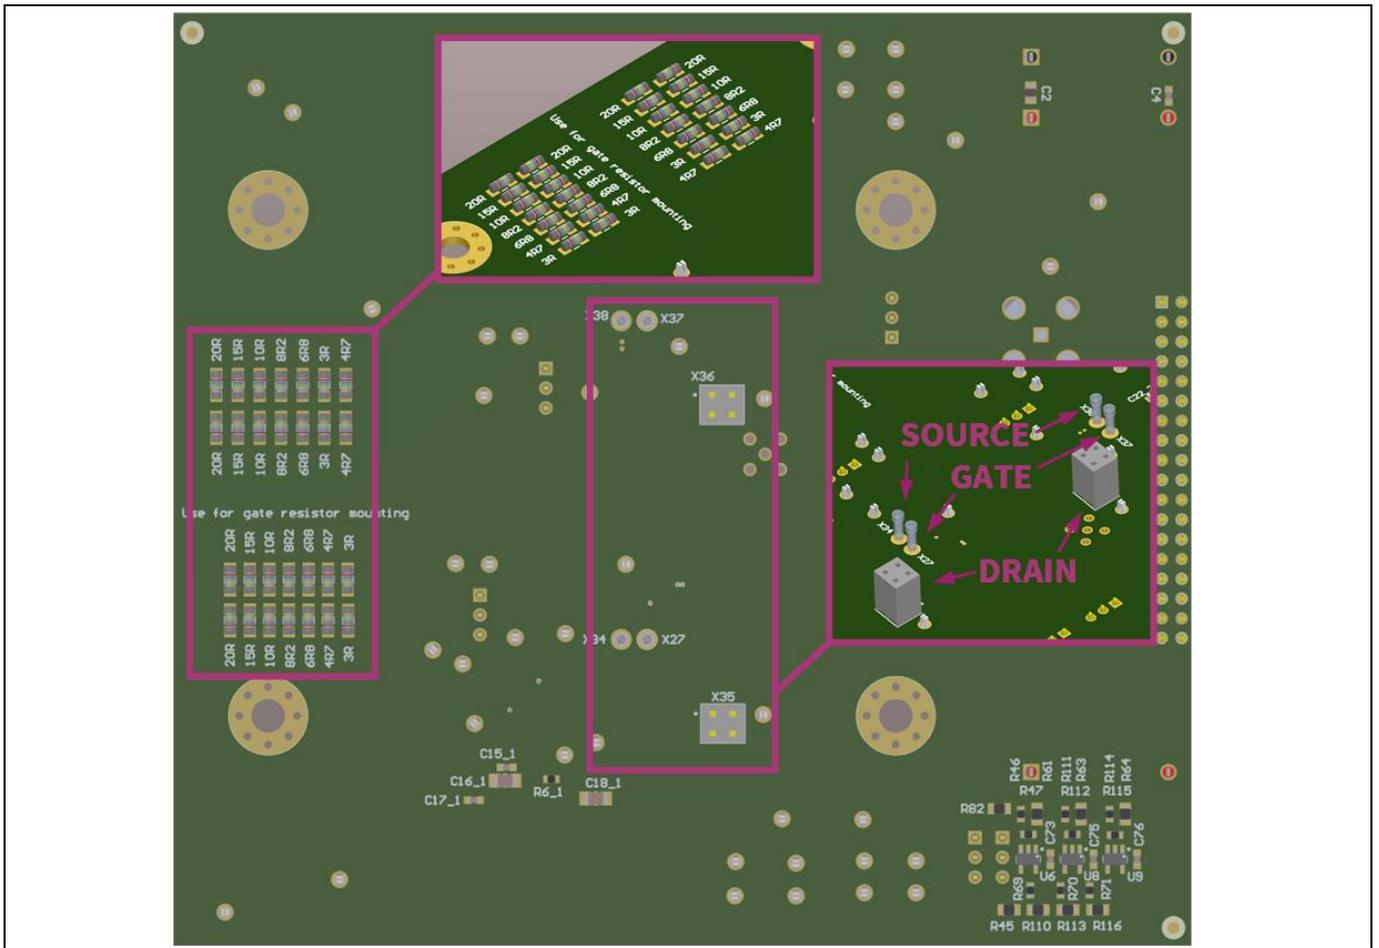


Figure 9 Bottom Mini-Melf resistor collection and base board contacts

2.1.6 External SI interface

The safety inputs control pin as shown in Figure 2 can be used to asynchronously control the state machine of the microcontroller through an external function generator. To use this function set the jumper according to Table 7 so that the external SI control is selected.

By applying a voltage in the range as shown below the

Table 8 SI interface voltages

Voltage on SI_IP (Typ)	Operating mode
0 ... 1.25 V	Configuration and Error
1.25 ... 2.5 V	PWM enable
2.5 ... 3.75 V	ASCP ON
3.75 ... 5 V	ASCP OFF

2.1.7 Operating conditions

Please make sure that the operating ranges defined in Table 9 are maintained to avoid electrical damage of the product.

Table 9 Operating conditions

Parameter	Pin	Values		Unit	Note
		Min.	Max.		
V_{primary}	Between banana sockets "+12 V" and "GND"	6	26	V	Limited by input voltage requirement from Flyback controller and linear voltage regulator
$V_{\text{SI_IP}}$	Between banana sockets "SI_IP" and "GND"	0	5	V	Limited by SI reset circuitry supplied by VCC1
V_{BNC}	All BNC connectors	-0.3	5	V	Limited by VCC1 voltage
V_{AIPLV}	Voltage nodes NTC_LS and DESAT_COMP_HS	0	3.3	V	Please see schematic of the evaluation board. Limited by internal clamping structure of the gate driver

2.2 Schematic

Figure 10, Figure 11, Figure 12, Figure 13, Figure 14, Figure 15 and Figure 16 show the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board schematics.

Note: A red cross represents not mounted components

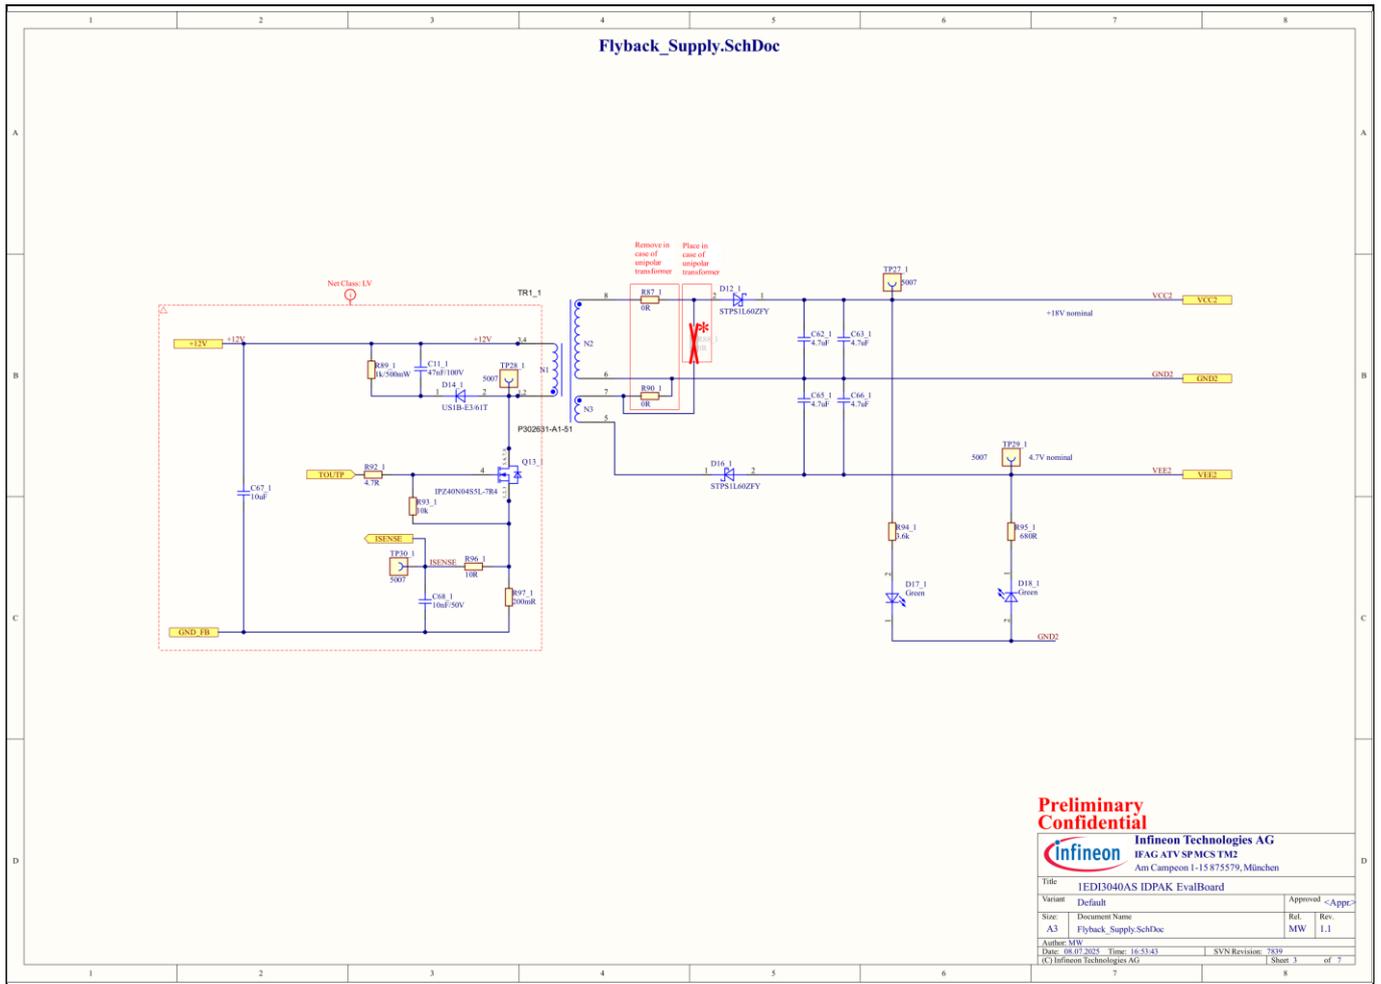


Figure 11 Flyback power supply schematic

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

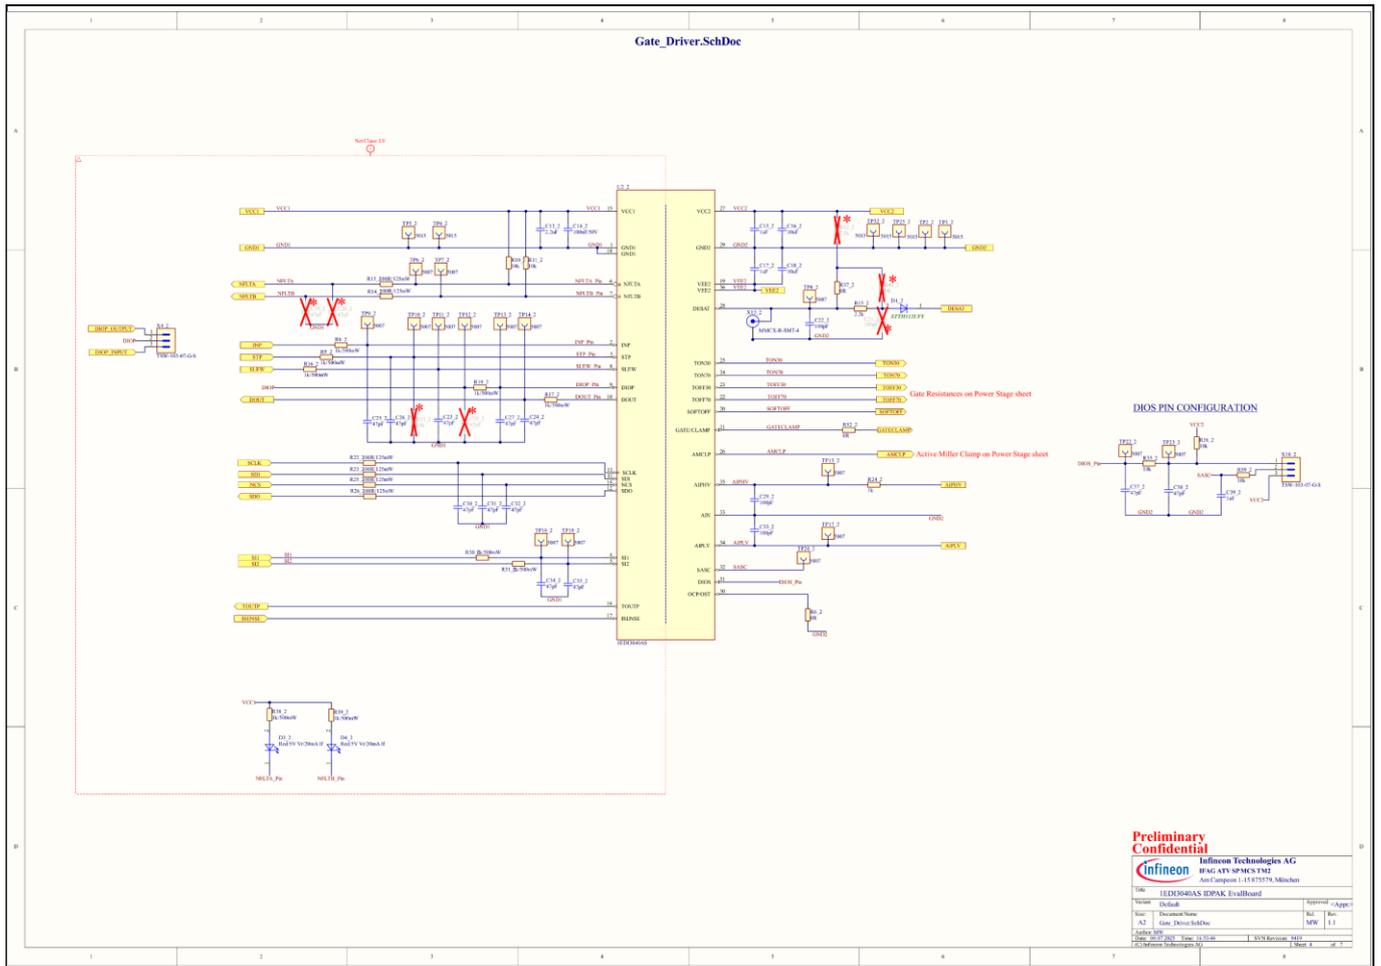


Figure 12 Gate driver schematic

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

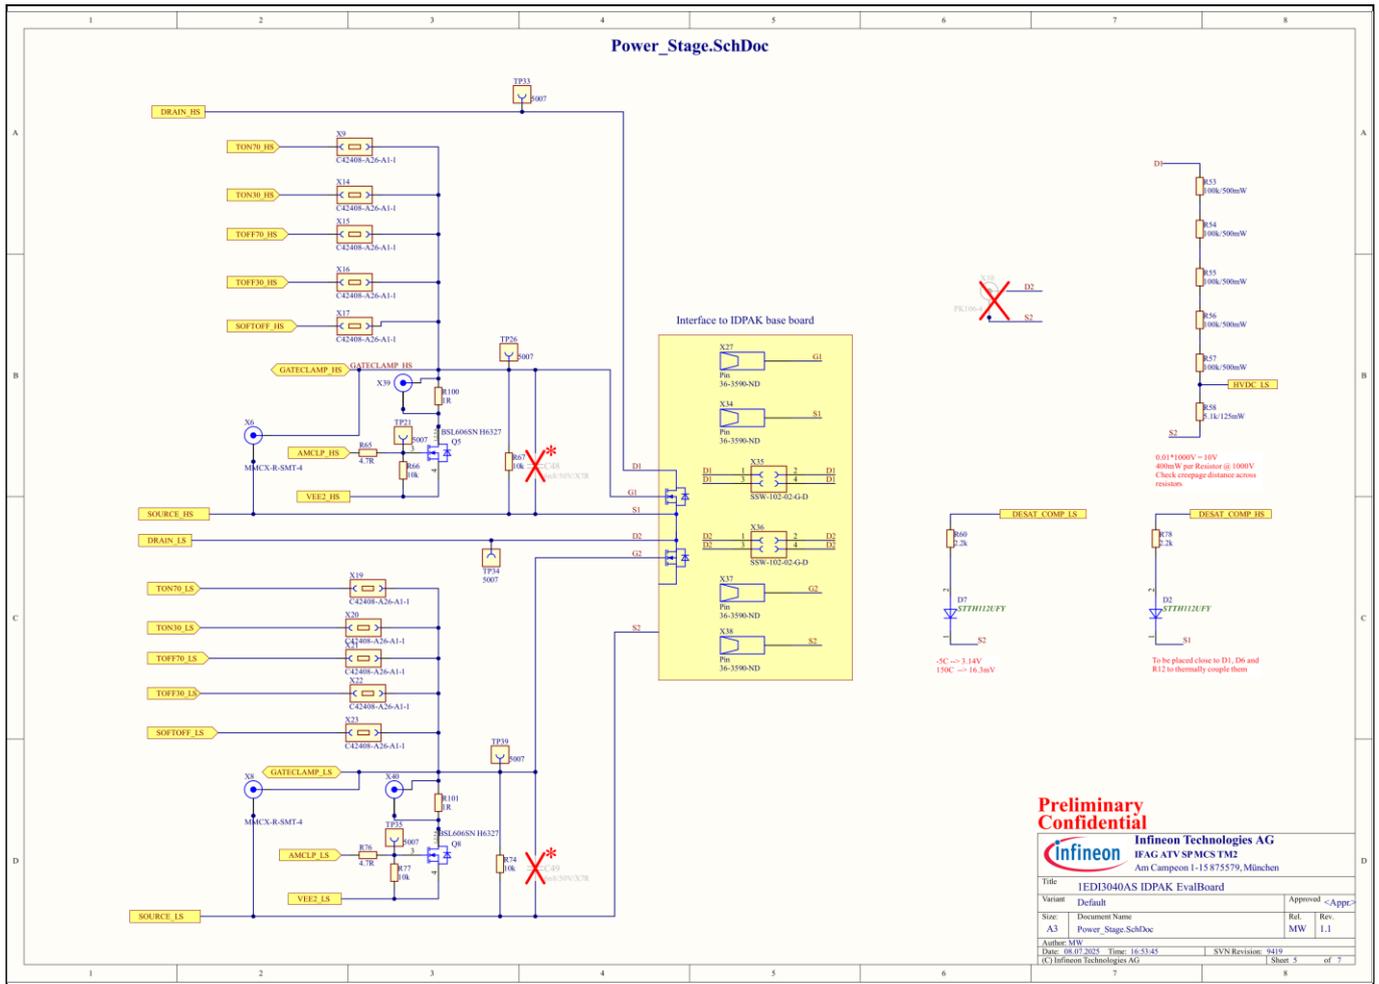


Figure 13 HybridPACK™ Drive power stage schematic

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

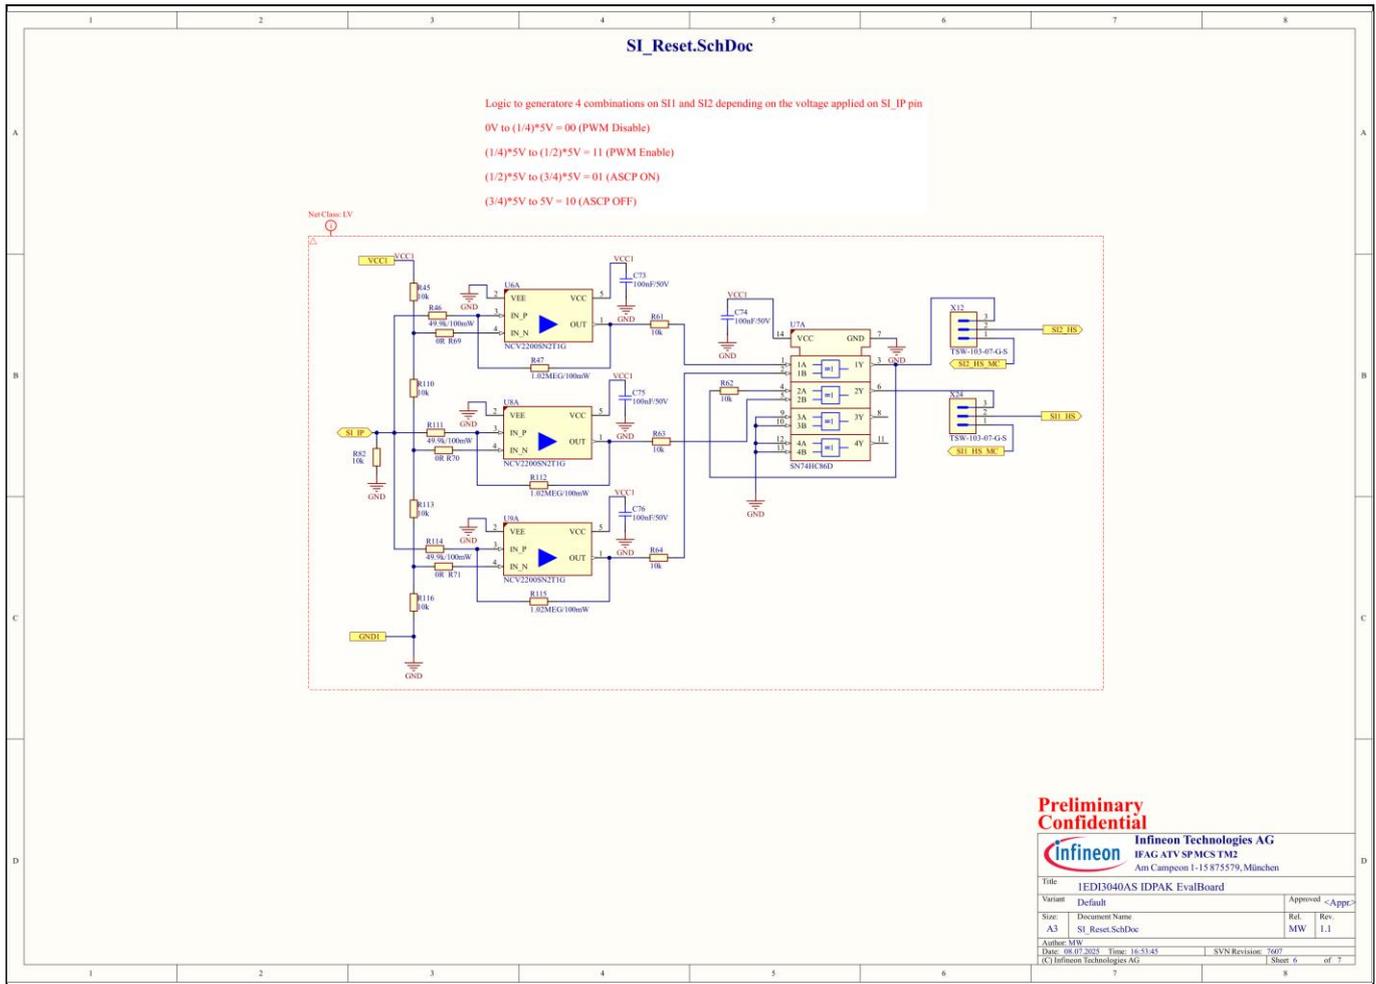


Figure 14 Safety inputs reset schematic

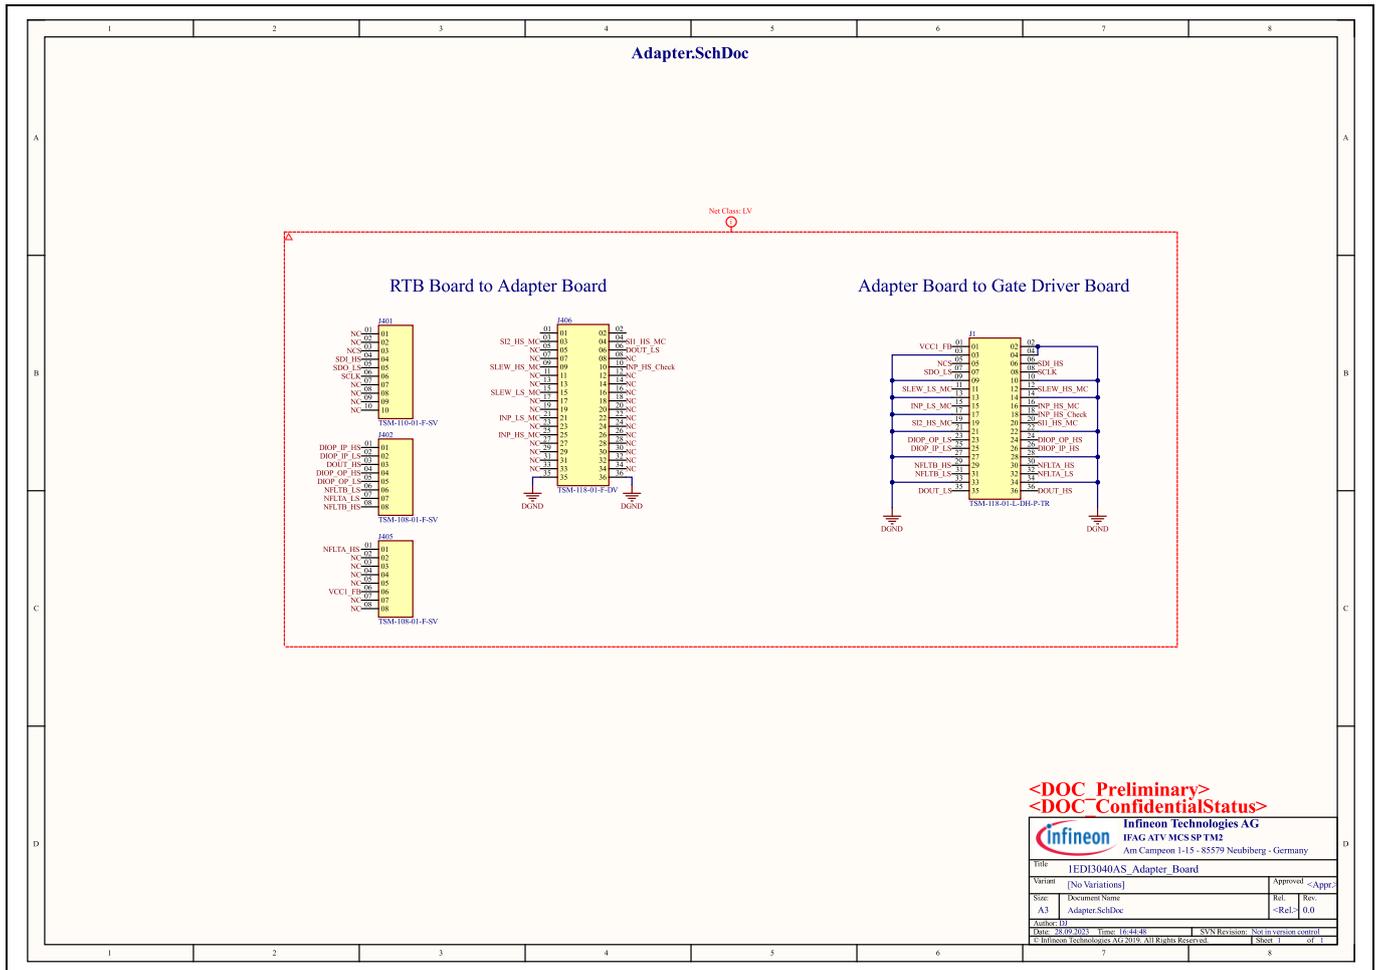


Figure 16 Adapter board schematic

2.3 Layout

</

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

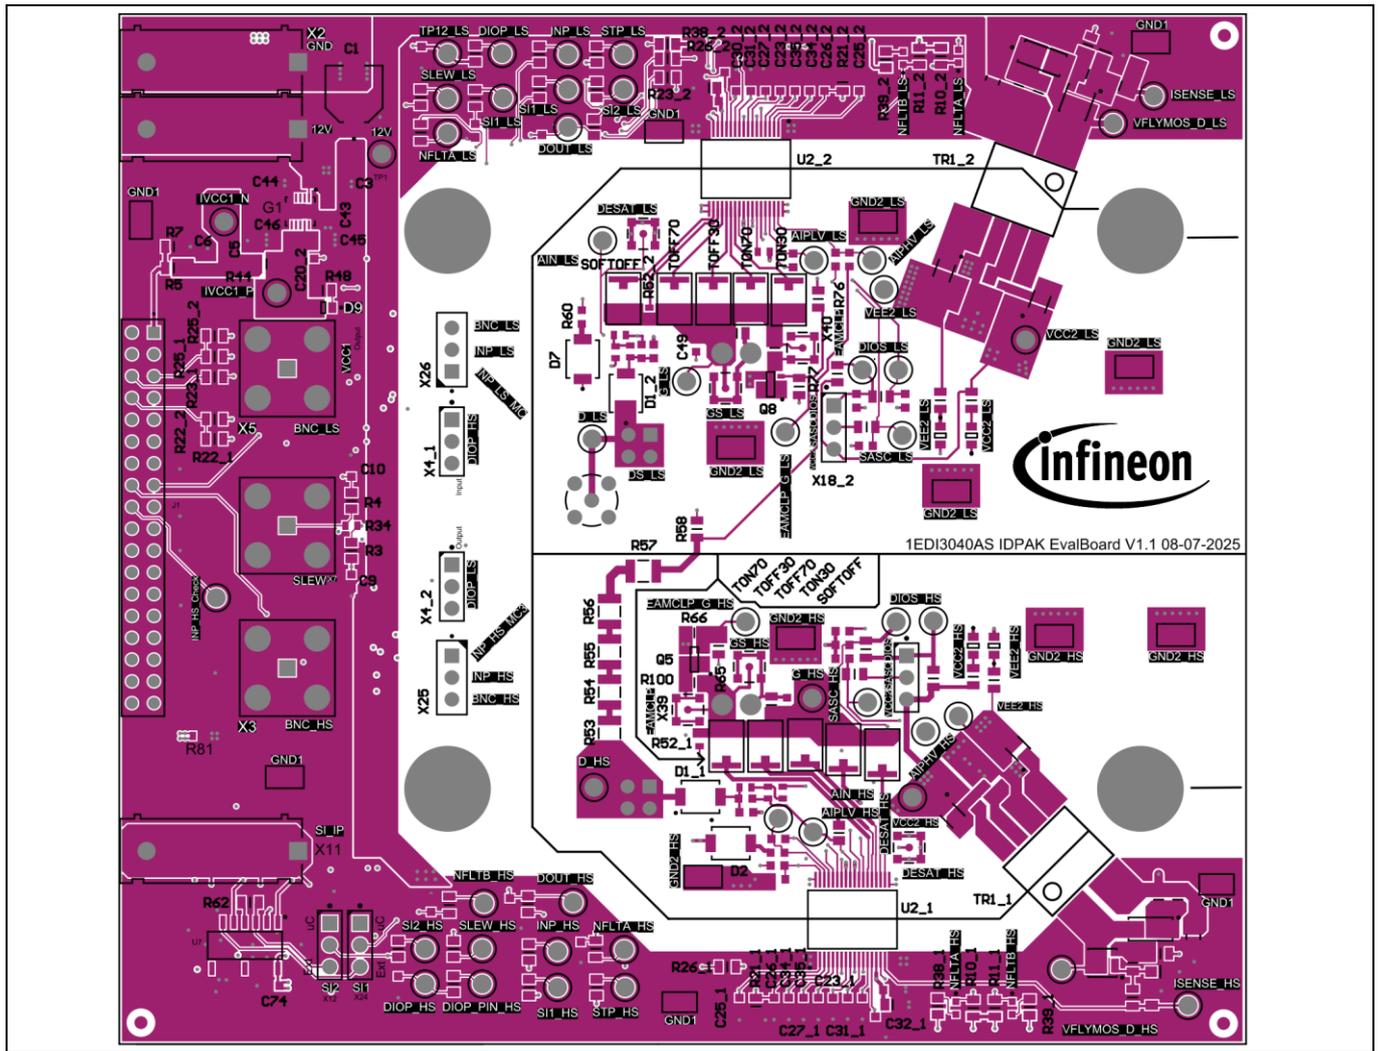


Figure 17 Top layer

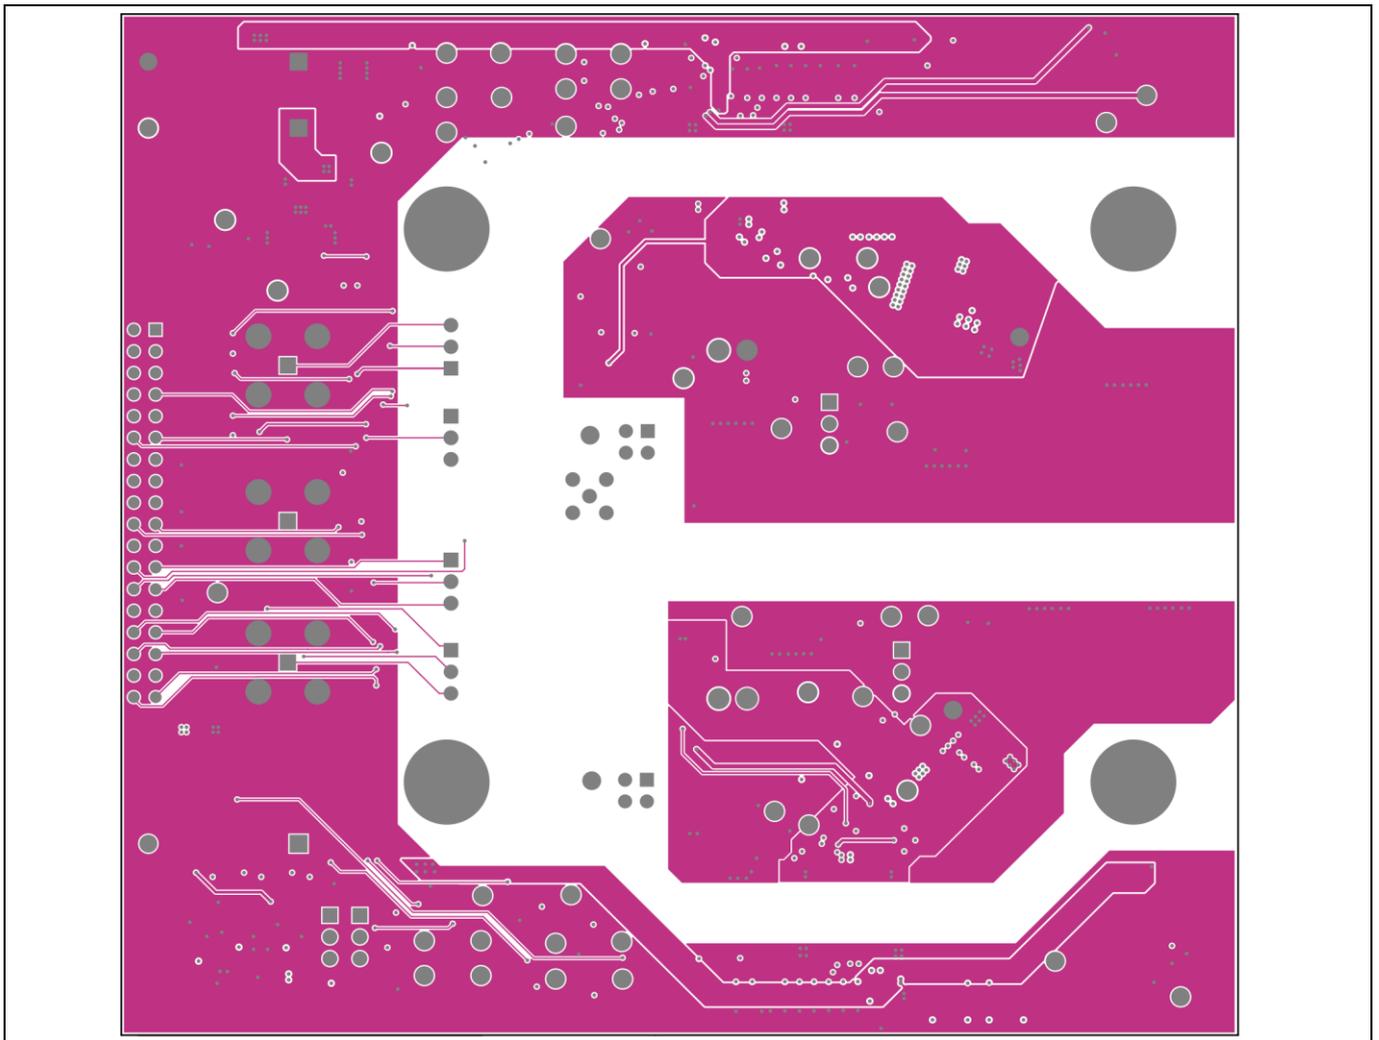


Figure 18 Layer 2

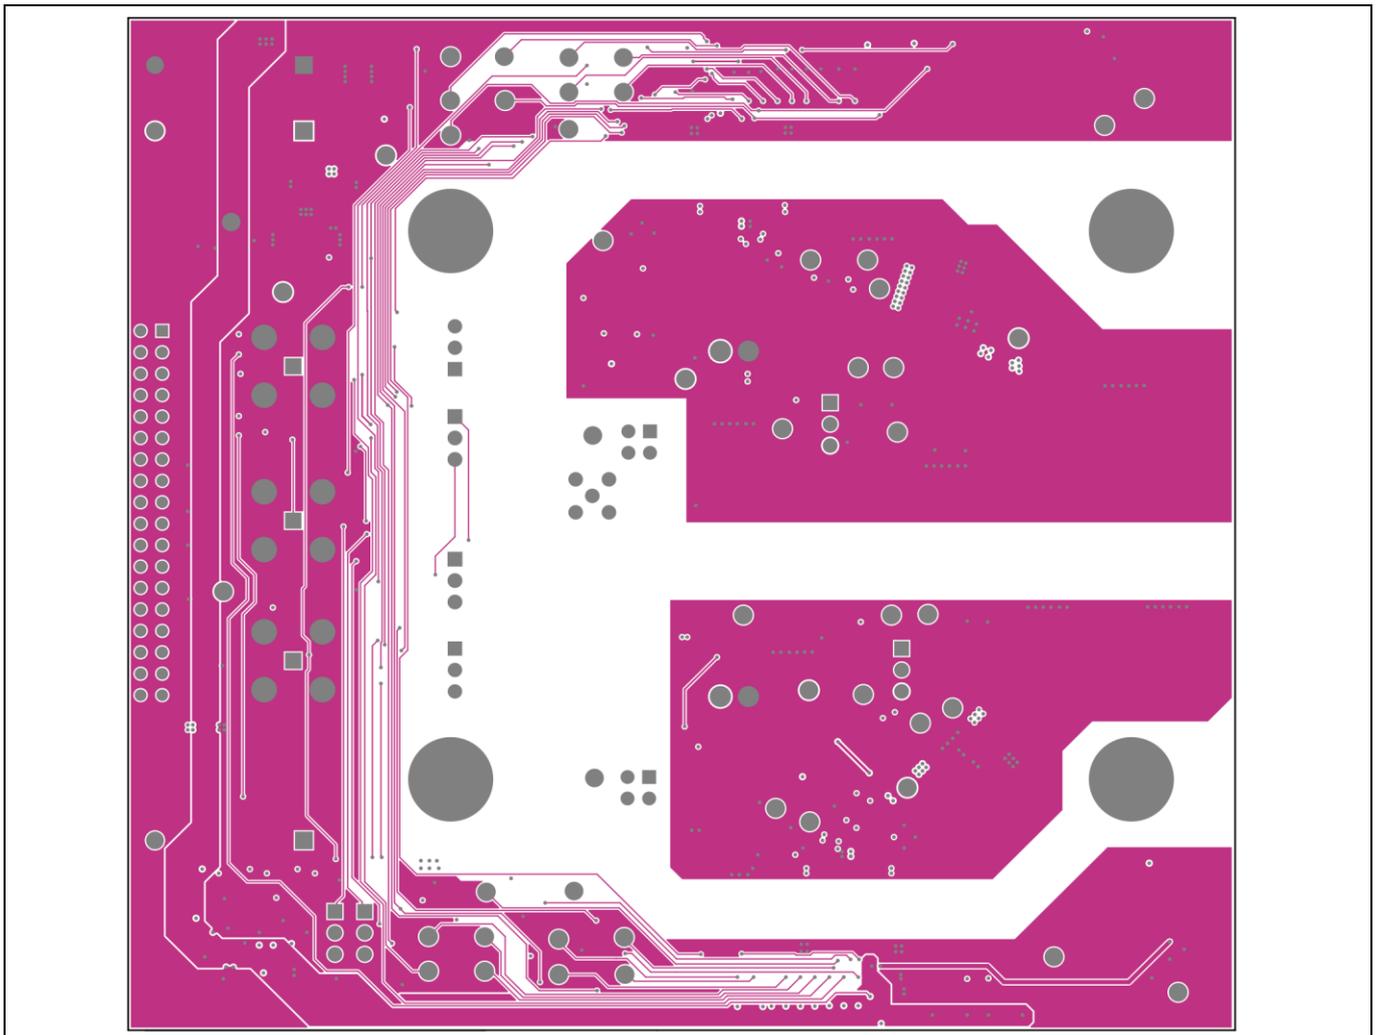


Figure 19 Layer 3

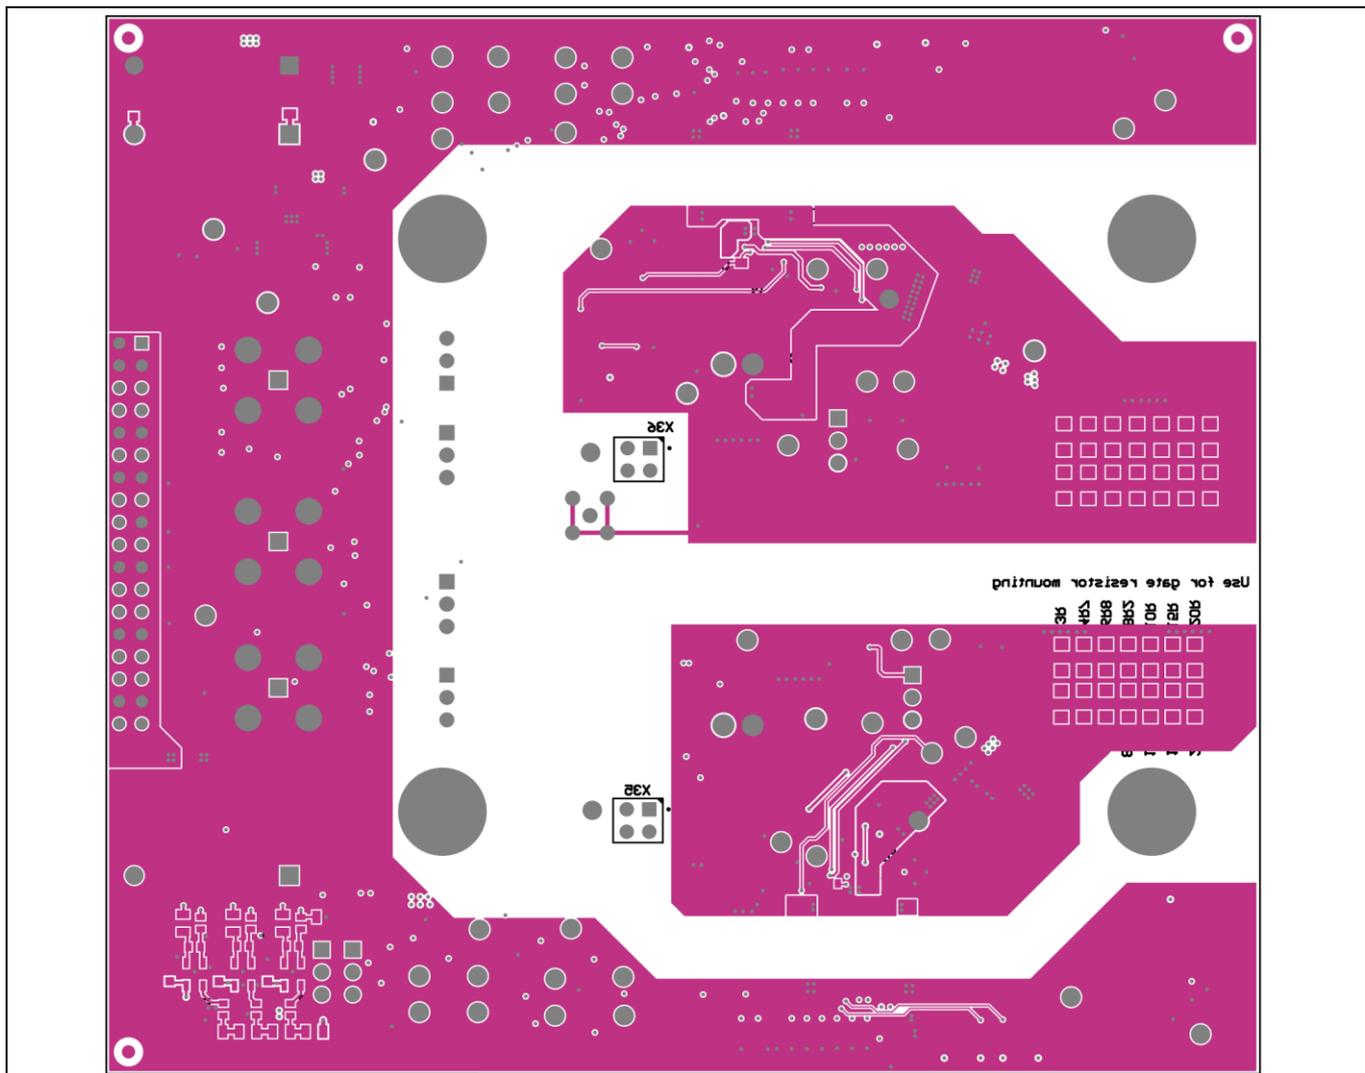


Figure 20 Bottom layer

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

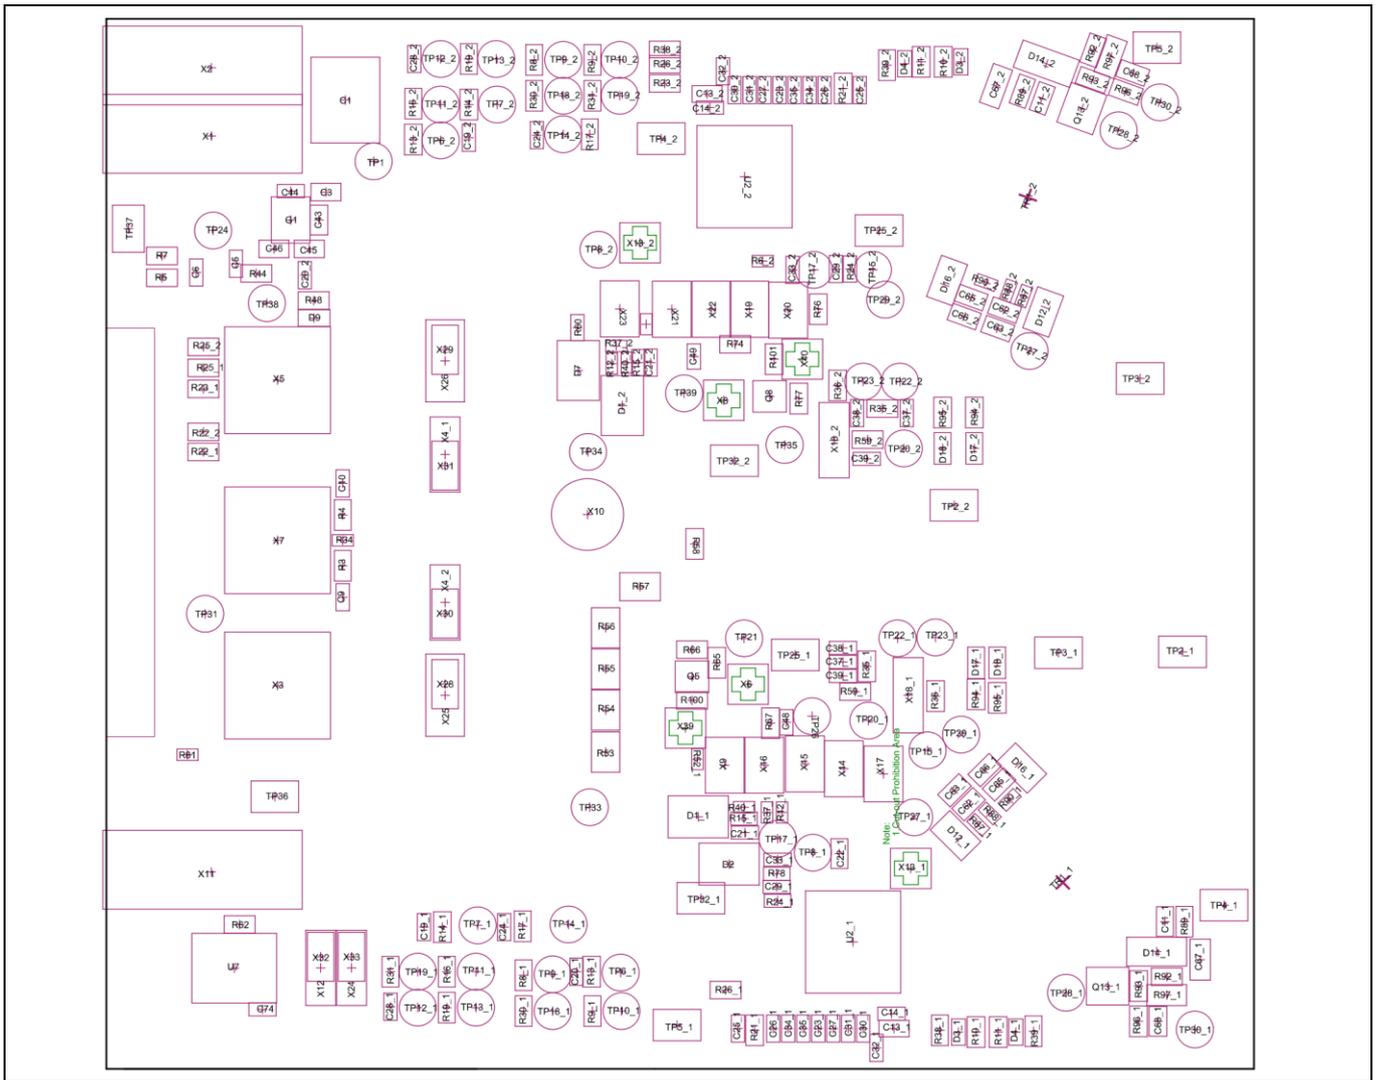


Figure 21 Top assembly

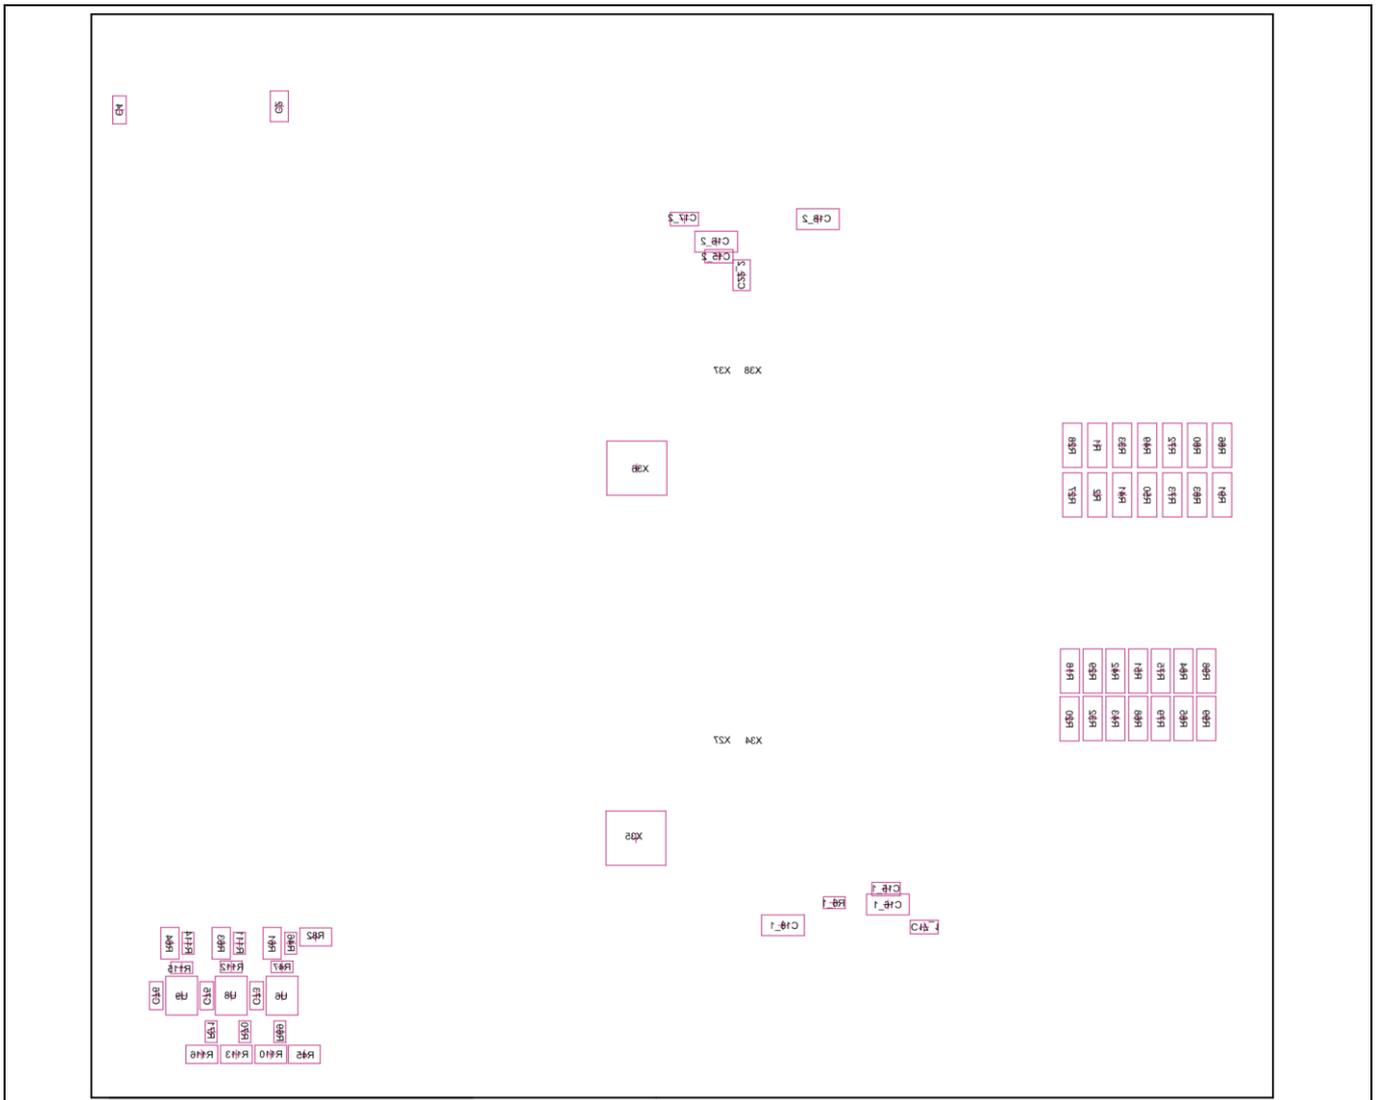


Figure 22 Bottom assembly

2.4 Bill of materials

Table 10 shows the bill of materials for the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board. The HybridPACK™ Drive SiC Gen2 module is not included.

Table 10 BOM of the most important/critical parts of the evaluation or reference board (example)

Designator	Comment	Quantity	Manufacturer	Manufacturer Order Number
C1	100uF	1	Panasonic	EEEFTH101XAP
C2, C3, C43, C45, C46, C62_1, C62_2, C63_1, C63_2, C65_1, C65_2, C66_1, C66_2	4.7uF	13	Taiyo Yuden	TMK212AB7475 KG-T
C4, C5, C6, C14_1, C14_2, C44, C73, C74, C75, C76	100nF/50V	10	AVX	06035C104K4Z 2A
C9, C10, C19_1, C19_2, C20_1, C20_2, C23_1, C23_2, C24_1,	47pF	32	MuRata	GRM1885C1H4 70GA01

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

C24_2, C25_1, C25_2, C26_1, C26_2, C27_1, C27_2, C28_1, C28_2, C30_1, C30_2, C31_1, C31_2, C32_1, C32_2, C34_1, C34_2, C35_1, C35_2, C37_1, C37_2, C38_1, C38_2				
C11_1, C11_2	47nF/100V	2	MuRata	GRM21BR72A473KA01
C13_1, C13_2	2.2uF	2	MuRata	GRM21BR71C225KA12
C15_1, C15_2, C17_1, C17_2	1uF	4	MuRata	GRM188R7YA105MA12
C16_1, C16_2, C18_1, C18_2, C67_1, C67_2	10uF	6	TDK Corporation	C3216X7R1E106K160AB
C21_1, C21_2	100pF	2	MuRata	GCM1885C2A101JA16
C22_1, C22_2	100pF	2	MuRata	GRM2165C1H101GA01
C29_1, C29_2, C33_1, C33_2	100pF	4	MuRata	GRM1885C2A101JA01
C39_1, C39_2	1nF	2	Kemet	C0603C102G8GAC
C48, C49, Con1, Con2, Con3, Con4	6n8, Connection	6	TDK/Epcos, [NoParam]	
C68_1, C68_2	10nF/50V	2	MuRata	GCM2195C1H103FA16
D1_1, D1_2, D2, D7	STTH112UFY	4	STMicroelectronics	STTH112UFY
D3_1, D3_2, D4_1, D4_2	Red/5V Vr/20mA If	4	LiteOn Optoelectronics	LTST-C190CKT
D9, D17_1, D17_2, D18_1, D18_2	Green	5	OSRAM Opto Semiconductors	LG R971-KN-1
D12_1, D12_2, D16_1, D16_2	STPS1L60ZFY	4	ST	STPS1L60ZFY
D14_1, D14_2	US1B-E3/61T	2	Vishay	US1B-E3/61T
G1	TLS810A1LD V50	1	Infineon Technologies	TLS810A1LD V50
J1	SSW-118-01-G-D	1	Samtec	03.13.0348.0
Q5, Q8	igfet_n_ch_enh_dio_1d2d3g4s5d6d_6p	2	Infineon Technologies	BSL606SN H6327
Q13_1, Q13_2	igfet_n_ch_enh_dio_1s2s3s4g5d6d7d8d_8p	2	Infineon Technologies	IPZ40N04S5L-7R4
R1, R2, R18, R20	3R	4	Vishay	SMM02040C3008FB300

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

R3, R4, R8_1, R8_2, R9_1, R9_2, R16_1, R16_2, R17_1, R17_2, R19_1, R19_2, R30_1, R30_2, R31_1, R31_2, R38_1, R38_2, R39_1, R39_2, R89_1, R89_2	1k/500mW	22	Panasonic	ERJ-P06J102V
R5, R7, R10_1, R10_2, R11_1, R11_2, R21_1, R21_2, R35_1, R35_2, R36_1, R36_2, R45, R59_1, R59_2, R61, R62, R63, R64, R66, R67, R74, R77, R82, R93_1, R93_2, R110, R113, R116	10k	29	Vishay	CRCW080510K0 FK
R6_1, R6_2, R34, R37_1, R37_2, R40_1, R40_2, R52_1, R52_2, R69, R70, R71, R81, R87_1, R87_2, R88_1, R88_2, R90_1, R90_2	0R	19	Vishay	CRCW06030000 Z0EA
R12_1, R12_2	7.5k	2	Vishay	CRCW06037K50 FKEA
R13_1, R13_2, R14_1, R14_2, R22_1, R22_2, R23_1, R23_2, R25_1, R25_2, R26_1, R26_2	100R/125mW	12	Vishay	CRCW0805100R FK
R15_1, R15_2, R60, R78	2.2k	4	ROHM Semiconductors	MCR03EZPFX22 01
R24_1, R24_2	1k	2	Multicomp	MCHP03W8F10 01T5E
R27, R28, R29, R32	4R7	4	Vishay	MMA02040C470 8FB000
R33, R41, R42, R43	6R8	4	Vishay	MMA02040C680 8FB000
R44, R96_1, R96_2	10R	3	Vishay	CRCW080510R0 FK
R46, R111, R114	49.9k/100mW	3	Vishay	CRCW060349K9 FK
R47, R112, R115	1.02MEG/100mW	3	Vishay	CRCW06031M0 2FK
R48, R95_1, R95_2	680R	3	Vishay	CRCW0805680R FK
R49, R50, R51, R68	8R2	4	Vishay	MMA02040C820 8FB300
R53, R54, R55, R56, R57	100k/500mW	5	Vishay	CRCW1210100K FK
R58	5.1k/125mW	1	Vishay	CRCW08055K10 FK
R65, R76, R92_1, R92_2	4.7R	4	Vishay	CRCW08054R70 FK
R72, R73, R75, R79	10R	4	Vishay	SMM02040C100 9FB000
R80, R83, R84, R85	15R	4	Vishay	MMA02040C150 9FB000

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

R86, R91, R98, R99	20R	4	Vishay	SMM02040C200 9FB000
R94_1, R94_2	3.6k	2	Vishay	CRCW08053K60 FK
R97_1, R97_2	200mR	2	Vishay	RCWE0805R200 FKEA
R100, R101	1R	2	Vishay	CRCW08051R00 FK
TP1, TP6_1, TP6_2, TP7_1, TP7_2, TP8_1, TP8_2, TP9_1, TP9_2, TP10_1, TP10_2, TP11_1, TP11_2, TP12_1, TP12_2, TP13_1, TP13_2, TP14_1, TP14_2, TP15_1, TP15_2, TP17_1, TP17_2, TP18_1, TP18_2, TP19_1, TP19_2, TP20_1, TP20_2, TP21, TP22_1, TP22_2, TP23_1, TP23_2, TP24, TP26, TP27_1, TP27_2, TP28_1, TP28_2, TP29_1, TP29_2, TP30_1, TP30_2, TP31, TP33, TP34, TP35, TP38, TP39	5007	50	Keystone Electronics Corp.	5007
TP2_1, TP2_2, TP3_1, TP3_2, TP4_1, TP4_2, TP5_1, TP5_2, TP25_1, TP25_2, TP32_1, TP32_2, TP36, TP37	5015	14	Keystone Electronics Corp.	5015
TR1_1, TR1_2	01.30.0524.0	2	TDK	B78308A2464A 003
U2_1, U2_2	1EDI3040AS	2	Infineon Technologie s	1EDI3040AS
U6, U8, U9	NCV2200SN2T1G	3	ON Semiconduc tor	NCV2200SN2T1 G
U7	SN74HC86D	1	Texas Instruments	SN74HC86D
X1, X11	973 582-101	2	Hirschmann Test & Measureme nt	973 582-101
X2	973 582-100	1	Hirschmann Test & Measureme nt	973 582-100
X3, X5, X7	5-1634506-2	3	TE Connectivity	5-1634506-2
X4_1, X4_2, X12, X18_1, X18_2, X24	TSW-103-07-G-S	6	Samtec	TSW-103-07-G- S
X6, X8, X13_1, X13_2, X39, X40	MMCX-R-SMT-4	6	Hirose Connectors	MMCX-R-SMT-4

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671



EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation boards

X9, X14, X15, X16, X17, X19, X20, X21, X22, X23	C42408-A26-A1-1	10	Inductron	C42408-A26-A1-1
X10	PK106-4	1	Teledyne Lecroy	PK106-4
X25, X26	HTSW-103-07-G-S	2	Samtec	HTSW-103-07-G-S
X27, X34, X37, X38	Pin	4	Keystone Electronics	3590
X28, X29, X30, X31, X32, X33	CON-SOC-JMP-1X2	6	Samtec	SNT-100-BK-G
X35, X36	SSW-102-02-G-D	2	Samtec	SSW-102-02-G-D

3 Getting started with the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

In this section, details on getting started and operating the evaluation board together with the Aurix™ TC375 Shieldbuddy board is described. Please refer in parallel to the document **Infineon-EiceDRIVER_AMC_gate_driver_Configuration_Wizard-UG** for details on how to use the GUI.

3.1 Step by step instructions

- Connect the ID-PAK base board to the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board as shown in Figure 23 and Figure 24.
- Set jumpers SI1 and SI2 to position “1-2” as shown in Figure 7
- When no ID-PAK base board is connected to the evaluation board, the device will generate DESAT and RBSOA faults due to floating DESAT pins. To prevent a DESAT or RBSOA error, the errors need to be disabled or set to warning using the corresponding SPSMER.DESATERR and SCPC3.RBSOAERR bits.
- Set the DIOP jumper of Table 4 as desired
- Set jumpers of Table 5 to **PWM input provided by microcontroller**
- Connect the 12 V supply to the evaluation board through banana connectors “+12V” and “GND”
- Observe the LEDs indicating the board supply voltages as of Table 2
- Connect the evaluation board to the PC through the USB cable
- Start the EiceDRIVER™ AMC 1EDI304xAS Configuration Wizard
- Go to the **Aurix (uC) Shield Buddy** tab page and click **Setup Serial Interface**, select the COM port and select the checkbox **Connect. Aurix Shield Status LED** will turn green
- When using the Aurix™ TC375 Shieldbuddy board for the first time, click **Program Aurix TC375** to ensure that the latest firmware is programmed to the microcontroller. This step only needs to be done only once and can be skipped for subsequent use
- Wait for the programming to be complete and for the **Aurix Shield Status LED** to turn green
- Click **Reset board** and check in tab page **Console** that the board is reset
- Click **Send RTB Board Configuration** to initialize all the peripherals of the microcontroller and wait for the **Evalboard Status LED** to turn green
 - **Note:** If the Evalboard status LED stays orange, the communication between AURIX™ and the TLE9189 is not working. Update the DAS drivers that might have been corrupted during the GUI installation if the AURIX™ development studio was previously installed.
- Configure the registers for each high side and low side gate driver individually under the **1EDI3040AS Gate Driver tab** and under **Register Configuration**
- To write to a register, enter mode **00_ Configuration & Error** and click **SPI Write Enable – HS/LS**. Corresponding LEDs **SPI Config Enabled** should turn green
- Turn on the 12 V power supply
- LED “VCC1” should turn green indicating that VCC1 has successfully powered-up
- LEDs “VCC2” and “VEE2” for both the HS and LS drivers should turn green indicating the VCC2 and VEE2 have powered-up successfully
- Once the devices have powered-up completely, LEDs “NFLTA” for both HS and LS should turn red indicating that the device is in “Configuration and Error” mode
- Follow the instructions under the tab **Test Mode** to execute the required tests
 - When values such as **PWM Frequency** need to be set, enter the corresponding values in units mentioned and press enter to load the values
 - Upon completion of a test, please click **Stop Test** to ensure that the test is complete

EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board Z8F80827671



Getting started with the EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board

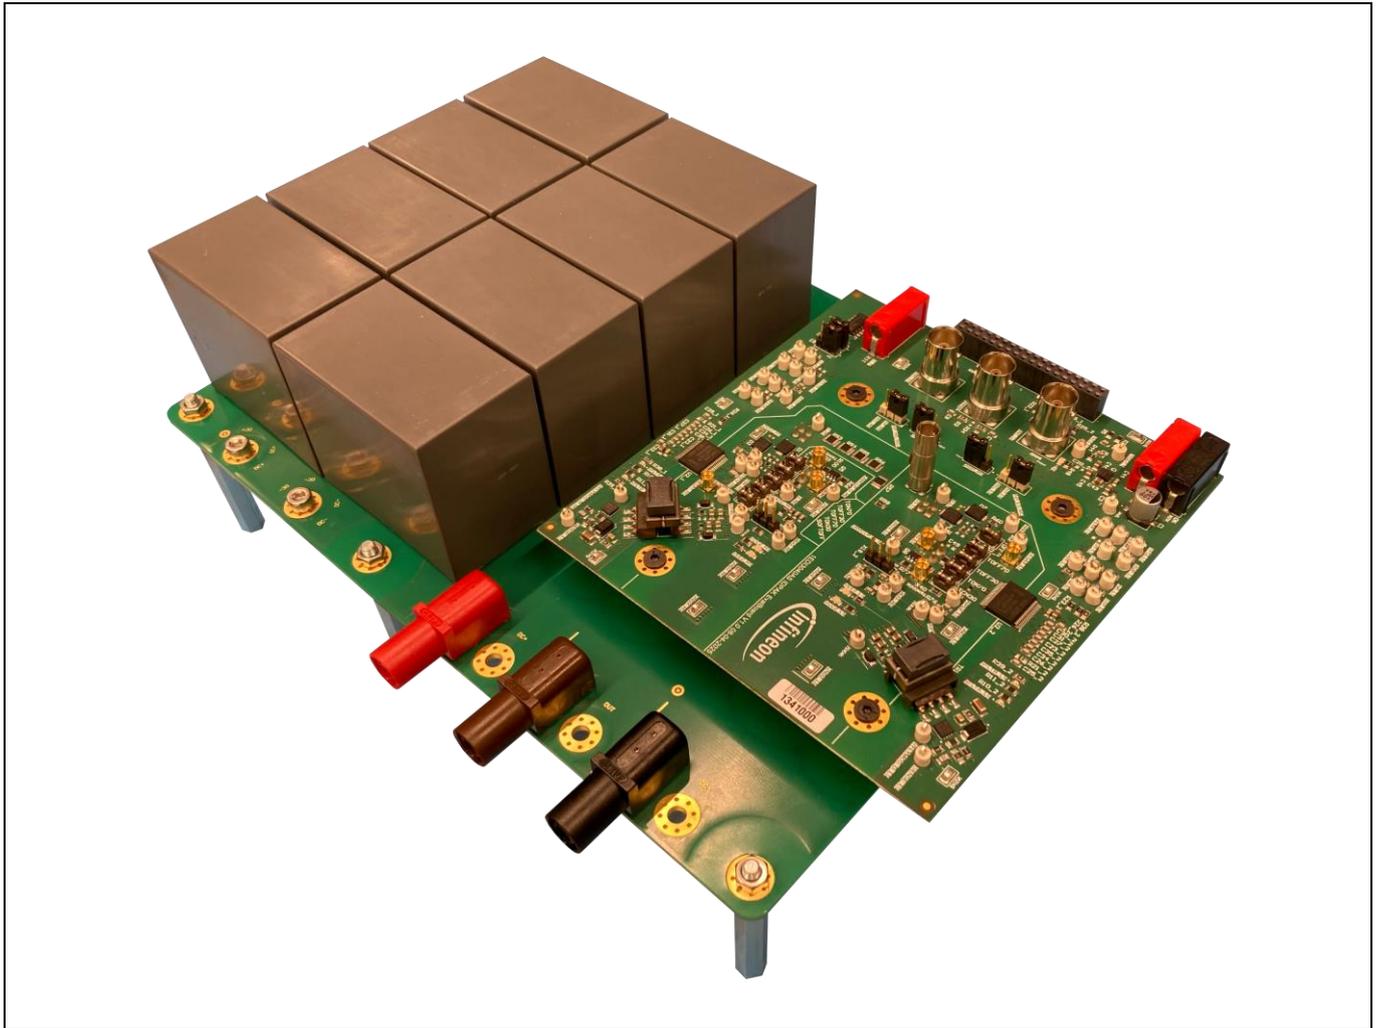


Figure 23 EiceDRIVER™ gate driver 1EDI3040AS ID-PAK evaluation board with base board



Figure 24 Connection to the IDPAK base board

Revision history

Revision history

Document revision	Date	Description of changes
1.0	2025-07-24	Initial version
1.1	2025-10-08	Chapter 2 : Added order numbers for base boards

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2025-10-08

Published by

Infineon Technologies AG

81726 Munich, Germany

© 2026 Infineon Technologies AG.

All Rights Reserved.

Do you have a question about this document?

Email: erratum@infineon.com

Document reference

Z8F80653277

Warnings

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.