

Radar Baseboard XMC4700

24 GHz radar system platform

Board version V2.0

About this document

Scope and purpose

This application note describes the key features of Infineon's Radar Baseboard XMC4700, part of Infineon's 24 GHz radar system platform. It also introduces the concept of the platform, which supports multiple sensors. At the heart of the board is the XMC4700, a 32-bit Arm® Cortex®-M4 MCU. It also has a high-speed USB 2.0 interface to host a computer for visualization or fast data processing. In addition, the board is compatible with the Arduino standard, which facilitates access to existing mass-market daughter boards for mass data storage or wireless communication Arduino boards.

Intended audience

This document is intended for anyone working with Infineon's 24 GHz radar system platform.

Related documents

Additional information can be found in the supplementary documentation provided with the Sense2GoL Pulse or Distance2GoL Kits in the Infineon Toolbox or from www.infineon.com/24GHz:

- 24 GHz Radar Tools and Development Environment User Manual
- Sense2GoL Pulse Application Note (AN598)
- Distance2GoL Application Note (AN615)

Table of contents

About this document.....	1
Table of contents.....	2
List of figures	3
List of tables	4
1 Introduction	5
1.1 Key features.....	5
2 Hardware description: Radar Baseboard XMC4700.....	6
2.1 Overview	6
2.2 Block diagram.....	7
2.3 Power supply	7
2.3.1 Battery and external power supply	8
2.3.1.1 Hardware changes (for V1.1 only)	8
2.3.1.2 External power supply operation with battery charging.....	9
2.3.3 USB operation	11
2.4 Current measurement of radar sensor shields	12
2.5 EEPROM	12
2.6 Microcontroller unit – XMC4700.....	13
2.7 User-configurable LEDs.....	13
2.8 User-configurable button	14
2.9 SD card reader	14
2.10 Level shifters.....	14
3 Connectors	16
4 Firmware development and debugging	19
4.1 Debugging.....	19
4.1.1 Onboard debugger and UART connection	21
5 Frequency band and regulations	22
5.1 24 GHz regulations	22
5.2 Regulations in Europe	22
5.3 Regulations in the United States of America.....	22
6 Authors	23
7 References	24
Revision history.....	25

List of figures

Figure 1	Radar Baseboard XMC4700 with main components and dimensions	6
Figure 2	Block diagram – Radar Baseboard XMC4700	7
Figure 3	Block diagram – power supply concept	8
Figure 4	P8 header configuration for using battery or external power supply	8
Figure 5	External power supply and battery charging – block diagram.....	9
Figure 6	External power supply and battery charging – schematic	9
Figure 7	Battery operation – block diagram.....	10
Figure 8	Battery operation – schematic	10
Figure 9	Operation with USB cables	11
Figure 10	Current sensors connections	12
Figure 11	Block diagram – XMC4700	13
Figure 12	User-configurable LEDs.....	13
Figure 13	User-configurable button	14
Figure 14	SD card reader connections.....	14
Figure 15	Level translator (U6, U7 and U8) connections.....	15
Figure 16	External headers – P2, P3, P4, P5 and P6.....	16
Figure 17	V1.1 Debugger components	19
Figure 18	P8 header connections – for onboard debugger, for external debugger (V1.1 only).....	20
Figure 19	V2.0 Debugger components – For debugging and flashing, the USB cable has to be simply connected to the “Debug USB” port. Header settings are no longer needed.....	20
Figure 20	Recommended installation options for the J-Link driver.....	21

List of tables

Table 1	User LEDs pin assignment.....	14
Table 2	External header (P2) – pin description	16
Table 3	External header (P3) – pin description	17
Table 4	External header (P4) – pin description	17
Table 5	External header (P5) – pin description	17
Table 6	External header (P6) – pin description	17
Table 7	Debugger type and header settings (V1.1 only)	20
Table 8	XMC4200 pins used for debugging and UART communication	21

1 Introduction

The Radar Baseboard XMC4700 is a generic sensor interface for Infineon's 24 GHz radar sensors. The central MCU can perform radar data processing or forward the sensor data to a USB interface or an Arduino interface. The board is designed to allow customers to do prototyping and system integrations as well as initial product feature evaluations.

An onboard debugger with licensed firmware from SEGGER, it also allows easy debugging over USB. Infineon's powerful, free-of-charge toolchain DAVE™ can be used for programming the XMC4700 microcontroller. This application note describes the key features and hardware configuration of the Radar Baseboard XMC4700 in detail.

1.1 Key features

The primary features of the Radar Baseboard XMC4700 are:

- XMC4700 – 32-bit Arm® Cortex®-M4 based microcontroller for signal processing
- Multiple power supply possibilities – micro-USB, external power supply or battery
- Compatible with Arduino for ease of use and prototyping
- Current sensors for current consumption estimation
- Onboard debugger for debugging
- SD card reader for raw data storage
- User-configurable LEDs
- User-configurable button

2 Hardware description: Radar Baseboard XMC4700

This section presents a detailed overview of the Radar Baseboard XMC4700 hardware specifications, including features, power supply and board interfaces.

2.1 Overview

The Radar Baseboard XMC4700 is shown in Figure 1. The board makes it possible to implement different settings to get closer to a custom-fit solution for the use case. It also makes it possible to quickly gather sampled radar data that can be used to develop radar signal-processing algorithms on a PC or implement target detection algorithms directly on the microcontroller using DAVE™.

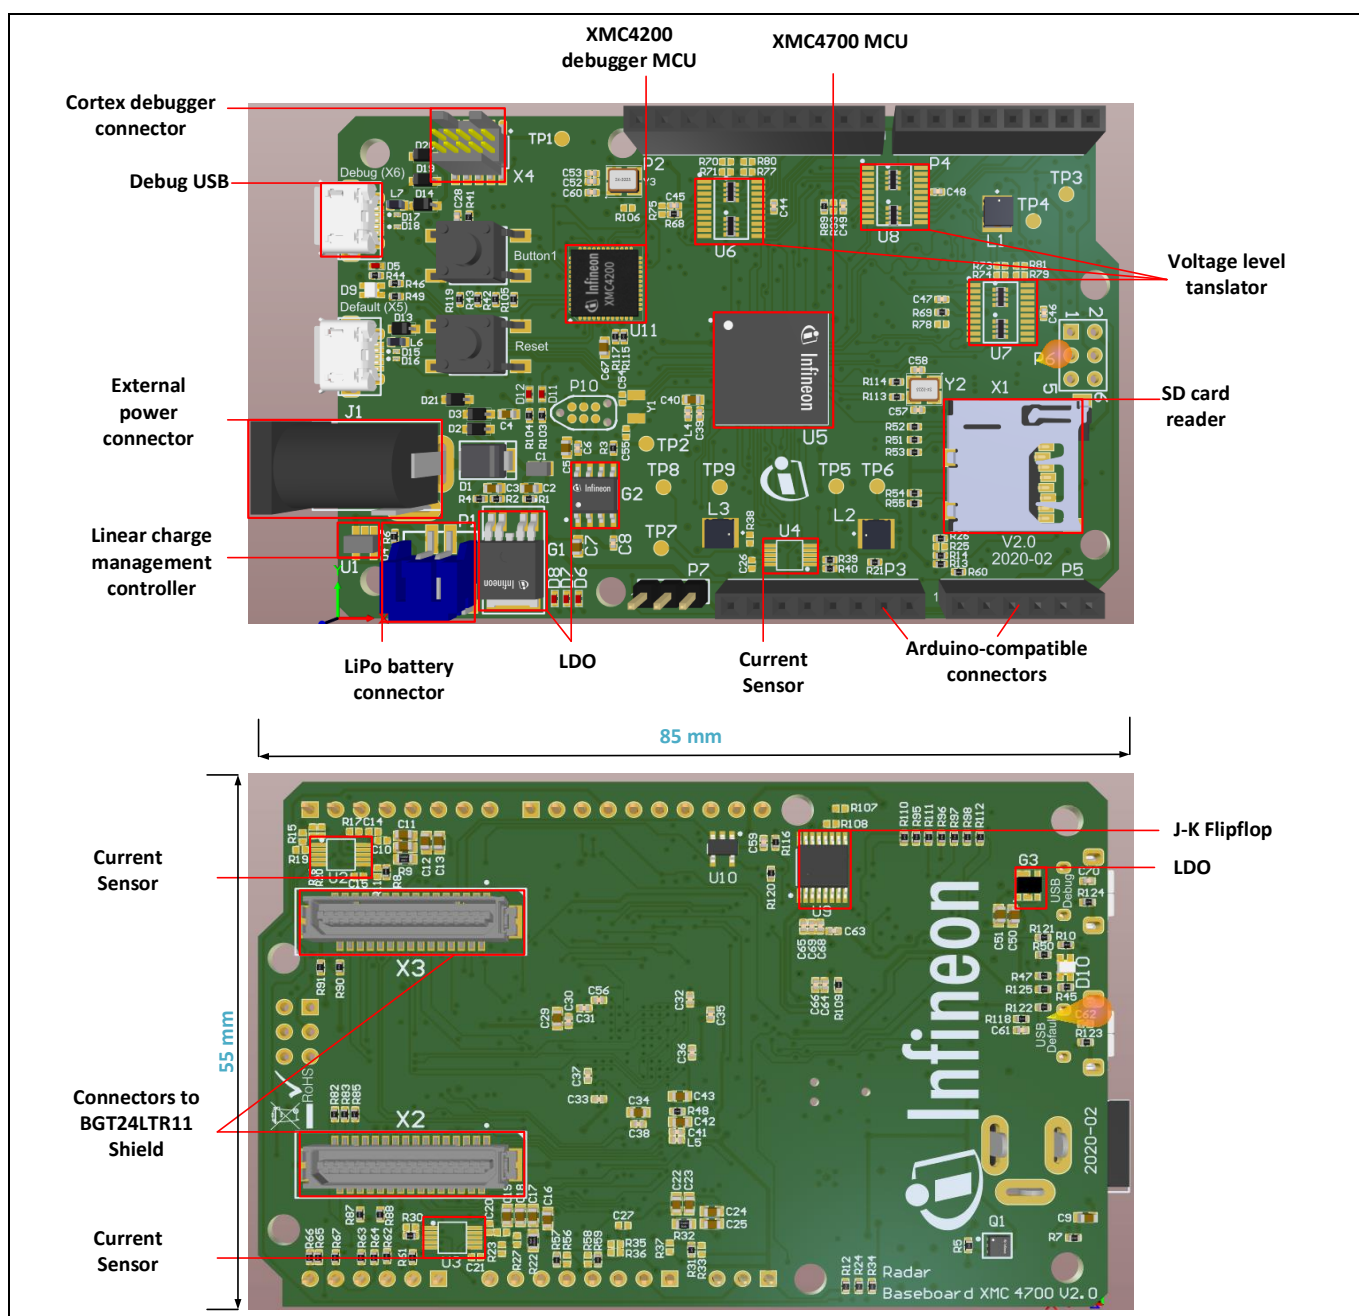


Figure 1 Radar Baseboard XMC4700 with main components and dimensions

The board is powered via the micro-USB cables. It is also possible to power it via external 7 V power supply or with a battery. A series of low-noise voltage regulators is used to provide a regulated power supply to the different building blocks of the board and the connected shield. There are three current sensors on the board for measuring current consumption of the connected shield or Arduino.

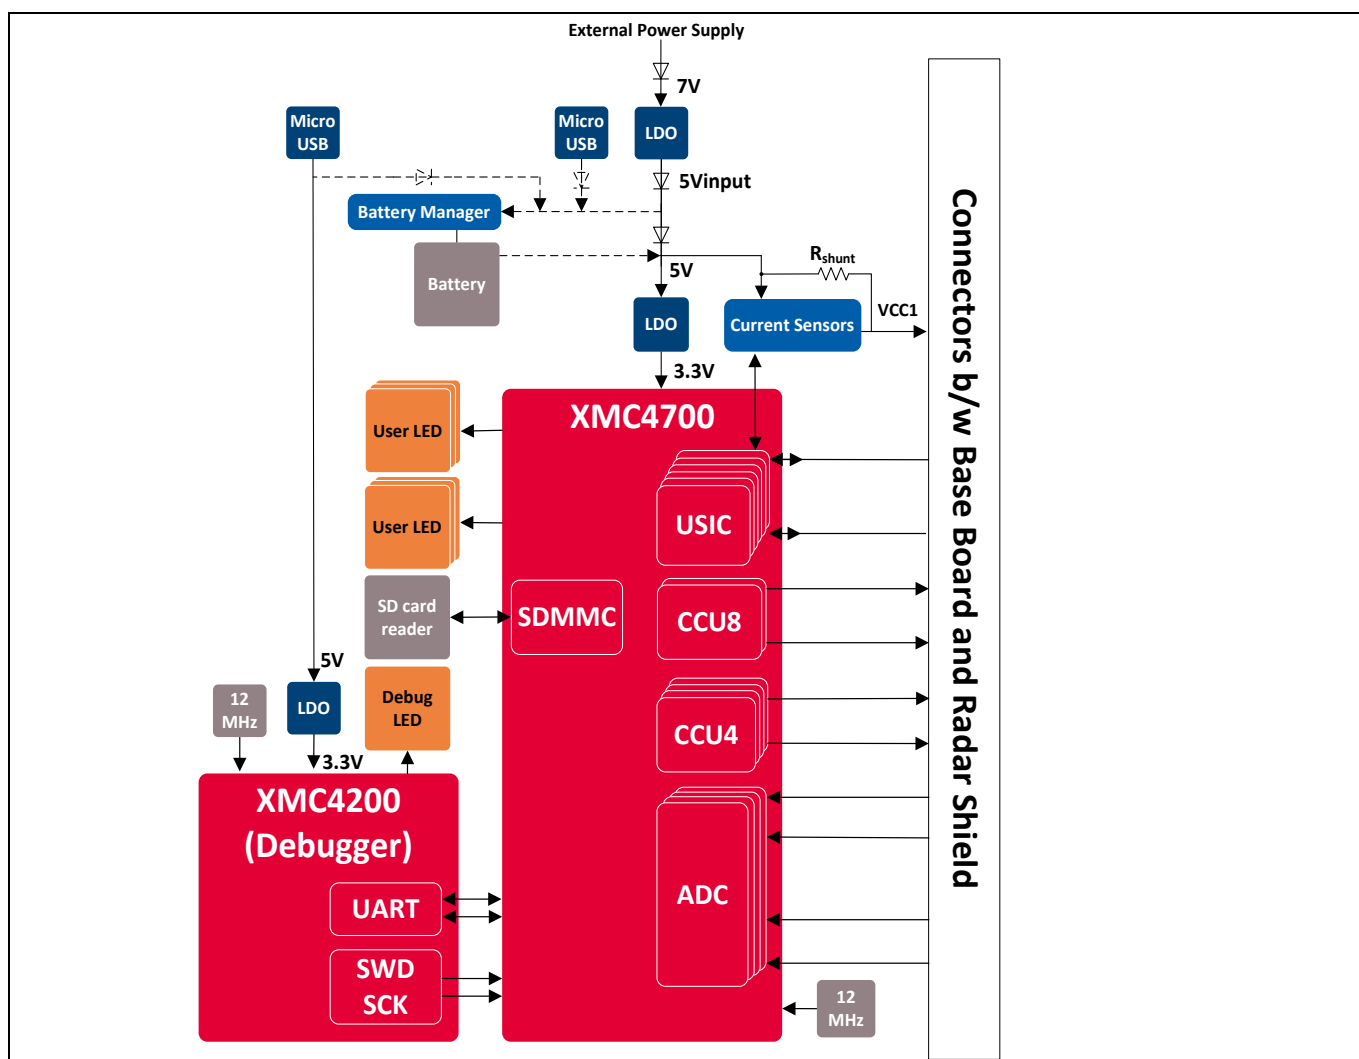


Figure 2 Block diagram – Radar Baseboard XMC4700

2.3 Power supply

The Radar Baseboard XMC4700 is powered via external 7 V power, battery or two micro-USB cables. Figure 3 shows the power supply concept used in the system.

Radar Baseboard XMC4700

24 GHz radar system platform

Hardware description: Radar Baseboard XMC4700

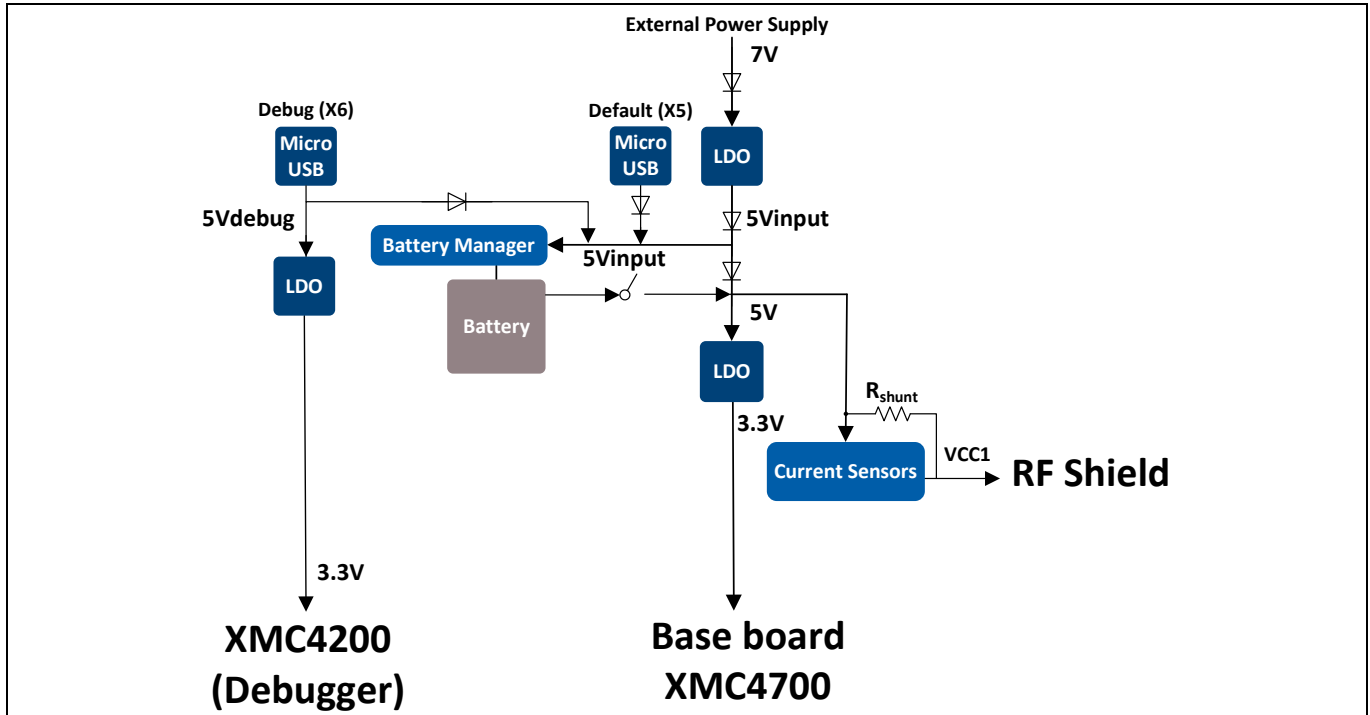


Figure 3 Block diagram – power supply concept

2.3.1 Battery and external power supply

The Radar Baseboard XMC4700 can be powered up with an external power supply (7 V) to operate the board. It is also possible to charge the battery using an onboard battery manager. This section explains the battery charging and external power supply feature of the board.

2.3.1.1 Hardware changes (for V1.1 only)

To start up the XMC4700 with external 7 V power supply or battery, it is important to first carry out these steps:

- Configure the P8 header as shown in Figure 4 (1, 2 connected and 5, 6 connected).
- Remove the P9 header to release the XMC4700 from RESET.

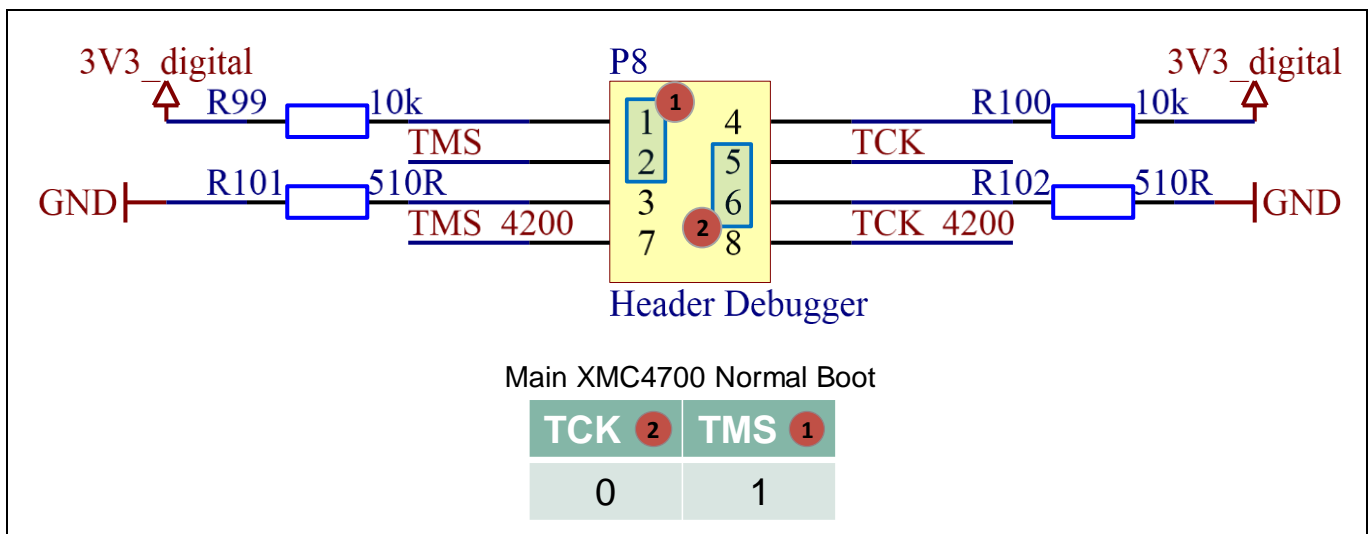


Figure 4 P8 header configuration for using battery or external power supply

2.3.1.2 External power supply operation with battery charging

The Radar Baseboard XCM4700 allows the user to use an external 7 V power supply for operation or to charge the battery. The block diagram of the circuitry is shown in Figure 5 and Figure 6. When the baseboard is connected to an external power supply (7 V), the LDO (G1) has an input voltage and creates a stable 5 V voltage ($5 V_{input}$). This 5 V ($5 V_{input}$) is then used by the battery manager (U1) to charge the battery. LED (D2) indicates the charging status. The same 5 V ($5 V_{input}$) is also used as an input to the second LDO (G2), which in turn generates the stable 3.3 V to power the board components. The PMOS switch (Q1) remains off as the gate voltage is high, hence keeping the battery output disconnected.

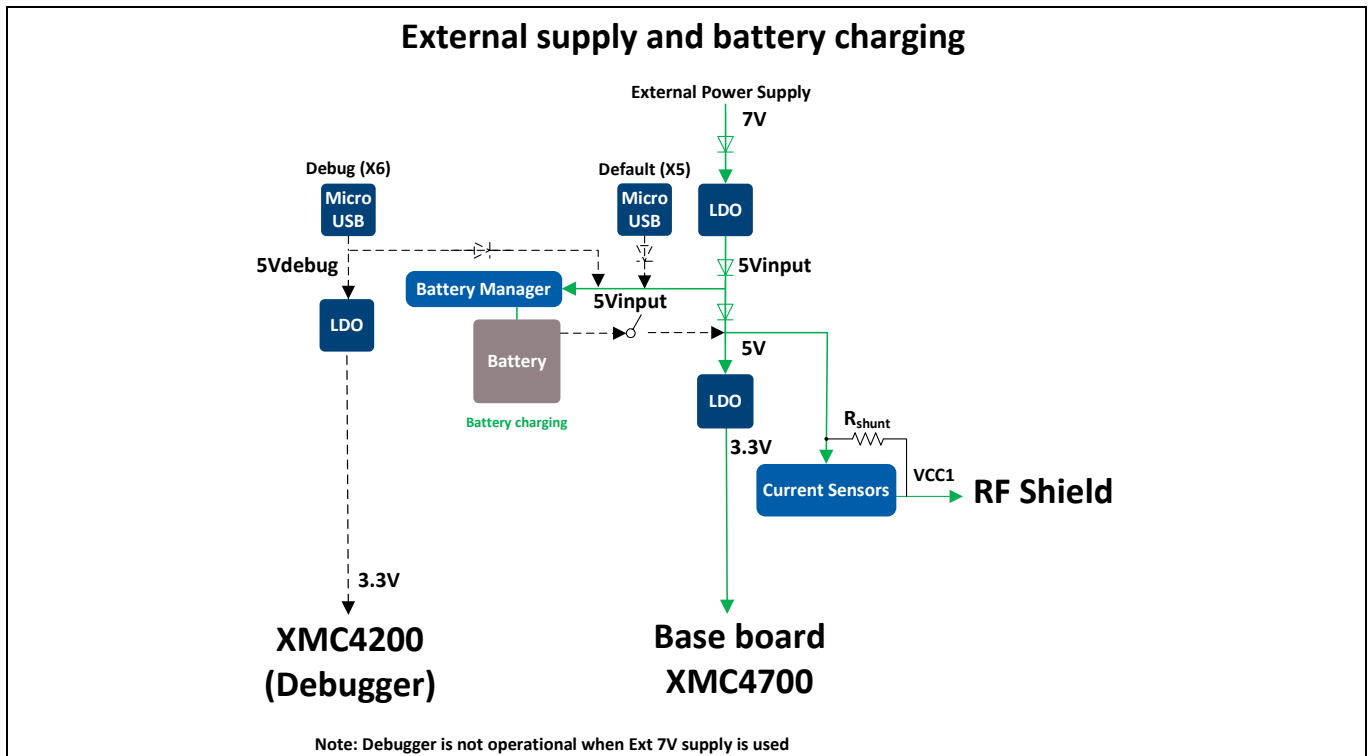


Figure 5 External power supply and battery charging – block diagram

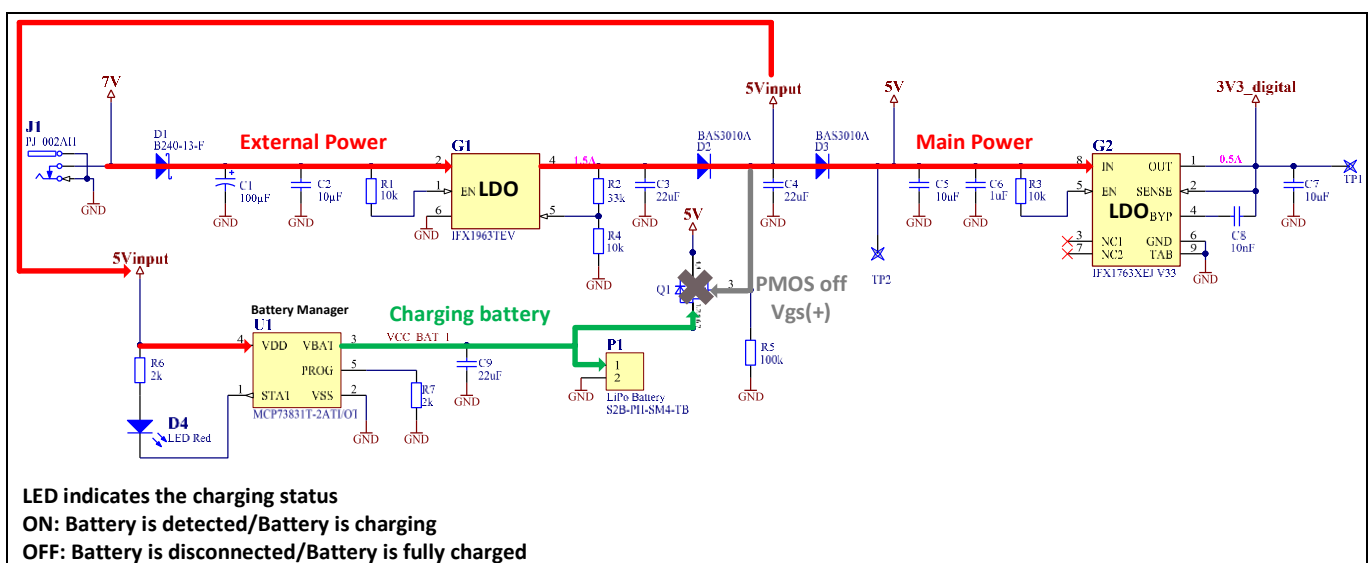


Figure 6 External power supply and battery charging – schematic

The operation of the baseboard using the battery is shown in Figure 7. When the baseboard is not connected to an external power supply, the LDO (G1) has no input voltage and remains disabled. Consequently, the battery manager (U1) has no input voltage and does not charge the battery. The gate voltage of the PMOS switch (Q1) is low. The switch is then closed, creating a connection between the battery and the input of the second LDO (G2). The battery supplies 4.2 V as an input to the LDO (G2) to generate the stable 3.3 V.

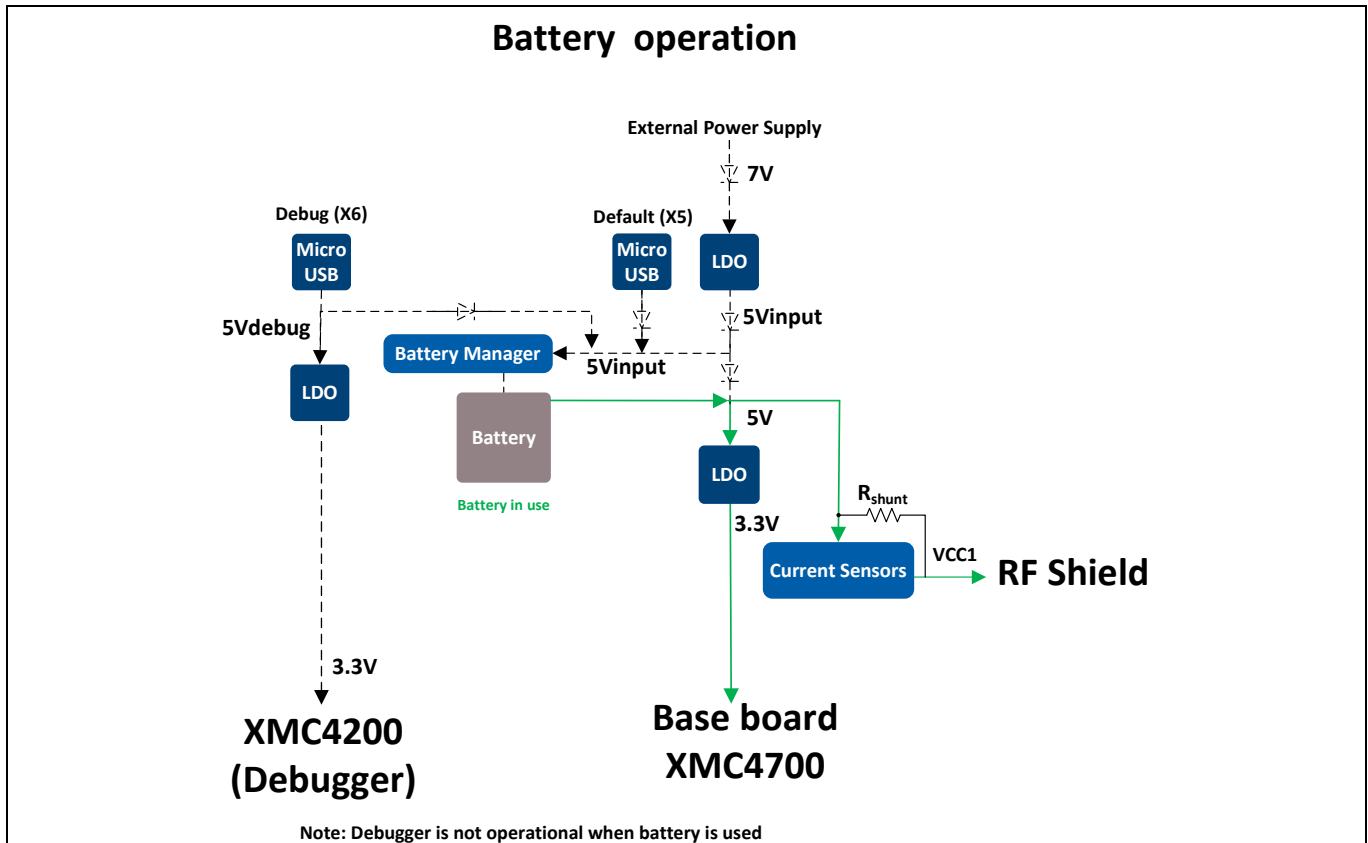


Figure 7 Battery operation – block diagram

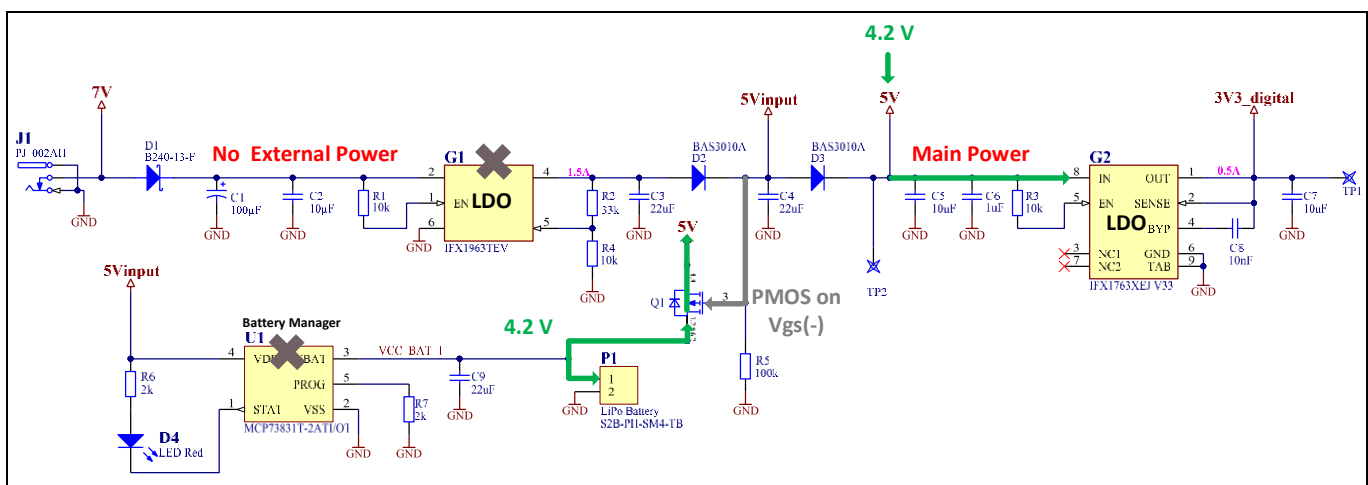


Figure 8 Battery operation – schematic

2.3.3 USB operation

The baseboard can also be powered through two USB cables, as shown in Figure 9. It is also possible to use a single USB cable for operation. However, single USB operation depends on the overall power consumption of the baseboard and the radar shield attached to it. The battery manager is connected to the battery and, depending on the current supplied by the USBs, charges the battery.

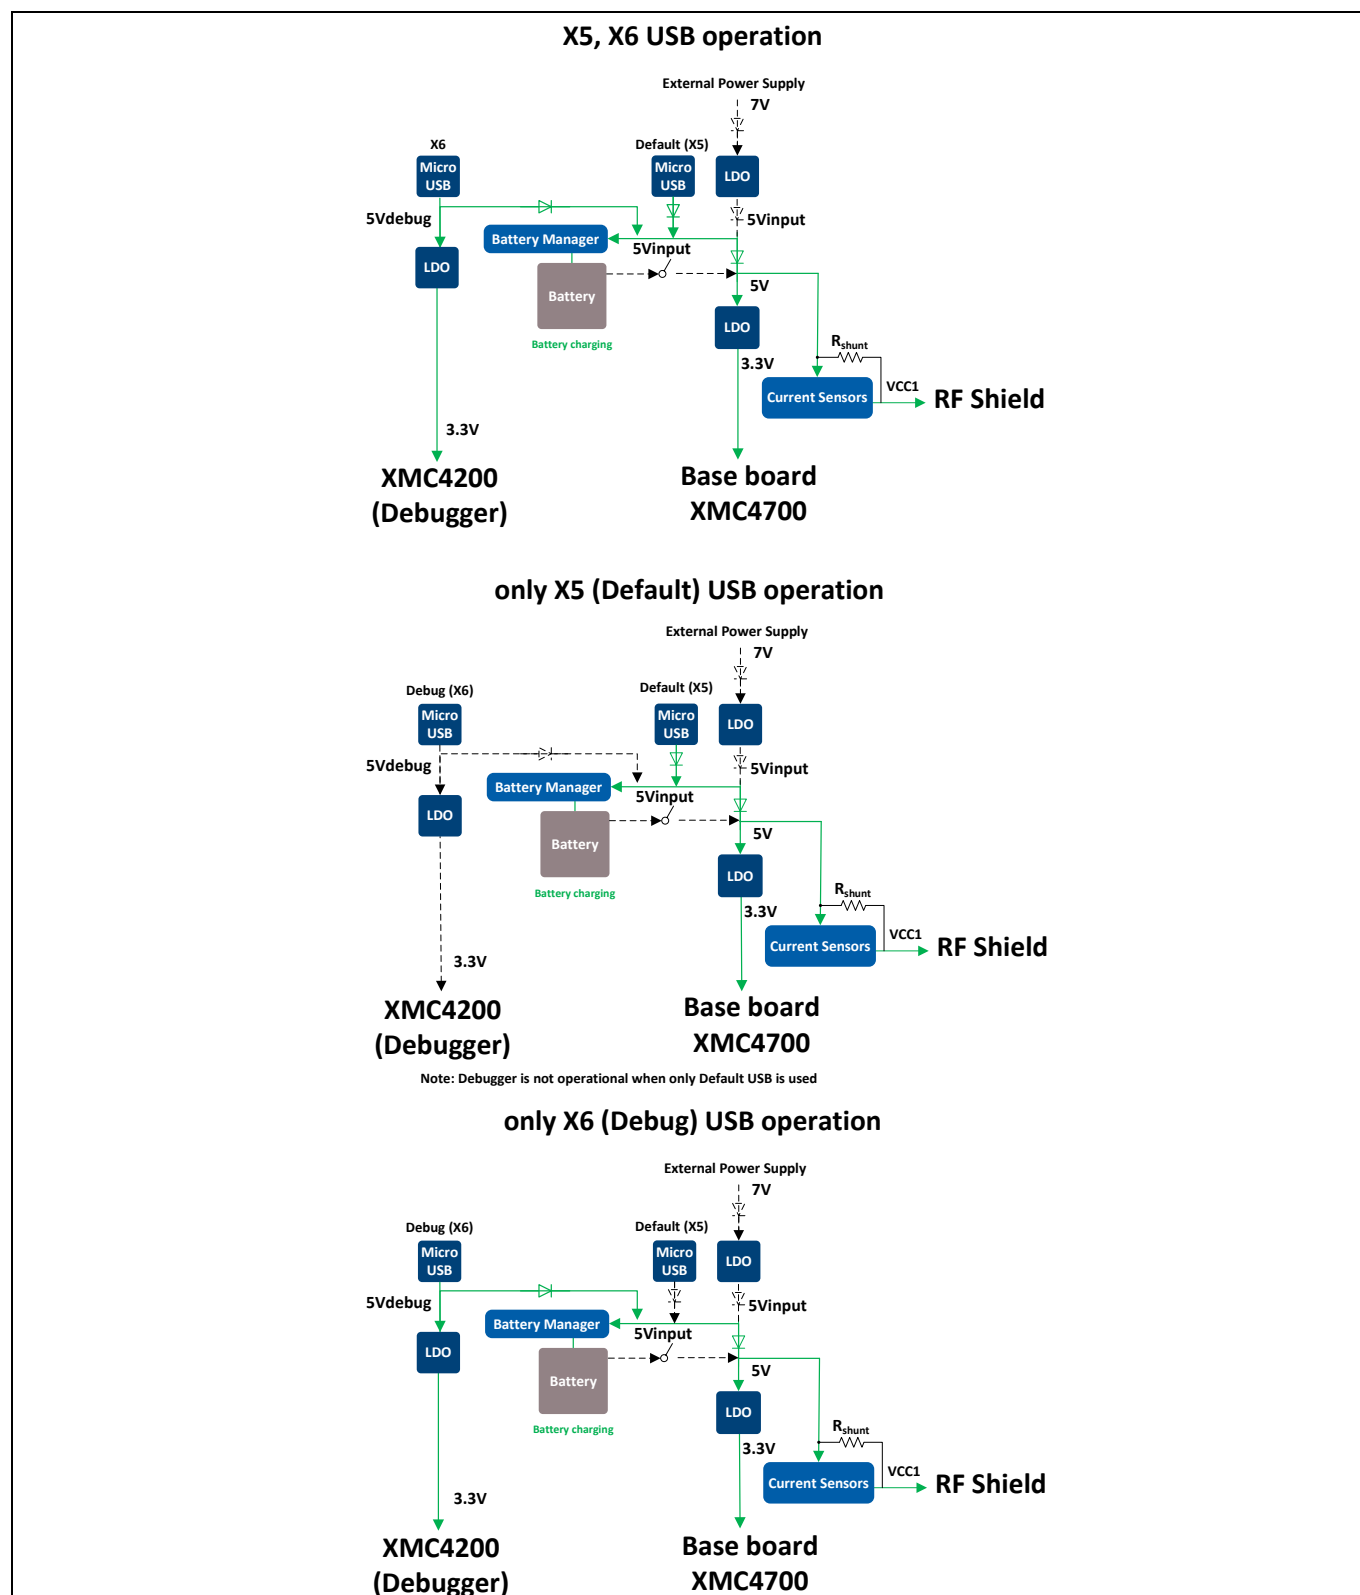


Figure 9 Operation with USB cables

[illegible]

Figure 10 **Current sensors connections**

2.5 EEPROM

V2.0
2021-03-18

Radar Baseboard XMC4700

24 GHz radar system platform

Hardware description: Radar Baseboard XMC4700

2.6 Microcontroller unit – XMC4700

The Radar Baseboard XMC4700 uses an XMC4700 32-bit Arm® Cortex®-M4 MCU to perform the radar signal processing. The XMC4700 takes care of communication with all the sub-systems on the radar module, enables data acquisition, performs the complete radar signal processing (including sampling and FFT) and communicates the results via its UART or USB interface to an external device.

An XMC4700 in a 194-pin BGA package is used, featuring a 144 MHz CPU frequency, 2048 kB Flash and 352 kB RAM. Four 12-bit ADCs help to implement the radar signal sampling and also acquire the various sensor data from the BGT24LTR11 MMIC. The MCU also has a USB 2.0 device interface, which enables direct communication with a PC. Figure 11 shows a system block diagram of the XMC4000 series MCUs.

Please refer to the [XMC4700/XMC4800 datasheet](#) for detailed information on the microcontroller.

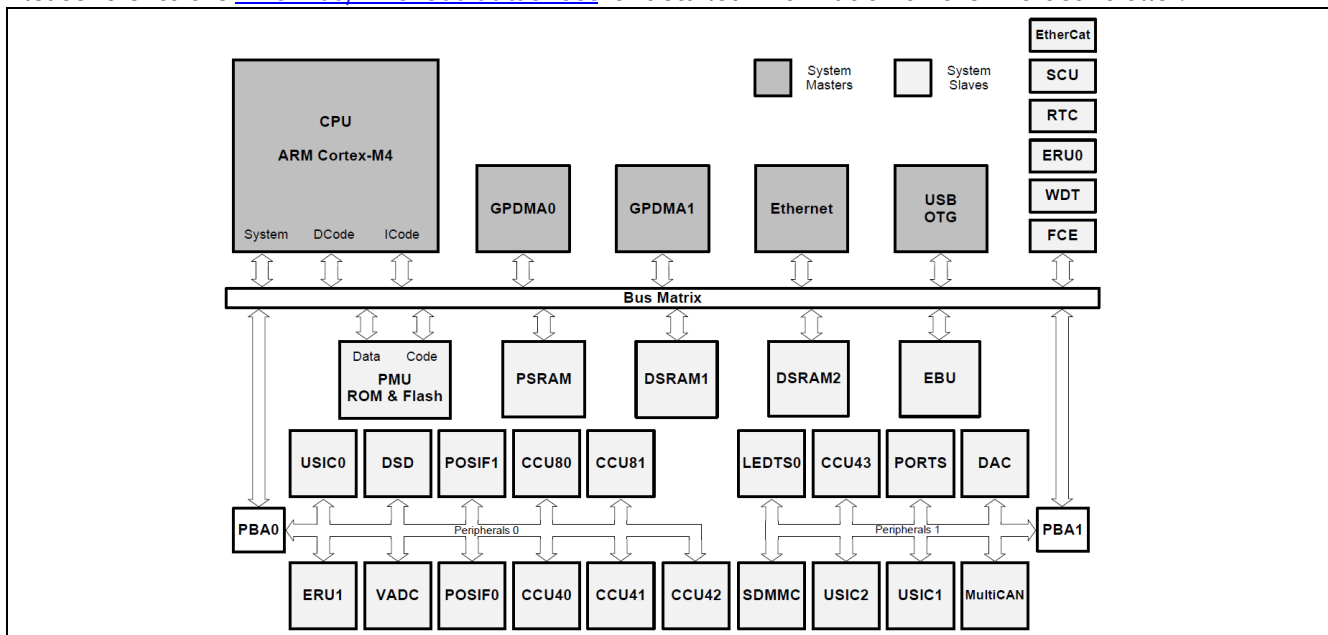


Figure 11 Block diagram – XMC4700

2.7 User-configurable LEDs

Pins of the XMC47000 on the Radar Baseboard are connected to external LEDs on the top and bottom of the PCB for status indication. Table 1 lists the user-configurable LEDs pin assignment. There is a set of three LEDs on each side of the PCB.

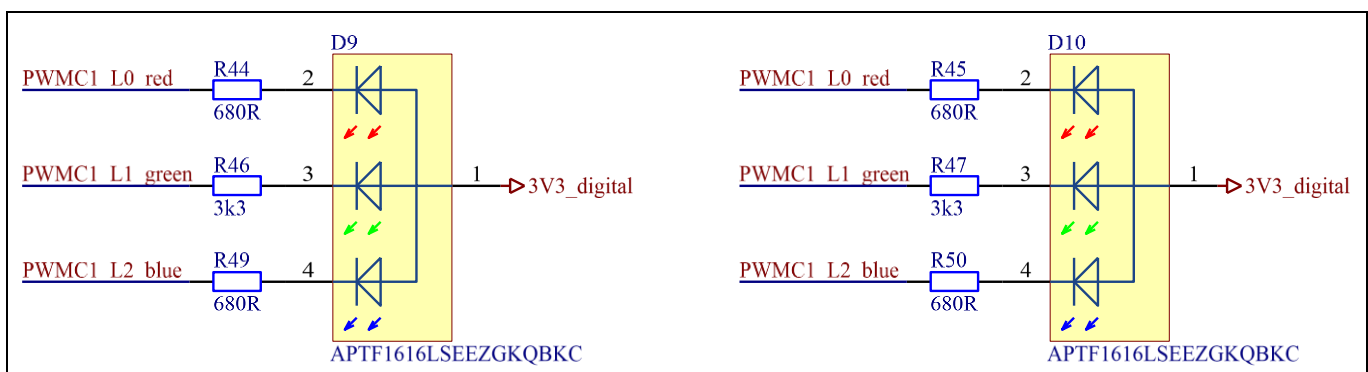


Figure 12 User-configurable LEDs

Table 1 User LEDs pin assignment

LED	MCU port pin
D9, D10 (red LED)	P1.15
D9, D10 (green LED)	P1.14
D9, D10 (blue LED)	P1.13

2.8 User-configurable button

The Radar Baseboard XMC4700 has a user-configurable button, S1, for additional functionality and flexibility for the user. It is interfaced with XMC4700 at the P8.8 pin.

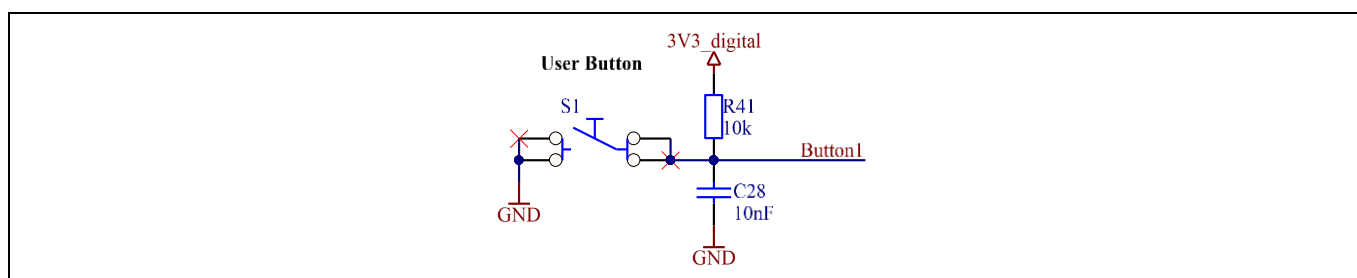


Figure 13 User-configurable button

2.9 SD card reader

The baseboard also has a SD card reader connected to the XMC4700's SDMMC block. This SD card reader can be used to collect and store raw data.

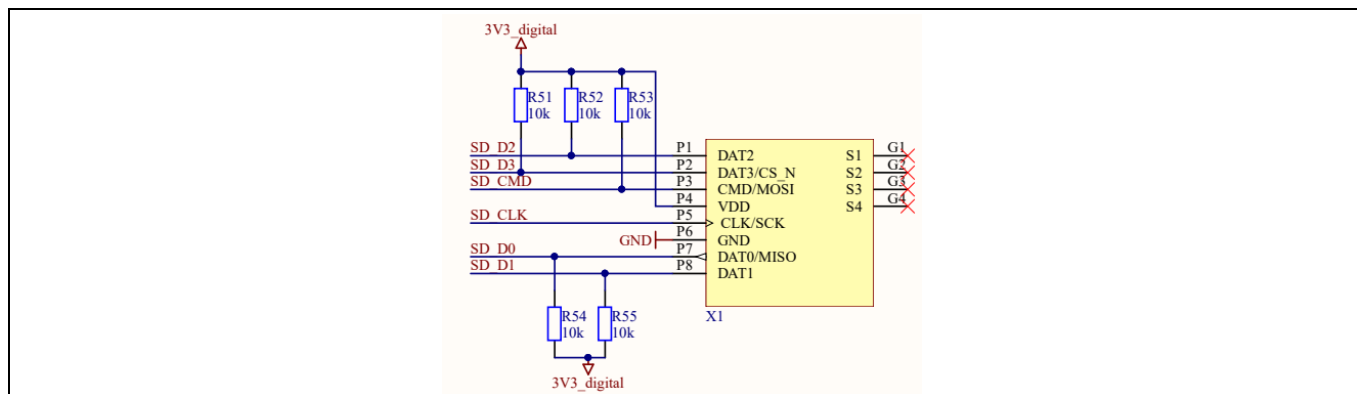


Figure 14 SD card reader connections

2.10 Level shifters

The baseboard has three level shifters (U6, U7 and U8), as shown in Figure 15, for translating logic voltage levels.

Port A tracks VCCA (3V3_digital) and port B tracks VCCB (configurable using the P7 header to 3.3 V or 5 V). These level translations are important for Arduino operation. When the Output Enable (OE) input is low, all outputs are placed in the high-impedance state.


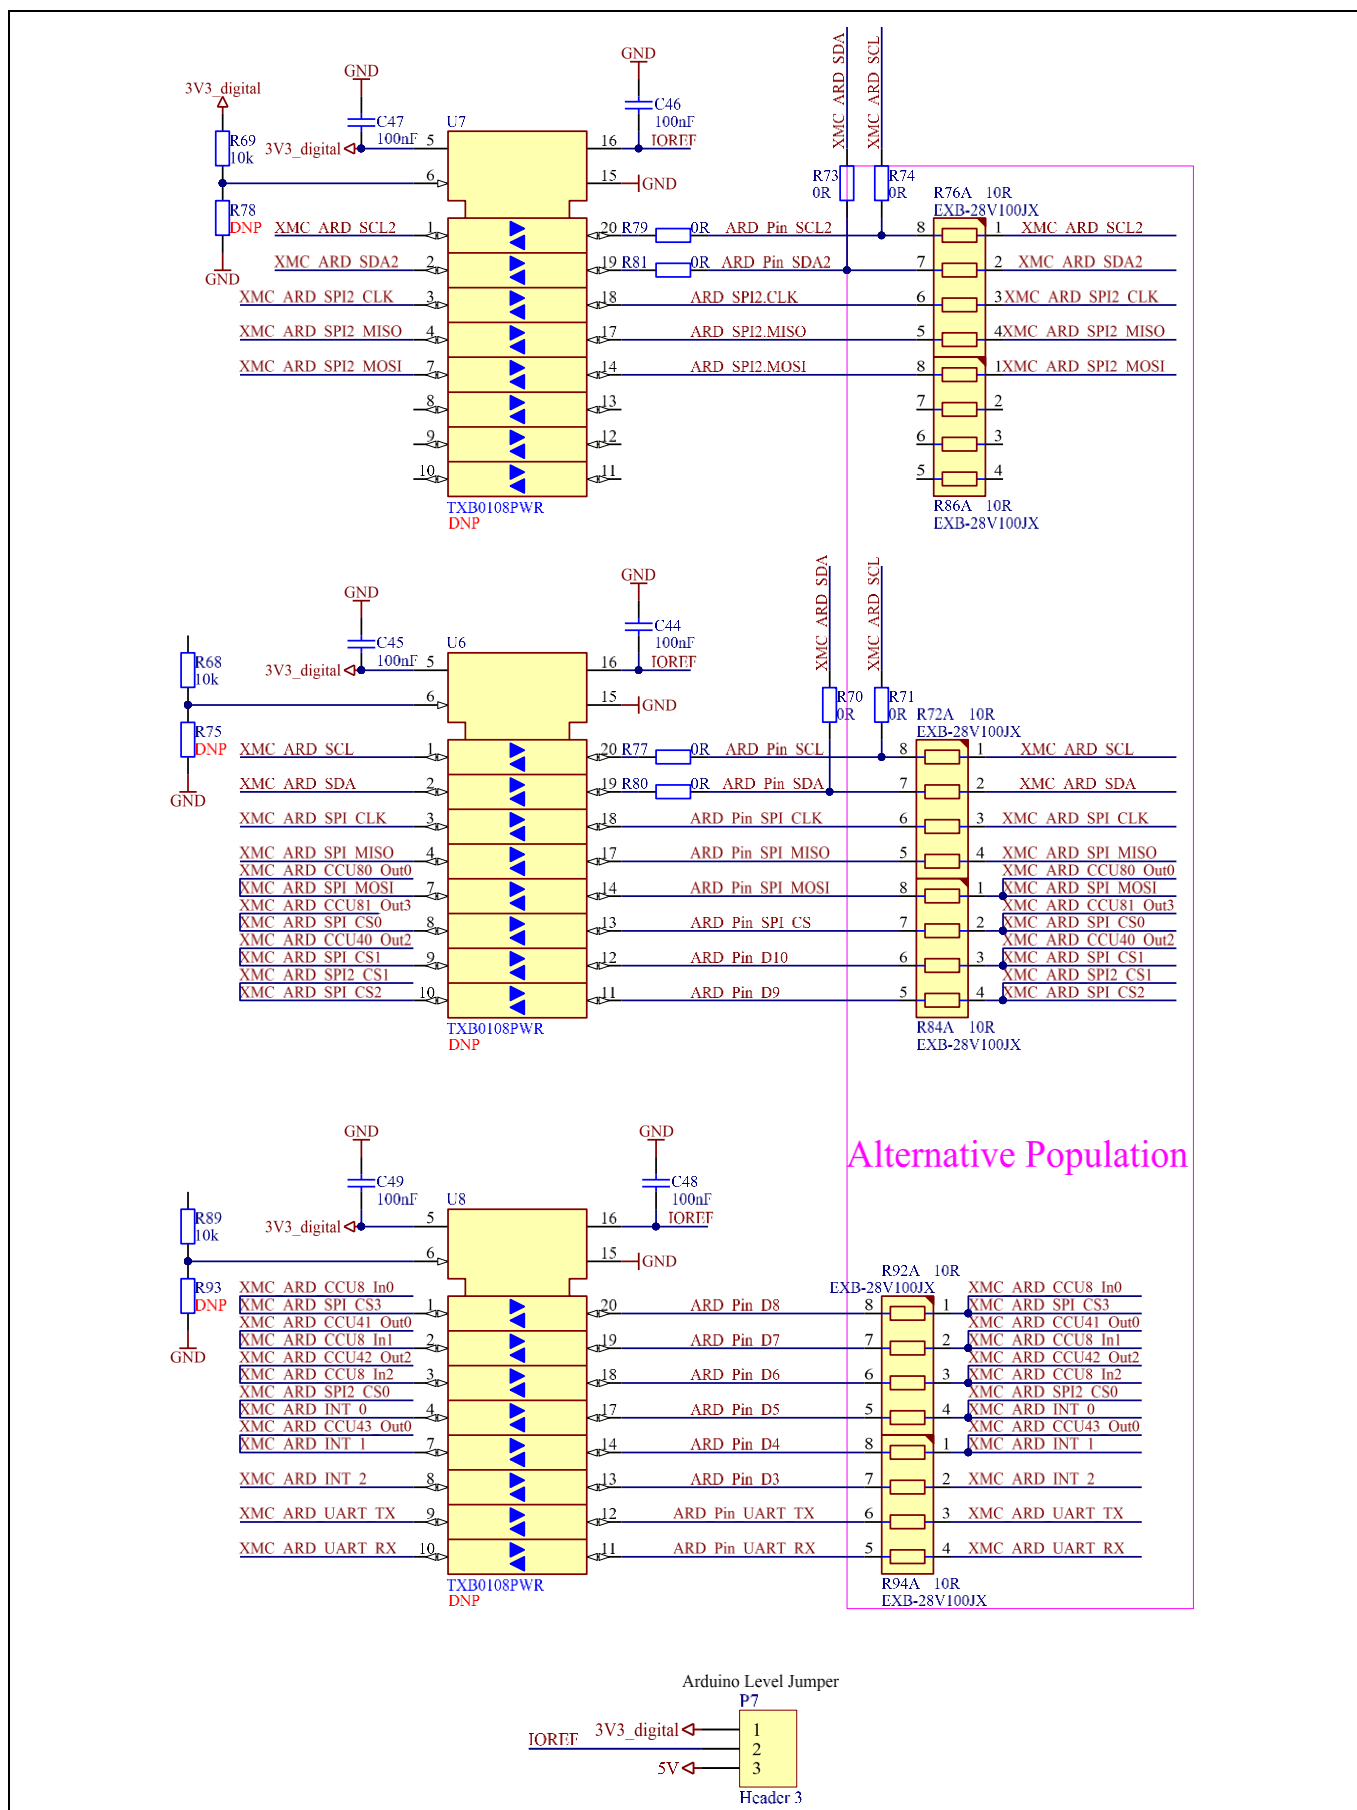


Figure 15 Level translator (U6, U7 and U8) connections

3 Connectors

Figure 16 shows the pin headers on the Radar Baseboard XMC4700 and Table 2, 0, Table 4 and Table 5 describe the pins.

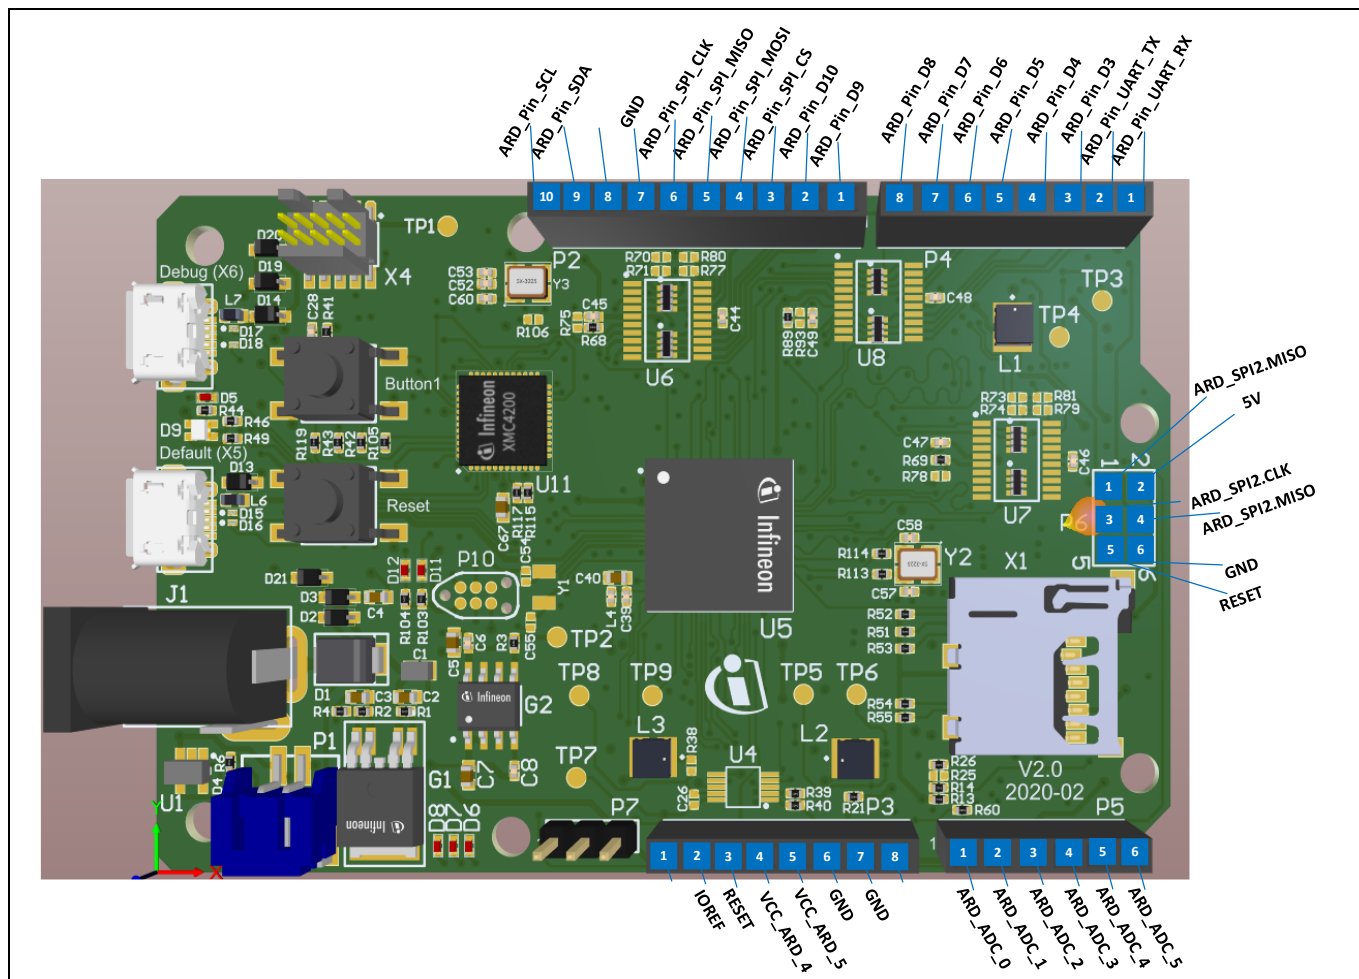

Connectors

Table 3 External header (P3) – pin description

Pin no.	Signal name	Pin description
2	IOREF	Voltage reference at which the external board interfacing with the Radar Baseboard XMC4700 is operating. Can be selected via P7.
3	RESET	Resets the Radar Baseboard XMC4700
4	VCC_ARD_4	3.3 V
5	VCC_ARD_5	5 V
6	GND	Ground
7	GND	Ground

Table 4 External header (P4) – pin description

Pin no.	Signal name	Pin description
1	ARD_Pin_UART_RX	XMC4700 UART receive
2	ARD_Pin_UART_TX	XMC4700 UART transmit
3	ARD_Pin_D3	External interrupt 0
4	ARD_Pin_D4	PWM output (default)/external interrupt 1
5	ARD_Pin_D5	Timer 0
6	ARD_Pin_D6	PWM output (default)/timer 1
7	ARD_Pin_D7	PWM output
8	ARD_Pin_D8	General-purpose IO

Table 5 External header (P5) – pin description

Pin no.	Signal name	Pin description
1	ARD_ADC_0	Arduino ADC channel CH0
2	ARD_ADC_1	Arduino ADC channel CH1
3	ARD_ADC_2	Arduino ADC channel CH2
4	ARD_ADC_3	Arduino ADC channel CH3
5	ARD_ADC_4/DAC.VCoarse	Arduino ADC channel CH4
6	ARD_ADC_5/DAC.VFine	Arduino ADC channel CH5

Table 6 External header (P6) – pin description

Pin no.	Signal name	Pin description
1	ARD_SPI2.MISO	SPI master in slave out
2	5V	5 V supply
3	ARD_SPI2.CLK	SPI clock
4	ARD_SPI2.MOSI	SPI master out slave in
5	RESET	Resets the Radar Baseboard XMC4700
6	GND	Ground

Connectors

Notes:

1. *Pin 8 of header P2 is not connected to any signal.*
2. *Pins 1 and 8 of header P3 are not connected to any signal.*
3. *Pins on P2 and P4 can primarily be used as general-purpose I/Os.*

The pin headers significantly enhance the functionality of the module. They enable probing the analog outputs of the sensor module and also probing various other signals provided to the IC. In principle, the accessibility of several pins on the radar IC and the IF signals available via the external pin headers enable interfacing the module with an external signal processor.

- communicate with the host via USB
- read radar sensor data via SPI
- perform signal processing on the received data from the shield
- provide control signals to the shield for specific tasks (for example, controlling the on/off of the radar MMIC)
- check if a radar shield board is plugged into the connectors
- read and write the EEPROM on the radar shield board (for example, to identify the board)
- control some auxiliary peripherals such as status LEDs on the baseboard.

4.1 Debugging

Cortex debug connector (X4) – 10-pin connector to enable external debugger to be connected

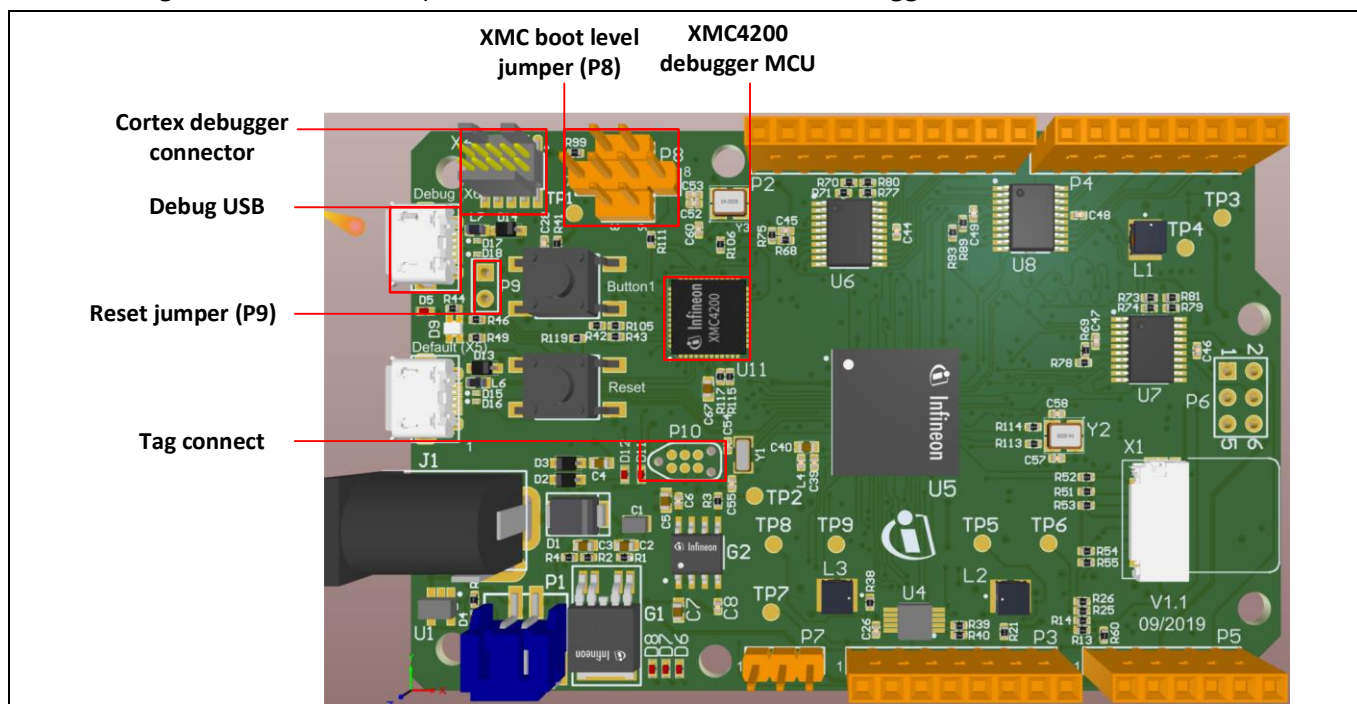


Figure 17 **V1.1 Debugger components**

Error! Reference source not found. and **Error! Reference source not found.** show the different header settings for using different types of debuggers for V1.1.

Table 7 Debugger type and header settings (V1.1 only)

Debugger type	Header settings
Onboard debugger (XMC4200)	P9 closed P8: 2 to 7 closed; 5 to 8 closed
External debugger (Tag connect)	P9 open P8: 1 to 2 closed; 5 to 6 closed
External debugger (cortex debug)	P9 open P8: 1 to 2 closed; 5 to 6 closed
No debugger	P9 open P8: 1 to 2 closed; 5 to 6 closed

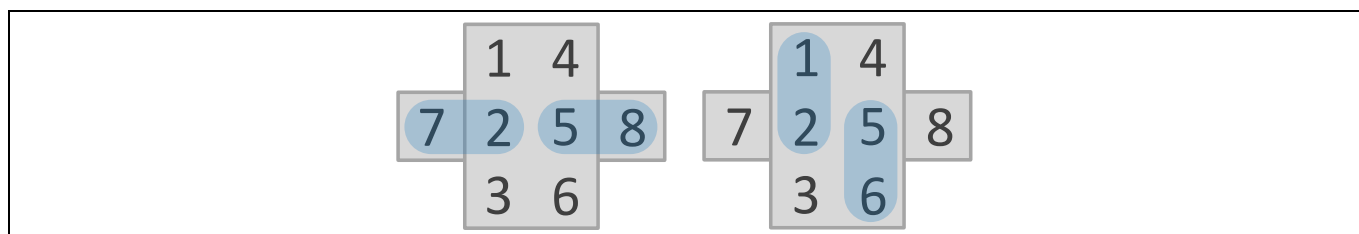


Figure 18 P8 header connections – for onboard debugger, for external debugger (V1.1 only)

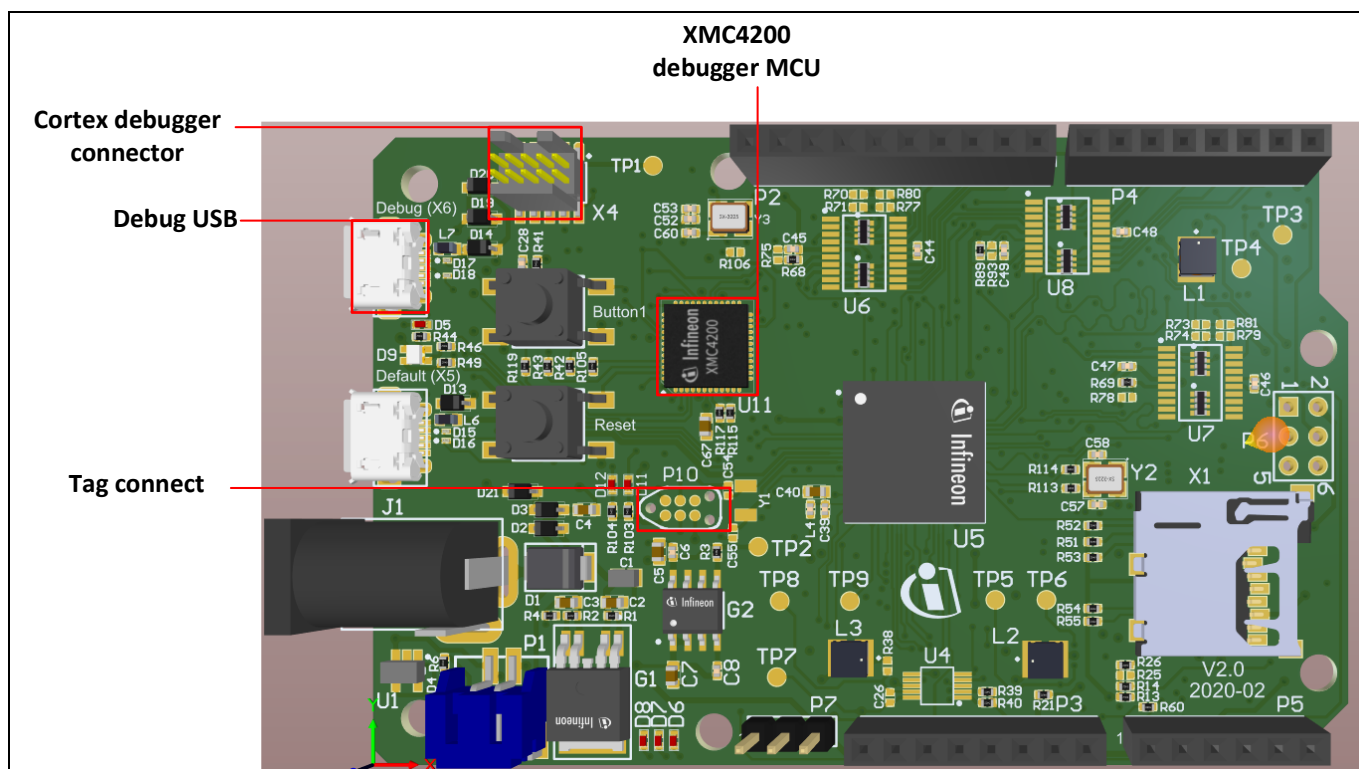


Figure 19 V2.0 Debugger components – For debugging and flashing, the USB cable has to be simply connected to the “Debug USB” port. Header settings are no longer needed.

4.1.1 Onboard debugger and UART connection

The Radar Baseboard XMC4700 features an onboard debugger, which comes preloaded with licensed firmware for debugging and communicating with the main radar MCU via the UART pins. The onboard debugger supports two-pin SWD and UART communication. Both require the installation of SEGGER's J-Link driver, which is part of the DAVE™ installation.

During installation of the J-Link driver make sure to select the option “**Install USB Driver for J-Link-OB with CDC**”, as shown in Figure 20.

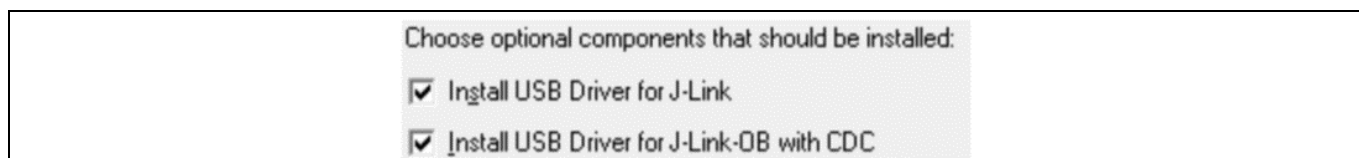


Figure 20 Recommended installation options for the J-Link driver

Table 8 shows the pin assignment of the XMC4200-VQFN48 MCU used for debugging and UART connection.

Table 8 XMC4200 pins used for debugging and UART communication

Port pin	Pin function
TMS (pin 33)	Data pin for debugging via SWD/SPD
TCK (pin 34)	Clock pin for debugging via SWD
P0.4 (pin 46)	Transmit pin for UART communication
P0.5 (pin 45)	Receive pin for UART communication

The debugger section supports communication between a PC/laptop and target XMC™ device via a UART-to-USB bridge).

5 Frequency band and regulations

5.1 24 GHz regulations

Infineon's BGT24LTR11 radar sensor operates in the globally available 24 GHz bands. There is an Industrial, Scientific and Medical (ISM) band from 24 to 24.25 GHz. However, each country may have deviating regulations in term of occupied bandwidth, maximum allowed radiated power, conducted power, spurious emissions, etc. Therefore, it is highly recommended to check the local regulations before designing an end product.

5.2 Regulations in Europe

In Europe, the European Telecommunications Standards Institute (ETSI) defines the regulations. For more details on the ETSI standards, please refer to their document [EN 300 440 V2.2.1](#). Please note that some countries do not follow harmonized European standards. Thus it is recommended to check national regulations for operation within specific regions and monitor regulatory changes.

5.3 Regulations in the United States of America

In the USA, the Federal Communications Commission (FCC) defines standards and regulations. The ISM band covers 24 to 24.25 GHz, and one can operate field disturbance sensors anywhere within this band within allowed power limits for certain applications. For details, please refer to FCC section number [15.245](#) or [15.249](#).

6 Authors

Radar Application Engineering Team, Business Line “Radio Frequency and Sensors”

7 References

- [1] 24 GHz industrial radar – [FAQs](#)
- [2] ETSI regulations – [EN 300 440 V2.2.1](#)
- [3] FCC regulations – [15.245](#), [15.249](#)

Revision history

Document version	Date of release	Description of changes
V1.0	2020-02-07	Initial version
V2.0	2021-03-18	Updated based on board version V2.0

Trademarks

All referenced product or service names and trademarks are the property of their respective owners.

Edition 2021-03-18

Published by

Infineon Technologies AG

81726 Munich, Germany

© 2021 Infineon Technologies AG.

All Rights Reserved.

Do you have a question about this document?

Email: erratum@infineon.com

Document reference

AN_1910_PL32_1910_100136<AN_191

IMPORTANT NOTICE

The information contained in this application note is given as a hint for the implementation of the product only and shall in no event be regarded as a description or warranty of a certain functionality, condition or quality of the product. Before implementation of the product, the recipient of this application note must verify any function and other technical information given herein in the real application. Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind (including without limitation warranties of non-infringement of intellectual property rights of any third party) with respect to any and all information given in this application note.

The data contained in this document is exclusively intended for technically trained staff. It is the responsibility of customer's technical departments to evaluate the suitability of the product for the intended application and the completeness of the product information given in this document with respect to such application.

For further information on the product, technology delivery terms and conditions and prices please contact your nearest Infineon Technologies office (www.infineon.com).

WARNINGS

Due to technical requirements products may contain dangerous substances. For information on the types in question please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by Infineon Technologies in a written document signed by authorized representatives of Infineon Technologies, Infineon Technologies' products may not be used in any applications where a failure of the product or any consequences of the use thereof can reasonably be expected to result in personal injury.